 


# STEERING COLUMN CONTROLS

- ignition Switch.....4.1
- Lighting/Tum Signal Control Lever.....4-2
- Windscreen Wiper and Washer Lever.....4-4
- Horn.....4.5
- Rear Wiper and Washer(if equipped).....4-5

 
## STEERING COLUMN CONTROLS

### IGNITION SWITCH

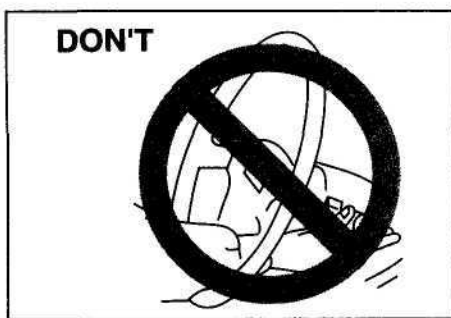

60G-04-001E

**⚠ WARNING**  
 To avoid possible injury, do not operate controls by reaching through the steering wheel.

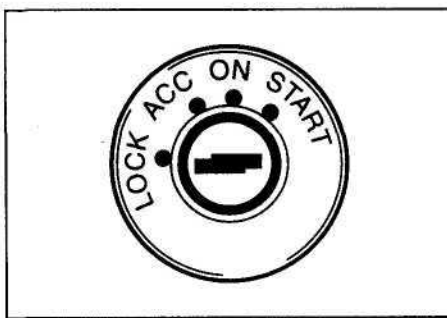


70F-02-002

The ignition switch has the following four positions:

**⚠ WARNING**

 - Do not use any locally made key.
- Should you require duplicate key, place your order with MARUTI dealer only.

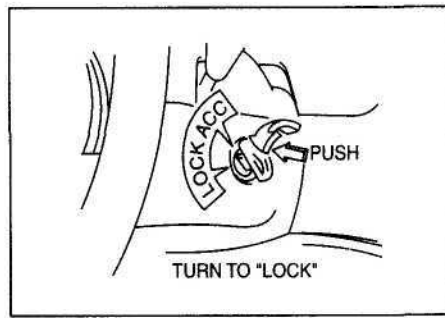

60G-04-002E

#### LOCK

This is the normal parking position. It is the only position in which the key can be removed.

You must push in the key to turn it to the "LOCK" position. The "LOCK" position locks the ignition, and prevents normal use of the steering wheel after the key is removed.

To release the steering lock, fully insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering, try turning the steering wheel slightly to the right or left while turning the key.

**ACC**

Accessories such as the radio can operate, but the engine is off.

**ON**

This is the normal operating position. All electrical systems are on.

**START**

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

 
**⚠ WARNING**

- Never remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.
- Do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle, which could result in severe personal injury.
- Always remove the key when parked to prevent unintentional operation of the vehicle and to improve security.

**CAUTION**

- Do not use the starter motor for more than 15 seconds at a time. If the engine does not start; wait 15 seconds before trying again. If the engine does not start after several attempts, check the fuel and ignition systems or consult your MARUTI dealer.
- Do not leave the ignition switch in the "ON" position if the engine is not running as the battery will discharge.

**LIGHTING/TURN SIGNAL CONTROL LEVER**

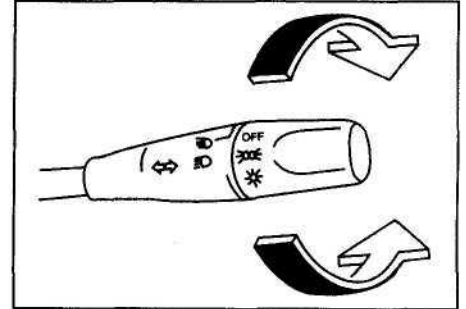


60G-04-003

This control lever is located on the outboard side of the steering column. Operate the lever as described below.

**Lighting Operation**

 To turn the lights on or off, twist the knob on the end of the lever. There are three positions: in the "OFF" position all lights are off; in the middle position the front parking lights, tail-lights, registration plate light, and instrument lights are on, but the headlights are off; in the third position the headlights come on in addition to the other lights.

**STEERING COLUMN CONTROLS**

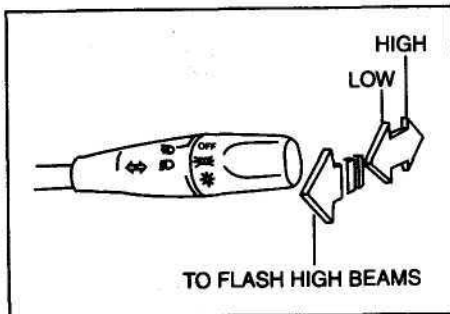


60G-04-004E

With the headlights on, push the lever forward to switch to the high beams (main beams) or pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument panel will come on. To flash the high beams (main beams) pull the lever slightly towards you and release it.

**Lights "On" Reminder (if Equipped)**

 A buzzer/chime sounds to remind you to turn off the lights if they are left on when the ignition key is removed and the driver's door is opened.

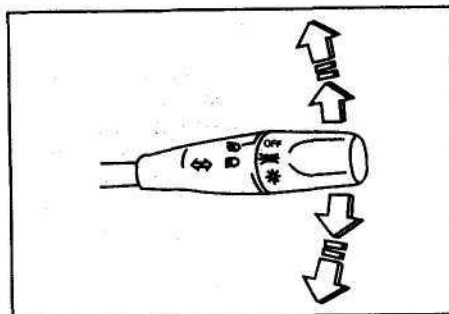


60G-04-005

**Turn Signal Operation**

 With the ignition switch in the "ON" position, move the lever up or down to activate the left or right turn signals.

**Normal Turn Signal**

Move the lever clockwise until it clicks to signal a right turn or anticlockwise to signal a left turn. When the turn is completed, the signal will cancel and the lever will return to its normal position.

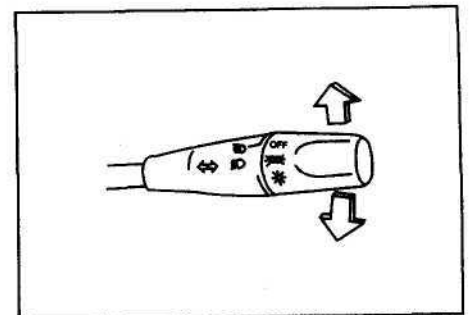


60G-04-006


**Lane Change Signal**

 Some times, such as when changing lanes, the steering wheel is not turned far enough to cancel the turn signal. For convenience, you can flash the turn signal by moving the lever part way and holding it there. The lever will return to its normal position when you release it.


**WINDSCREEN WIPER AND WASHER LEVER**

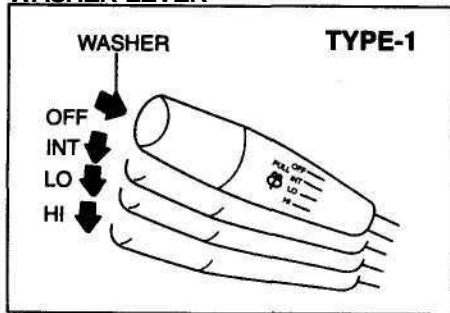

60G-04-007E

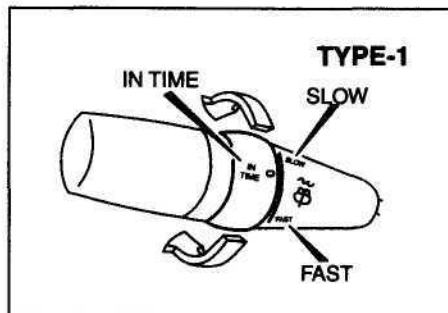 

60G-04-008E

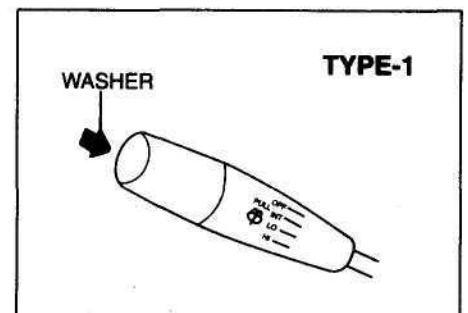 


60G-04-009E

**Windscreen Wipers**

 To turn the windscreen wipers on, move the lever down to one of the three operating positions. In the "INT" position (if equipped), the wipers operate intermittently. The "INT" position is very convenient for driving in mist or light rain. In the "LO" position, the wipers operate at a steady low speed. In the "HI" position, the wipers operate at a steady high speed. To turn off the wipers, move the lever back to the "OFF" position.

If the lever is equipped with "INT TIME" control, turn the control toward the "SLOW" or "FAST" positions to adjust the intermittent wiper operation to the desired interval.

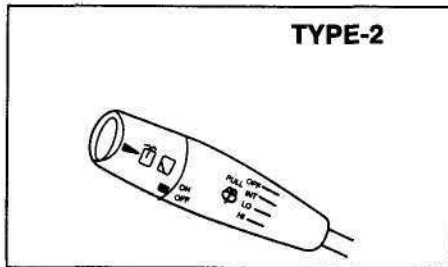

60G-04-011E

The operation of windscreen wiper and washer Type-2 is same as Type-1.

**Windscreen Washer**

To spray windscreen washer fluid, pull the lever toward you. The windscreen wipers will automatically turn on at low speed if they are not already on and the "INT" position is equipped.

**▲ WARNING**

- To prevent windscreen icing in cold weather, turn on the defroster to heat the windscreen before and during windscreen washer use.
- Do not use radiator antifreeze in the windscreen washer reservoir. It can severely impair visibility when sprayed on the windscreen, and can also damage your vehicle's paint.

 
STEERING COLUMN CONTROLS

**CAUTION**

To help prevent damage to the windscreen wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windscreen washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windscreen with the wipers or you can damage the windscreen and the wiper blades. Always wet the windscreen with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.
- Only fill the washer fluid reservoir 3/4 full during cold weather to allow room for expansion if the temperature falls low enough to freeze the solution.


**HORN**

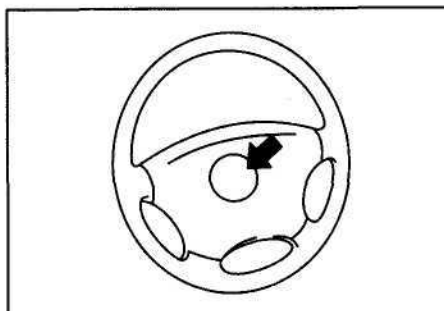

60G-04-010

Press the horn button of the steering wheel to sound the horn. The horn will sound with the ignition switch in any position.

**REAR WIPER AND WASHER (if equipped)**

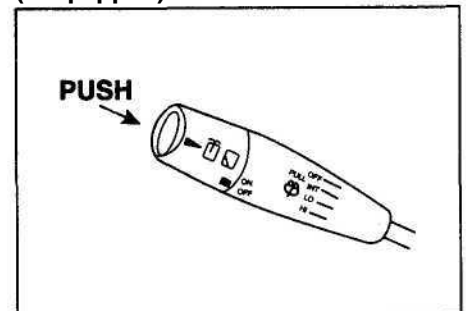 

Press the button located at the end of the windscreen wiper and washer lever to operate the rear washer and turn the lever anti clockwise to operate the rear washer.