


SERVICE INSTRUCTIONS

STORING THE JACK

1. Place the handle in the upright clipped position against the steel standard (bar).
2. Raise the reversing latch until it locks in the UP position.
3. Store the Jack in an upright clipped position in a dry location, preferably indoors. If the Jack is stored outdoors, or is stored in a Loc-Rac or 4X4RAC, use a Jack protector. See "Accessories."

STORING THE EQUIPMENT-AGRICULTURAL JACK

1. Pivot the Equipment-Agriculture jack to a horizontal position. Rest the steel handle of the Equipment-Agricultural jack on top of the steel (standard) bar.
2. Secure the jack in this position with the lock-pin through the holes in the tubular mounting bracket.
3. Secure the lock-pin in the tubular mounting brackets with the safety cotter pin.

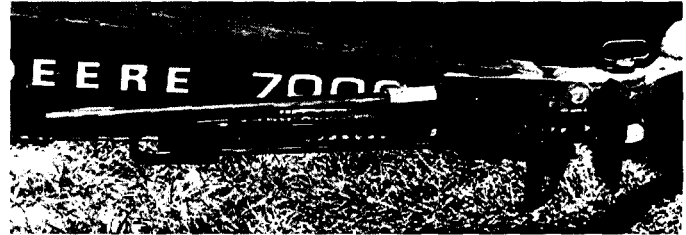

MAINTENANCE

If you use and maintain your Hi-Lift® Jack properly, it will give you many years of service. Follow these maintenance instructions carefully to keep your Jack in good working condition. Never perform maintenance on the Jack while it is under load.

INSPECTION

Inspect the Jack thoroughly before each use. Make sure the Jack is not damaged, badly worn, or missing parts. Check the climbing pins to make sure that they are not worn or damaged. Check the steel standard (bar) to make sure that it is straight and that nothing is blocking the holes. Do not use the Jack unless it is in good, clean working condition and properly lubricated. See "Lubricating the Jack."

CLEANING AND LUBRICATING THE JACK

If the moving parts of the jack or the steel standard (bar) are clogged, use air pressure, water pressure, or a stiff brush to clean. Use a non-flammable cleaning solvent or another good de-greaser to clean the Jack. Remove any existing rust, preferably with a penetrating lubricant. Then lubricate the Jack using white lithium grease, light penetrating oil, or a silicon or Teflon spray at the following points: