


AUTOMATIC LOCKING WHEN DRIVING

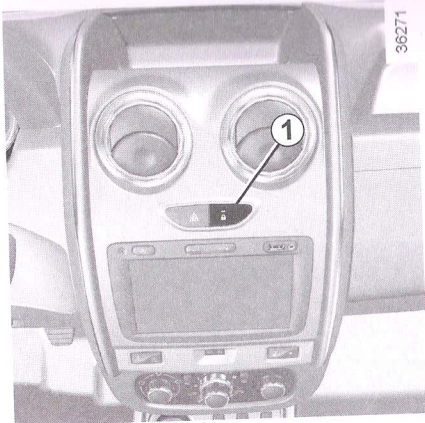


Operating principle

After the vehicle is started, the system automatically locks the doors once your speed reaches approximately 5 mph (7 km/h).

To activate

With the ignition on, press and hold switch **1** for approximately 5 seconds, until you hear a beep. The indicator light built into the switch comes on when the doors are locked.

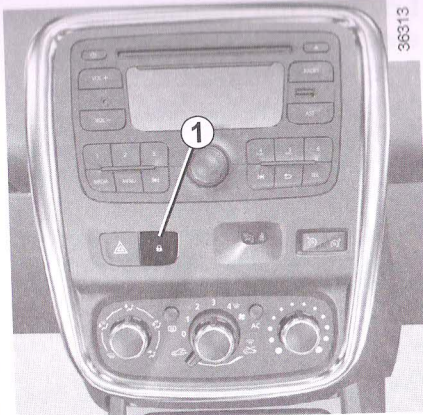

To deactivate

With the ignition on, press and hold switch **1** for approximately 5 seconds, until you hear a beep.



If you decide to keep the doors locked when you are driving, remember that it may be more difficult for those assisting you to gain access to the passenger compartment in the event of an emergency.




Operating faults

If you notice an operating fault (automatic locking impossible), first check that all doors are correctly locked. If they are correctly locked and the fault is still present, contact an approved Dealer.

Also make sure that locking has not been inadvertently deactivated.

If this is the case, reactivate it.

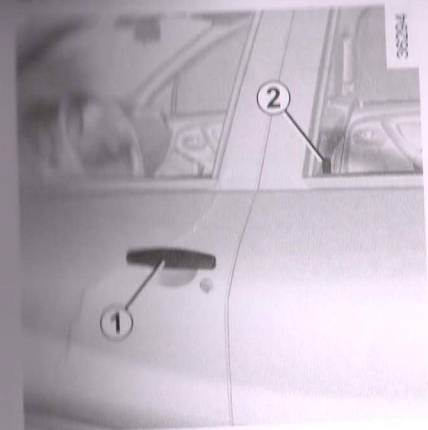

Opening from the outside

With the doors unlocked (refer to the information on "Locking/unlocking the doors" in Section 1).

Front: place your hand behind handle **1** and pull it towards you..

Rear (manual opening): lift unlocking button **2** from the inside and move the door handle.



Opening from the inside

Front: pull handle

Rear: from the inside, lift the unlocking button **2** and pull the door handle.