

Fuses and Relays


Overview of fuse and relay holders

Overview of fuse and relay holders, left-hand and right-hand drive models



Note:

Illustration shows left-hand drive model. Point 1 and 2 can be found on the right-hand side in right-hand drive vehicles

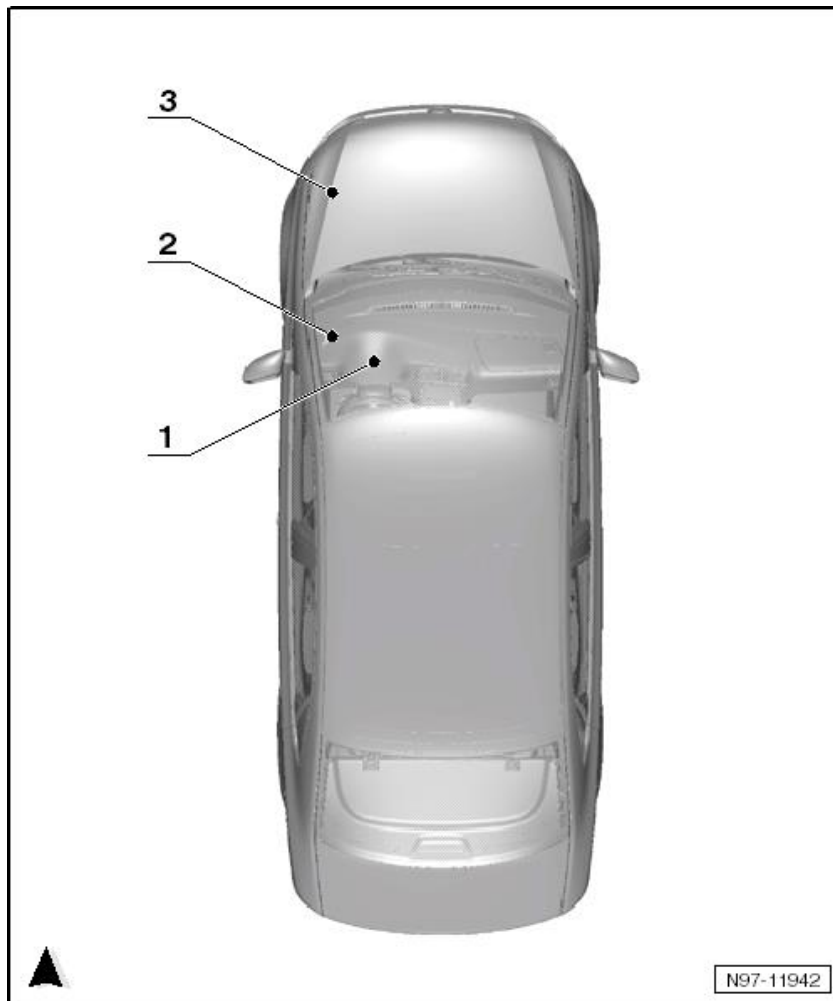

1 - Fuse holder B -SB-

q Fitting location: under the steering wheel

q Fuse assignment, from August 2010 → [Chapter](#)


q Fuse assignment, from August 2011 → [Chapter](#)

q Fuse assignment, from August 2015 → [Chapter](#)

2 - Relay and fuse carrier 1 -SR1-

- t Side light relay -J3-
- t Fuel pump relay -J17-
- t Air conditioning system relay -J32-
- t X-contact relief relay -J59-
- t Heated exterior mirror relay -J99-
- t Starter inhibitor relay -J207-
- t Main relay -J271-
- t Terminal 30 voltage supply relay -J317-
- t Dipped beam relay -J331-
- t Fuel supply relay -J643-
- q Relay and fuse assignment, from August 2010 → [Chapter](#)
- q Relay and fuse assignment, from November 2010 → [Chapter](#)
- q Relay and fuse assignment, from August 2011 → [Chapter](#)
- q Relay and fuse assignment, from May 2012 → [Chapter](#)
- q Relay and fuse assignment, left-hand drive models, from August 2012 → [Chapter](#)
- q Relay and fuse assignment, right-hand drive models, from August 2012 → [Chapter](#)
- q Relay and fuse assignment, left-hand drive models, from August 2015 → [Chapter](#)
- q Relay and fuse assignment, right-hand drive models, from August 2015 → [Chapter](#)
- 3 - Fuse holder A -SA-
- q Fitting location → [Chapter](#)
- q Fuse assignment → [Chapter](#)
- q Fuse assignment, from August 2015 → [Chapter](#)
- Fuse holder C -SC-
- q Fitting location → [Chapter](#)
- q Fuse assignment → [Chapter](#)
- q Fuse assignment, from August 2015 → [Chapter](#)
- Fuse holder on the battery
- t Automatic glow period control unit -J179-
- t Additional coolant pump relay -J496-
- Fitting location → [Chapter](#)

Fuse holder on the battery

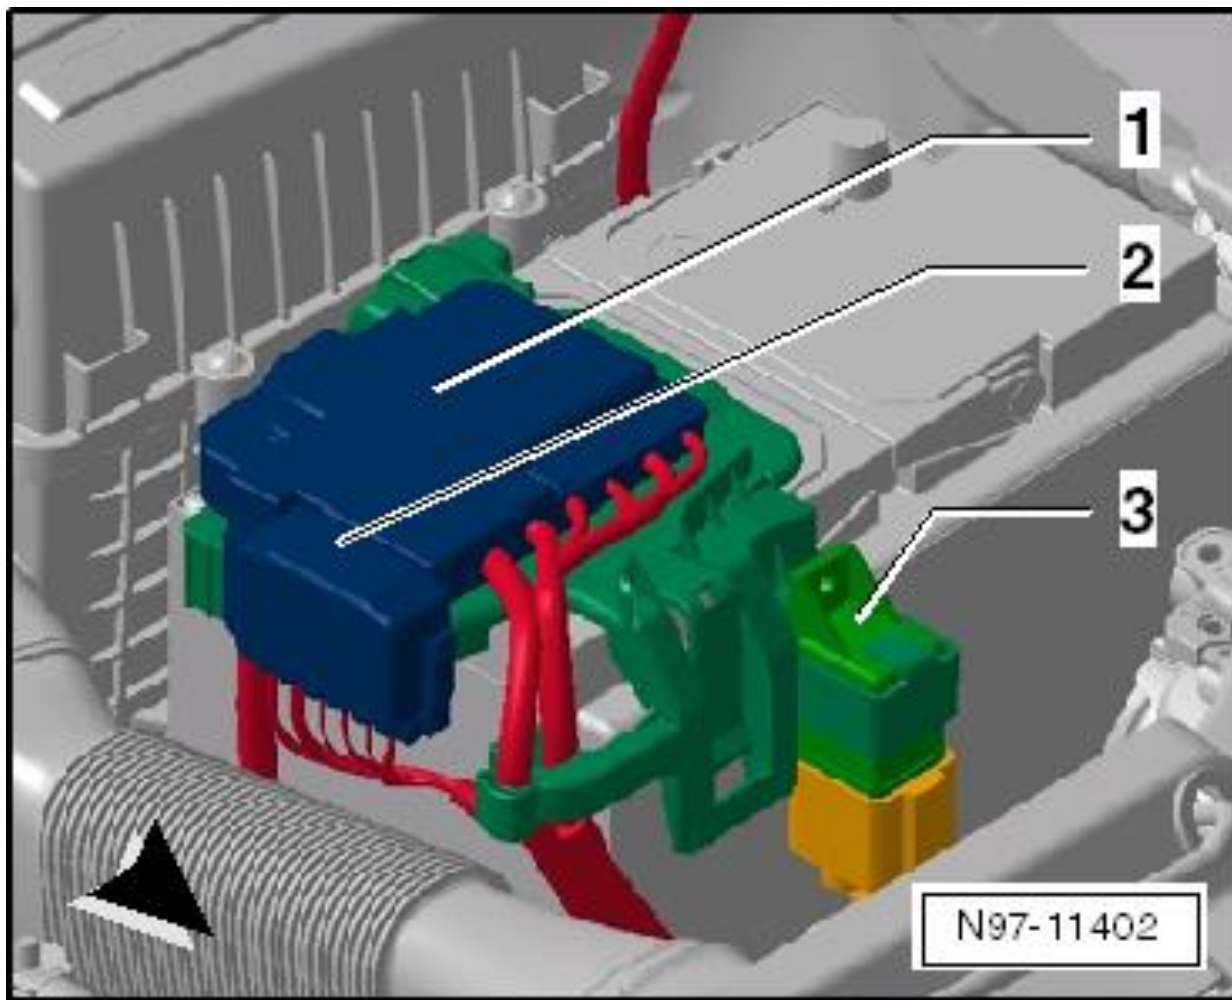

3 - Automatic glow period control unit -J179-

q Only models with diesel engine

3 - Additional coolant pump relay -J496-


q According to equipment

Back to overview → [Chapter](#)

Fuse holder A -SA- , fuse holder C -
SC-

1 - Fuse holder A -SA-

2 - Fuse holder C -SC-

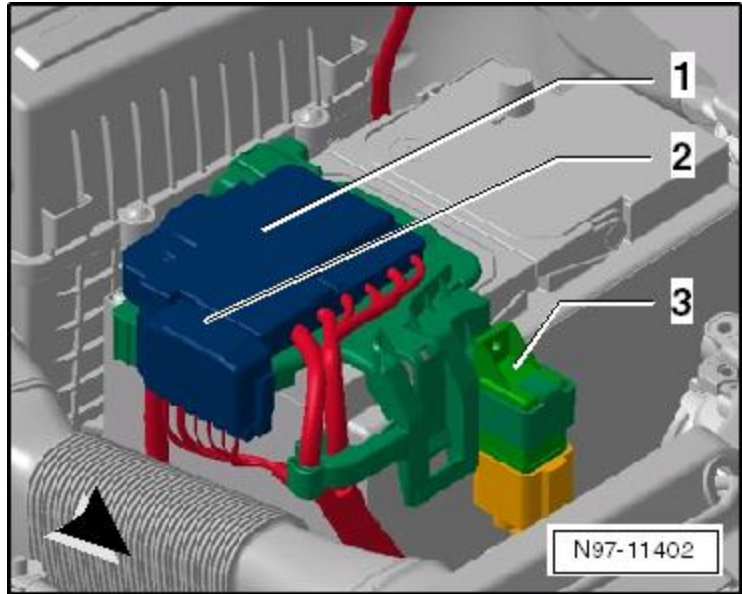

Fuse assignment
on fuse holder A
-SA-, fuse
holder C -SC-

Fuse colours

30 A - green

25 A - white

20 A - yellow


15 A - blue

10 A - red

7,5 A - brown

5 A - beige

3 A - purple

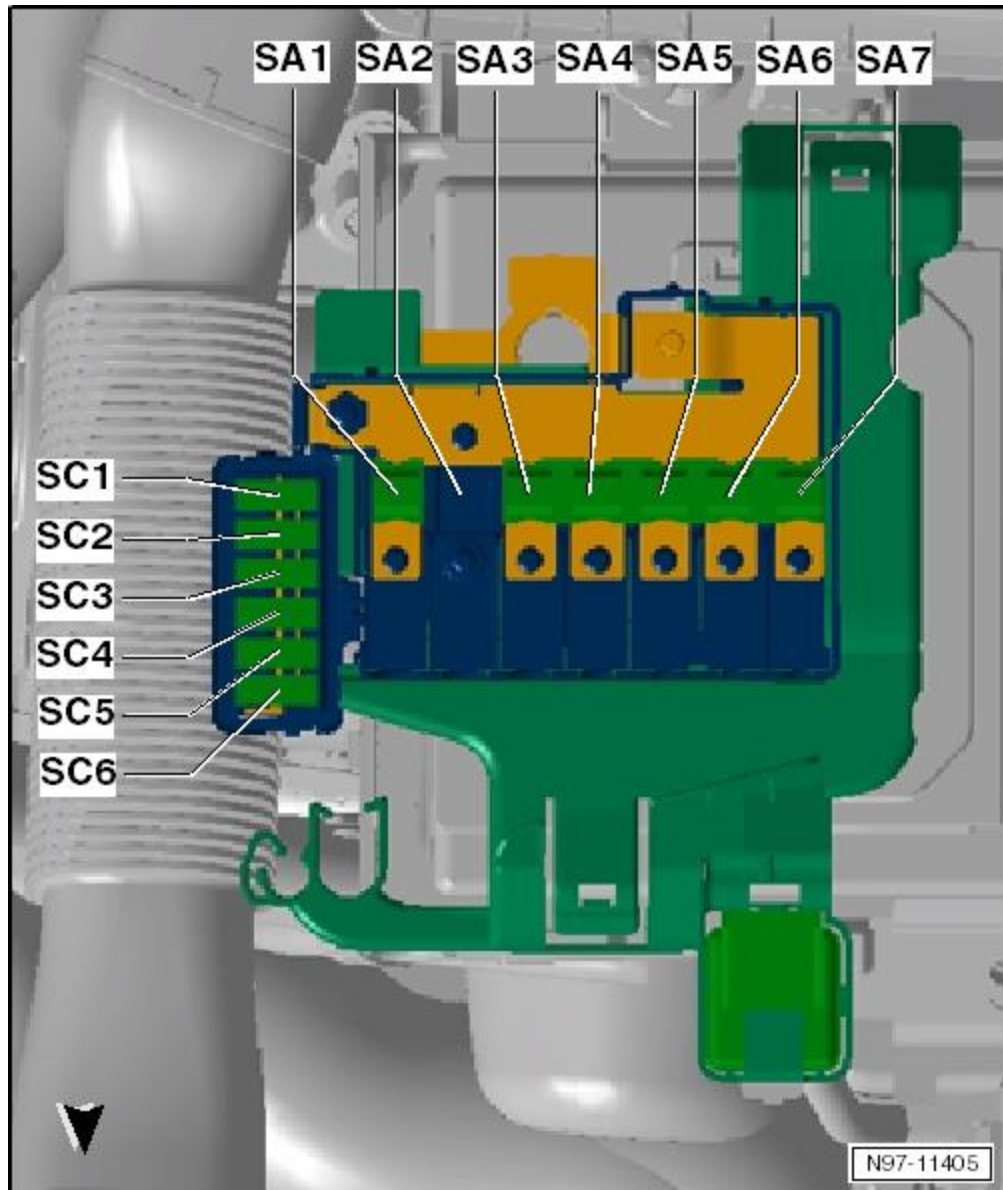

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
- SA1-	Fuse 1 on fuse holder A	150A	- Alternator -C-	30
- SA2-	Fuse 2 on fuse holder A		- Not assigned	
- SA3-	Fuse 3 on fuse holder A	110A	- Ignition/starter switch -D- - Light switch -E1- - Steering column combination switch -E595- - X-contact relief relay -J59- - Fuel pump relay -J17- - Fuel supply relay -J643- - Dipped beam relay -J331-	30

			Fuse 20 on fuse holder B -SB20- Side light relay -J3- Terminal 30 voltage supply relay - J317- Fuse 3 on fuse holder B -SB3-	
- SA4-	Fuse 4 on fuse holder A	50A	-Power steering control unit -J500-	30
- SA5-	Fuse 5 on fuse holder A	40A	-ABS control unit -J104-	30
- SA6-	Fuse 6 on fuse holder A	40A	-Radiator fan control unit -J293- ¹⁾ Radiator fan -V7- ¹⁾	30
- SA7-	Fuse 7 on fuse holder A	50A	-Automatic glow period control unit - J179-	30
- SC1-	Fuse 1 on fuse holder C	25A	-ABS control unit -J104-	30
- SC2-	Fuse 2 on fuse holder C	30A	-Radiator fan control unit -J293- ²⁾ Radiator fan -V7- ²⁾	30
- SC3-	Fuse 3 on fuse holder C	-	-Not assigned	
- SC4-	Fuse 4 on fuse holder C	10A	-ABS control unit -J104-	30
- SC5-	Fuse 5 on fuse holder C	5A	-Onboard supply control unit -J519- (T73b/59)	30
- SC6-	Fuse 6 on fuse holder C	-	-Not assigned	-

¹⁾ From November


²⁾ Up to November

Back to overview → [Chapter](#)

Fuse assignment on fuse holder A -SA-, fuse holder C -SC-, from August 2015

Fuse colours

- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red
- 7,5 A - brown
- 5 A - beige
- 3 A - purple

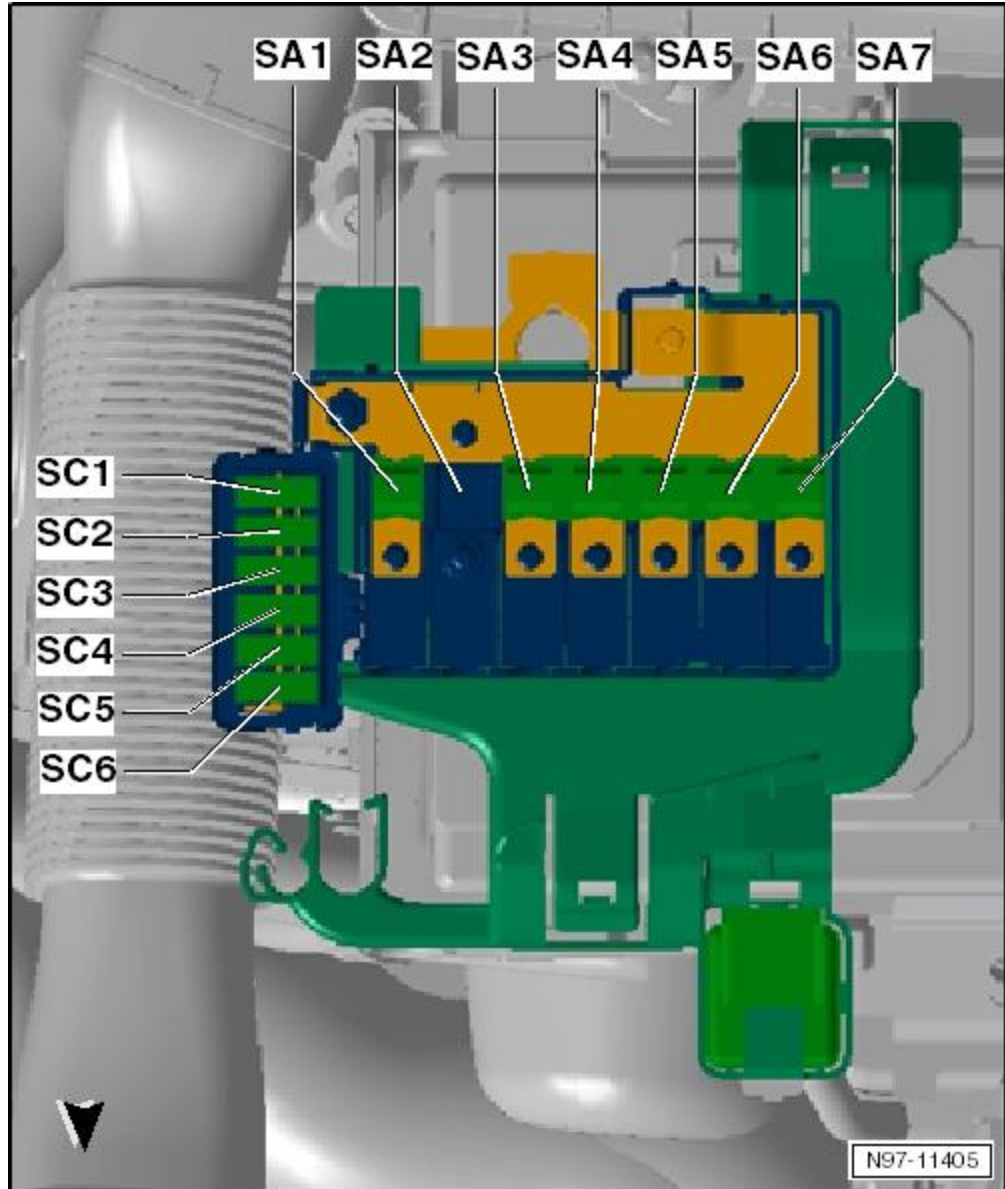

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
- SA1-	- Fuse 1 on fuse holder A		- Not assigned	30
- SA2-	- Fuse 2 on fuse holder A		- Not assigned	
- SA3-	- Fuse 3 on fuse holder A	110 A	- Ignition/starter switch -D- - Light switch -E1- - Steering column combination switch -E595- - X-contact relief relay -J59- - Fuel pump relay -J17- - Fuel supply relay -J643- - Dipped beam relay -J331-	30

			Fuse 20 on fuse holder B -SB20- Side light relay -J3- Terminal 30 voltage supply relay - J317- Fuse 3 on fuse holder B -SB3-	
- SA4-	Fuse 4 on fuse holder A	50 A	- Power steering control unit -J500-	30
- SA5-	Fuse 5 on fuse holder A	40 A	- ABS control unit -J104-	30
- SA6-	Fuse 6 on fuse holder A	40 A	- Radiator fan control unit -J293- Radiator fan -V7-	30
- SA7-	Fuse 7 on fuse holder A	50 A	- Automatic glow period control unit - J179-	30
- SC1-	Fuse 1 on fuse holder C	25 A	- ABS control unit -J104-	30
- SC2-	Fuse 2 on fuse holder C	30 A	- Radiator fan control unit -J293- Radiator fan thermal switch -F18-	30
- SC3-	Fuse 3 on fuse holder C		- Not assigned	
- SC4-	Fuse 4 on fuse holder C		- Not assigned	30
- SC5-	Fuse 5 on fuse holder C	10 A	- Onboard supply control unit -J519-	30
- SC6-	Fuse 6 on fuse holder C	25 A	- Automatic gearbox control unit -J217-	-

Back to overview → [Chapter](#)

Fuse assignment
on fuse holder B,
from August
2010

Fuse colours

30 A - green

25 A - white

20 A - yellow


15 A - blue

10 A - red

7,5 A - brown

5 A - beige

3 A - purple

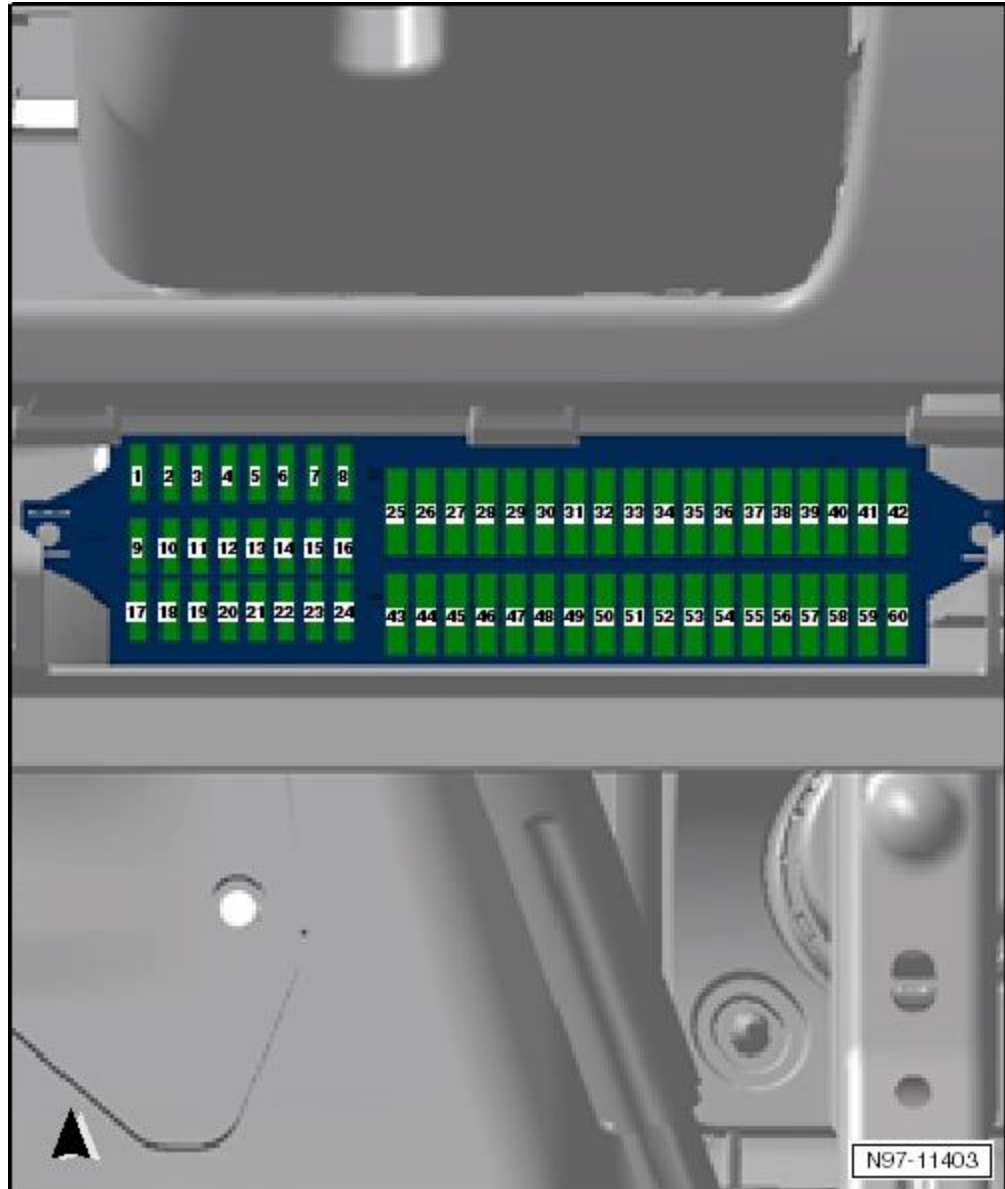

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	- Fuse 1 on fuse holder B - SB1-		- Not assigned	
2	- Fuse 2 on fuse holder B - SB2-	10A	- Steering column combination switch - E595- Rear window wiper motor -V12- Windscreen and rear window washer pump -V59-	15
3	- Fuse 3 on fuse holder B - SB3-	5A	- Fuel pump relay -J17- Engine control unit -J623-	15
4	- Fuse 4 on fuse holder B - SB4-	2A	- Steering column combination switch - E595- ¹⁾	15

			Multifunction steering wheel control unit - J453- ¹⁾	
5	- Fuse 5 on fuse holder B - SB5-		- Not assigned	
6	- Fuse 6 on fuse holder B - SB6-	5A	- Control unit in dash panel insert -J285-	15
7	- Fuse 7 on fuse holder B - SB7-	5A	- Headlight range control regulator -E102- Left number plate light -X4- Right number plate light -X5- Switch and instrument illumination regulator -E20- ¹⁾	58
8	- Fuse 8 on fuse holder B - SB8-	10A	- Injector, cylinder 1 -N30- Injector, cylinder 2 -N31- Injector, cylinder 3 -N32- Injector, cylinder 4 -N33-	87
9	- Fuse 9 on fuse holder B - SB9-	5A 7.5A ¹⁾	- ABS control unit -J104- TCS and ESP button -E256- ¹⁾ Steering column combination switch - E595- ¹⁾	15
10	- Fuse 10 on fuse holder B - SB10-	5A	- Vehicle speed sender -G68- Onboard supply control unit -J519- (T73a/44) t Ignition/starter switch -D-	15
11	- Fuse 11 on fuse holder B - SB11-	5A	- Headlight range control regulator -E102- Left headlight range control motor -V48- Right headlight range control motor -V49- Steering column combination switch - E595- ¹⁾	15
12	- Fuse 12 on fuse holder B - SB12-	5A	- Mirror adjustment switch -E43-	15
13	- Fuse 13 on fuse holder B - SB13-	15A	- Automatic gearbox control unit -J217- Multifunction switch -F125- Selector lever -E313-	15
14	- Fuse 14 on fuse holder B - SB14-	5A	- Airbag control unit -J234- Front passenger airbag deactivated warning lamp -K145- ¹⁾	15
15	- Fuse 15 on fuse holder B - SB15-		- Not assigned	
16	- Fuse 16 on fuse holder B - SB16-		- Not assigned	
17	- Fuse 17 on fuse holder B - SB17-	10A	- Lambda probe heater -Z19- Lambda probe 1 heater after catalytic converter -Z29- Activated charcoal filter solenoid valve 1 - N80-	87

18	- Fuse 18 on fuse holder B -SB18-	5A	- Control unit in dash panel insert -J285- Rear right fog light bulb -L47-	55a
19	- Fuse 19 on fuse holder B -SB19-	5A	- Side light relay -J3- Radio -R- Onboard supply control unit -J519- (T73a/42) t Ignition/starter switch -D-	75
20	- Fuse 20 on fuse holder B -SB20-	5A	- Control unit in dash panel insert -J285- Steering column combination switch - E595- ¹⁾	30
21	- Fuse 21 on fuse holder B -SB21-	10A	- Onboard supply control unit -J519- (T73a/66) t Driver side reading light -W19- t Front passenger reading light -W13- Interior light with switch-off delay - t W15- t Right luggage compartment light -W35- t Rear centre reading light -W44-	30
22	- Fuse 22 on fuse holder B -SB22-	5A	- Diagnostic connection -U31- Air conditioning system control unit - J301- Climatronic control unit -J255- Ignition key withdrawal lock solenoid - N376-	30
23	- Fuse 23 on fuse holder B -SB23-	7.5A	- Onboard supply control unit -J519- (T73b/39) Engine control unit -J623- Automatic gearbox control unit -J217- Selector lever -E313-	30
24	- Fuse 24 on fuse holder B -SB24-		- Not assigned	
25	- Fuse 25 on fuse holder B -SB25-	5A	- High-pressure sender -G65- Air conditioning system relay -J32- Air conditioning system control unit - J301- Diagnostic connection -U31-	15
26	- Fuse 26 on fuse holder B -SB26-	5A 7.5A ³⁾	- Power steering control unit -J500- Air mass meter -G70-	15
27	- Fuse 27 on fuse holder B -SB27-	5A	- Reversing light switch -F4-	15
28	- Fuse 28 on fuse holder B -SB28-		- Not assigned	
29	- Fuse 29 on fuse holder B	10A	- Fuel pressure regulating valve -N276-	87

	-SB29-		Fuel metering valve -N290-	
30	-Fuse 30 on fuse holder B -SB30-	10A	-Coolant circulation pump 2 -V178- Exhaust gas recirculation cooler changeover valve -N345- Charge pressure control solenoid valve - N75-	87
31	-Fuse 31 on fuse holder B -SB31-	10A	-Fuel supply relay -J643- Automatic glow period control unit -J179-	87
32	-Fuse 32 on fuse holder B -SB32-	30A	-Engine control unit -J623-	87
33	-Fuse 33 on fuse holder B -SB33-	5A	-Clutch pedal switch -F36- Brake light switch -F- Radiator fan control unit -J293-	87
34	-Fuse 34 on fuse holder B -SB34-	7.5A 15A ¹⁾	-Right headlight main beam bulb -M32- Left headlight main beam bulb -M30- ¹⁾ Control unit in dash panel insert -J285- ¹⁾	56a
35	-Fuse 35 on fuse holder B -SB35-	10A	-Engine control unit -J623-	87
36	-Fuse 36 on fuse holder B -SB36-	15A 20A ¹⁾	-Fuel system pressurisation pump -G6- Fuel supply relay -J643-	87
37	-Fuse 37 on fuse holder B -SB37-		-Not assigned	
38	-Fuse 38 on fuse holder B -SB38-	7.5A	-Left headlight main beam bulb -M30- Control unit in dash panel insert -J285-	56a
39	-Fuse 39 on fuse holder B -SB39-	10A	-Right headlight dipped beam bulb -M31-	56b
40	-Fuse 40 on fuse holder B -SB40-	30A	-Fresh air blower switch -E9- Fresh air blower control unit -J126-	75
41	-Fuse 41 on fuse holder B -SB41-		-Reserve	
42	-Fuse 42 on fuse holder B -SB42-	15A	-Cigarette lighter -U1-	75
43	-Fuse 43 on fuse holder B -SB43-	15A	-Onboard supply control unit -J519- (T73b/13) t Front left turn signal bulb -M5- t Front right turn signal bulb -M7- t Rear left turn signal bulb -M6- t Rear right turn signal bulb -M8- t Left brake light bulb -M9- t Right brake light bulb -M10- t High-level brake light bulb -M25-	30
44	-Fuse 44 on fuse holder B	5A	-Anti-theft alarm ultrasonic sensor -G209-	30

	-SB44-	10A ¹⁾	Alarm horn -H12-	
45	-Fuse 45 on fuse holder B -SB45-	15A	-Radio -R-	30
46	-Fuse 46 on fuse holder B -SB46-	20A	-Onboard supply control unit -J519- (T73a/73) t Treble horn -H2- t Bass horn -H7-	30
47	-Fuse 47 on fuse holder B -SB47-	20A	-Onboard supply control unit -J519- (T73a/68) t Windscreen wiper motor -V-	30
48	-Fuse 48 on fuse holder B -SB48-	25A	-Onboard supply control unit -J519- (T73a/16) t Driver side central locking lock unit - F220- t Front passenger side central locking lock unit -F221- t Rear left central locking lock unit - F222- t Rear right central locking lock unit - F223- t Rear lid lock unit -F256- t Tank filler flap locking motor -V155-	30
49	-Fuse 49 on fuse holder B -SB49-	5A	-Onboard supply control unit -J519- ²⁾ t Left reversing light bulb -M16-	30
50	-Fuse 50 on fuse holder B -SB50-	25A	-Driver door control unit -J386-	30
51	-Fuse 51 on fuse holder B -SB51-	25A	-Front passenger door control unit -J387-	30
52	-Fuse 52 on fuse holder B -SB52-	30A	-Rear left door control unit -J388- Rear right door control unit -J389-	30
53	-Fuse 53 on fuse holder B -SB53-	30A	-Onboard supply control unit -J519- (T73b/67) t heated rear window -Z1-	30
54	-Fuse 54 on fuse holder B -SB54-	15A	-Left fog light bulb -L22- Right fog light bulb -L23-	55
55	-Fuse 55 on fuse holder B -SB55-	15A	-Ignition coil 1 with output stage -N70- Ignition coil 2 with output stage -N127- Ignition coil 3 with output stage -N291- Ignition coil 4 with output stage -N292-	87
56	-Fuse 56 on fuse holder B -SB56-		-Not assigned	

57	- Fuse 57 on fuse holder B -SB57-	5A	- Left side light bulb -M1- - Left tail light -MX3-	30
58	- Fuse 58 on fuse holder B -SB58-	5A	- Right side light bulb -M3- - Right tail light -MX4-	87
59	- Fuse 59 on fuse holder B -SB59-	10A	- Left headlight dipped beam bulb -M29-	56b
60	- Fuse 60 on fuse holder B -SB60-		- Reserve	

- 1) According to equipment
- 2) Only models with automatic gearbox
- 3) From November 2010

Back to overview → [Chapter](#)

Fuse assignment
on fuse holder B,
from August
2011

Fuse colours

30 A - green

25 A - white

20 A - yellow


15 A - blue

10 A - red

7,5 A - brown

5 A - beige

3 A - purple

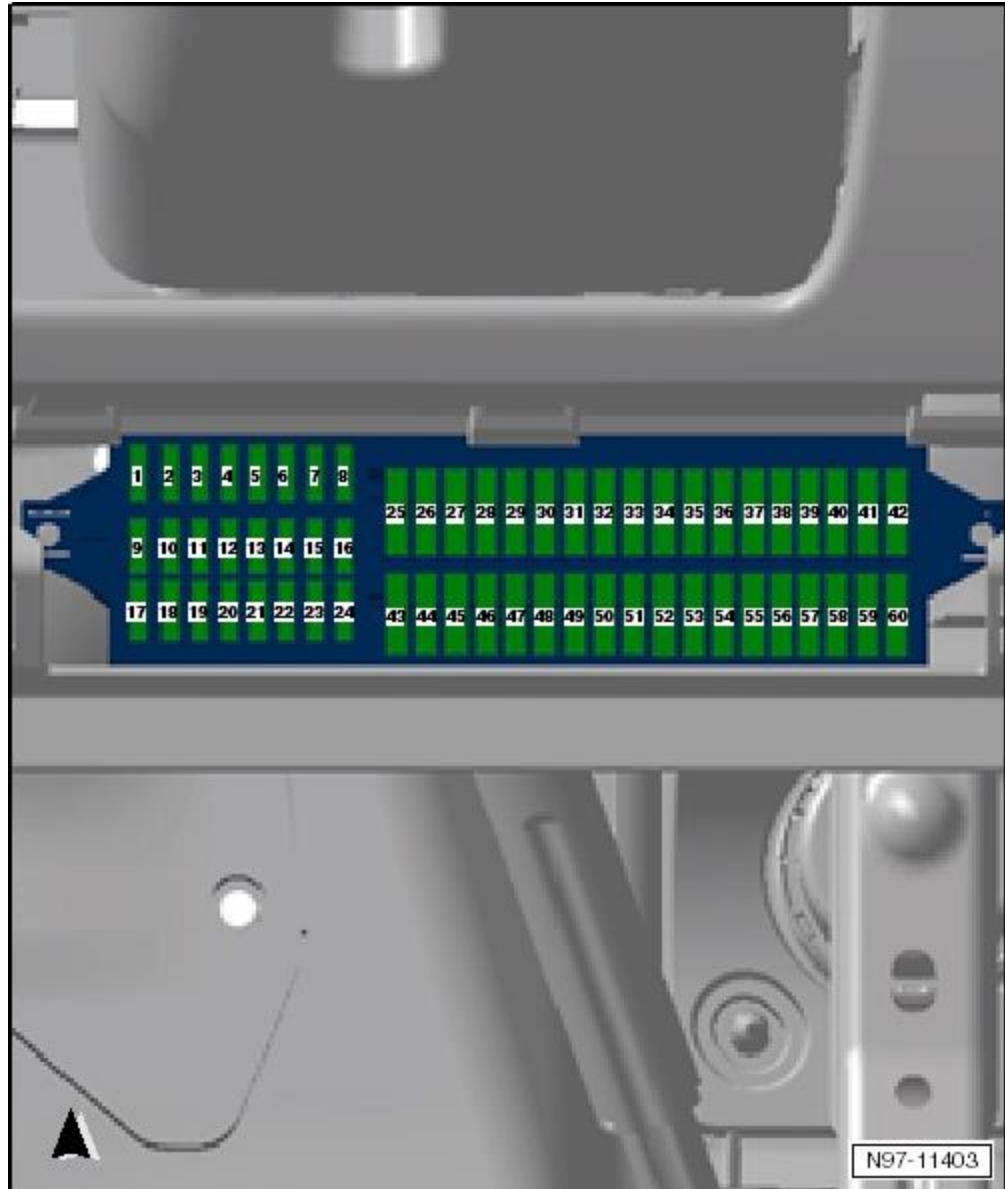

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	- Fuse 1 on fuse holder B -SB1-		- Not assigned	
2	- Fuse 2 on fuse holder B -SB2-	10A	- Steering column combination switch -E595- Rear window wiper motor -V12- Windscreen and rear window washer pump -V59-	15
3	- Fuse 3 on fuse holder B -SB3-	5A	- Fuel pump relay -J17- Engine control unit -J623-	15
4	- Fuse 4 on fuse holder B -SB4-	2A	- Steering column combination switch -E595- ¹⁾ Multifunction steering wheel control unit -	15

			J453- ¹⁾	
5	-Fuse 5 on fuse holder B -SB5-		-Not assigned	
6	-Fuse 6 on fuse holder B -SB6-	5A	-Control unit in dash panel insert -J285-	15
7	-Fuse 7 on fuse holder B -SB7-	5A	-Headlight range control regulator -E102- Left number plate light -X4- Right number plate light -X5- Switch and instrument illumination regulator -E20- ¹⁾	58
8	-Fuse 8 on fuse holder B -SB8-		-Not assigned	
9	-Fuse 9 on fuse holder B -SB9-	5A 7.5A ¹⁾	-ABS control unit -J104- TCS and ESP button -E256- ¹⁾ Steering column combination switch -E595- ¹⁾	15
10	-Fuse 10 on fuse holder B -SB10-	5A	-Vehicle speed sender -G68- Onboard supply control unit -J519- (T73a/44) t Ignition/starter switch -D-	15
11	-Fuse 11 on fuse holder B -SB11-	5A	-Headlight range control regulator -E102- Left headlight range control motor -V48- Right headlight range control motor -V49- Steering column combination switch -E595- ¹⁾	15
12	-Fuse 12 on fuse holder B -SB12-	5A	-Mirror adjustment switch -E43-	15
13	-Fuse 13 on fuse holder B -SB13-	15A	-Automatic gearbox control unit -J217- Multifunction switch -F125- Selector lever -E313-	15
14	-Fuse 14 on fuse holder B -SB14-	5A	-Airbag control unit -J234- Front passenger airbag deactivated warning lamp -K145- ¹⁾	15
15	-Fuse 15 on fuse holder B -SB15-		-Not assigned	
16	-Fuse 16 on fuse holder B -SB16-	5A	-Parking aid control unit -J446-	15
17	-Fuse 17 on fuse holder B -SB17-	10A	-Lambda probe heater -Z19- Lambda probe 1 heater after catalytic converter -Z29- Activated charcoal filter solenoid valve 1 -N80-	87
18	-Fuse 18 on fuse holder B -SB18-	5A	-Control unit in dash panel insert -J285- Rear right fog light bulb -L47-	55a
19	-Fuse 19 on fuse holder B -SB19-	5A	-Side light relay -J3- Radio -R- Onboard supply control unit -J519- (T73a/42) t Ignition/starter switch -D-	75

20	- Fuse 20 on fuse holder B -SB20-	5A	- Control unit in dash panel insert -J285- Steering column combination switch -E595- ¹⁾	30
21	- Fuse 21 on fuse holder B -SB21-	10A	- Onboard supply control unit -J519- (T73a/66) t Driver side reading light -W19- t Front passenger reading light -W13- t Interior light with switch-off delay -W15- t Right luggage compartment light -W35- t Rear centre reading light -W44-	30
22	- Fuse 22 on fuse holder B -SB22-	5A	- Diagnostic connection -U31- Air conditioning system control unit -J301- Climatronic control unit -J255- Ignition key withdrawal lock solenoid -N376-	30
23	- Fuse 23 on fuse holder B -SB23-	7.5A	- Onboard supply control unit -J519- (T73b/39) Engine control unit -J623- Automatic gearbox control unit -J217- Selector lever -E313- Rain sensor -G213-	30
24	- Fuse 24 on fuse holder B -SB24-		- Not assigned	
25	- Fuse 25 on fuse holder B -SB25-	5A	- High-pressure sender -G65- Air conditioning system relay -J32- Air conditioning system control unit -J301- Diagnostic connection -U31- Automatic anti-dazzle interior mirror -Y7-	15
26	- Fuse 26 on fuse holder B -SB26-	7.5A	- Power steering control unit -J500- Air mass meter -G70-	15
27	- Fuse 27 on fuse holder B -SB27-	5A	- Reversing light switch -F4-	15
28	- Fuse 28 on fuse holder B -SB28-		- Not assigned	
29	- Fuse 29 on fuse holder B -SB29- ³⁾	15A	- Ignition coil 1 with output stage -N70- Ignition coil 2 with output stage -N127- Ignition coil 3 with output stage -N291- Ignition coil 4 with output stage -N292-	87
29	- Fuse 29 on fuse holder B -SB29- ⁴⁾	10A	- Fuel pressure regulating valve -N276- Fuel metering valve -N290-	87
30	- Fuse 30 on fuse holder B -SB30-	10A	- Coolant circulation pump 2 -V178- Exhaust gas recirculation cooler changeover valve -N345- Charge pressure control solenoid valve -N75-	87
31	- Fuse 31 on fuse holder B -SB31- ³⁾	10A	- Injector, cylinder 1 -N30- Injector, cylinder 2 -N31- Injector, cylinder 3 -N32-	87

			Injector, cylinder 4 -N33-	
31	-Fuse 31 on fuse holder B -SB31- ⁴⁾	10A	-Fuel supply relay -J643- Automatic glow period control unit -J179-	87
32	-Fuse 32 on fuse holder B -SB32-	30A 10A ¹⁾	-Engine control unit -J623-	87
33	-Fuse 33 on fuse holder B -SB33-	5A	-Clutch pedal switch -F36- Brake light switch -F- Radiator fan control unit -J293-	87
34	-Fuse 34 on fuse holder B -SB34-	7.5A 15A ¹⁾	-Right headlight main beam bulb -M32- Left headlight main beam bulb -M30- ¹⁾ Control unit in dash panel insert -J285- ¹⁾	56a
35	-Fuse 35 on fuse holder B -SB35-		-Not assigned	
36	-Fuse 36 on fuse holder B -SB36-	15A 20A ¹⁾	-Fuel system pressurisation pump -G6- Fuel supply relay -J643-	87
37	-Fuse 37 on fuse holder B -SB37-		-Not assigned	
38	-Fuse 38 on fuse holder B -SB38-	7.5A	-Left headlight main beam bulb -M30- Control unit in dash panel insert -J285-	56a
39	-Fuse 39 on fuse holder B -SB39-	10A	-Right headlight dipped beam bulb -M31-	56b
40	-Fuse 40 on fuse holder B -SB40-	30A	-Fresh air blower switch -E9- Fresh air blower control unit -J126-	75
41	-Fuse 41 on fuse holder B -SB41-		-Not assigned	
42	-Fuse 42 on fuse holder B -SB42-	15A	-Cigarette lighter -U1-	75
43	-Fuse 43 on fuse holder B -SB43-	15A	-Onboard supply control unit -J519- (T73b/13) t Front left turn signal bulb -M5- t Front right turn signal bulb -M7- t Rear left turn signal bulb -M6- t Rear right turn signal bulb -M8- t Left brake light bulb -M9- t Right brake light bulb -M10- t High-level brake light bulb -M25-	30
44	-Fuse 44 on fuse holder B -SB44-	5A 10A ¹⁾	-Anti-theft alarm ultrasonic sensor -G209- Alarm horn -H12-	30
45	-Fuse 45 on fuse holder B -SB45-	15A	-Radio -R- Multimedia system control unit -J650- ¹⁾	30
46	-Fuse 46 on fuse holder B -SB46-	20A	-Onboard supply control unit -J519- (T73a/73) t Treble horn -H2- t Bass horn -H7-	30

47	-Fuse 47 on fuse holder B -SB47-	20A	-Onboard supply control unit -J519- (T73a/68) t Windscreen wiper motor -V-	30
48	-Fuse 48 on fuse holder B -SB48-	25A	-Onboard supply control unit -J519- (T73a/16) t Driver side central locking lock unit -F220- t Front passenger side central locking lock unit -F221- t Rear left central locking lock unit -F222- t Rear right central locking lock unit -F223- t Rear lid lock unit -F256- t Tank filler flap locking motor -V155-	30
49	-Fuse 49 on fuse holder B -SB49-	5A	-Onboard supply control unit -J519- ²⁾ t Left reversing light bulb -M16-	30
50	-Fuse 50 on fuse holder B -SB50-	25A	-Driver door control unit -J386-	30
51	-Fuse 51 on fuse holder B -SB51-	25A	-Front passenger door control unit -J387-	30
52	-Fuse 52 on fuse holder B -SB52-	30A	-Rear left door control unit -J388- Rear right door control unit -J389-	30
53	-Fuse 53 on fuse holder B -SB53-	30A	-Onboard supply control unit -J519- (T73b/67) t heated rear window -Z1-	30
54	-Fuse 54 on fuse holder B -SB54-	15A	-Left fog light bulb -L22- Right fog light bulb -L23-	55
55	-Fuse 55 on fuse holder B -SB55-		-Not assigned	
56	-Fuse 56 on fuse holder B -SB56-		-Not assigned	
57	-Fuse 57 on fuse holder B -SB57-	5A	-Left side light bulb -M1- Left tail light -MX3-	30
58	-Fuse 58 on fuse holder B -SB58-	5A	-Right side light bulb -M3- Right tail light -MX4-	87
59	-Fuse 59 on fuse holder B -SB59-	10A	-Left headlight dipped beam bulb -M29-	56b
60	-Fuse 60 on fuse holder B -SB60-		-Not assigned	

1) According to equipment

2) Only models with automatic gearbox

3) Only models with petrol engine

4) Only models with a diesel engine

Back to overview → [Chapter](#)

Fuse assignment
on fuse holder B
-SB-, from
August 2015

Fuse colours

30 A - green

25 A - white

20 A - yellow


15 A - blue

10 A - red

7,5 A - brown

5 A - beige

3 A - purple

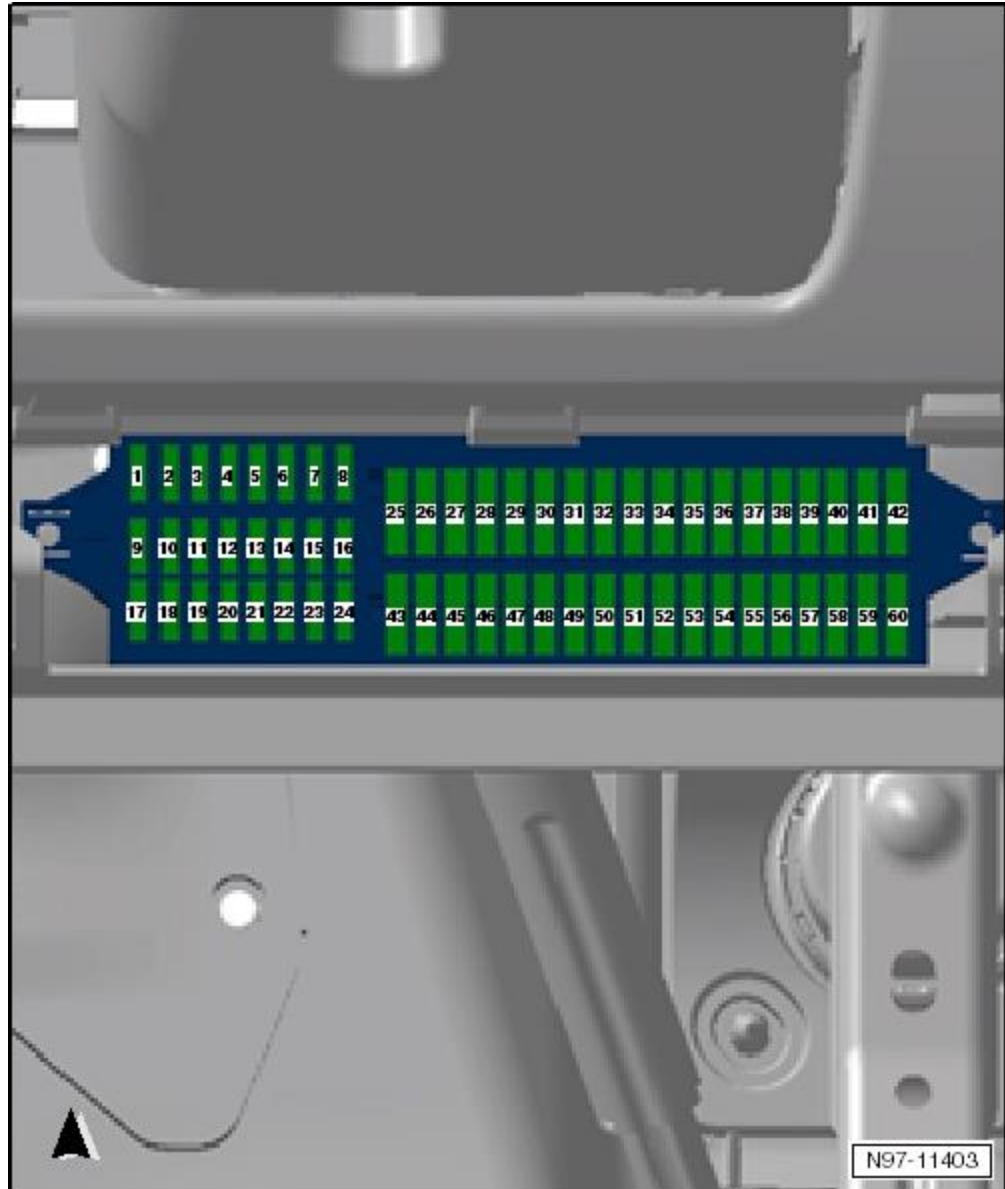

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	- Fuse 1 on fuse holder B -SB1-		- Not assigned	
2	- Fuse 2 on fuse holder B -SB2-	10 A	- Steering column combination switch -E595- t Intermittent wiper switch -E22- t Washer pump switch (automatic wash/wipe t and headlight washer system) -E44-	15
3	- Fuse 3 on fuse holder B -SB3-	7.5 A	- Fuel pump relay -J17- Onboard supply control unit -J519- t Ignition/starter switch -D- Fuel pump control unit -J538-	15

			Engine control unit -J623- Fuel supply relay -J643-	
4	- Fuse 4 on fuse holder B -SB4-	7.5 A	- Steering column combination switch -E595- t Multifunction steering wheel control unit - J453-	15
5	- Fuse 5 on fuse holder B -SB5-		- Not assigned	
6	- Fuse 6 on fuse holder B -SB6-		- Not assigned	
7	- Fuse 7 on fuse holder B -SB7-	15 A	- Left number plate light -X4- Right number plate light -X5- Switch and instrument illumination regulator - E20-	58
8	- Fuse 8 on fuse holder B -SB8-		- Not assigned	
9	- Fuse 9 on fuse holder B -SB9-	7.5 A	- ABS control unit -J104- TCS and ESP button -E256- Tyre Pressure Loss Indicator button -E492- Steering column combination switch -E595- t Steering angle sender -G85- ⁵⁾	15
10	- Fuse 10 on fuse holder B -SB10-	7.5 A	- Radio -R-	15
11	- Fuse 11 on fuse holder B -SB11-	10 A	- Headlight range control regulator -E102- Steering column combination switch -E595- t Cruise control system switch -E45- Headlight range control unit -J431- Dash panel insert -KX2- t Control unit in dash panel insert -J285- Left headlight range control motor -V48- Right headlight range control motor -V49-	15
12	- Fuse 12 on fuse holder B -SB12-	7.5 A	- Mirror adjustment switch -E43- Driver side exterior mirror -VX4- Front passenger side exterior mirror -VX5-	15
13	- Fuse 13 on fuse holder B -SB13-	10 A	- Automatic gearbox control unit -J217-	15
14	- Fuse 14 on fuse holder B -SB14-	15 A	- Airbag control unit -J234-	15
15	- Fuse 15 on fuse holder B -SB15-		- Not assigned	
16	- Fuse 16 on fuse holder B -SB16-	10 A	- Parking aid control unit -J446-	15

17	- Fuse 17 on fuse holder B -SB17-	10 A	- Windscreen and rear window washer pump - V59-	87
18	- Fuse 18 on fuse holder B -SB18-	7.5 A	- Dash panel insert -KX2- t Control unit in dash panel insert -J285- Rear right fog light bulb -L47-	55a
19	- Fuse 19 on fuse holder B -SB19-	7.5 A	- Side light relay -J3- Radio -R- Onboard supply control unit -J519- t Ignition/starter switch -D-	75
20	- Fuse 20 on fuse holder B -SB20-	10 A	- Dash panel insert -KX2- t Control unit in dash panel insert -J285- Steering column combination switch -E595- t Steering angle sender -G85- ⁵⁾ Main relay -J271- ³⁾ Terminal 30 voltage supply relay -J317- ⁴⁾	30
21	- Fuse 21 on fuse holder B -SB21-	15 A	- Onboard supply control unit -J519- t Driver side reading light -W19- t Front passenger reading light -W13- t Interior light with switch-off delay -W15- t Right luggage compartment light -W35- t Rear centre reading light -W44-	30
22	- Fuse 22 on fuse holder B -SB22-	10 A	- Diagnostic connection -U31- Rain and light sensor -G397- Side light relay -J3- Heated exterior mirror relay -J99- Climatronic control unit -J255- Air conditioning system control unit -J301- Ignition key withdrawal lock solenoid -N376-	30
23	- Fuse 23 on fuse holder B -SB23-	10 A	- Selector lever -E313- Rain sensor -G213- Automatic gearbox control unit -J217- Onboard supply control unit -J519- Engine control unit -J623-	30
24	- Fuse 24 on fuse holder B -SB24-	15 A	- Onboard supply control unit -J519- t Heated exterior mirror on driver side -Z4- t Heated exterior mirror on front passenger side -Z5- t Heated exterior mirror relay -J99-	30

25	- Fuse 25 on fuse holder B -SB25-	15 A	- Interior mirror -EX5- t Automatic anti-dazzle interior mirror -Y7- High-pressure sender -G65- Climatronic control unit -J255- Radiator fan control unit -J293- Air conditioning system control unit -J301- Air conditioner compressor regulating valve -N280- Diagnostic connection -U31-	15
26	- Fuse 26 on fuse holder B -SB26-	20 A	- Air mass meter -G70- Air conditioning system relay -J32- Power steering control unit -J500-	15
27	- Fuse 27 on fuse holder B -SB27-	15 A	- Reversing light switch -F4-	15
28	- Fuse 28 on fuse holder B -SB28-	15 A	- Lambda probe 1 after catalytic converter -GX7- t Lambda probe -G39- t Lambda probe heater -Z19- Lambda probe 1 before catalytic converter -GX10- t Lambda probe after catalytic converter -G130- t Lambda probe 1 heater after catalytic converter -Z29- Injector, cylinder 1 -N30- Injector, cylinder 2 -N31- Injector, cylinder 3 -N32- Injector, cylinder 4 -N33- Activated charcoal filter solenoid valve 1 -N80- Automatic glow period control unit -J179- ⁴⁾	87
29	- Fuse 29 on fuse holder B -SB29-	20 A ³⁾ 15 A ⁴⁾	- Ignition coil 1 with output stage -N70- ⁷⁾ Ignition coil 2 with output stage -N127- ⁷⁾ Fuel pressure regulating valve -N276- ⁴⁾ Fuel metering valve -N290- ⁴⁾ Ignition coil 3 with output stage -N291- ⁷⁾ Ignition coil 4 with output stage -N292- ⁷⁾ Output stage -N122- ⁶⁾ Ignition transformer -N152- ⁶⁾	87
30	- Fuse 30 on fuse holder B -SB30-	-	- Not assigned	
31	- Fuse 31 on fuse holder B -SB31- ³⁾	15 A	- Ignition coil 1 with output stage -N70- ⁸⁾ Ignition coil 2 with output stage -N127- ⁸⁾	87

			Ignition coil 3 with output stage -N291- ⁸⁾ Ignition coil 4 with output stage -N292- ⁸⁾ Charge pressure control solenoid valve -N75- ⁴⁾ Automatic glow period control unit -J179- ⁴⁾ Exhaust gas recirculation cooler changeover valve -N345- ⁴⁾ Coolant circulation pump 2 -V178- ⁴⁾	
32	- Fuse 32 on fuse holder B -SB32-	30 A	- Engine control unit -J623-	87
33	- Fuse 33 on fuse holder B -SB33-	10 A	- Brake light switch -F-Clutch pedal switch -F36- Air conditioning system relay -J32- Radiator fan control unit -J293-	87
34	- Fuse 34 on fuse holder B -SB34-	20 A	- Front left headlight -MX1- t Right headlight main beam bulb -M32- Front right headlight -MX2- t Left main beam bulb -M30- Dash panel insert -KX2- t Control unit in dash panel insert -J285-	56a
35	- Fuse 35 on fuse holder B -SB35-		- Not assigned	
36	- Fuse 36 on fuse holder B -SB36-	20 A	- Fuel system pressurisation pump -G6- Fuel pump relay -J17- Fuel supply relay -J643-	87
37	- Fuse 37 on fuse holder B -SB37-		- Not assigned	
38	- Fuse 38 on fuse holder B -SB38-	30 A	- Automatic gearbox control unit -J217-	30
39	- Fuse 39 on fuse holder B -SB39-	15 A	- Front right headlight -MX2- t Right headlight dipped beam bulb -M31-	56b
40	- Fuse 40 on fuse holder B -SB40-	30 A	- Fresh air blower control unit -J126-	75
41	- Fuse 41 on fuse holder B -SB41-		- Not assigned	
42	- Fuse 42 on fuse holder B -SB42-	20 A	- Cigarette lighter -U1-	75
43	- Fuse 43 on fuse holder B -SB43-	20 A	- Onboard supply control unit -J519- t Front left turn signal bulb -M5- t Front right turn signal bulb -M7- t Rear left turn signal bulb -M6-	30

			<ul style="list-style-type: none"> t Rear right turn signal bulb -M8- t Left brake light bulb -M9- t Right brake light bulb -M10- t High-level brake light bulb -M25- 	
44	-Fuse 44 on fuse holder B -SB44-	10 A	-Anti-theft alarm sensor -G578- -Anti-theft alarm system horn -H8-	30
45	-Fuse 45 on fuse holder B -SB45-	30 A	-Radio -R-	30
46	-Fuse 46 on fuse holder B -SB46-	30 A	-Onboard supply control unit -J519- t Horn and dual tone horn -H1-	30
47	-Fuse 47 on fuse holder B -SB47-	30 A	-Onboard supply control unit -J519- t Windscreen wiper motor -V-	30
48	-Fuse 48 on fuse holder B -SB48-	30 A	-Onboard supply control unit -J519- t Driver side central locking lock unit -F220- t Front passenger side central locking lock unit -F221- t Rear left central locking lock unit -F222- t Rear right central locking lock unit -F223- t Rear lid lock unit -F256- t Tank filler flap locking motor -V155-	30
49	-Fuse 49 on fuse holder B -SB49-	15 A	-Onboard supply control unit -J519- t Left reversing light bulb -M16- ¹⁾ t Right reversing light bulb -M17- ¹⁾	30
50	-Fuse 50 on fuse holder B -SB50-	30 A	-Driver door control unit -J386- ¹⁾ -Front left window regulator switch -E40- -Driver side window regulator motor -V147-	30
51	-Fuse 51 on fuse holder B -SB51-	30 A	-Front passenger door control unit -J387- ¹⁾ -Window regulator switch in front passenger door -E107- -Front passenger side window regulator motor -V148-	30
52	-Fuse 52 on fuse holder B -SB52-	30 A	-Rear left door control unit -J388- -Rear right door control unit -J389- -Rear left window regulator switch, in door -E52- -Rear right window regulator switch, in door -E54- -Rear left window regulator motor -V26- -Rear right window regulator motor -V27-	30
53	-Fuse 53 on fuse holder B -SB53-	30 A	-Onboard supply control unit -J519-	30


			t heated rear window -Z1-	
54	-Fuse 54 on fuse holder B -SB54-	20 A	-Left fog light bulb -L22- -Right fog light bulb -L23-	55
55	-Fuse 55 on fuse holder B -SB55-		-Not assigned	
56	-Fuse 56 on fuse holder B -SB56-		-Not assigned	
57	-Fuse 57 on fuse holder B -SB57-	7.5 A	-Front left headlight -MX1- -Left side light bulb -M1- -Left tail light -MX3-	30
58	-Fuse 58 on fuse holder B -SB58-	7.5 A	-Front right headlight -MX2- -Right side light bulb -M3- -Right tail light -MX4-	87
59	-Fuse 59 on fuse holder B -SB59-	15 A	-Front left headlight -MX1- -Left headlight dipped beam bulb -M29-	56b
60	-Fuse 60 on fuse holder B -SB60-	15 A	-Left daytime running light bulb -L174- -Right daytime running light bulb -L175-	

- 1) According to equipment
- 2) Only models with automatic gearbox
- 3) Only models with petrol engine
- 4) Only models with a diesel engine
- 5) Only models with electronic stabilisation program (ESP)
- 6) Only for petrol engine with forced induction
- 7) Only for 1.4l petrol engine without forced induction
- 8) Only for 1.6l petrol engine without forced induction
- 9) Only left-hand drive models
- 10) Only right-hand drive models

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1-

Relay and fuse assignment, from August 2010

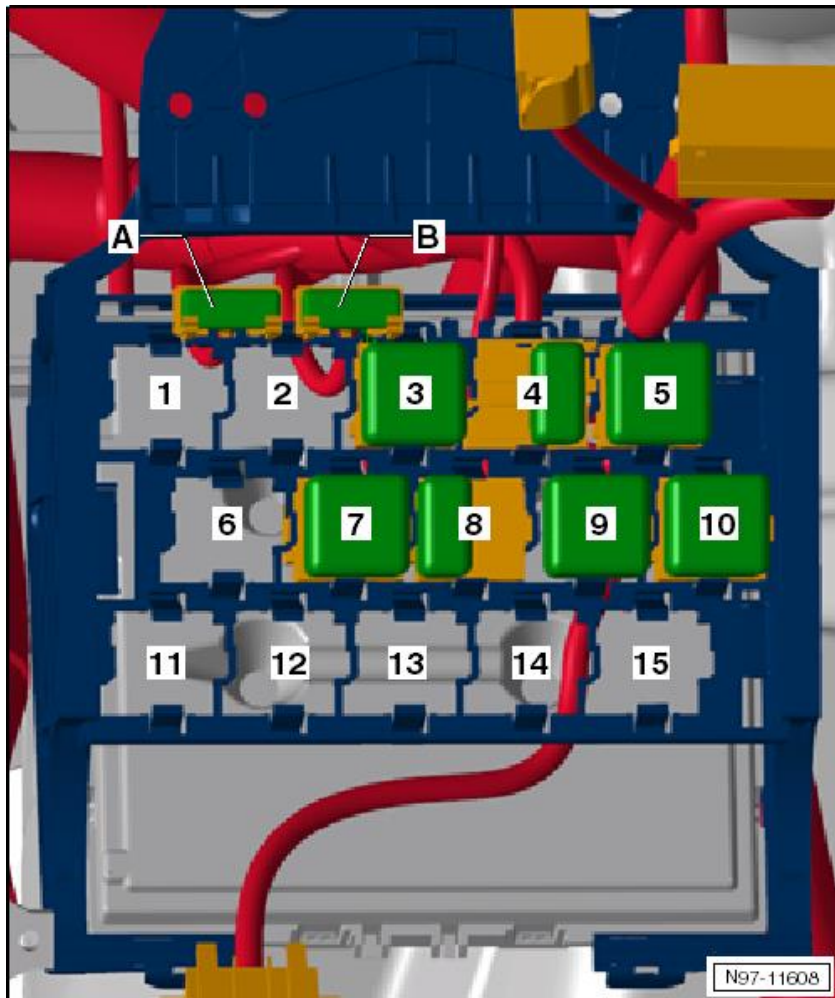

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Dipped beam relay -J331-

q Slot 4, left

Fuel supply relay -J643-

q Slot 4, right

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine


6 - Side light relay -J3-

- q Slot 6, right
- 7 - Fuel pump relay -J17-
 - 8 - Starter inhibitor relay -J207-
 - 9 - Air conditioning system relay -J32-
 - 10 - X-contact relief relay -J59-
 - 11 - Not assigned
 - 12 - Not assigned
 - 13 - Not assigned
 - 14 - Not assigned
 - 15 - Not assigned

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
A	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
B	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse assignment, from November 2010

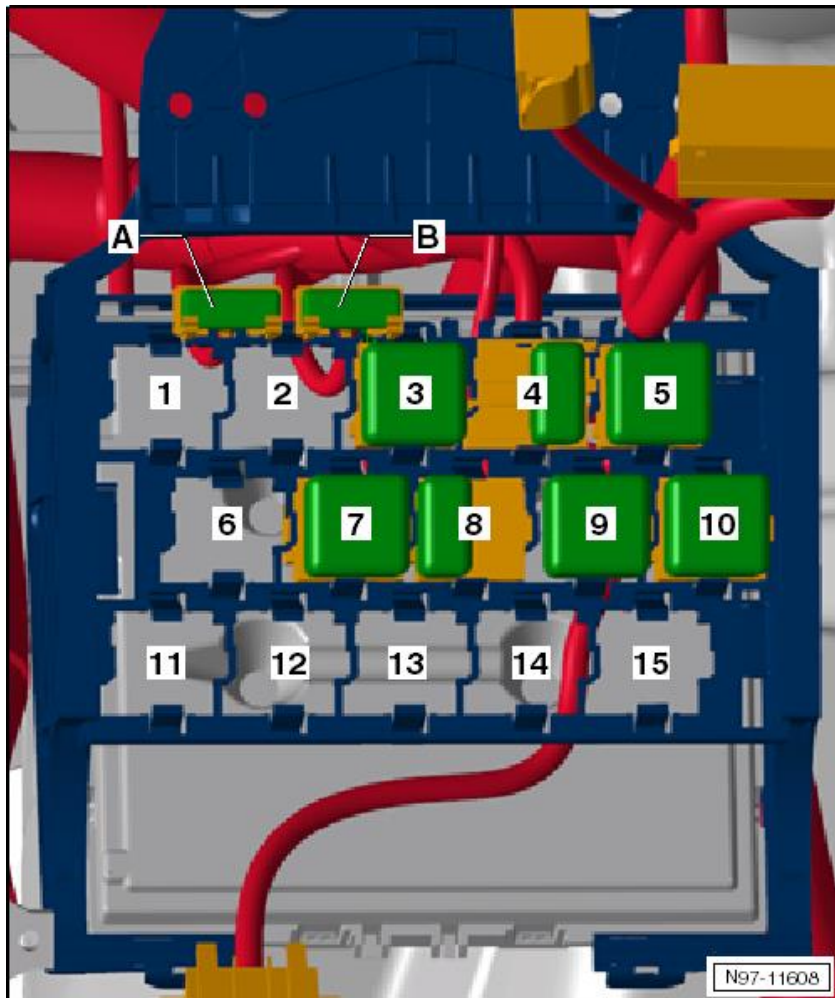

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Fuel pump relay -J17-

q Slot 4, left

Fuel supply relay -J643-

q Slot 4, right

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine

6 - Dipped beam relay -J331-

q Slot 6, left

Side light relay -J3-

q Slot 6, right

7 - Air conditioning system relay -J32-

8 - Starter inhibitor relay -J207-

9 - Not assigned

10 - X-contact relief relay -J59-

11 - Not assigned

12 - Not assigned

13 - Not assigned


14 - Not assigned

15 - Not assigned

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
A	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
B	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse assignment, from August 2011

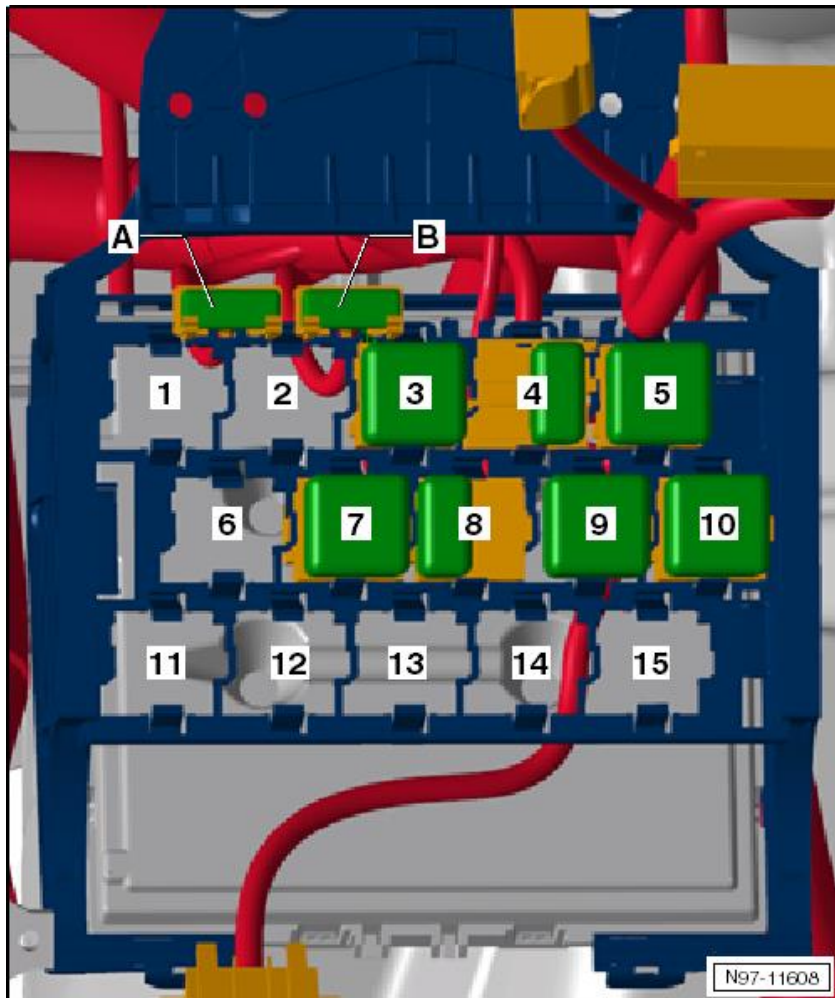

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Fuel pump relay -J17-

q Slot 4, left

Fuel supply relay -J643-

q Slot 4, right

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine


6 - Dipped beam relay -J331-

- q Slot 6, left
- Side light relay -J3-
- q Slot 6, right
- 7 - Not assigned
- 8 - Starter inhibitor relay -J207-
- 9 - Air conditioning system relay -J32-
- 10 - X-contact relief relay -J59-
- 11 - Not assigned
- 12 - Not assigned
- 13 - Not assigned
- 14 - Not assigned
- 15 - Not assigned

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
A	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
B	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1- , from May 2012

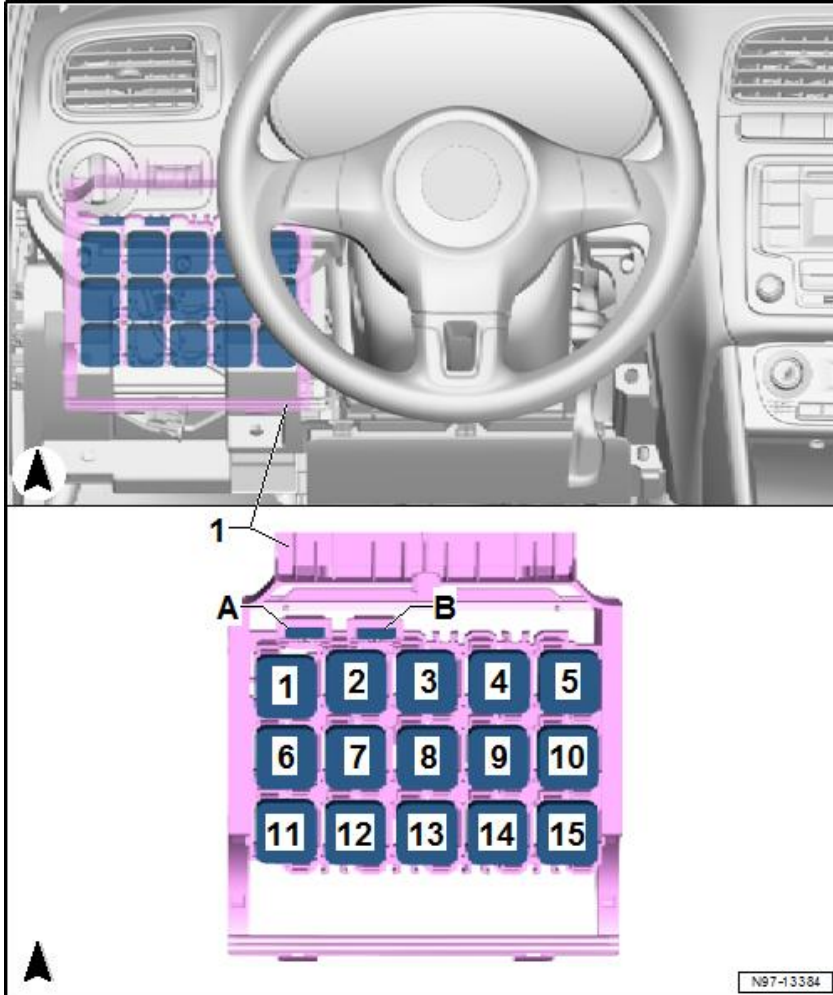

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Fuel pump relay -J17-

q Slot 4, left

Fuel supply relay -J643-

q Slot 4, right

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine


6 - Dipped beam relay -J331-

- q Slot 6, left
- Side light relay -J3-
- q Slot 6, right
- 7 - Not assigned
- 8 - Starter inhibitor relay -J207-
- 9 - Air conditioning system relay -J32-
- 10 - X-contact relief relay -J59-
- 11 - Not assigned
- 12 - Not assigned
- 13 - Not assigned
- 14 - Not assigned
- 15 - Not assigned

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
2	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1- , left-hand drive models, from August 2012

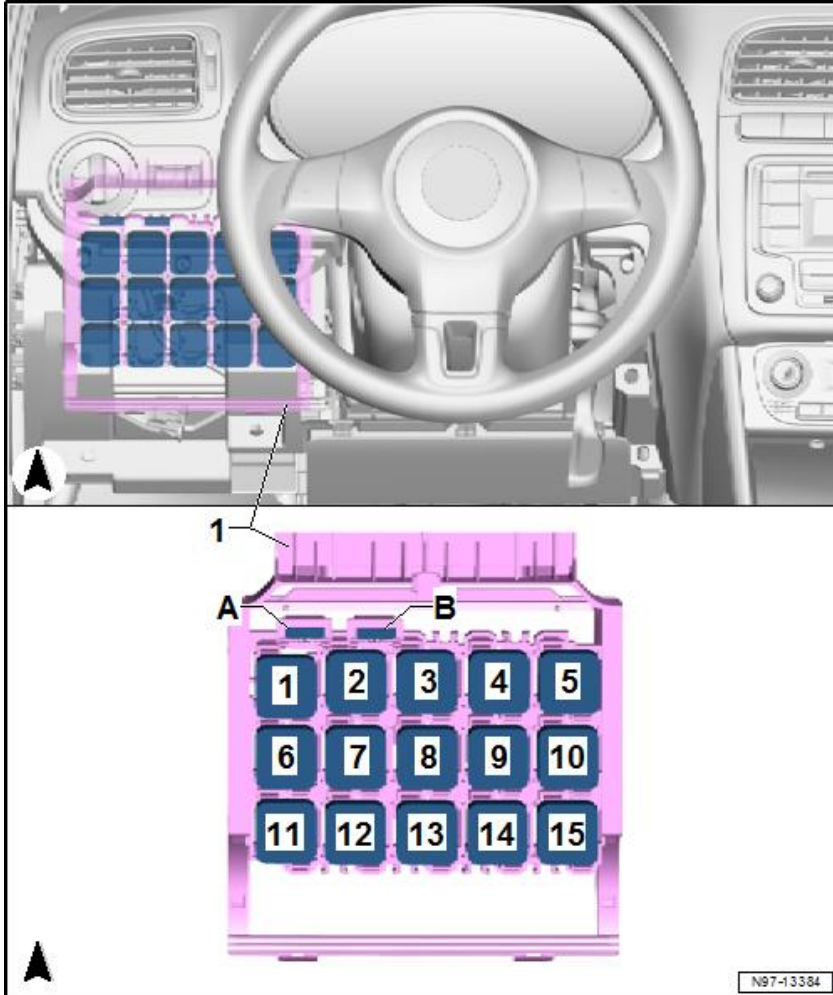

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Not assigned

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine

6 - Starter inhibitor relay -J207-

7 - Not assigned

8 - Side light relay -J3-

q Slot 8, left

Dipped beam relay -J331-

q Slot 8, right

9 - Not assigned

10 - X-contact relief relay -J59-

11 - Not assigned

12 - Not assigned

13 - Fuel pump relay -J17-

q Slot 13, left

Fuel supply relay -J643-

q Slot 13, right


14 - Not assigned

15 - Air conditioning system relay -J32-

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
2	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1- , right-hand drive models, from August 2012

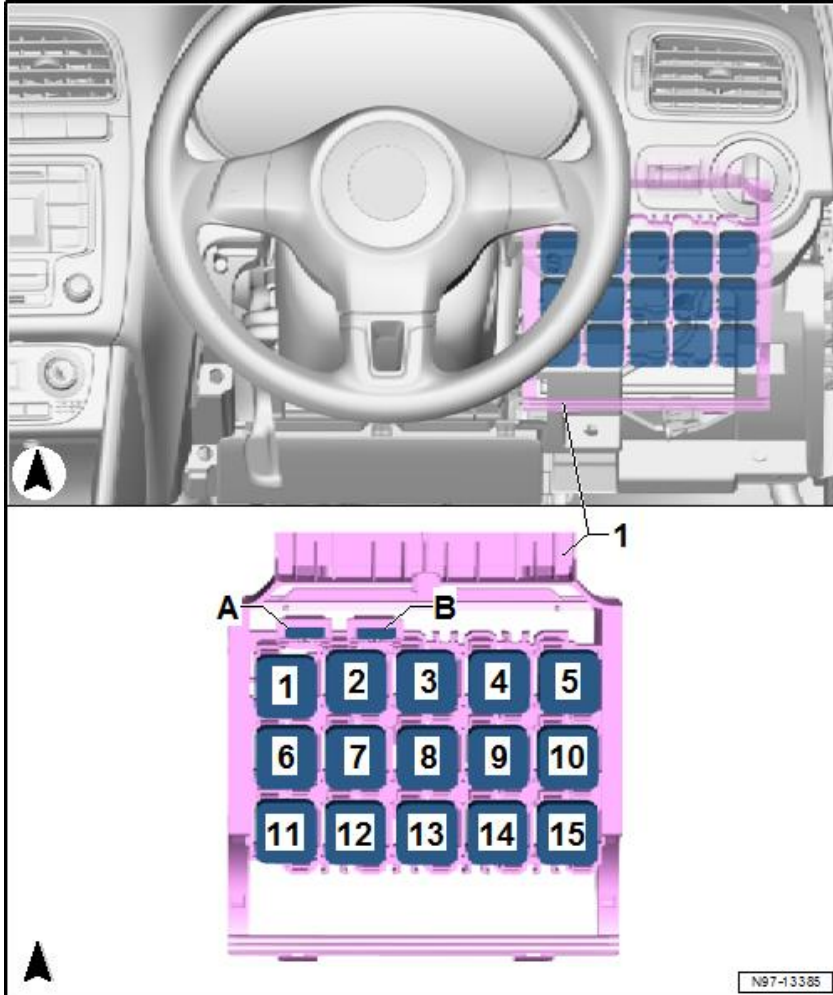

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Not assigned

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine

6 - Starter inhibitor relay -J207-

7 - Not assigned

8 - Side light relay -J3-

q Slot 8, left

Dipped beam relay -J331-

q Slot 8, right

9 - Not assigned

10 - X-contact relief relay -J59-

11 - Not assigned

12 - Not assigned

13 - Fuel pump relay -J17-

q Slot 13, left

Fuel supply relay -J643-

q Slot 13, right


14 - Not assigned

15 - Air conditioning system relay -J32-

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
2	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1- , left-hand drive models, from August 2015

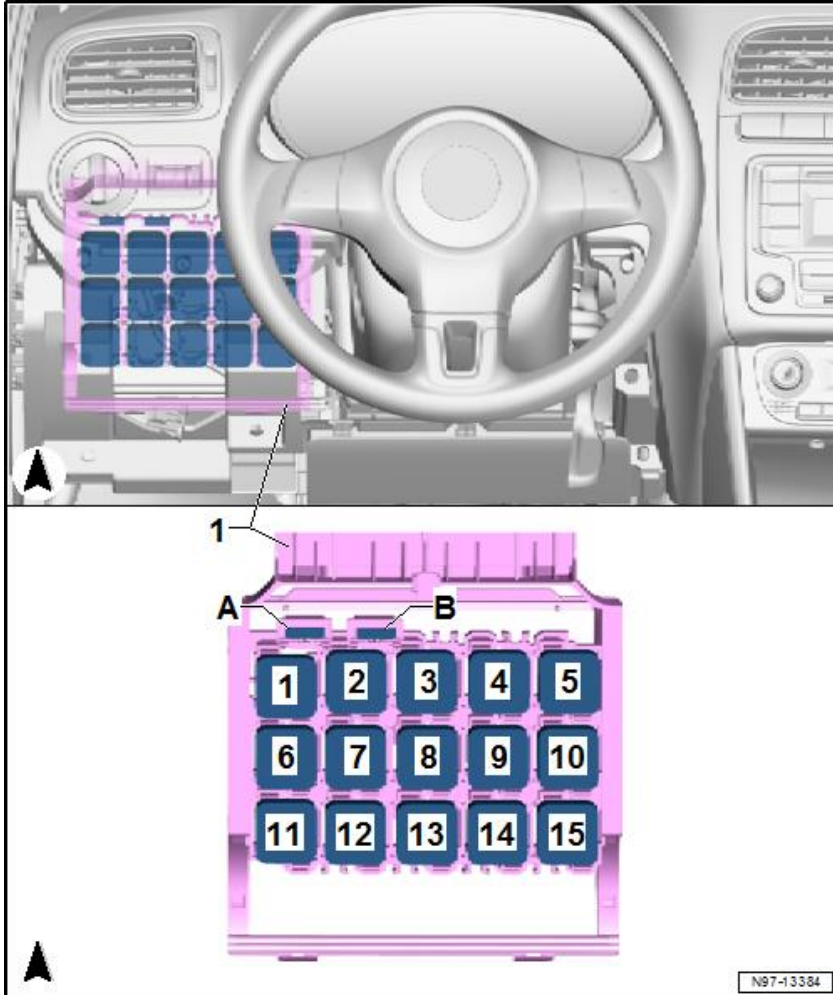

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Not assigned

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine

6 - Starter inhibitor relay -J207-

7 - Heated exterior mirror relay -J99-

8 - Side light relay -J3-

q Slot 8, left

Dipped beam relay -J331-

q Slot 8, right

9 - Not assigned

10 - X-contact relief relay -J59-

11 - Not assigned

12 - Not assigned

13 - Fuel pump relay -J17-

q Slot 13, left

Fuel supply relay -J643-

q Slot 13, right


14 - Not assigned

15 - Air conditioning system relay -J32-

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
2	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)

Relay and fuse carrier 1 -SR1- , right-hand drive models, from August 2015

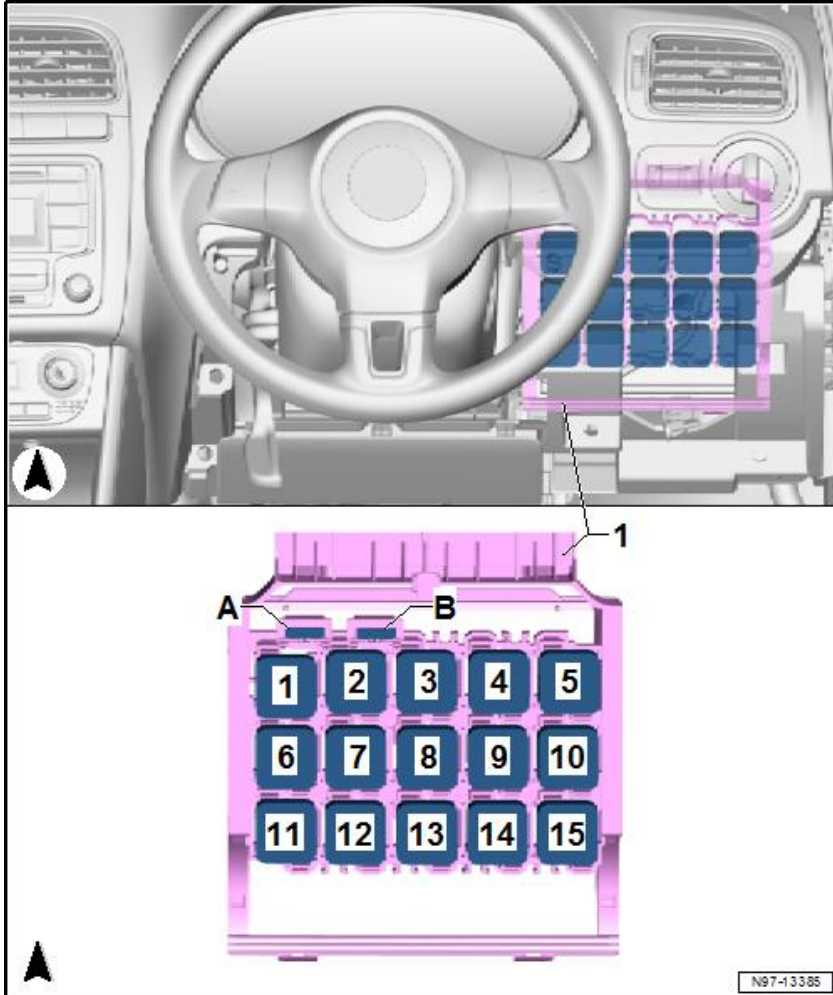

A - Fuses in relay plate fuse holder -S1-

B - Fuses in relay plate fuse holder -S2-

1 - Not assigned

2 - Not assigned

3 - Not assigned

4 - Not assigned

5 - Terminal 30 voltage supply relay -J317-

q Only models with diesel engine

Main relay -J271-

q Only models with petrol engine

6 - Starter inhibitor relay -J207-

7 - Heated exterior mirror relay -J99-

8 - Side light relay -J3-

q Slot 8, left

Dipped beam relay -J331-

q Slot 8, right

9 - Not assigned

10 - X-contact relief relay -J59-

11 - Not assigned

12 - Not assigned

13 - Fuel pump relay -J17-

q Slot 13, left

Fuel supply relay -J643-

q Slot 13, right

14 - Not assigned

15 - Air conditioning system relay -J32-

No.	Current Flow Diagram designation	Nominal value	Function/component	Terminal
1	-Fuses in relay plate fuse holder -S1-	15A	-Operating unit for window regulator in driver door -E512- Driver side window regulator motor - V147- Window regulator switch in front passenger door -E107- Front passenger side window regulator motor -V148-	15
2	-Fuses in relay plate fuse holder -S2-	15A	-Operating unit for window regulator in driver door -E512- Rear window regulator isolation switch - E39- t Rear left window regulator switch, in door -E52- t Rear left window regulator motor - V26- t Rear right window regulator switch, in door -E54- t Rear right window regulator motor - V27-	15

Back to overview → [Chapter](#)