NEXA

OWNER'S MANUAL & SERVICE BOOKLET

- Keep With Vehicle At All Times
- Contains Warranty policy and Important Information On Safety, Operation & Maintenance

Part No. 99011M80T00-74E May, 2023 <u>ENG</u> This owner's manual applies to the JIMNY series.



NOTE: The illustrated model is one of the JIMNY series.

Copyright © **Maruti Suzuki India Limited.** 2023 All Rights Reserved No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without the express written permission of Suzuki Motor Corporation.

FOREWORD

This manual is an essential part of your vehicle and should remain with the vehicle when resold or otherwise transferred to a new owner or operator. Please read this manual carefully before operating your new MARUTI SUZUKI and review the manual from time to time. It contains important information on safety, operation and maintenance. You are invited to avail the three Free Inspection Services as described in the manual. Three free inspection coupons are attached to this manual. Please show this manual to your dealer workshop while you take your MARUTI SUZUKI for any Service.

To prolong the life of your vehicle and reduce maintenance cost, the periodic maintenance must be carried out according to "PERIODIC MAINTENANCE SCHEDULE" described in "INSPECTION AND MAINTENANCE" section of this manual. It is essential for preventing trouble and accidents to ensure your satisfaction and safety.

Daily inspection and care as per "DAILY INSPECTION CHECKLIST" described in the "OPERATING YOUR VEHICLE" section of this manual is essential for prolonging the life of the vehicle and for safe driving.

Vehicle and the available features/accessories therein should be used and plied by the owner/user in accordance with the applicable legal requirements.

MARUTI SUZUKI INDIA LIMITED believes in conservation and protection of Earth's natural resources.

To that end, we encourage every vehicle owner to recycle, trade-in or properly dispose of, as appropriate, used Engine Oil, coolant and other fluids, batteries and tyres etc.

MARUTI SUZUKI INDIA LIMITED

All information in this manual is based on the latest product information available at the time of publication. Due to improvements or other changes, there may be discrepancies between information in this manual and your vehicle. MARUTI SUZUKI INDIA LIMITED reserves the right to make production changes at any time, without notice and without incurring any obligation to make the same or similar changes to vehicles previously built or sold.

This vehicle may not comply with standards or regulations of other countries. Before attempting to register this vehicle in any other country, check all applicable regulations and make any necessary modifications.

IMPORTANT

WARNING/ CAUTION/NOTICE/

Please read this manual and follow its instructions carefully. To emphasize special information, the symbol and the words **WARNING**, **CAUTION**, **NOTICE** and **NOTE** have special meanings. Pay particular attention to messages highlighted by these signal words:

WARNING

Indicates a potential hazard that could result in death or serious injury.

A CAUTION


Indicates a potential hazard that could result in minor or moderate injury.

NOTICE

Indicates a potential hazard that could result in vehicle damage.

NOTE:

Indicates special information to make maintenance easier or instructions clearer.

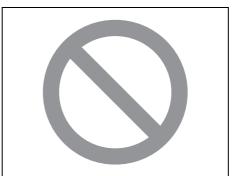

75F135

The circle with a slash in this manual means "Don't do this" or "Don't let this happen".

NOTE:

- Words like car, model/variant are invariably used in this manual to denote the "Vehicle".
- Pictorial representations used in this manual are for reference purposes only.

MODIFICATION WARNING

WARNING

Do not modify your vehicle. Modification could adversely affect safety, handling, performance, or durability and may violate governmental regulations. In addition, damage or performance problems resulting from modification shall not be covered under warranty.

NOTICE

Improper installation of mobile communication equipment such as cellular telephones, CB (Citizen's Band) radios may cause electronic interference with your vehicle's ignition system, resulting in vehicle performance problems. Consult your Maruti Suzuki authorized workshop or qualified service technician for advice on installing such mobile communication equipment.

NOTICE

The diagnostic connector of your vehicle is prepared only for the specific diagnostic tool for inspection and service purpose. Connecting any other tool or device may interfere with electronic parts operations and cause running out of batteries.

"WARNING"



Vehicle may break-down, meet with an accident or catch fire due to

- 1. Installation of
 - High wattage bulbs
 - Non genuine lamps / horns
 - Modified suspension / wheels
 - Non genuine parts/accessories etc.
- 2. Retrofitment of LPG / CNG fuel systems/kits.
- 3. Usage of domestic LPG.
- 4. Short circuiting due to tampering of wiring harness.

CAUTION: DO NOT STORE OR CARRY INFLAMMABLE MATERIALS IN THE VEHICLE.



Avoid driving into or starting the vehicle in a heavily water logged area. Vehicle may breakdown or engine may fail due to

- 1. Water entry into the engine (which may lead to hydrostatic lock).
- 2. Short circuiting of the electrical systems.

If the vehicle is stuck in deep water, do not start / crank the vehicle until the level of water drops below the level of exhaust pipe.

NOTE:

IF THE VEHICLE IS SUBMERGED IN WATER, REPORT TO THE NEAREST AUTHORIZED WORKSHOP.

"CAUTION"

- 1. Retro-fitment of LPG / CNG kit may deteriorate vehicle performance, reduce engine & engine related component's life and also warranty will be null and void for such vehicles.
- 2. Do not use domestic LPG/LPG cylinder for your factory fitted LPG vehicles.
- 3. Usage of domestic LPG for running vehicles is prohibited as per law.
- 4. Do not remove company fitted LPG/CNG kit to install some other kit. It may affect vehicle performance and may cause fire.
- 5. Drive slowly on wet roads. Tires may slip while braking at higher speeds due to aquaplaning.(reduced contact area between tire and road due to presence of water)
- 6. Do not leave engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon-monoxide in cabin and may lead to suffocation or breathing problems.
- 7. Do not park vehicle on dry leaves or grass. This may lead to fire due to hot catalytic converter, igniting the dry leaves/grass.
- 8. If the vehicle is equipped with CNG/LPG, ensure availability of fire extinguisher in the vehicle all the time.
- 9. Always wear seat belt at all the times.
- 10. Do not use mobile phone while driving.
- 11. Avoid Smoking in the car, live bud thrown in car may cause fire.
- 12. Do not put any body part under the vehicle when it is supported on a Jack.
- 13. Do not use non-genuine accessories in your vehicle.
- 14. Do not fit accessories from unauthorized workshops/sources.
- 15. Usage of non-approved electrical accessories in your vehicle may result in spark, fire or personal injury.
- 16. Do not use camphor, incense sticks inside cabin room. Doing so may cause fire.
- 17. Avoid usage of cellular phones while refueling. Electric current and/or electronic interference from cellular phones can potentially ignite fuel vapors and cause fire.
- 18. Avoid entry inside vehicle immediately once after you have begun refueling. You can generate a build up of static electricity by touching, rubbing or sliding against any item or fabric capable of producing static electricity. Static electricity discharge can ignite fuel vapors and may causing a fire.
- 19. Do not check the engine room / open the hood near the fire area (Outside the vehicle). Fuel, washer fluid, etc. are flammable oils that may cause fire.
- 20. Avoid driving when vehicle has met with an accident. Before driving, Please contact with authorized MSIL dealership.

WARRANTY POLICY

Maruti Suzuki India Limited (hereinafter called "Maruti Suzuki"), warrants that each new Maruti Suzuki vehicle distributed in India by Maruti Suzuki and sold by a Maruti Suzuki authorised dealer will be free, under normal use and service, from any defects in material and workmanship at the time of manufacture SUBJECT TO THE FOLLOWING TERMS AND CONDITIONS:

(1) Qualification:

To qualify for this warranty the vehicle must be delivered by a Maruti Suzuki authorised dealer and set-up, and serviced by a Maruti Suzuki authorised workshop.

(2) Term:

The term of the warranty shall be twenty-four (24) months or 40,000 kilometers (whichever occurs first) from the date of invoice to the first owner.

NOTICE

Maruti Suzuki offers warranty of sixty (60) months or 1,00,000 kilometers (whichever occurs first) for Lithiumion battery & Integrated Starter Generator (ISG) in petrol model from the date of invoice to the first owner.

(3) Maruti Suzuki Warranty Obligation:

If any defect(s) should be found in a Maruti Suzuki vehicle within the term stipulated above, Maruti Suzuki's only obligation is to repair or replace at its sole discretion any part shown to be defective, with a new part or the equivalent at no cost to the owner for parts or labour, when Maruti Suzuki acknowledges that such a defect is attributable to faulty material or workmanship at the time of manufacture. Such defective parts, which have been replaced, will become the property of Maruti Suzuki. The owner is responsible for any repair or replacements which are not covered by this warranty. The decision of Maruti Suzuki shall be final & binding.

(4) Limitation:

This warranty shall not apply to:

- (a) Normal maintenance service required other than the three free services, including without limitation, oil and fluid changes, Consumables, headlight aiming, fastener retightening, wheel balancing, wheel alignment and tyre rotation, cleaning of injectors, adjustments of clutch and valve clearance.
- (b) The normal wear of parts including without limitation, bulbs, tyres* and tubes, spark plugs, belts, hoses, filters, wiper blades, brushes, contact points, fuses, clutch disc, brake shoes, brake pads, cable and all rubber parts (except oil seal and glass run).
- (c) Any vehicle which has been used for competition, rallies or racing.
- (d) Any repairs or replacement arising from accidents or collision.
- (e) Any defect/ damage caused by misuse, negligence, abnormal use, insufficient care, vandalism, theft, riot, fire, flooding not limited to entry of water in the components resulting in engine seizure, hydrostatic lock, etc. or external damages to the body/ components.
- (f) Any damage resulting due to usage of adulterated fuel/ lubricants/ oil/ coolant/ fluids/ polishing products and fuel/ lubricants/ oil/ coolant/ fluids used other than those specified in the Owner's Manual.
- (g) Any vehicle which has been modified or altered, including without limitation, the installation of performance accessories, enlargements of lights, other changes and external/ consequential reasons.
- (h) Any vehicle on which parts or accessories not approved by Maruti Suzuki (Non-MSGA, Non-MSGP) have been used.

(* - If there is a complaint related to tyre, the customer may contact respective tyre manufacturer.)

- Any vehicle which has not been operated in accordance with the operating instructions in this Owner's Manual and Service Booklet.
- Any vehicle which has not received the service inspections prescribed in this Owner's Manual and Service Booklet.
- (k) Any vehicle which has been assembled, disassembled, adjusted or repaired by other than a Maruti Suzuki authorised workshop.
- (I) Any vehicle which has been used for purposes other than what it was designed for.
- (m) Any damage or deterioration caused by airborne fallout, industrial fallout, acid rain, hail or hail storm, wind storm, lightning, bird droppings, rodents bite / rat bite and such other thing that result in damage to the vehicle.
- (n) Insignificant defects / noise which do not affect the function of the vehicle including without limitation, sound, vibration and fluid seep.
- (o) Any natural wear and tear including without limitation, ageing, wear & tear or deterioration such as discoloration, fading, deformation or blurring and fabric discoloration.
- (p) Installation and usage of domestic LPG gas/LPG Cylinder.
- (q) V-belts, hoses and gas leaks.
- (r) Any vehicle retrofitted with LPG/CNG kits.
- (s) Repainting including patchwork, bodywork and mouldings and interior trims.
- (t) Corrosion, rusting of body parts and/ or components.
- (u) Any vehicle on which odometer has been changed unauthorisedly or odometer reading has been modified/ tampered with/ or not matching the service records.
- (v) The damage(s) caused to the vehicle being unattended despite knowledge that the defect exists and ignorance by the owner/ user of the vehicle.
- (w) Any damage(s) caused to vehicle including battery/ tyre due to parking of the vehicle in idle condition for long duration of time periods.

- (x) Any vehicle on which the retro-fitment is not authorized and/ or type approved as per the standards prescribed by the relevant authority including but not limited to Automotive Standards of India.
- (y) Any vehicle on which the retro-fitment is such which directly or indirectly causes any damage to the vehicle or affects the functions of the vehicle in any manner whatsoever.

(5) Extent of Warranty:

This warranty is the entire written warranty given by Maruti Suzuki for Maruti Suzuki vehicles and no dealer or its or his agent or employee is authorised to extend or enlarge this warranty and no dealer or its or his agent or employee is authorised to make any oral warranty or representation or assurance on behalf of Maruti Suzuki.

Maruti Suzuki reserves the right to add any improvements or change the design of any model at any time with no obligation to make the same changes on units previously sold.

(6) Warranty Service:

To obtain warranty service, the complete vehicle must be presented at the owner's expenses to Maruti Suzuki authorised workshop.

The customer shall be responsible for his belongings or accessories fitted in the vehicle at the time of presenting the vehicle for service and no claim shall be entertained in any manner under any circumstances.

(7) Owner's Warranty Obligations:

NOTICE

The owner shall not use the vehicle in a damaged condition and report the same immediately to the nearest Maruti Suzuki authorized workshop. This would result in early inspection and repair of the vehicle and any possible harm to the person or aggravation of damage to the vehicle can be prevented.

It is responsibility of each owner to:

- Have performed, at his own expenses, by a Maruti Suzuki authorised workshop all the service inspections specified in the Maruti Suzuki "Owner's Manual and Service Booklet" and maintain adequate proof that such service inspections have been performed.
- Update and maintain the 'Customer service maintenance records' page in the "Owner's Manual and Service Booklet", whenever service inspection or warranty service is carried out on the vehicle in a Maruti Suzuki authorised workshop.
- Present the Maruti Suzuki "Owner's Manual and Service Booklet" to the Maruti Suzuki authorised workshop whenever requesting service inspections or warranty service.

If the "Owner's Manual and Service Booklet" should be lost or destroyed the owner should consult the Maruti Suzuki authorised dealer from whom the vehicle was purchased for instructions concerning replacement of the "Owner's Manual and Service Booklet".

(8) Disclaimer of Consequential Damage:

Maruti Suzuki assumes no responsibility for loss of vehicle, loss of time, inconvenience or any other indirect incidental or consequential damage resulting from the vehicle not being available to the owner because of any defect covered by this warranty.

(9) Change of Owner

Even if ownership of the vehicle changes, the remaining warranty period is effective for the new owner.

This warranty is applicable only in India and not transferable to any other country.

NOTE:

Notwithstanding the warranty obligations, Maruti Suzuki may reuse reworked (refurbished) parts for undertaking rectification of recalled vehicles in terms of applicable laws.

EMISSION WARRANTY POLICY

Maruti Suzuki offers the Emission Warranty on all Maruti Suzuki vehicles (apart from the Regular Warranty and will run parallel to the regular product warranty) only in four metropolitan cities (New Delhi, Kolkata, Mumbai and Chennai) with effect from July 1st, 2001

Terms:

The Emission Warranty will be applicable for **80,000 kms or 3 years** (Whichever comes earlier) from the date of invoice to the first owner. The remaining warranty terms will be valid in case of any change in ownership provided the production of all valid documents.

Conditions:

- Under Emission Warranty, Warranty claims will be admitted for a prima-facie examination, in case vehicle fails to meet the Emission Standard as specified in sub rule (2) of rule no. 115 of Central Motor Vehicles Rules (CMVR), 1989.
- The warranty claims will only be accepted after examination carried out by Maruti Suzuki or Maruti Suzuki authorised workshop which leads to firm conclusions that the
 - a) Original settings have not been tampered in any case.
 - b) Part (as given in Annexure A) has a manufacturing defect.
 - c) Vehicle is unable to meet the Emission Standards (as given in 1.), inspite of the vehicle having been maintained and used in accordance with the instructions as specified in Owner's Manual and Service Booklet and the used fuel and different oils (Engine oil, Transmission oil, Brake oil etc.) are also as per specification.

- 3. The method of examination for deciding the warranty of the parts will be at the sole discretion of Maruti Suzuki and Maruti Suzuki authorised workshop and results of the examination will be final and binding. If after examination, the warrantable condition is not established, Maruti Suzuki and Maruti Suzuki authorised workshop has the right to charge all, or part of the cost of such examination.
- Under Emission Warranty, the parts (as given in Annexure A) will be changed free of cost, but the consumables will be charged as per actual.
- 5. If the part covered under Emission Warranty or the associated parts, are not independently replaceable, on account of these being integral parts of a complete assembly, Maruti Suzuki and Maruti Suzuki authorised workshop will have the sole discretion to replace either the entire assembly or by using some of the parts of the system through suitable repairs or modifications.
- 6. Any consequential repairs or replacement of parts which may be found necessary to establish compliance of Emission Warranty, will not be considered under warranty, unless the same is under product warranty. The consumable will be charged as per actual under such repair or replacement.
- 7. Maruti Suzuki will not be responsible for the cost of transportation of the vehicle to the nearest Maruti Suzuki authorised workshop or any loss due to non-availability of the vehicle during the period of lodging of a warranty claim and examination and/or repair by Maruti Suzuki authorised workshop.
- Maruti Suzuki will not be responsible for any penalty that may be charged by statutory authorities on account of failure to comply with the EMISSION STANDARDS.
- Emission Warranty will not be affected by the change of owner, provided all the documents are available.

- All maintenance actions (as specified in the Owner's Manual and Service Booklet) need to be followed and recorded in the manual for emission warranty.
- 11. The customer needs to produce the PUC (Pollution Under Control) certificate valid for the period preceding the test during which the failure is discovered. The receipts (for the maintenance of the vehicle as per specification in Owner's Manual and Service Booklet from the date of original purchase of the vehicle) will also be required.

Conditions under which the Emission Warranty is not APPLICABLE

- 1. In the absence of valid PUC certificate.
- Vehicle not serviced from Maruti Suzuki authorised workshop as per the schedule specified in the Owner's Manual.
- 3. Vehicle subjected to abnormal use (accident, motor race, rallies or for the purpose of establishing the records etc).
- 4. Use of non MSGP (Maruti Suzuki Genuine Part).
- 5. Vehicle that has been tampered with.
- Tampering with odometer so that the actual kilometer reading cannot be determined.
- 7. Use of adulterated fuel and/or unspecified oils (Engine oil, Transmission oil and Brake oil etc).

Annexure - A

List of parts (if applicable) covered under Emission Warranty

- Fuel Injection Assembly, Pressure Regulator, Throttle Body Assembly.
- 2. Electronic Control Module (ECM).
- Intake Manifold.
- 4. EGR valve.
- 5. Ignition Coil.
- 6. Canister Assembly.
- 7. Vapour Liquid Seperator.
- 8. Fuel Tank and Filler Cap.
- 9. PCV (Positive Crankcase Ventilation) Valve.
- 10. Oil Filler Cap.
- 11. Catalytic Convertor.
- 12. Exhaust Manifold.
- 13. All Fuel Injection System related Sensors.
- 14. High Pressure Fuel Pump.
- 15. Glow Plug.
- 16. Glow Plug Controller.

SERVICE STATION GUIDE

- 1. Engine hood (see section 7)
- 2. Engine coolant (see section 9)
- 3. Windshield washer fluid/ Headlight washer fluid (see section 9)
- 4. Engine oil dipstick (see section 9)
- 5. Lead-acid battery (see section 9)
- 6. Automatic transmission fluid dipstick (see section 9)
- 7. Fuel (see section 7)
- 8. Tyre pressure (see Tyre Information Label on driver's door lock pillar)
- 9. Tyre changing tools (see section 10)10. Spare tyre (see section 10)

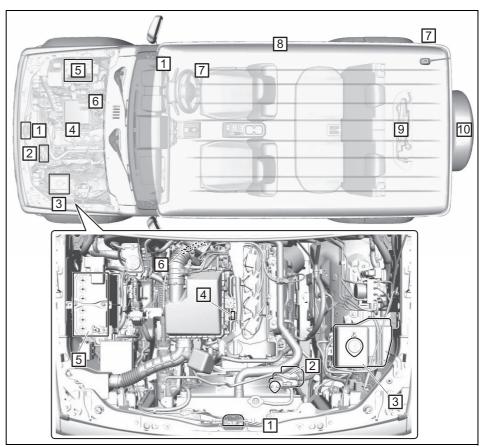


TABLE OF CONTENTS

QUICK GUIDE	1
FOR SAFE DRIVING	2
BEFORE DRIVING	3
INSTRUMENT CLUSTER	4
OPERATING YOUR VEHICLE	5
ADVICE FOR YOUR DRIVING	6
OTHER CONTROLS AND EQUIPMENT	7
VEHICLE LOADING AND TOWING	8
INSPECTION AND MAINTENANCE	9
EMERGENCY SERVICE	10
APPEARANCE CARE	11
SPECIFICATIONS	12
SERVICE NETWORK	13


MEMO		



Illustrated Table of Contents	1-1
Warning Lights and Indicators	1-9
Warning Buzzer	1-1
FAQ	1-2

Illustrated Table of Contents **Exterior**

- (1) Fuel Filler Cap (P.7-1)
- (2) Door Locks (P.3-1)
- (3) Outside Rearview Mirror (P.2-9)
- (4) Windshield Wiper (P.3-27, 9-42)
- (5) Tailgate (P.3-4)
- (6) Rear Window Wiper (P.3-29, 9-44)
- (7) High-mount Stop Light (P.9-38) (8) Radio Antenna (P.7-32)
- (9) Door (P.3-1)
- (10) Side turn signal light on fender (P.9-36)
- (11) Front Fog Light (if equipped) (P.3-24, 9-42)
- (12) Front Turn Signal Light (P.9-35)
- (13) Headlight (P.9-34)
- (14) Position light (P.9-35)
- (15) Engine Hood (P.7-4)
- (16) Tail / Brake Light (P.9-37)
- (17) Rear Turn Signal Light (P.3-25, 9-37)
- (18) Reversing Light (P.9-37)
- (19) Parking sensor (P.5-47)
- (20) License Plate Light (P.9-38)
- (21) Rearview Camera (P.5-50)
- (22) Spare Tyre (P.10-7)

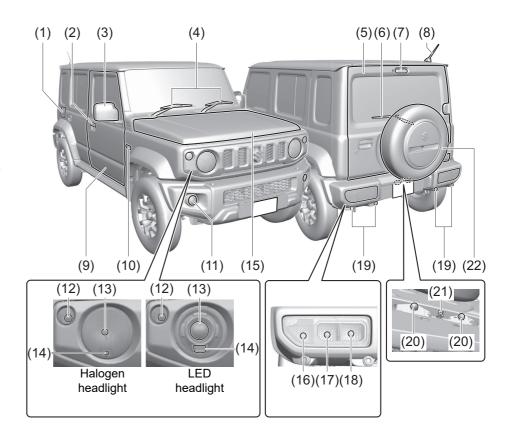


Interior, Side

- (1) Inside Rearview Mirror (P.2-8)
- (2) Front Interior Light (P.7-7, 9-39)
- (3) Sun Visor (P.7-6)
- (4) Warning Label for Front Passenger's Front Airbag (P.2-41) *1, *2 (5) Side Curtain Airbag (P.2-42)


- (6) Seat Belt (P.2-18) (7) Center Interior Light (P.7-8, 9-39)
- (8) Front Seat (P.2-5)
- (9) Side Airbag (P.2-39) (10) Front Seat Back Pocket (P.7-15)
- *1: Be sure to read the detailed information in the target page before using a child restraint system.
- *2: NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DÉATH or SERIOUS INJURY to the CHILD can occur.



72M00150

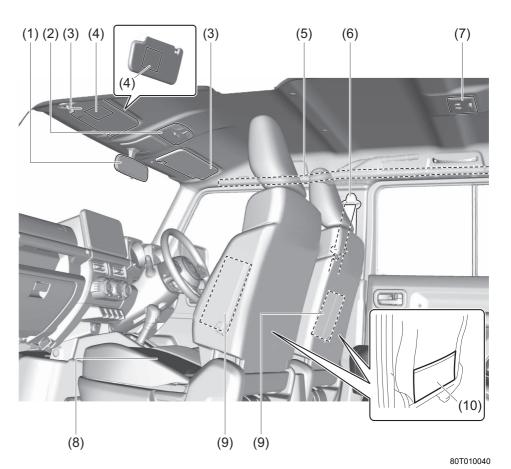


- Interior, Rear
 (1) Assist Grip (P.7-13)
 (2) Seat Belt (P.2-18)
 (3) Accessory Socket (if equipped)
 (P.7-9)
 (4) Luggage Compartment Light (P.7-9)
 (5) Rear Seat (P.2-10)

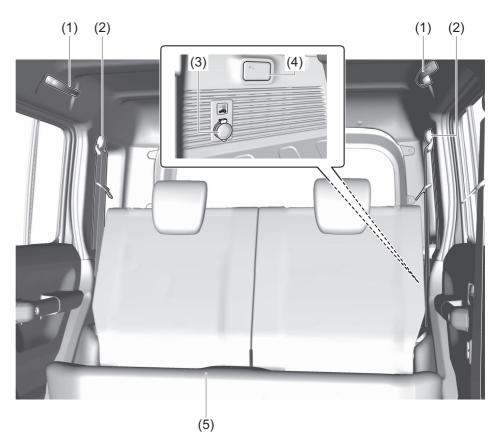


Interior, Front

- (1) Glove Box (P.7-13)
- (2) Front Passenger's Front Airbag (P.2-41)
- (3) USB Socket (P.7-15)
- (4) Driver's Front Airbag (P.2-41) (5) Engine Hood Release Handle (P.7-4)
- (6) Manual Heating and Air Conditioning
- System (P.7-19)
 (7) Automatic Heating and Air Conditioning System (P.7-25) (8) Accessory Socket (P.7-9)
- (9) Parking Brake Lever (P.5-29)
- (10) Transfer Lever (P.5-39)
- (11) Electric Window Control (Rear passenger's door) (P.3-19) (12) Window Lock Switch (P.3-20)
- (13) Fuel Lid Opener Lever (P.7-1)

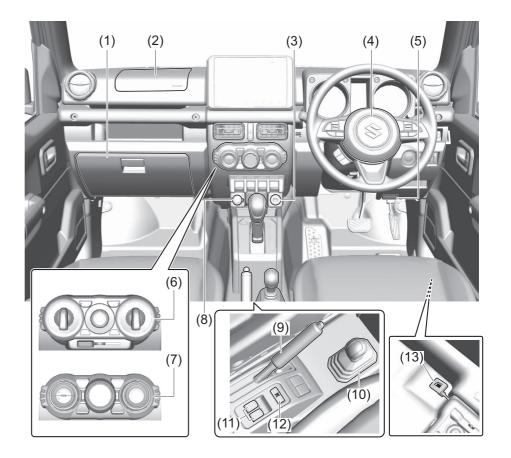

Instrument Panel 1


- (1) Heated Rear Window Switch (Automatic Heating and Air Conditioning System) (P.3-30)
- (2) Heated Rear Window Switch (Manual Heating and Air Conditioning System) (P.3-30)
- (3) Windshield Wiper and Washer Lever (P.3-27)/Rear Window Wiper/Washer Switch (P.3-29)
- (4) Remote Audio Controls (P.7-33)
- (5) Instrument Cluster (P.4-1)
- (6) Cruise Control Switches (if equipped) (P.5-45)
- (7) Lighting Control Lever (P.3-21)/ Turn Signal Control Lever (P.3-25)
- (8) Hazard Warning Switch (P.3-26)
- (9) Hands-free switch (P.7-34)
 Voice recognition switch (if equipped)
 (P.7-34)
- (10) Tilt Steering Lock Lever (P.2-7)
- (11) Engine Switch (vehicle with keyless push start system) (P.5-5)
- (12) Ignition Switch (vehicle without keyless push start system) (P.5-3)

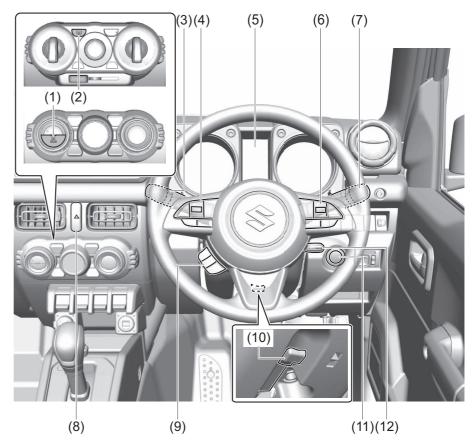


Instrument Panel 2

- (1) ENG A-STOP OFF Switch (P.5-26)
- (2) Headlight Washer Switch (if equipped) (P.3-25)
- (3) Headlight Leveling Switch (P.3-24) (4) Electric Window Control (Passenger's door) (P.3-19) (5) ESP[®] OFF Switch (P.5-58) (6) Hill Descent Control Switch (P.5-59)


- (7) Electric Window Control (Driver's door) (P.3-18)
- (8) Electric Mirror Control (P.2-9)

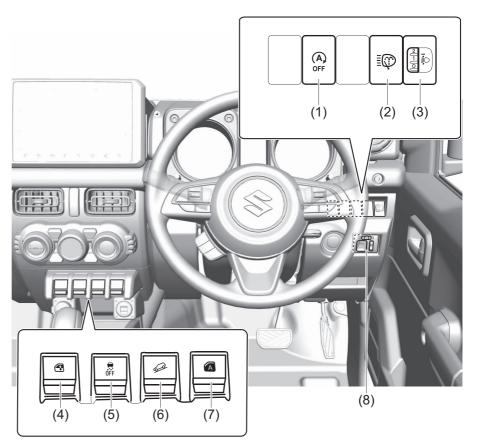


Luggage Compartment (1) Luggage Compartment Board (2) Wheel Wrench (P.10-4) (3) Jack Handle (P.10-4) (4) Jack (P.10-4)

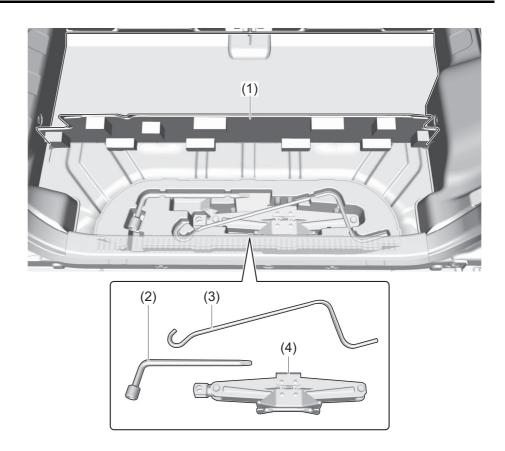


- **Key** (1) Keyless Push Start System Remote Controller (P.3-10) Keyless Push Start System (P.5-10) Starting Engine (P.5-15)
- (2) Key (P.3-1) Door Locks (P.3-1)
- (3) Keyless Entry System Transmitter (P.3-6) Starting Engine (P.5-13) Key (P.3-1) Door Locks (P.3-1)

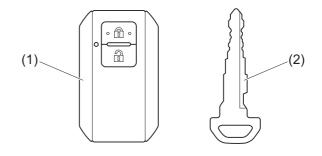

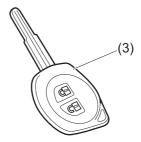

Warning Lights and Indicators Warning Lights

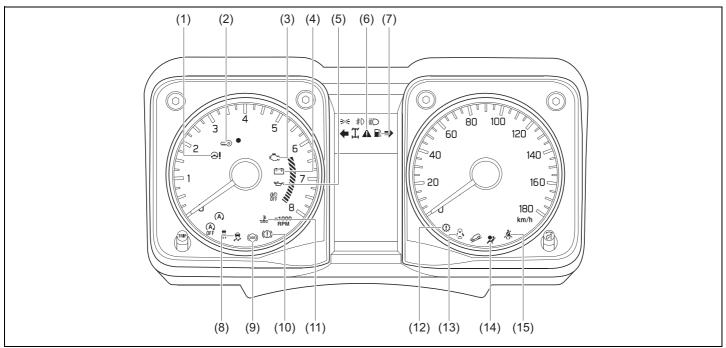

80TM01001


- If a warning light continues to be lit or is blinking, there may be a problem with the vehicle or the system. Carefully read the following reference information and consult with a Maruti Suzuki authorized workshop.
- It is considered normal that warning lights and indicators marked with an asterisk (*) are lit when turn the ignition switch to "ON" position or pressing the engine switch to change the ignition mode to ON (i.e., high engine coolant temperature warning light initially lights up in red). If such lights do not light up, consult with a Maruti Suzuki authorized workshop.
- For the ENG A-STOP system, there is the particular condition that a warning light or an indicator is lit.

	Warning light		Color	Name
(1)	⊕!	*	Orange	Electric Power Steering Light
(2)		*	Orange	Immobilizer System Warning Light
(3)	ر آ	*	Orange	Malfunction Indicator Light
(4)	- +	*	Red	Charge Warning Light
(5)	7	*	Red	Engine Oil Pressure Warning Light
(6)	A	*	Orange	Master Warning Indicator Light

	Warning light		Color	Name	
(7)			Orange	Low Fuel Warning Light	
(8)	***	*	Orange	ESP [®] Warning Light	
(9)	(ABS)	*	Orange	Anti-lock Brake System (ABS) Warning Light	
(10)	(1)	*	Red	Brake System Warning Light	
(11)	₽	*	Red	High Engine Coolant Temperature Warning Light	
(12)	(1)	*	Orange	Transmission Warning Light (Automatic Transmission models)	
(13)			Red	Open Door Warning Light	
(14)		*	Red	Airbag Warning Light	

	Warning light	Color	Name
(4.5)	15)		Driver's Seat Belt Reminder Light / Front Passenger's Seat Belt Reminder Light
(15)	Red		Rear Passenger's Seat Belt Reminder Light (if equipped)

Indicators

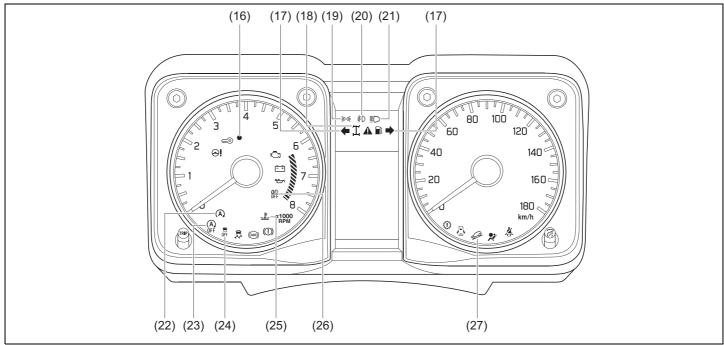

80TM01002

	Indicator		Color	Name	
(16)	•		Red	Security System Indicator	
(17)	++		Green	Turn Signal Indicators	
(18)	101	*	Green	4WD Indicator Light	
(19)	- 00=		Green	Illumination Indicator Light	
(20)	 D		Green	Front Fog Light Indicator Light (if equipped)	
(21)	≣ O		Blue	Main Beam (High Beam) Indicator Light	
(22)	(A)	*	Green	ENG A-STOP Indicator Light	
(23)	(A) OFF	*	Orange	ENG A-STOP OFF Indicator Light	

	Indicator		Color	Name
(24)	⊕ OFF	*	Orange	ESP® OFF Indicator Light
(25)	<u>π.}</u> }		Blue	Low Engine Coolant Temperature Light
(26)	O/D OFF		Amber	"O/D OFF" Indicator Light (for Automatic Transmission models)
(27)		*	Green	Hill Descent Control Indicator Light

Warning Buzzer

- *1: The master warning in the instrument cluster blinks. At the same time, the message will be shown on the information display to inform the driver of the vehicle condition and the remedy.
 *2: The message will be shown on the information display to inform the driver of the vehicle condition and the remedy.

For All model

When	Warning buzzer	Instrument cluster	Cause and remedy
	Interior buzzer		The security system warning is being activated. You can stop
doors (including engine hood and tailgate) is opened	Beeping at short intervals for approx. 10 seconds	Blinks every 2 seconds	 the warning by either of the following operations: Unlock the doors using the keyless entry transmitter or less push start system remote controller or the requestich. Turn the ignition switch to "ON" position or press the engineering switch to change the ignition mode to ON.
	Interior buzzer		Indicates that a security system has been activated while the
switch is in "ON" position or the engine switch is pressed to change the ignition mode to ON	Beeping 4 times	Blinks rapidly for approx. 8 seconds	vehicle has been parked; check the vehicle to make sure that it is not broken into or nothing is stolen.
	Interior buzzer	*1	The steering wheel lock has not been released. With load not applied, turn the steering wheel to the left or right so as to turn
	Chime (once)	,	the ignition switch or press the engine switch again.

When	Warning buzzer	Instrument cluster	Cause and remedy
When the ignition	Interior buzzer	(0)	The brake fluid is insufficient or the brake system may be
switch is in "ON" position or the engine switch is pressed to change	Chime (once)	Lights up	faulty. consult with a Maruti Suzuki authorized workshop.
the ignition mode to ON	Interior buzzer	Ú	The fuel level is low. Refuel soon.
	Chime (once)	Lights up	
When driving	Interior buzzer	• •	The driver does not wear his/her seat belt. Stop the vehicle in
	Beeping at short intervals for approx. 95 seconds	Blinks *1	a safe place and wear your seat belt. The front passenger does not wear his/her seat belt. Wear the seat belt.
	Onds		The rear passenger does not wear his/her seat belt. Wear the seat belt (if equipped).
	Interior buzzer		The parking brake has not been released. Stop the vehicle in
	3 beeps repeating at short intervals	Lights up	a safe place and release the parking brake.
	Interior buzzer		One of the doors is not completely closed. Stop the vehicle in
	Chime (once)	Lights up	a safe place and close all doors completely.

When	Warning buzzer	Instrument cluster	Cause and remedy
When opening the	Interior buzzer		The headlights and/or the position lights are left on. Turn them
driver's door	Continuous beep	Lights up	off.
When stopping or	Interior buzzer		Rear parking sensors detect an obstacle on the rear side
backing up the vehi- cle	Short beeps at long intervals, short beeps at short intervals, short beeps at very short intervals, or continuous beep		the vehicle. Check the surrounding area directly with your eyes and the mirrors, and back up the vehicle slowly.

For Manual Transmission models

When	Warning buzzer	Instrument cluster	Cause and remedy	
When the engine is	Interior buzzer	-	 The engine stalled because the hood is opened after the engine is stopped automatically. To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then shift into "N" (Neutral). 2) Securely close the engine hood. 3) Turn the ignition switch or press the engine switch to restart the engine. 	
stopped automati- cally by the ENG A- STOP system	• 2 Beeps			
When the engine is	Interior buzzer		The gearshift lever is in a position other than "N" (Neutral).	
stopped automati- cally by the ENG A- STOP system	• 2 Beeps	-	Place the gearshift lever in "N" (Neutral) position.	
When the engine is		•	The engine stalled because the following operations were per	
stopped automati- cally by the ENG A- STOP system			formed. • The driver's seat belt is unfastened. • The driver's door is opened.	
		and Lights up	Close the door and buckle the seat belt, and then turn the ignition switch or press the engine switch to restart the engine.	
When the engine is stopped automati- cally by the ENG A- STOP system	Interior buzzer	1,	The driver's seat belt is unfastened. You can restart the engine	
	• 2 beeps		by depressing the clutch pedal when the seat belt is fastened.	
		Lights up		

For Automatic Transmission models

For vehicle with ENG A-STOP system

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine is stopped automati- cally by the ENG A- STOP system	Interior buzzer	_	The engine stalled because the hood is opened after the engine is stopped automatically. To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) Securely close the engine hood. 3) Press the engine switch to restart the engine.
	• 2 Beeps		
When the engine is stopped automati- cally by the ENG A- STOP system	Interior buzzer	*	The engine has restarted automatically because either of the following operations was performed. • The driver's seat belt is unfastened. • The driver's door is opened.
	• 5 beeps		
	or Lights up *2	or	Before starting the vehicle, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below.
			 Set the parking brake firmly, and then place the gearshift lever in the "P" position. When the vehicle will be stopped for a long time or when
			you will leave the vehicle unattended, turn the ignition switch or press the engine switch to stop the engine.

For Vehicle Without Keyless Push Start System

When	Warning buzzer	Instrument cluster	Cause and remedy
When opening the driver's door	Interior buzzer		The ignition key is in the ignition switch. Remove the ignition key from the ignition switch.
	Continuous beep		

For Vehicle With Keyless Push Start System

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine switch is pressed to change the ignition mode to LOCK (OFF)	Interior buzzer	*1	You cannot change the ignition mode to LOCK (OFF) because there may be malfunction of the gearshift lever. consult with a Maruti Suzuki authorized workshop.
	Chime (once)		
When the engine switch is pressed to change the ignition mode to ON	Interior buzzer	₩	There may be a problem with the keyless push start system. Ask your Maruti Suzuki authorized workshop for inspection.
	Beeping once		
		Blinks every 1 second *1	
	Interior buzzer	Lights up	The remote controller may be outside the vehicle or its battery may have become discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller.
	Beeping twice		

When	Warning buzzer	Instrument cluster	Cause and remedy
When the engine switch is pressed to change the ignition mode to ON or ACC	buzzers		When the engine switch was pressed to change the ignition mode to ON or ACC, the remote controller was detected. However, when starting the engine, the remote controller was not detected. Place the remote controller in the interior workable area and then press the engine switch again.
	5 beeps repeating at short intervals		
	Interior buzzer		
	Chime (once)		
When one of the door is opened or			The remote controller may be outside the vehicle. Bring the remote controller in the vehicle.
closed	5 beeps repeating at short intervals	Blinks *1	
When opening the	Interior buzzer		Press the engine switch to change the ignition mode from ACC to LOCK (OFF).
driver's door	Beeping at short intervals	-	
	Interior buzzer		The steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch. Have the vehicle inspected by a Maruti Suzuki authorized workshop.
	Continuous short beeps	-	

QUICK GUIDE

When	Warning buzzer	Instrument cluster	Cause and remedy
When pushing the	Exterior buzzer	-	The engine switch is in ACC or ON mode. Press the engine switch to change the ignition mode to LOCK (OFF).
request switch	Beeping at short intervals for approx. 2 seconds		
		-	The remote controller is left inside the vehicle. Take the remote controller outside the vehicle.
		Lights up *2	Any door (including the tailgate) is open. Close all doors completely
When pushing		Lights up *2	Any door (including the tailgate) is open. Close all doors completely
LOCK button on the remote controller	Beeping at short intervals for approx. 2 seconds		

FAQ Q&A

Refer to the following list of frequently asked questions.

Door opening / closing

- Q. The keyless entry system does not work. What should I do?
- A. There is a possibility that something is interfering with the function of the keyless entry system. Refer to "Keyless Entry System" in the "BEFORE DRIVING" section.
- A. If the battery of the keyless entry system transmitter or keyless push start system remote controller is dead, replace it. Refer to "Battery Replacement" in the "BEFORE DRIVING" section.
- Q. A loud alarm sounds when opening the door. What does this mean?
- A. The security system has been activated. Press the engine switch to change the ignition mode to ON to stop the alarm. For the correct method of handling, refer to "Security System (if equipped)" in the "BEFORE DRIVING" section.

Window glass

- Q. How can I clear fog on the inside of the windshield and door glass areas?
- A. Use the defroster switch. Refer to "Manual Heating and Air Conditioning System" or "Automatic Heating and Air Conditioning System" in the "OTHER CONTROLS AND EQUIPMENT" section.
- Q. How can I clear fog on the inside of the rear window glass?
- A. Use the heated rear window switch. Refer to "Heated Rear Window Switch" in the "BEFORE DRIVING" section.

QUICK GUIDE

Tyres

- Q. I get a flat tyre. What should I do?
- A. Change the flat tyre with a spare tyre. Refer to "Changing Wheels" in the "EMERGENCY SERVICE" section.

Running out of battery

- Q. The battery runs out and the engine does not start. What should I do?
- A. Connect the battery of a vehicle for assistance to jump leads and start the engine. Refer to "Jump-starting Instructions" in the "EMERGENCY SERVICE" section.

Engine oil

- Q. I would like to change the engine oil. What should I do?
- A. Refer to "Engine Oil and Filter" in the "INSPECTION AND MAINTENANCE" section and "Specifications" in the "SPECIFICATIONS" section.


ENG A-STOP system

- Q. The ENG A-STOP system does not work. What should I do?
- A. Refer to "ENG A-STOP" in the "OPERATING YOUR VEHICLE" section.

Electrical equipment

- Q. The headlights or brake lights do not light up. What should I do?
- A. Check the light bulbs. Refer to "Bulb Replacement" in the "INSPECTION AND MAINTENANCE" section and "Specifications" in the "SPECIFICATIONS" section.
- Q. I cannot use an electrical device. What should I do?
- A. Check the fuses. Refer to "Fuses" in the "INSPECTION AND MAINTENANCE" section.


QUICK GUIDE					
MEMO					

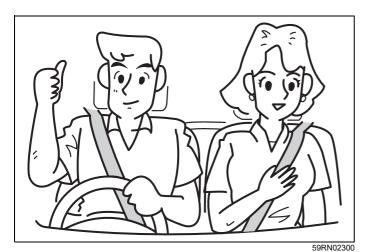

FOR SAFE DRIVING

Driver's Seat Floor2-1
Seat Belts and Child Restraint Systems2-2
Front Seats
Tilt Steering Lock Lever2-7
Mirrors
Rear Seats2-10
Seat Utility2-12
Safety for Child2-14
Seat Belt2-18
Handling and Care for Seat Belt2-23
Seat Belt Pretensioner System (Only for Front Seat) 2-25
Seat Belt Force Limiter System (if equipped)2-26
Child Restraint Systems2-27
Supplemental Restraint System (Airbags)2-37
When Driving the Vehicle with SRS Airbag System 2-39
Handling for Airbags2-43
Function of Airbags2-45
When Starting the Engine2-53
When Loading the Luggage2-54

Driver's Seat Floor Floor Mats

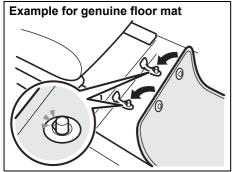

55T020010

To prevent the driver's side floor mat from sliding forward and possibly interfering with the operation of the pedals, genuine Maruti Suzuki floor mats are recommended.

Whenever you put the driver's side floor mat back in the vehicle after it has been removed, hook the floor mat grommets to the fasteners and position the floor mat properly in the footwell.

When you replace the floor mats in your vehicle with a different type such as all-weather floor mats, we highly recommend to use genuine Maruti Suzuki floor mats for proper fitting.

▲ WARNING

Failure to take the following precautions may result in the driver's side floor mat interfering with the pedals and causing a loss of vehicle control or an accident.

- Check that the floor mat grommets are hooked to the fasteners.
- · Never stack floor mats.
- Never use a floor mat which does not fit the floor as the same may cause hindrance/damage in vehicle and its functioning.
- · Never use damaged floor mats.

Clearing the Floor




69RHS157

WARNING

Do not leave empty cans, etc. at your feet. These objects may interfere with pedal operation and cause accidents.

Seat Belts and Child Restraint **Systems**

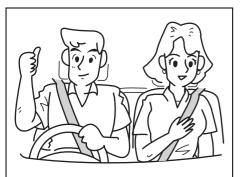

59RN02300

WARNING


- · Wear your seat belts at all times.
- · An airbag supplements or adds to the frontal collision protection offered by seat belts. The driver and all passengers must be properly restrained by wearing seat belts at all times, even if driving for a very short distance, whether or not an airbag is mounted at their seating position, to minimize the risk of severe injury or death in the event of a collision.


(Continued)

▲ WARNING

(Continued)

· Do not modify, remove, disassemble seat belts. Doing so may prevent them from functioning properly and cause the risk of severe injury or death in the event of a collision.

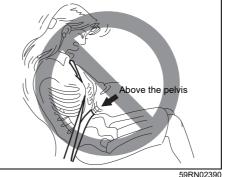

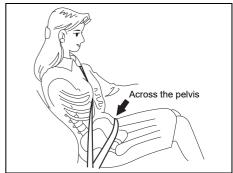

59RN02400



2-2

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Ensure that all seat belts are worn correctly. An improperly worn seat belt increases the risk of injury or death if a collision occurs.
- Seat belts should always be adjusted as follows:
 - the lap portion of the belt should be worn low across the pelvis, not across the waist.
 - the shoulder straps should be worn on the outside shoulder only, and never under the arm.
 - the shoulder straps should be away from your face and neck, but not falling off your shoulder.
- Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than a snug belt.
- Check that seat belt latch plate (tongue) is inserted into the proper buckle especially in the rear seats. It is not possible to insert into the wrong buckles in the rear seats.

(Continued)

WARNING

(Continued)

- Pregnant women should use seat belts, although specific recommendations about driving should be made by the woman's medical advisor. Remember that the lap portion of the belt should be worn as low as possible across the hips, as shown in the illustration.
- Do not wear seat belts over hard, fragile, or sharp items such as pens, keys, eyeglasses, etc in pockets or on clothing. The pressure from seat belt on such items can cause injury in case of an accident.



50RNI02///

 Do not hold a child on a passenger's lap. Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

(Continued)

WARNING

(Continued)

- Never use the same seat belt for more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated or damaged in any way. It is essential to replace the entire seat belt assembly after it has been worn in a severe impact, even if damage to the assembly is not obvious.
- Children aged 12 and under should ride properly restrained in the rear seat.

(Continued)

(Continued)

- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Check that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.
- For child, if the seat belt irritates the neck or face, use a child restraint system appropriately for the child. The seat belts of your vehicle are principally designed for persons of adult size.
- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- Do not insert any items such as coins and clips into the seat belt buckles, and be careful not to spill liquids into these parts. If foreign materials get into a seat belt buckle, the seat belt may not work properly.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

Adjustment before Driving



80J014

WARNING


- When driving, do not adjust the steering wheel (only adjustable type with certain specifications), the seat, the inside rearview mirror or the outside rearview mirrors. Otherwise, there is the risk of mistaken operation of the steering wheel or reduced awareness of what is in front of you, possibly leading to an accident.
- Do not tilt the seatback further back than necessary. Otherwise, the head restraint and the seat belt cannot function as intended.

Correct Use of Seat Belt



69RHS158

- Adjust the seat to the correct position.
 Sit your body fully into the seat.
- Make sure that the seat belt is not twisted.
- Make sure that you place the lap portion of the belt as low as possible across the pelvis.
- The upper belt should rest on the area midway between the shoulder and the base of the neck.
- Confirm that the belt is not twisted in any way, and remove any slack.

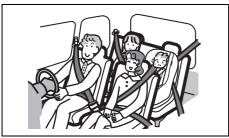

77R20050

- If you do not fasten your seat belt properly, your body may not be restrained in a sudden braking and a collision. This may cause severe injury.
 - Fasten your seat belt properly before driving.
- If all the passengers do not fasten their seat belts properly, their body may not be restrained in a sudden braking and a collision. This may cause severe injury.

Ask all the passengers on the front passenger's seat and the rear seats to fasten their seat belts properly before driving.

Front Seats Seat Adjustment

WARNING

- Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Check that the driver's seat and seatback are properly adjusted before you start driving.
- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.

(Continued)

WARNING

(Continued)

- If you place a cushion, etc. between the seatback and your back, you may not be able to drive the vehicle in a correct posture. Also, the seat belt and the head restraint may not provide the best performance. This may cause severe injury in an accident.
 - Do not place a cushion, etc. between the seatback and your back.
- Do not place any object under the front seat. If an object gets stuck under the front seat, the seat shall not be latched properly and may cause injury.
- Do not leave cigarette lighters or spray cans on the floor. If a cigarette lighter or spray can is on the floor, it may light accidentally when luggage is loaded or the seat is adjusted, causing a fire.



80T020260

Seat position adjustment lever (1)Pull the lever up and slide the seat.




80T020270

Seatback angle adjustment lever (2)
Pull the lever up and move the seatback.

NOTE:

To operate the seat back smoothly, pull the seat back adjustment lever (2) in upward direction. Ensure to move seat back only after lever is moved to fully up position. After adjustment of seat back, release the lever gently. Check that seat back is locked by moving it forward and backward.

Head Restraints

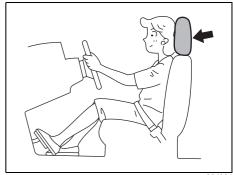

80J001

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the center of the head restraint closest to the top of your ears. If this is not possible for very tall passengers, adjust the head restraint as high as possible.

- If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury. Never drive the vehicle with the head restraints removed.
- If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.

If the head restraint is installed back to front, you cannot adjust the height and install it securely.


Make sure to install the head restraint securely in the right direction.

 Being distracted by head restraint adjustment could lead to an accident.

Do not attempt to adjust the head restraint while driving.

NOTE:


It may be necessary to recline the seatback to provide enough overhead clearance to remove the head restraint.

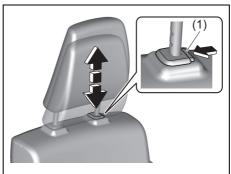

77R30530

To raise the front head restraint, pull upward the head restraint until it clicks. To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

Tilt Steering Lock Lever

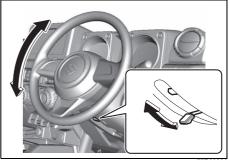

77D3023

(1) LOCK (2) UNLOCK

The lock lever is located under the steering column. To adjust the steering wheel height:

- 1) Push down the lock lever to unlock the steering column.
- Adjust the steering wheel to the desired height and lock the steering column by pulling up the lock lever.
- Try moving the steering wheel up and down back and forth to check that it is securely locked in position.

▲ WARNING

Never attempt to adjust the steering wheel while the vehicle is moving or you could lose control of the vehicle.


Mirrors

WARNING


Failure to observe following point may result in loss of vehicle control and cause an accident, leading to death or serious injury. Always follow below points while driving.

- Always unfold all the outside rearview mirrors and adjust properly before driving.
- Do not place objects in the rear of the vehicle which may hinder visibility or interfere with your vision from the rear window glass.

Inside Rearview Mirror

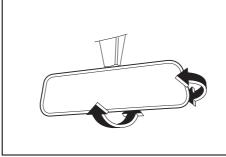

81M30360

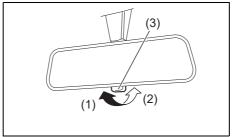

83S02352

- (1) Night driving
- (2) Day driving
- (3) Selector tab

You can adjust the inside rearview mirror by hand to see the rear of your vehicle in the mirror. To adjust the mirror, set the selector tab (3) to the day position, then move the mirror up, down or sideways by hand to obtain the best view.

When driving at night, you can move the selector tab (3) to the night position to reduce glare from the headlights of vehicles behind you.

▲ WARNING

- If you adjust the inside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.
 - Adjust the inside rearview mirror before driving.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you.
 Be aware that in this position you may not be able to see some objects that could be seen in the day position.

A CAUTION

Do not modify the inside rearview mirror or install a non-genuine wide mirror. It could result in injury during accident.

FOR SAFE DRIVING

Outside Rearview Mirrors


Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

WARNING

If you adjust the outside rearview mirror while driving, you could lose control of the vehicle, resulting in an accident.

Adjust the outside rearview mirror before driving.

Electric mirrors (if equipped)

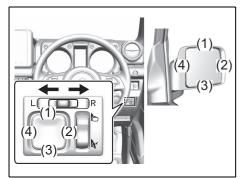

80T020020


The switch to control the electric mirrors is located on the instrument panel. You can adjust the mirrors when the ignition switch is in "ACC" or "ON" position, or the ignition mode is ACC or ON. To adjust the mirrors:

- Move the selector switch (1) to the left or right to select the mirror you wish to adjust.
- 2) Press the outer part of the switch (2) that corresponds to the direction in which you wish to move the mirror.
- Return the selector switch (1) to the center position to help prevent unintended adjustment.


NOTICE

- The electric type outside rearview mirror operates even though the ignition switch is in the ACC position. However, to prevent unnecessary battery discharge, do not adjust the mirrors longer than necessary while the engine is not running.
- The mirrors stop moving when they reach the maximum adjusting angles, but the motor continues to operate while the switch is pressed. Do not continue to press the switch in such a situation as the motor may be damaged.
- Do not attempt to adjust the outside rearview mirror by hand which may cause damage to the motor.
- Do not fold the electrical foldable outside rearview mirror by hand. It could cause motor failure.

Outside Rearview Mirror Folding Switch (if equipped)

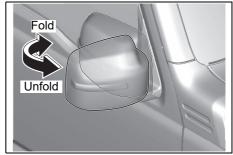


80T020040

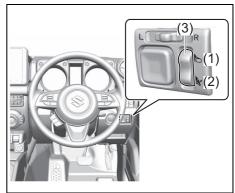

80T020070

- (1) Unfold
- (2) fold

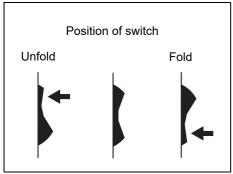

78RB20202

You can fold the mirrors when you park the vehicle in a narrow space. Push the folding switch (3) to fold and unfold the mirrors. Make sure the mirrors are completely unfolded before you start driving.

WARNING

If you drive the vehicle with the outside rearview mirrors folded, it may result in an accident.

Do not drive the vehicle with the outside rearview mirrors folded.

A CAUTION

Moving mirrors can pinch and injure a hand. Do not allow anyone's hand to get near the mirrors when folding and unfolding the mirrors.


NOTE:

- If you press the folding switch to open the outside rearview mirrors and simultaneously start the engine, then the outside rearview mirrors may get stuck during that moment. To open the outside rearview mirrors completely, again press the folding switch after starting the engine.
- Slight time difference in opening of both outside rearview mirrors is due to angular positioning of the driver seat.

Rear Seats Seat Adjustment

▲ WARNING

- To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, check that the seats are adjusted before the seat belts are fastened.
- All seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the upright position.
- Do not place any object under the rear seat equipped with the seat position adjustment lever. If an object becomes caught under the rear seat, the seat will not be latched.

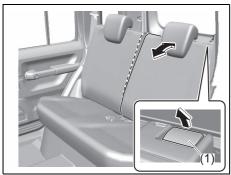

30T020290

Pull the lever (1) up and move the seat-back.

After adjustment, move the seat and seatback forward and backward to check that it is securely latched.

Head Restraints

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident.

WARNING

 If you drive the vehicle with the head restraint removed, a passenger's backward tilting cannot be prevented in a collision from the backward and the impact to a passenger's head cannot be reduced in a sudden braking or a collision. This may cause severe injury.
 Never drive the vehicle with the

Never drive the vehicle with the head restraints removed.

 If the head restraint is installed back to front or it is not installed securely, the head restraint may not provide the best performance in case of emergency, resulting in severe injury.

If the head restraint is installed back to front, you cannot adjust the height and install it securely.

Make sure to install the head restraint securely in the right direction.

(Continued)

WARNING

(Continued)

- Being distracted by head restraint adjustment could lead to an accident.
 - Do not attempt to adjust the head restraint while driving.
- If you try to install a child restraint system and it touches the head restraint, a child may be severely injured in a collision.

When you install a child restraint system, adjust the height of the head restraint as high as possible or remove the head restraint for avoiding that the child restraint system touches the head restraint.

A CAUTION


If you leave the removed head restraint in the vehicle, it may jump out and hit passengers or objects, resulting in injury or damage.

Do not leave the removed head

Do not leave the removed head restraint in the vehicle.


NOTE:

It may be necessary to fold forward the seatback to provide enough overhead clearance to remove the head restraint.

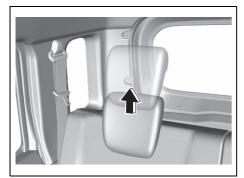

80T020120

To raise the rear head restraint, pull up the head restraint until it clicks.

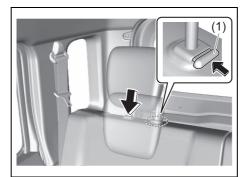

80T020130

To lower the head restraint, push down the head restraint while holding in the lock button (1). If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock button (1) and pull the head restraint all the way out.

When installing a child restraint system, adjust the height of the head restraint or remove it for fitting the child restraint system, as necessary.

Seat Utility Folding Rear seats

A CAUTION

Remove objects from the rear seats before folding the rear seats. There may be a case that the rear seat belt reminder will not be activated, if objects are remained on the rear seats.

To fold the rear seats forward:

1) Lower the head restraint fully.



80T020100

Pull the release lever (1) on the top of each split seat, and fold the seatbacks forward

NOTICE

After folding the rear seatback forward, do not allow any foreign material to enter the lock opening. This may cause damage to the inside of the lock and prevent the seatback from being locked securely.

WARNING

If you need to carry cargo in the passenger compartment with the rear seatback folded forward, secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.


To return the seat to the normal position, follow the procedure below.

A CAUTION

When returning the rear seatback to the normal position, be careful that your finger is not caught between the lock and the striker.

NOTICE

When returning the rear seatback to the normal position, check that there is nothing around the striker. Any foreign materials prevent the seatback from being locked securely.

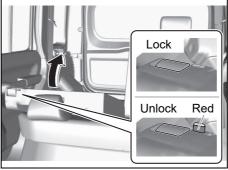

80T020110

Raise the seatback until it locks into place.

After returning the seat, move the seatback forward and backward to check that it is securely latched.

A CAUTION

- Do not put your hand into the rear seatback lock opening, or your finger may get caught and be injured.
- After securing the rear seatback, check that it is locked securely. If it is not, red button will appear beside the release lever.

NOTICE

- When returning the rear seatback to the normal position, do not allow any foreign material to enter the lock opening. This may prevent the seatback from being locked securely.
- When returning the rear seatback to the normal position, handle it carefully by hand to avoid any damage to the lock itself. Do not push it by using some material or by applying excessive force.
- As the lock is designed exclusively for securing the rear seatback, do not use it for any other purpose. Incorrect use of it may cause damage to the inside of the lock and prevent the seatback from being locked securely.

NOTE:

After returning the rear seatback, check that the seat belts are not twisted or caught in the rear seatback.

Safety for Child

For safety, carefully drive at lower speed than usual.

Place a Child in the Rear Seat



51K0188

- Seat a child next to an adult when possible, and ensure that the child can be visually monitored.
- Select an appropriate child restraint system suitable for the child's age and physical size.

WARNING

- If you do not use the child-proof lock, a child may open a door and the child may be thrown out, resulting in severe injury. To avoid this, use the child-proof lock setting.
- When it is necessary to seat the child who does not need a child restraint system in the front passenger's seat, observe the following point.
 - Slide the front passenger's seat all the way back. If the front passenger's seat is in a forward position, there is a risk of serious injury due to major impact if the front passenger's seat airbag was to be deployed.

(Continued)

▲ WARNING

(Continued)



59RN04650

- If a child put a hand out of the window or lean on a door, the child may get severe injury by a strong impact of side or curtain airbag activation.
 - Do not allow a child to put hand out of the window or lean on a door.
- Do not allow the hands or feet, etc., of a child near movable parts inside a vehicle, such as the seat rails. Otherwise, there is the possibility of injury.

FOR SAFE DRIVING

A Child Needs to Wear Seat Belt



69RHS159

WARNING

- Do not drive with a child on your lap. Even if you hold the child tightly, proper support is not possible, and in the event of a collision, etc., the child may get serious injury.
- If a child does not wear a seat belt. in a sudden braking and a collision. the child may get serious injury. Be sure to always have a child wear a seat belt.

(Continued)

WARNING

(Continued)

• If two or more people use a single seat belt, in a sudden braking and a collision, the seat belt may not provide the best performance, resulting in severe injury.

Do not allow two or more people to use a single seat belt.



69RHS160

▲ WARNING

- The seat belts of this vehicle are designed to be suitable for occupants of adult size. If the shoulder strap rests on the neck or chin of a child rather than the shoulder, or if the lap portion of the belt does not rest securely on the hipbone, ensure that the child is seated in a child restraint system placed in the rear seat. Failure to properly use a seat belt may result in serious injury to the child.
- Use a child restraint system securely fastened to the rear seat for any child that cannot hold their head upright or sit on their own.

Do not Let a Child Play with Seat Belt



69RHS161

WARNING

If a child play with a seat belt, for example, if the child's body is wrapped by the seat belt, it may cause severe injury such as suffocation. In case of emergency, cut the seat belt with scissors.

Using the Child Restraint SystemRefer to "Securing Child Restraint System by Seat Belt" in this section.

An Adult Needs to Open or Close Each Door or Window, and Adjust Seats

Only an adult should open or close each door or window and adjust seats, not to get a child's hands, arms, legs or neck, etc. caught in.



69RHS162

WARNING

 If the windows are not locked, a child may operate the windows by mistake or the other passengers may be caught in the windows.
 To avoid unintended operation of the power window by a child, use the window lock switch.

(Continued)

WARNING

(Continued)

 If you leave the power window in ready condition, it may cause unintended operation of the power window by a child, resulting in an accident.

When you leave the vehicle, make sure to turn the ignition switch to "OFF" position or press the engine switch to change the ignition mode to OFF, keep the key with you and leave the vehicle with your child.

Do not Let a Child Stick His/her Head or Hands out of the Window




69RHS163

Do not Leave a Child Unattended in the Vehicle



69RHS164

Do not Place a Child in Luggage Compartment

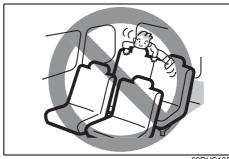

69RHS165

WARNING

Ensure that a child does not put their hands or heads, etc., out the windows. Otherwise, serious injuries due to falling out or sudden braking may occur. Moreover, serious injury could also occur if a child were to come into contact with objects outside the vehicle.

WARNING

When getting out of the vehicle, do not allow a child to stay in the vehicle without you.

- Unintended and wrong operations by a child may cause a fire or an accident from the vehicle start.
- As the inside temperature of the vehicle will become hot under the blazing sun, a child may suffer from heat stroke or dehydration, resulting in severe health problems or death in the worst case. Even if you turn on the air conditioner. do not leave a child alone in the vehicle.

WARNING

The luggage areas do not feature a structure that can accommodate people. Do not allow a child to ride in such areas. Otherwise, there is the danger of accidents due to sudden braking, etc. Do not let a child play in luggage areas even while the vehicle is stopped on the road.

Seat Belt

A Child Needs to Wear Seat Belt Refer to "Safety for Child" in this section.

Information for Pregnant Woman and the Sick Person



69RHS166

WARNING

- Those that are pregnant or sick/disabled must also wear their seat belts. However, in the event of a collision, there is the danger of heavy pressure focused on certain body areas. Consultation with a physician is recommended.
- For those that are pregnant, ensure that the lap portion of the belt is as low as possible across the pelvis, avoiding to touch the abdomen.
 Make sure that the shoulder strap rests halfway between the shoulder and the base of the neck, crossing the chest and avoiding to touch the abdomen.

Lap-shoulder Belt

Emergency locking retractor (ELR)


The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact. It also may lock if you pull the belt across your body very quickly. If this happens, let the belt go back to unlock it, and then pull the belt across your body more slowly.

Safety reminder




59RN02310

FOR SAFE DRIVING

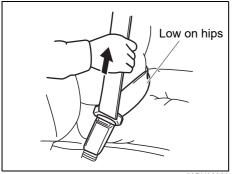


59RN02320

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust it to a snug fit by pulling the shoulder portion of the belt upward through the latch plate. The length of the diagonal shoulder strap adjusts itself to allow freedom of movement.

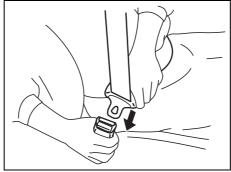

59RN02330


To fasten the seat belt, sit up straight and far back into the seat, pull the latch plate attached to the seat belt across your body and press it straight into the buckle until you hear a click. After pressing the latch plate into the buckle, pull the seat belt to make sure it is securely latched.

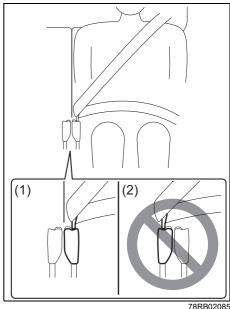

- 78RB0
- (1) Correct (2) Wrong

WARNING

When fastening the rear seat belt, always use the closest buckle to you. If you use the buckle for your next rear seat position by mistake, the rear seat belt may not function properly.

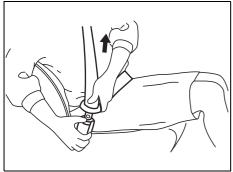

59RN02340

To unfasten the seat belt, push the red "PRESS" button on the buckle and retract the belt slowly while holding the belt or/and the latch plate.

NOTE:

If the seat belt cannot be pulled from its fully retracted position, firmly pull the belt and release it. Then smoothly pull the belt out of the retractor.

Adjustment of Seat Belt Length

The seat belt does not require length adjustment. The seat belt extends and retracts according to the movement of the body. If the seat belt gets a strong impact, the belt locks its tension automatically, in order to secure the body.

Correct Use of Seat Belt


WARNING

Use the seat belt correctly. Otherwise, in a sudden braking or a collision, the body may not be restrained, resulting in severe injury. Observe the following points.

- If the seat belt is twisted or contains excessive slack, there is danger of heavy pressure focused on certain body areas.
- If the seat belt rests on the abdomen, this area may sustain heavy pressure when you get a strong impact.
- If the seat belt does not rest firmly over the shoulder, you may be thrown forward when you get a strong impact.

FOR SAFE DRIVING

Seat Belt Reminder

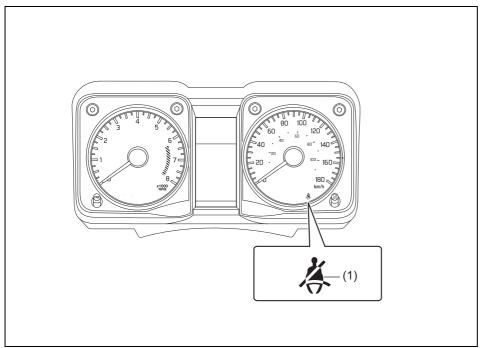

80TM02001

(1) Driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light*

When the driver and/or passenger (front passenger and/or rear passenger*) do(does) not fasten their seat belts, the seat belt reminder lights will come on or blink and a buzzer will sound to remind the driver and/or passenger (front passenger and/or rear passenger*) to fasten their seat belts. For more details, refer to the explanation below.

▲ WARNING

It is absolutely essential that the driver, front passenger and rear passenger* fasten their seat belts at all times. Persons who are not fastening seat belts have a much greater risk of injury if an accident occurs. Make a regular habit of buckling your seat belt before starting the engine.

NOTE:

The driver's seat belt reminder light / front passenger's seat belt reminder light / rear passenger's seat belt reminder light* is for all the driver, front passenger and rear passenger.

*: If equipped

Driver's seat belt reminder

If the driver's seat belt remains unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:


- 1) The driver's seat belt reminder light will come on. The front passenger's seat belt reminder light will also come on if a front passenger does not fasten his/her seat belt.
- 2) After the vehicle's speed has reached about 15 km/h, the driver's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the driver's seat belt is buckled.

If the driver has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the driver's seat belt is buckled or the ignition switch is turned to off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

Front passenger's seat belt reminder

If there is a person sitting in the front passenger seat and the front passenger seat belt is unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the front passenger's seat belt reminder will activate

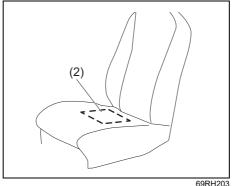

(2) The sensor of the front passenger's seat belt reminder

The seat belt reminder sensor (2) detects whether a person is sitting in the front seat. The sensor of the front passenger's seat belt reminder is located in the seat cushion. The front passenger's seat belt reminder works in the same manner as the driver's seat belt reminder.

NOTICE

- · The sensor of the front passenger's seat belt reminder is located in the seat cushion. If heavy or sharp objects are put on the seat cushion, or a removal, disassembly and modification of the passenger's seat are performed, the sensor may not work properly or can be damaged. Do not put heavy or sharp objects on the seat cushion. Do not remove, disassemble and modify the passenger's seat.
- Depending on the variety of seat cover, operation of the sensor may be adversely affected. Maruti Suzuki highly recommends that you use Maruti Suzuki genuine seat cover exclusively for this vehicle. If a seat cover is installed, consult with a Maruti Suzuki authorized workshop.
- · If you spill liquid such as liquid aromatics, soft drinks or juice on the front passenger's seat cushion, the sensor of the front passenger's seat belt reminder located in the seat cushion can be damaged. Immediately wipe it dry with a soft cloth when spilled.

(Continued)

NOTICE

(Continued)

· When sitting on the front passenger's seat, it is very important that the passenger sits upright, leaning against the seat backrest and centered on the seat cushion in order for the seatbelt reminder system to function effectively. An occupant sitting improperly (slouches, turns sideways, sits forward or sideways) may hamper the functioning of this system as it may not detect the occupant.

NOTE:

- If you put an object on the passenger's seat, the weight of the object will be sensed by the sensor and the front passenger's seat belt reminder light will come on and then the interior buzzer mav beep.
- If a child or a small sized person sit on the front passenger's seat or the cushion is put on the front passenger's seat, the weight will not be sensed by the sensor and the interior buzzer may not beep.

Rear passenger's seat belt reminder

If the rear passenger's seat belt remains unbuckled when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the reminder works as follows:

- 1) The rear passenger's seat belt reminder light will come on.
- 2) After the vehicle's speed has reached about 15 km/h, the rear passenger's seat belt reminder light will blink and a buzzer will sound for about 95 seconds.
- 3) The reminder light will remain on until the rear passenger's seat belt is buckled.

If the rear passenger has buckled his or her seat belt and later unbuckles the seat belt, the reminder system will be activated from Step 1) or 2) according to the vehicle's speed. When the vehicle's speed is less than 15 km/h, the reminder will start from Step 1). When the vehicle's speed is more than 15 km/h, the reminder will start from Step 2).

The reminder will be automatically canceled when the rear passenger's seat belt is buckled or the ignition switch is turned to off, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

Handling and Care for Seat Belt

Seat Belt Handling



Periodically check if the seat belts work properly and are not damaged. Check the webbing, buckles, latch plates, retractors, anchorages and guide loops. Replace any seat belts which do not work properly or are damaged.

- Inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly even which was not in use during a collision must be replaced if the seat belt pretensioners were activated. The pretensioners and the load limiter only function once. In case they did not activate, consult with a Maruti Suzuki authorized workshop.
- If frays, scratches, cuts are found on the seat belt, replace it with a new one.
- If the buckle does not work properly, ask your Maruti Suzuki authorized workshop for inspection.
- If strong force was applied to the seat belt in a collision, the seat belt function may be damaged, even though its appearance is normal. Replace the seat belt with a new one.

(Continued)

WARNING

(Continued)

- As the seat belt may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - When foreign material enters into the buckle or you spill a drink, the seat belt may not work properly. In this case, ask your Maruti Suzuki authorized workshop for inspection.
 - As the seat belt may be damaged, be careful not to get the seat belt caught in the door. Before closing the door, check that the seat belt is retracted without any slack.
 - Do not modify or remove the seat belt.


Seat Belt Care

Caring for seat belts is the same as caring for any type of regular cloth material, etc.

▲ WARNING

Do not use bleach, solvent or dyes on seat belts. Doing so may cause stains, discoloration and strength deterioration, and the seat belt may not function properly.

Seat Belt Pretensioner System (Only for Front Seat)

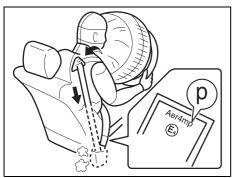

55T020520

WARNING

This section describes your Maruti Suzuki vehicle's seat belt pretensioner system. Read and follow all these instructions carefully to minimize your risk of severe injury or death.

To determine if your vehicle is equipped with a seat belt pretensioner system at the front or rear seating positions, check the label on the seat belt at the bottom part. If the letter "p" appears as illustrated, your vehicle is equipped with the seat belt pretensioner system. You can use the preten-

sioner seat belts in the same manner as ordinary seat belts.

Read this section and "Supplemental Restraint System (Airbags)" section to learn more about the pretensioner system.

The seat belt pretensioner system works with the supplemental restraint system (airbags). The crash sensors and the electronic controller of the airbag system also control the seat belt pretensioners. The pretensioners are triggered only when there is a frontal or side collision severe enough to trigger the airbags and the seat belts are fastened. For precautions and general information including servicing the pretensioner system, refer to "Supplemental Restraint System (Airbags)" section in addition to this "Seat Belt Pretensioner system" section, and follow all those precautions.

The pretensioner is located in each front seat belt retractor. The pretensioner tightens the seat belt so the belt fits the occupant's body more snugly in the event of a frontal or side collision. The retractors will remain locked after the pretensioners are activated. Upon activation, some noise will occur and some smoke may be released. These conditions are not harmful and do not indicate a fire in the vehicle.

The driver and all passengers must be properly restrained by fastening seat belts at all times, whether or not a pretensioner is equipped at their seating position, to minimize the risk of severe injury or death in the event of a collision.

Sit fully back in the seat; sit up straight; do not lean forward or sideways. Adjust the belt so the lap portion of the belt is worn low across the pelvis, not across the waist. Please refer to "Seat Adjustment" section and the instructions and precautions about the seat belts in this "Seat Belts and Child Restraint Systems" section for details on proper seat and seat belt adjustments.

Please note that the pretensioners along with the airbags will activate in severe frontal or side collisions. They are not designed to activate in rear impacts, rollovers, or minor frontal side collisions. The pretensioners can be activated only once. If the pretensioners are activated (that is, if the airbags are activated), have the pretensioner system serviced by Maruti Suzuki authorized workshop as soon as possible.

The pretensioner system or the airbag system may not work properly if any of the following conditions occurs:

- 1) If the air bag warning light on the instrument cluster does not come on briefly, when the ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".
- 2) If the air bag light comes on and stays on for more than 10 seconds, when the

ignition switch is turned to the "ON" position or the engine switch is pressed to change the ignition mode to "ON".

3) If the air bag light comes on while driving.

Have both systems inspected by Maruti Suzuki authorized workshop as soon as possible.

Service on or around the pretensioner system components or wiring must be performed only by Maruti Suzuki authorized workshop. who is specially trained. Improper service could result in unintended activation of pretensioners or could render the pretensioner inoperative. Either of these two conditions may result in personal injury.

To prevent damage or unintended activation of the pretensioners, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle.

Do not touch pretensioner system components or wiring. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow. When scrapping your Maruti Suzuki vehicle, ask a Maruti Suzuki authorized workshop, body repair shop, or scrap yard for assistance.

For Proper Operation of Seat Belt Pretensioner System

Do not modify any parts that can affect the functionality of the seat belt pretensioner system. The seat belt may be retracted unexpectedly, or it may not be properly retracted when necessary.


Disposal and Scrapping

Seat belt pretensioners that have not been activated must be activated according to the predetermined procedure before disposal.

WARNING

If you do not handle a pretensioner properly for disposal, the pretensioner system may activate unexpectedly, resulting in severe injury. When disposing of a pretensioner or scrapping the vehicle equipped with a pretensioner, consult with a Maruti Suzuki authorized workshop


Seat Belt Force Limiter System (if equipped)

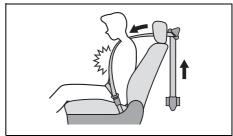

69RHS167

In the event of a strong impact coming from the front, the seat belt force limiter operates in two stages (driver's seat) and one stage (front and rear passenger's seat) to reduce a force to the shoulder strap, thus lessening the impact being sustained by the front passengers.

FOR SAFE DRIVING

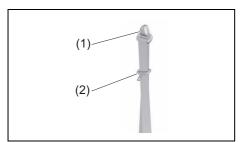

80T020160

WARNING

If the seat belt sustains strong impact, the resin of the shoulder anchor part (1) and the tongue plate part (2) could soften due to heavy friction, thus sticking to the seat belt, making the belt slide less easily. In such a case, the seat belt may not provide the best performance, resulting in severe injury in case of emergency. Have the seat belt replaced by Maruti Suzuki authorized workshop.

Child Restraint Systems Child Restraint System Usage



59RN02280


The following types of child restraint system are available generally.

Infant restraint



80JC007

Child restraint

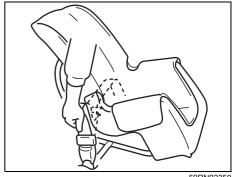

59RN02350

Booster seat



59RN02290

Maruti Suzuki highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; check that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats either by seat belts (lap belts or the lap portion of lapshoulder belts) or by special rigid lower anchor bars built onto the floor. Whenever possible, Maruti Suzuki recommends that child restraint systems be installed on the rear seat. According to accident statistics, children are safer when properly restrained in rear seating positions than in front seating positions.

NOTE:

Observe any statutory regulation about child restraints.



• Do not install a child restraint system on the front passenger's seat.

(Continued)

WARNING

(Continued)

- When installing a child restraint system to the rear seat, touching the child's foot or the child restraint system to the seatback of the front seat can cause serious injury to the child in the event of an accident. Adjust the front seat so that it does not touch the child or the child restraint system.
- If child restraint systems are not installed properly, children or other occupants could be seriously injured in the event of an accident. Secure the child restraint system firmly according to both this manual and the instruction provided by child restraint system's manufacturer.

(Continued)

(Continued)

- If the child is not secured properly in the child restraint system, it could cause serious injury to the child in the event of an accident. Use the child restraint system correctly following the instruction provided by child restraint system's manufacturer.
- If you recline the seatback, a child restraint system may not be secured properly and a child body may slip beneath the seat belt. This may cause severe injury.
 Do not recline the seatback when a child restraint system is installed on the seat.
- If you use the child restraint system which was severely damaged by an accident, etc., it may not provide the best performance. This may cause severe injury to a child. If the child restraint system was severely damaged by an accident, etc., do not reuse the child restraint system even though its appearance looks normal.

Child Restraint Systems for India Child Restraint

The suitability of each passenger's seat position for carriage of children and fitting of child restraint system is shown in the table below. Whenever you carry children up to 12 years of age, properly use the child restraints which conform to AIS 072, the standard for child restraints, referring to the table.

MASS GROUP		Seating position (or other site)					
		Front Passenger	Rear Outboard	Rear Center	Intermediate Outboard	Intermediate Center	
Group 0	Up to 10 kg	Х	U	N.A.	N.A.	N.A.	
Group 0+	Up to 13 kg	Х	U	N.A.	N.A.	N.A.	
Group I	9 to 18 kg	Х	U	N.A.	N.A.	N.A.	
Group II	15 to 25 kg	Х	U	N.A.	N.A.	N.A.	
Group III	22 to 36 kg	Х	U	N.A.	N.A.	N.A.	

Key of letters to be inserted in the above table:

U =Suitable for 'universal' category restraints approved for use in this mass group

X =Seat position not suitable for children in this mass group

N.A = Seat position not available for children in this mass group.

NOTE:

- 'universal' is the category in the AIS 072.
- · 'Outboard' indicates window side seat.

Securing Child Restraint System by Seat Belt

Choose the appropriate seat for the child's age and physical size.



61M0241

- Do not install a child restraint system on the front passenger's seat.
- If you install a child restraint system in the rear seat, slide the front seat far enough forward so that the child's feet do not contact the front seatback. This will help avoid injury to the child in the event of an accident.

(Continued)

WARNING

(Continued)

- Do not hold a child on passenger'S lap when the vehicle is in motion.
- Even if the passenger holds the child tightly, he/she would not be supported enough in the event of an accident and it could result in a serious injury of the child.

A CAUTION

If your vehicle is equipped with the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improp-

NOTE:


Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

erly, a child sitting in it could be

injured in a collision.

Securing

This section explains securing the child restraint system in the rear seat.

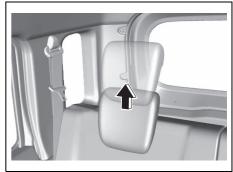


80T020120

 When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision.


When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.

- 2) If your vehicle is equipped with the reclining mechanism of rear seatback, adjust the angle of the seatback so that there is no gap between the child restraint system and the seatback.
- Make sure that the child restraint system is securely fastened to the main seat.
- 4) Make sure to pass the seat belt of the passenger's seat through the specified parts, according to the instruction manual that came with the child restraint system.

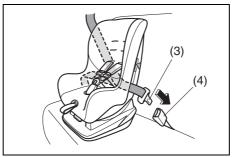

59RN02140

 - Insert the tongue plate (3) firmly into the seat belt buckle (4) until you hear a click.
 - The child restraint system in the above figure is a typical example.



72M00172

- 6) If the child restraint system does not have a seat belt locking mechanism or a locking clip, secure it to the seat by using an aftermarket locking clip.
 - The aftermarket locking clip shown in the above figure is a typical example.

WARNING

Failure to securely fasten a child restraint system via the seat belt locking mechanism or a locking clip may cause serious injury to a child when sudden braking or a collision occurs.

FOR SAFE DRIVING

- Shake the child restraint system back and forth, and left and right to check if it is securely in position.
 - If you cannot ensure secure positioning, check the instruction manual that came with the child restraint system or consult the dealer where you purchased the seat.

WARNING

Make sure to position the child restraint system securely. Failure in doing so could result in the child sustaining serious injury when sudden braking or a collision occurs.

Securing Child Restraint System by ISOFIX

Securing




80T020170

(1) Lower anchorage

Your vehicle is equipped with the lower anchorages in the rear seats for securing a ISOFIX type of child restraints with the connecting bars. The lower anchorages are located where the rear of the seat cushion meets the bottom of the seatback.

Install the ISOFIX type child restraint system according to the instructions provided by the child restraint system manufacturer. After installation, try moving the child restraint system in all directions especially forward to check that connecting bars are securely latched to the anchorages.

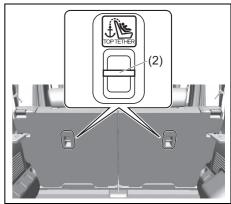

80T020180

(2) Top tether anchorage

Your vehicle is equipped with the top tether anchorages. Use the top tether strap of the child restraint according to the instructions provided by the child restraint system manufacturer.


Here is a general instruction:

A CAUTION

If your vehicle is equipped with the head restraint, adjust the height of the rear head restraint or remove it for fitting the child restraint, as necessary. However, if a booster cushion not equipped with the head restraint is fitted, the head restraint should not be removed. If the head restraint is removed for fitting the child restraint, you need to install it again after removing the child restraint. If the child restraint is fitted improperly, a child sitting in it could be injured in a collision.

NOTE:

Stow the removed head restraint in the luggage compartment so it will not cause inconvenience to the occupants.

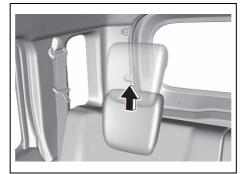


80T020120

 When the child restraint system contacts the head restraint, adjust the height of the head restraint or remove it for fitting the child restraint system.

MARNING

If the child restraint system contacts the head restraint, the child restraint system cannot be secured firmly. This may cause severe injury to a child in a collision.


When installing the child restraint system, adjust the head restraint height to the highest position as much as possible or remove the head restraint so that the child restraint system would not contact the head restraint.

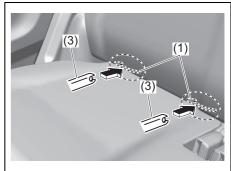

80T020190


 Place the child restraint in the rear seat, inserting the connecting bars (3) to the lower anchorages (1) between the seat cushion and the seatback.

FOR SAFE DRIVING

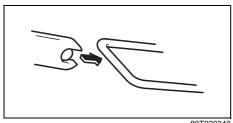


80T020340

3) Use your hands to carefully align the connecting bar tips with the anchorages. Take care not to pinch your fingers.

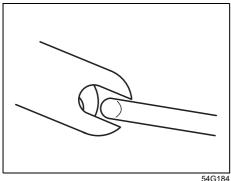

4) Push the child restraint toward the anchorages so that the connecting bar tips are partially hooked to the anchorages. Use your hands to confirm the position.

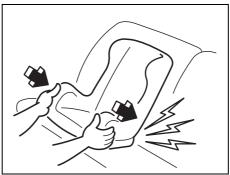


54G185

- 5) Grasp the front of the child restraint and push the child restraint forcefully to latch the connecting bars. Check that they are securely latched by trying to move the child restraint system in all directions, especially forward.
- 6) Attach the top tether strap referring to "Installation of child restraint with top tether" section. When you put your child in the child restraint system, appropriately slide the front seat forward not to touch a part of vour child's body.

NOTICE

When installing a child restraint system to the rear seat, adjust the front seat position so that the front seat does not interfere with the child restraint system.

Installation of Child Restraint with **Top Tether**

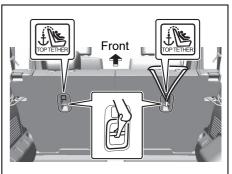

Some child restraint systems require the use of a top tether strap. Top tether anchorages are provided in your vehicle at the locations shown in the illustrations.


The number of the top tether anchorage brackets provided in your vehicle depends on the vehicle specification. Install the child restraint system as follows:

1) Secure the child restraint on the rear seat using the procedure described above for securing a restraint system that does not require a top tether strap.

2) Hook the top tether strap to the top tether anchorage and tighten the top tether strap according to the instructions provided by the child restraint system manufacturer. Attach the top tether strap to the corresponding top tether anchorage located directly behind the child restraint. Do not attach the top tether strap to the luggage restraint loops (if equipped).

WARNING

Do not attach the child restraint top tether strap to the luggage restraint loops. Incorrectly attached top tether strap will reduce the intended effectiveness of the child restraint system.

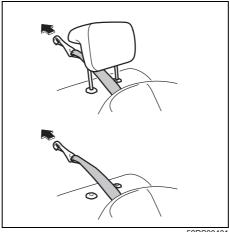

52RS20431

- When routing the top tether strap, pass the top tether strap as shown in the illustration. (Refer to "Head Restraints" section for details on how to adjust the height of head restraint or remove it.)
- 4) Check that cargo does not interfere with routing of the top tether strap.

WARNING

If the seat belt, etc. gets stuck in the child restraint system, it may not be secured properly and this may cause severe injury to a child in a collision. When you install the child restraint system, check that obstacles and the seat belt do not exist near the ISOFIX anchorages and the top tether anchorages.


Supplemental Restraint System (Airbags)

▲ WARNING

This section describes the protection provided by your Maruti Suzuki vehicle's supplemental restraint system (airbags). Read and follow all instructions carefully to minimize your risk of severe injury or death in the event of a collision.

Your vehicle is equipped with a supplemental restraint system consisting of the following components in addition to a lapshoulder belt at each seating position.

- (1) Side curtain airbag module (if equipped)
- (2) Side crash sensor (if equipped)
- (3) Forward crash sensor
- (4) Front passenger's front airbag module
- (5) Driver's front airbag module
- (6) Front seat belt pretensioner
- (7) Side airbag module (if equipped)
- (8) Airbag controller

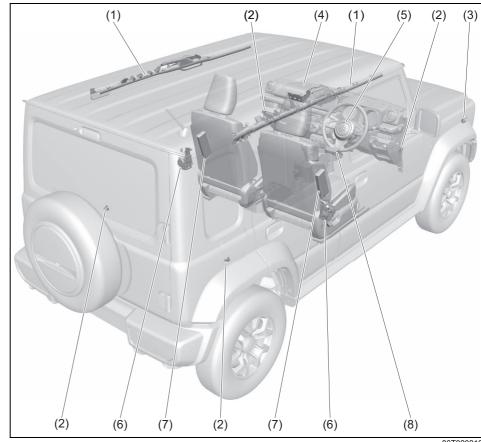

What is SRS Airbag System?

SRS stands for "Supplemental Restraint System". This system aims to restrain passengers in their seats for safety.



80T020320

If airbag warning light on the instrument cluster does not blink or come on when the ignition switch is first turned to "ON" position, or the ignition mode is first changed to ON, or airbag warning light stays on, or comes on while driving, the airbag system (or the seat belt pretensioner system) may not work properly. Have the airbag system inspected by Maruti Suzuki authorized workshop as soon as possible.

WARNING

SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time.

If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.

Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

 If the seat belts are not fastened properly, airbags may not provide the best performance. This may cause severe injury in a sudden braking and a collision.

Make sure that the driver and all the passengers fasten the seat belts properly in a correct posture.

NOTE:

Via the event data recorder (EDR) system, this vehicle records and accumulates data when the airbag is deployed.

Front airbags



80J090

Front airbags are designed to inflate in severe frontal collisions when the ignition switch is in "ON" position or the ignition mode is ON.

NOTE:


In a frontal angle collision, the side airbags (if equipped) and side curtain airbags (if equipped) may inflate.

Front airbags are not designed to inflate in rear impacts, side impacts, rollovers or minor frontal collisions, since they would offer no protection in those types of accidents. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

FOR SAFE DRIVING

Side airbags (if equipped) and side curtain airbags (if equipped)

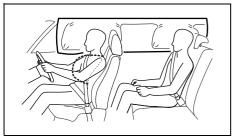

68KM090

Side airbags and side curtain airbags are designed to inflate in severe side impact collisions when the ignition mode is ON.

Side airbags and side curtain airbags are not designed to inflate in frontal or rear collisions, rollovers or minor side collisions, since they would offer no protection in those types of accidents. Only the side airbag and side curtain airbag on the side of the vehicle that is struck will inflate. However, in a frontal angle collision, the side airbags and side curtain airbags may inflate. Since an airbag deploys only one time during an accident, seat belts are needed to restrain occupants from further movements during the accident.

Therefore, an airbag is not a substitute for seat belts. To maximize your protection, always fasten your seat belts. Be aware that no system can prevent all possible injuries that may occur in an accident.

When Driving the Vehicle with SRS Airbag System

Make Sure to Fasten Seat Belt



65,1106

WARNING

SRS airbag system is not a substitute for seat belts. SRS airbag system is the supplemental restraint system and will provide the effectiveness by using the seat belts at the same time. If you and the passengers do not fasten their seat belts, it may result in severe injury in a sudden braking or a collision.

Even when you drive the vehicle equipped with SRS airbag system, make sure to fasten seat belt.

Correct Sitting Posture



80 101

There is a possibility of major impact from the front airbags when the airbags activate and deploy instantaneously, the driver and the passenger should sit deeply into their seats and touch their backs lightly to the seatback. In addition, the seat should be positioned so that it is not too far forward.



- Do not position your face, chest, etc., close to the steering wheel or instrument cluster, and do not rest your feet up into this area. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- If side airbags (if equipped) or side curtain airbags (if equipped) activate, you may get strong impact, resulting in severe injury. Do not put hands out of the window or lean on the door. Also, when sitting in the rear seat, do not hug the seatback of the front seat.


For Proper SRS Airbag System Operation



69RHS169

WARNING

- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it.
- Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
- Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

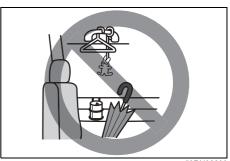

59RN02200

WARNING

For the vehicle with side airbags or side curtain airbags, do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

FOR SAFE DRIVING

Warning Label of SRS Airbag for Front Passenger's Seat



72M00150

You may find this label on the sun visor.

WARNING

NEVER use a rearward facing child restraint on a seat protected by an ACTIVE AIRBAG in front of it, DEATH or SERIOUS INJURY to the CHILD can occur.

Description of warning label


Symbol	Symbol meaning
	Do not install a rear-facing child restraint system to the front passenger's seat equipped with an airbag.
	If the front passenger's seat airbag were to be deployed, a major impact could be applied to a rearfacing child restraint system and the child.
<u> </u>	For more details, read this owner's manual.

"SRS AIRBAG" Mark and Location Driver's front airbag



77R30400

Front passenger's front airbag

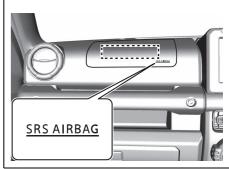

77R30410

Side airbags (if equipped)



80T020330

Side curtain airbags (if equipped)



80T020250

The driver's front airbag is located behind the center pad of the steering wheel and the front passenger's front airbag is located behind the passenger's side of the dashboard.

Side airbags are located in the part of the front seatbacks closest to the doors.

Side curtain airbags are located in the roof lining.

The words "SRS AIRBAG" are molded into the airbag covers to identify the location of the airbags.

WARNING

- If the airbag stored place is damaged or cracked, the airbag system may not work properly, which could result in serious injury in the event of a collision. Have your vehicle inspected by Maruti Suzuki authorized workshop.
- If you smash the airbag stored place or apply a strong impact to it, the airbag may not work properly or may inflate unexpectedly, resulting in serious injury.

Do not smash the airbag stored place or apply a strong impact to it.

Installation of Child Restraint System



Refer to "Seat Belts and Child Restraint Systems" section for details on securing your child.

Handling for Airbags For Proper SRS Airbag System

Operation
If objects are positioned within the range

where the airbag deploys, such objects might be impacted and blown off or the airbag may not deploy properly.

WARNING

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not modify the suspension. If the vehicle height or the stiffness of the suspension were to change, airbag malfunction may result.
 - When installing a grille guard, etc., on the front of the vehicle, consult with a Maruti Suzuki authorized workshop. If you modify the front part of the vehicle, the airbag system may not work properly.
 - When installing radio equipment, etc., consult with a Maruti Suzuki authorized workshop. Radio waves, etc., from a radio may adversely affect the computer module used in the airbag system.

(Continued)

WARNING

(Continued)

- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by a Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of airbag system is damaged, airbag may not function effectively and fully in case of an emergency.
- If the airbag-related parts are replaced or repaired, which has an impact on the airbag functions, the airbag may activate unnecessarily or may not activate when necessary.

The following situations may give a negative impact to the airbag system. In these cases, consult with a Maruti Suzuki authorized workshop beforehand.

 Removing the steering wheel, repairing the areas around the steering wheel, etc.


(Continued)

WARNING

(Continued)

- Center console repair, repairs around the instrument cluster, repairs under the front seat, and repairs of electrical wiring
- Installation of audio equipment, etc.
- Sheet metal painting and repairs around the dashboard
- Replacement of the front seat and repairs around the seat
- Repairs around the front pillar, the back pillar or the roof side
- Repairs around the center pillar

Driver's front airbag precautions

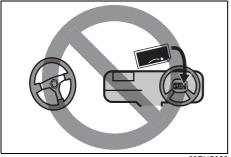


69RHS022

WARNING

- Do not position your hands, face, chest, etc., close to airbag unit area or lean on the steering wheel. Otherwise, there is the risk of serious injury due to major impact if the airbag were to be deployed.
- Do not modify the steering wheel, such as replacing it, placing stickers on it, painting it or putting the cover on it. Otherwise, the airbag may not deploy normally in case of emergency, resulting in severe injury.

Front passenger's front airbag precautions

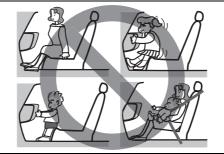

69RHS170

WARNING

- When riding in the front passenger's seat or when allowing a child to ride in this seat, be sure to observe the following points. Failure to do so may result in serious injury due to major impact if the airbag is deployed.
 - Do not position your hands or feet on the airbag unit area, and do not position your face, chest, etc., close to this area.
- Do not allow a child to stand in front of the airbag unit area or sit on a passenger's lap in the front passenger's seat. Have a child ride in the rear seat wearing a seat belt.

(Continued)

WARNING

(Continued)


 For a child that is not yet big enough to wear a seat belt properly, be sure to use a child restraint system on the rear seat.



69RHS171

- As the airbag may not provide the best performance and it may result in severe injury in case of emergency, observe the following points.
 - Do not place stickers on the airbag units or the surrounding areas or paint them. Also, do not attach any accessories, fragrances, electronic toll control units, portable car navigation systems, etc. to this area, and do not lean umbrellas or other objects against it.
 - Do not attach accessories (except for Maruti Suzuki genuine products), etc., to the windshield or the inside rearview mirror.

Side airbags (if equipped) and side curtain airbags (if equipped) precautions

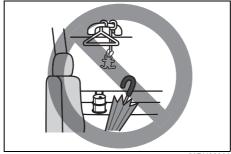

59RN02200

WARNING

If you attach accessories such as cup holders or hangers near the door, or if you lean umbrellas against the door, when side airbags or side curtain airbags activate, these objects may be thrown out and may not inflate properly, resulting in severe injury.

Do not attach accessories such as cup holders or hangers near the door. Also, do not lean umbrellas against the door.

Function of Airbags How the System Works

In a frontal collision, the collision sensors will detect rapid deceleration, and if the controller judges that the deceleration represents a severe frontal collision, the controller will trigger the inflators. The inflators inflate the appropriate airbags with nitrogen or argon gas. The inflated airbags provide a cushion for your head and upper body. The airbag inflates and deflates so quickly that you may not even realize that it has activated. The airbag will neither hinder your view nor make it harder to exit the vehicle.

A seat belt helps keep you in the proper position for maximum protection when an airbag inflates. Adjust your seat as far back as possible while still maintaining control of the vehicle. Sit fully back in your seat; sit up straight; do not lean over the steering wheel or dashboard. Front occupants should not lean on or sleep against the door. Refer to "Seat Adjustment" section and "Seat Belts and Child Restraint Systems" section in this section for details on proper seat and seat belt adjustments.







59RN04670



59RN02360

• The driver should not lean over the steering wheel. The front passenger should not rest his or her body against the dashboard where a front air bag is mounted or a child should not stand in front of the dashboard. Otherwise, he or she will get too close to the dashboard. For vehicles with side air bags and side curtain air bag, occupants should not lean on or sleep against the door. In these situations, the out-of-position occupant would be too close to an inflating airbag, and may suffer severe injury.

(Continued)

WARNING

(Continued)

- Do not attach any objects to, or place any objects over, the steering wheel or dashboard. Do not place any objects between the airbag and the driver or front passenger. These objects may interfere with airbag operation or may be propelled by the airbag in the event of a collision. Also, these objects may move when you start moving vehicle or while vehicle is moving, they may interfere with driver's view or safe driving. In each condition, it may cause severe injury.
- For vehicles with side airbags, do not use non-genuine seat covers on the front seats, because non-genuine seat covers may obstruct the inflation of side airbags. Maruti Suzuki highly recommends Maruti Suzuki-genuine seat covers to be used when covering the front seats of such vehicles with side airbags. Also, near the door, do not place cup holders, hangers or any other objects and do not lean an umbrella. as these objects could be propelled by the airbag in the event of a collision. Either of these conditions may cause severe injury.

(Continued)

(Continued)

- Do not strike or apply significant levels of impact to the airbag component areas. It can cause the airbags to malfunction.
- Even though your vehicle is damaged by a collision, it may not be severe enough to trigger front, side or side curtain airbags to inflate. If your vehicle sustains any front-end or side damage, have the airbag system inspected by Maruti Suzuki authorized workshop to ensure that it works properly. If the original function of air bag system is damaged, air bag may not function effectively and fully in case of an emergency.

A CAUTION

Airbags must inflate quickly and forcefully in order to reduce the chance of serious or fatal injuries. However, an unavoidable consequence of the quick inflation is that the airbag may irritate bare skin, such as the facial area against a front airbag. Wash off any residue as soon as possible to prevent skin irritation. Also, upon inflation, a loud noise will occur and some powder and smoke will be released. These conditions are not harmful and do not indicate a fire in the vehicle. Be aware, however. that some airbag components may be hot for a while after inflation. This may cause burn injury.

Your vehicle is equipped with a diagnostic module which records information about the airbag system if the airbags deploy in a collision. The module records information about overall system status, and which sensors activated the deployment.

Servicing the airbag system

If the airbags inflate, have the airbags and related components replaced by Maruti Suzuki authorized workshop as soon as possible.

If your vehicle ever gets in deep water and the driver's floor is submerged, the airbag controller could be damaged. If this happens, ask your Maruti Suzuki authorized workshop to check the airbag system as soon as possible.

Special procedures are required for servicing or replacing an airbag. For that reason, only Maruti Suzuki authorized workshop should be allowed to service or replace your airbags. Remind anyone who services your Maruti Suzuki vehicle that it has airbags.

Service on or around airbag components or wiring must be performed only by Maruti Suzuki authorized workshop. Improper service could result in unintended airbag deployment or could render the airbag inoperative. Either of these two conditions may result in severe injury.

To prevent damage or unintended inflation of the airbag system, check that the battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components or wires. The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.


A CAUTION

If you do not handle the airbags properly, they may inflate unexpectedly, resulting in personal injury. When scrapping the airbags or the

When scrapping the airbags or the vehicle that has the airbags, consult with a Maruti Suzuki authorized workshop.


Front Airbag Deployment Conditions

Front airbags deploy (inflation)

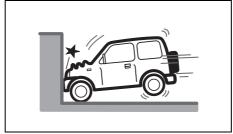

76J30450

 Frontal collision with a fixed wall that does not move or deform at more than about 25 km/h

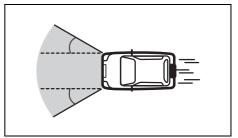

76J30460

 Strong impact equivalent to frontal collision such as above at left and right angles of about 30 degrees (1) or less from the front of your vehicle

Front airbags may inflate


Receiving a strong impact to the lower body of your vehicle, the front airbags may inflate.



76J30470

· Hitting a curb or medial strip

FOR SAFE DRIVING

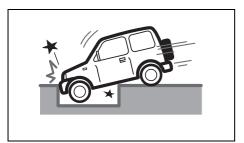

76J30480

· Falling into a deep hole or ditch



76J30490

· Landing hard or falling

Front airbags may not inflate


The front airbags may not inflate when a strong impact has not occurred since the collision object (including living beings like animals) was easy to be deformed or moved, or the crashed portion of your vehicle was easy to be deformed.

Also, front airbags may not inflate in many cases when the collision angle is greater than about 30 degrees at left and right angles from the front of your vehicle. Also, in certain collisions at low speed, the airbag may not inflate.



76J30500

 Frontal collision to a stopped vehicle at less than about 50 km/h

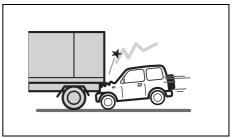


76J30510

 Collision that the front of your vehicle goes under the bed of a truck etc.




76J30520.

· Collision with a utility pole or stumpage

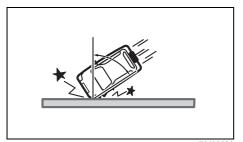

76J30530

 Collision with a fixed wall or guardrail at left and right angles of greater than about 30 degrees (1) from the front of your vehicle

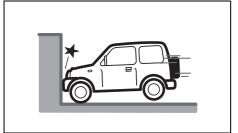

76J30540


 Frontal collision with a fixed wall that does not move or deform at less than about 25 km/h

Front airbags do not inflate

Front airbags do not inflate in rear impacts, side impacts or rollovers, etc. However, these might inflate in a strong impact.




76J30561

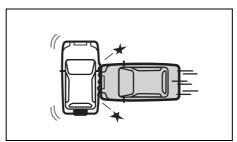

76J30571

· Impact from the side

· Impact from the rear

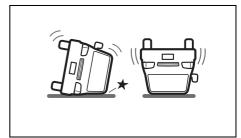


76J30580

Vehicle rollover

FOR SAFE DRIVING

Side Airbags (if equipped) and Side Curtain Airbags (if equipped) Deployment Conditions

Side airbags and side curtain airbags deploy (inflation)

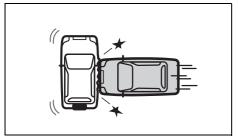

76J30571

 Impacts from the side at about a right angle by a general passenger car to your vehicle at more than about 30 km/h or in a greater impact


Side airbags and side curtain airbags may inflate in a strong impact

Side airbags and side curtain airbags may inflate even in a frontal collision, if there is a strong impact to the lateral direction.




76J30500

Frontal collision

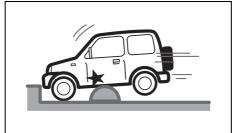

77R30880

· Hitting a curb or bump

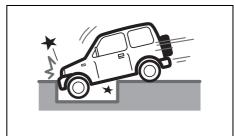

76J30480


• Falling into a deep hole or ditch




76J30490

· Landing hard or falling

Side airbags and side curtain airbags may not inflate

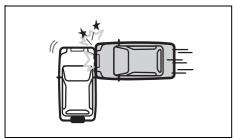

77R30890

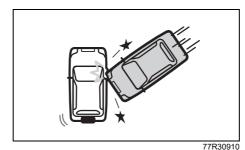


Impact from the side at an oblique angle




77R30930


• Impact from the side by a motorcycle or bicycle

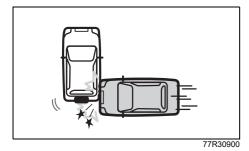

 Impact from the side to the vehicle body other than the passenger compartment

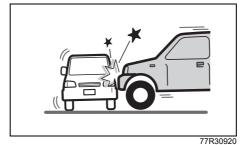


Impact from the side by a high hood vehicle

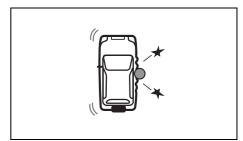

77R30940


· Collision with a utility pole or stumpage

Side airbags and side curtain airbags do not inflate

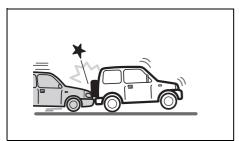

76J30561

· Impact from the rear

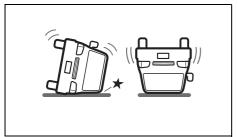

76J30580

Vehicle rollover


When Starting the Engine Be Careful of Carbon Monoxide Poisoning

▲ WARNING

Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. If you breath exhaust gases, you may feel drowsy, resulting in severe health problems or death in the worst case.

If you start the engine, be careful of carbon monoxide poisoning.

Do not Run Engine in a Poorly-ventilated Area

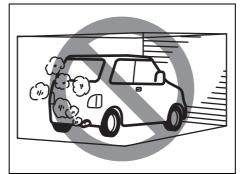

52D334

WARNING

Avoid breathing exhaust gases. Exhaust gases contain carbon monoxide, a potentially lethal gas that is colorless and odorless. Since carbon monoxide is difficult to detect by itself, take the following precautions to help prevent carbon monoxide from entering your vehicle.

Otherwise, it may result in severe health problems or death in the worst case.

- Do not leave the engine running in garages or confined areas, with passengers inside. This may result in accumulation of carbon monoxide in cabin and may lead to suffocation or breathing problem and lead to death.
- Do not park with the engine running for a long period of time, even in an open area. In case of long periods, danger of choking and death on being inside the vehicle is a possibility when the engine is running. If it is necessary to sit for a short time in a parked vehicle with the engine running, check that the air intake selector is set to "FRESH AIR" and the blower is at high speed.

(Continued)

(Continued)

- Avoid operating the vehicle with the tailgate or trunk open. If it is necessary to do so, check that the all windows are closed, and the blower is at high speed with the air intake selector set to "FRESH AIR".
- To allow proper operation of your vehicle's ventilation system, keep the air inlet grill in front of the windshield clear of snow, leaves or other obstructions at all times.
- Keep the exhaust tailpipe area clear of snow and other material to help reduce the buildup of exhaust gases under the vehicle. This is particularly important when parked in blizzard conditions.
- Have the exhaust system inspected periodically for damage and leakage. Any damage or leakage should be repaired immediately.

Do not Take a Nap with Engine Running



69RHS172

WARNING

Do not take a nap with the engine running. Otherwise, it may result in an accident, severe health problems or death in the worst case.

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while asleep, the engine and exhaust system could overheat, resulting in danger of fire.

When Loading the Luggage

Loading too much luggage in the vehicle may have negative effects to the vehicle body or driving performance.



59RN02230

 Fuel, chemical containers, spray cans etc. may catch a fire or cause an explosion.

Do not bring these objects into the vehicle.

(Continued)

(Continued)

 If you place any objects on the instrument panel, these objects may move and interfere with driver's view or safe driving. Also, the front passenger's front airbag may not work properly or these objects may be thrown out when the airbag inflates in an accident. Do not place any objects on the instrument panel.




59RN07290

A CAUTION

- If you hang any objects on the gearshift lever or use it as a handrest, the gearshift lever may not work properly, resulting in a malfunction or an accident.
- Do not hang any objects on the gearshift lever or use it as a handrest.
- If you pile up luggage, it may interfere with driver's view. Also, in a sudden braking, the luggage would jump out and it may result in an accident.
 - Do not pile up luggage in the vehicle.
- If animals move about in the vehicle, it may interfere with driver's view. Also, in a sudden braking, it may result in an accident.

When you bring animals into the vehicle, make sure that animals do not move about.

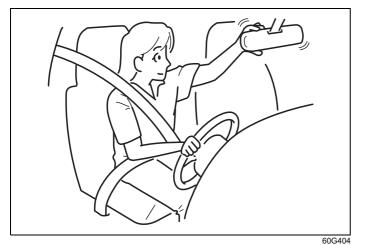

BEFORE DRIVING


Keys	3-1
Doors	3-1
Keyless Entry System Transmitter /	
Keyless Push Start System Remote Controller	3-6
Security System	3-16
Windows	3-18
Lighting Control Lever	3-21
Headlight Leveling Switch	3-24
Headlight Washer Switch (if equipped)	3-25
Hazard Warning Switch	3-26
Windshield Wiper and Washer Lever	3-27
Horn	
Heated Rear Window Switch	3-30

BEFORE DRIVING

Keys

Your vehicle comes with a pair of identical keys. Keep one of the keys as a spare key in a safe place. One key can open all of the locks on the vehicle.

Key Number Plate

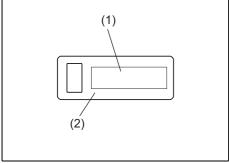

55T030020

The key identification number (1) is stamped on a metal tag (2) provided with the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number below for your future reference.

KEY NUMBER:	

NOTE:

- Carefully keep the tag in the place other than your vehicle, so that someone does not find out about the key identification number. If you lose your key, inform the key identification number to a Maruti Suzuki authorized workshop
- When you resell or transfer your vehicle to a new owner or operator, give the key number plate with your vehicle to him or her.

Immobilizer System

For detail of immobilizer system, "Immobilizer System" in the "OPERATING YOUR VEHICLE" section

Doors


WARNING

- When a seat belt or luggage is caught by a door, the door cannot be shut properly and it may open while driving. This may cause an accident. Close a door not to catch a seat belt or luggage in the door.
- When you keep the tailgate open with the engine running, exhaust gases will enter the vehicle and cause carbon monoxide poisoning. This may cause severe health problems or death in the worst case. Do not keep the tailgate open with the engine running.
- To prevent fire or theft, stop the engine and lock the doors when leaving the vehicle.
- When opening a door, be careful of the surrounding area. An accident, such as a collision with the vehicle or a pedestrian behind your vehicle, may occur. Be very careful when opening a door especially on a windy day.

A CAUTION

- · When a child opens or closes a door, his / her hands, legs or head may be caught in the door and this may cause injury. Opening or closing a door should be performed not by a child but by an adult.
- · When the tailgate is not fully opened, it may be unexpectedly closed and this may cause injury. When opening the tailgate, open it fully.
- Opening the tailgate right behind the exhaust pipes may cause burn injury. With the engine running, do not open the tailgate right behind the exhaust pipes.

NOTICE

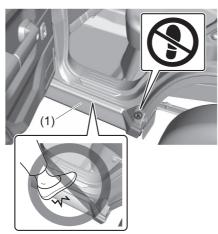

80T030330


Do not put your foot on the side sill splash quard (1).

This might cause it to damage.

NOTE:

- · When leaving the vehicle even for a short period of time, do not leave cash or valuables in the vehicle, to avoid risk of theft.
- Depending on the setting conditions of the security alarm and the opening conditions of the doors, an alarm may operate. Refer to "Security System" in this section.

Side Door Locks

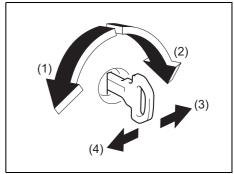

59RN03180


- (1) UNLOCK
- (2) LOCK (3) Front
- (4) Rear

To lock a front door from outside the vehicle:

- Insert the key and turn the top of the key toward the front of the vehicle, or
- Turn the lock knob forward, then pull and hold the door handle as you close the door.

To unlock a front door from outside the vehicle, insert the key and turn the top of the key toward the rear of the vehicle.

BEFORE DRIVING

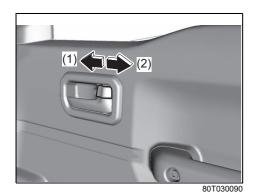

(1) LOCK (2) UNLOCK


To lock a door from inside the vehicle, turn the lock knob forward. Turn the lock knob rearward to unlock the door.

To lock a rear door from outside the vehicle, turn the lock knob forward and close the door. You do not need to pull and hold the door handle as you close the door.

NOTE:

Be sure to hold the door handle when you close a locked front door, or the door will not remain locked.

Central Door Locking System

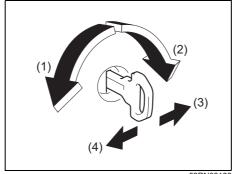

59RN03180

NOTE:

You can switch the function that unlocks all doors from requiring two turns to requiring one turn, and vice versa, via the information display setting mode. For details on how to use the information Display, refer to "Information Display" in "INSTRUMENT CLUSTER" section.


- (1) UNLOCK
- (2) LOCK
- (3) Front
- (4) Rear

You can lock and unlock all doors (including the tailgate) simultaneously by using the key in the driver's door lock.

To lock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the front of the vehicle.

To unlock all doors simultaneously, insert the key in the driver's door lock and turn the top of the key toward the rear of the vehicle.

Child-proof Locks (rear door)

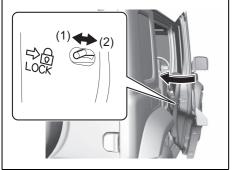

80T030100

- (1) UNLOCK (2) LOCK
- Each of the rear doors is equipped with a child-proof lock which can be used to help prevent unwanted opening of the door from inside the vehicle. When the lock lever is in the lock position (2), the rear door can only be opened from outside. When the lock lever is in the unlock position (1), the rear door can be opened from inside or outside.

WARNING

Be sure to place the child-proof lock in the lock position whenever children are seated in the rear.

NOTE:

When you open a door from inside, put your hand out of the window and use the door handle.

Tailgate


WARNING

Always check that the tailgate is closed and latched securely. Completely closing the tailgate helps prevent occupants from being thrown from the vehicle in the event of an accident. Completely closing it also helps keep exhaust gases from entering the vehicle.

A CAUTION

If you unlock the tailgate, pull up the tailgate handle and pull the tailgate, it will continue to open to the fully-open position by the damper stay performance. Check that no obstacle exists within the opening and closing range of the tailgate.

Locking and unlocking from outside the vehicle

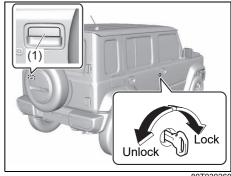

80T030260

(1) Tailgate handle

You can lock and unlock the tailgate by using the key in the driver's door lock.


To open the tailgate, pull up the tailgate handle (1) and pull the tailgate.

BEFORE DRIVING


Unlocking from inside the vehicle

If you cannot unlock the tailgate by using the key in the driver's door lock due to a discharged lead-acid battery or malfunction, follow the procedure below to unlatch the tailgate from inside the vehicle.

 Fold the rear seat forward for easier access. Refer to "Folding Rear seats" in "FOR SAFE DRIVING" section for details on how to fold the rear seat forward.

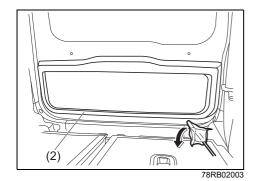


Remove the trim (2) of the tailgate.
 Insert a flat-bladed screwdriver covered with a soft cloth between the trim and the tailgate to make a space for fingers, and then pull out the trim with your fingers.

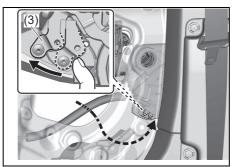

78RB02004

3) Move the lever (3) in arrow direction to unlock the tailgate.

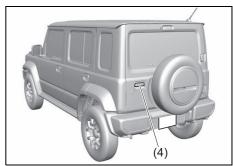

80T030110


 From outside the vehicle, pull up the tailgate handle (4) and open the tailgate.

If the tailgate cannot be unlatched by pulling up the tailgate handle, have the vehicle inspected by a Maruti Suzuki authorized workshop.

A CAUTION

Check that there is no one near the tailgate when pushing open the tailgate from inside the vehicle.

Keyless Entry System Transmitter / Keyless Push Start System Remote Controller

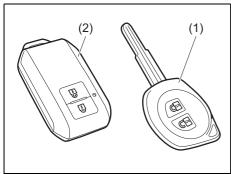

55T030010


Your vehicle is equipped with either a keyless entry system transmitter (1) or a keyless push start system remote controller (2). The transmitter has only a keyless entry system. The remote controller has a keyless entry system and a keyless push start system. For details, refer to the following explanations.

WARNING

Radio waves from the keyless push start system antenna(s) may interfere with operation of electrical medical equipment such as pacemakers. Failure to take the precautions listed below can increase the risk of severe injury or death due to radio wave interference.

- Anyone who uses electrical medical equipment such as a pacemaker should consult the medical equipment supplier or their medical advisor about whether radio waves from the antenna(s) can interfere with the medical equipment.
- If radio wave interference is a concern, have the function of the antenna(s) disabled by a Maruti Suzuki authorized workshop.

Keyless Entry System Transmitter (if equipped)

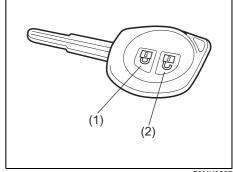

79MH0237

- (1) LOCK button
- (2) UNLOCK button

You can lock or unlock all doors (including the tailgate) simultaneously by operating the transmitter near the vehicle.

BEFORE DRIVING

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

The turn signal lights will flash once and the siren will sound once (if equipped) when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice (if equipped).
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you insert the key into the ignition switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

- If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.
- If you lock the doors using the transmitter when the engine hood is open, the siren will sound 3 times to remind you (if equipped).

- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the transmitter, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of the LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound (if equipped). However, push one of the buttons 5 seconds later, the siren will sound.
- You can set whether the siren sounds (if equipped) when locking or unlocking the door(s) via the setting mode of the information display. For details on how to use the information display, refer to "Information Display" in "INSTRUMENT CLUS-TER" section.
- The maximum operating distance of the keyless entry system transmitter is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the transmitter, if the ignition key is inserted in the ignition switch.
- When any door is open, the door locks can only be unlocked with the transmitter, and the turn signal light will not flash.

 If you lose one of the transmitters, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new transmitter code in your vehicle's memory so that the old code is erased.

NOTICE

The transmitter is a sensitive electronic instrument. To avoid damaging the transmitter:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the transmitter away from magnetic objects such as a television.

Car locator function (if equipped)

This function helps in locating the vehicle. Push both of the LOCK button (1) and UNLOCK button (2) for more than 3 seconds.

The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button (LOCK or UNLOCK).

You can also turn the ignition switch to the "ON" position or the press the engine switch to change the ignition mode to ON to cancel the car locator function.

NOTE:

The car locator function will not activate when the key is in the ignition switch.


Battery replacement

If the transmitter becomes unusable, replace the battery.

NOTE:


You may damage the transmitter when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.

To replace the battery of the transmitter:

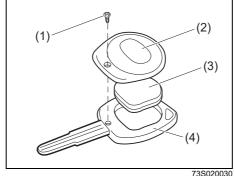

738020030

- 1) Remove the screw (1), and open the transmitter cover (2).
- 2) Remove the transmitter (3) from the transmitter holder (4).

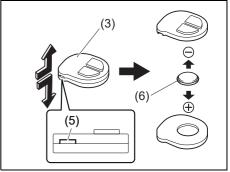

73S020010

- (6) Lithium disc type battery: CR1616
- 3) Separate the case up and down while applying force to the slot (5) on the side of the transmitter (3).
- 4) Replace the battery (6) so its + terminal faces "+" mark of the transmitter.
- 5) Close the case and install it into the transmitter holder (4).
- 6) Close the transmitter cover (2), install and tighten the screw (1).
- 7) Check that the door locks can be operated with the transmitter.
- Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.


Swallowing a lithium battery may cause serious internal injury. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The transmitter is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When replacing the battery by yourself, the transmitter controller could be damaged affected by static electricity. Discharge the static electricity built up in your body by touching metal before replacing the battery.

NOTE:

Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.

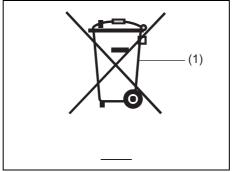

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult with a Maruti Suzuki authorized workshop.

Be careful not to lose your key and to leave it in the locked vehicle.

▲ WARNING


When you take the remote controller in an airplane, do not press the lock button or the unlock button. When you put the remote controller in a bag, place it so that either of these buttons is not pressed easily. If either of these buttons is pressed, radio wave may interfere with operation of the airplane.

*The remote controller is an electronic device which has a restriction on its use in the airplane.

Keyless Push Start System Remote Controller (if equipped)

The remote controller enables the following operations:

- You can lock or unlock the doors by operating LOCK/UNLOCK buttons on the remote controller. Refer to the explanation in this section.
- You can lock or unlock the doors by pushing the request switch. For details, refer to the explanation in this section.
- You can start the engine without using an ignition key. For details, refer to "Engine Switch (Vehicle with Keyless Push Start System) (if equipped)" in "OPERATING YOUR VEHICLE" section.

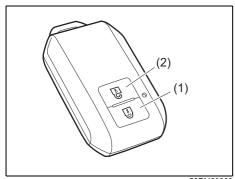

52RM20060

(1) LOCK button (2) UNLOCK button There are two ways to lock or unlock all doors (including the tailgate) simultaneously by operating the remote controller near the vehicle.

Central door locking system

- To lock all doors, push LOCK button (1) once.
- To unlock only the driver's door, push UNLOCK button (2) once.
- To unlock other doors, push UNLOCK button (2) once again.

The turn signal lights will flash once and the siren will sound once (if equipped) when the doors are locked.

When the doors are unlocked:

- The turn signal lights will flash twice and the siren will sound twice (if equipped).
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate LOCK button (1).

NOTE:

- If no door is opened within about 30 seconds after UNLOCK button (2) is operated, the doors will automatically lock again.
- The maximum operating distance of the remote controller is about 5 m (16.4 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the "LOCK" (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.

Car locator function

This function helps in locating the vehicle. Push both of LOCK button (1) and UNLOCK button (2) for more than 3 seconds. The turn signal lights will blink for about 27.5 seconds. Also, the siren will sound for about 27.5 seconds at the same time.

To cancel the car locator function, press any button (LOCK or UNLOCK).

You can also cancel the car locator function in any of the following operations.

- Press the engine switch to change the ignition mode to ON.
- Bring the remote controller with you and press the request switch.


NOTE:

- The car locator function will not activate when the ignition mode is "ACC" or "ON".
- If you lock the doors using the remote controller when the engine hood are open, the siren will sound 3 times to remind you.
- If the security system was triggered due to an unauthorized entry into the vehicle and then you unlock the doors using the remote controller, the siren will sound 4 times to remind you. If this happens, check whether your vehicle has been broken into while you were away from it.
- Once you push both of LOCK button (1) and UNLOCK button (2), then you push one of the buttons within 5 seconds, the siren will not sound. However, push one

of the buttons 5 seconds later, the siren will sound.

- You can set whether the siren sounds when locking or unlocking the door(s) via the setting mode of the information display.
- For details on how to use the information display, refer to "Information Display" in "INSTRUMENT CLUSTER" section.
- The maximum operating distance of the remote controller is about 5 m (16 ft.), but this can vary depending on the surroundings, especially near other transmitting devices such as radio towers or CB (Citizen's Band) radios.
- The door locks cannot be operated with the remote controller if the ignition mode is other than the LOCK (OFF).
- When any door is open, if you push LOCK button on the remote controller, the exterior buzzer will sound and doors cannot be locked.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.

Keyless unlocking / locking using the request switches

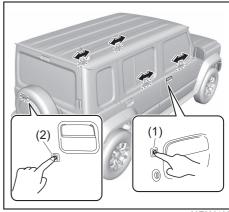

80T030130

When the remote controller is within the operating range described in this section, you can lock or unlock all the doors (including tailgate) by pushing the request switch (1) on the driver's door or front passenger's door or tailgate.

When all doors are unlocked:

 To lock all doors, push one of the request switches once.

The turn signal lights will flash once and the siren will sound once when the doors are locked.

To unlock a door or all doors:

- Push one of the request switches once to unlock only one door.
- Push one of the request switches twice to unlock all doors.


When the doors are unlocked:

- The turn signal lights will flash twice and the exterior buzzer will sound twice.
- If the interior light switch is in DOOR position, the interior light will turn on for about 15 seconds and then fade out. If you press the engine switch during this time, the light will start to fade out immediately.

Check that the doors are locked after you operate the request switch to lock the doors.

NOTE:

- The door locks cannot be operated by the request switch under the following conditions:
 - If any door is open or is not completely closed.
 - If the ignition mode is in any other mode than LOCK (OFF).
- If no doors are opened within about 30 seconds after unlocking the doors by pushing the request switch, the doors will be locked again automatically.

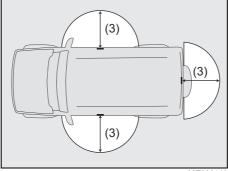

80T030140

(3) 80 cm (2.6 ft)

When the remote controller is within approximately 80 cm (2.6 ft) from a front door handle or the tailgate switch, you can lock or unlock the doors by pushing the request switch.

NOTE:

- If the remote controller is outside the request switch operating range described above, you will not be able to operate the request switch.
- If the battery of the remote controller runs down or there are strong radio waves or noise, the request switch operating range may be reduced or the remote controller may be inoperative.
- If the remote controller is too close to the door glass, the request switches may not operate.

- If a spare remote controller is in the vehicle, the request switches may not operate normally.
- The remote controller will only operate a request switch if it is within the switch's operating range. For example, if the remote controller is within the operating range of the driver's door request switch but not the front passenger's door request switch or the tailgate request switch, the driver's door switch can be operated but the front passenger's door switch or tailgate switch cannot be operated.

NOTICE

The remote controller is a sensitive electronic instrument. To avoid damaging the remote controller:

- Do not expose it to impacts, moisture or high temperature such as by leaving it on the dashboard under direct sunlight.
- Keep the remote controller away from magnetic objects such as a television.

NOTE:


The keyless push start system may not function correctly in certain environments or under certain operating conditions such as the following:

 When there are strong signals coming from a television, power station or a cellular phone.

- When the remote controller is in contact with or covered by a metal object.
- When a radio wave type remote keyless entry is used nearby.
- When the remote controller is placed near an electronic device such as personal computer.


Some additional precautions you should take and information you should be aware of are:

- Check that the key is stowed in the remote controller. If the remote controller becomes unusable, you will not be able to lock or unlock the doors.
- Check that the driver always carries the remote controller.
- If you lose one of the remote controllers, ask your Maruti Suzuki authorized workshop as soon as possible for a replacement. Have your Maruti Suzuki authorized workshop for program the new remote controller code in your vehicle's memory so that the old code is erased.
- You can use up to four remote controllers and the keys for your vehicle. Ask your Maruti Suzuki authorized workshop for details.
- The battery life of the remote controller is about two years, but it can vary depending on usage conditions.

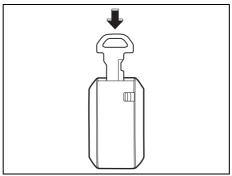

55T030030

To stow the key into the remote controller, push the key in the remote controller until you hear a click.

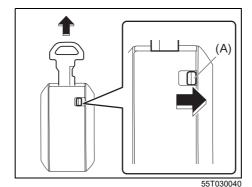

To remove the key from the remote controller, slide the lock knob (A) in arrow direc-

tion and pull the key out from the remote controller.

Request switch warning buzzer


The exterior buzzer beeps for about 2 seconds in the following conditions to warn you that the request switch is not working:

- The request switch is pressed after all doors are closed with the ignition mode changed to ACC or ON position by pressing the engine switch when the remote controller is outside the vehicle.
- The request switch is pressed in any of the following conditions after changing the ignition mode to LOCK (OFF) by pressing the engine switch.
 - The remote controller is left inside the vehicle.
 - Any door (including the tailgate) is open.

Press the request switch again after doing the following:

With the ignition mode changed to LOCK (OFF) by pressing the engine switch, bring out the remote controller if it is inside the vehicle and check that all doors are completely closed.

Reminder function

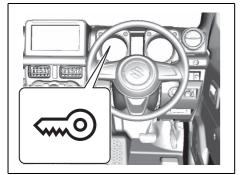

77R40040

If the remote controller is not in the vehicle under the following conditions, the buzzer sounds intermittently for about 2 seconds and the immobilizer/keyless push start system warning light on the instrument cluster blinks:

When one or more doors are opened and all of the doors are later closed with the ignition in any other mode than LOCK (OFF).

The indicator light will turn off within several seconds after the remote controller is returned to an area of the vehicle other than the rear luggage area.

If the remote controller is left in the vehicle and you lock the driver's door or front passenger's door as described below, the door will be automatically unlocked.

- If you open the driver's door and lock the door by turning the lock knob forward, the driver's door will be automatically unlocked.
- If you open the front passenger's door and lock the door by turning the lock knob forward, the front passenger's door will be automatically unlocked.

NOTE:

- The reminder will not operate when the remote controller is on the instrument panel, in the glove box, in a storage compartment, in the sun visor or on the floor, etc.
- Check that the driver always carries the remote controller.
- Do not leave the remote controller in the vehicle when leaving the vehicle.

Battery Replacement

▲ WARNING

Swallowing a lithium battery may cause serious internal injury or death in the worst case. Do not allow anyone to swallow a lithium battery. Keep lithium batteries away from children and pets. If swallowed, contact a physician immediately.

NOTICE

- The remote controller is a sensitive electronic instrument. To avoid damaging it, do not expose it to dust or moisture or tamper with internal parts.
- When you replace the battery by yourself, touch a metallic part and remove static electricity to prevent damaging the remote controller.


NOTE:

- · Used batteries must be disposed of properly according to applicable rules or regulations and must not be disposed of with ordinary household trash.
- You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop to inspect the system.
- · When you purchase the battery by yourself at Maruti Suzuki authorized workshop, check the year of manufacture for the battery.


If the remote controller becomes unreliable, replace the battery as follows:

NOTE:

You may damage the remote controller when replacing its battery. Ask your Maruti Suzuki authorized workshop for details.

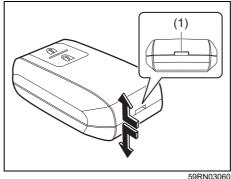


- 1) Pull the key out from the remote controller.
- 2) Separate the remote controller up and down while applying force to the slot (1) on the side of the remote controller.
- 3) Replace the old battery.

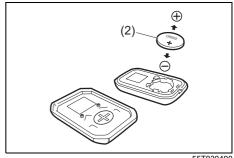

55T030490

- (2) Lithium disc type battery: CR2032
- 4) Place the battery (2) so its + terminal faces up as shown in the illustration.
- 5) Close the remote controller firmly.
- 6) Make sure the door locks can be operated with the remote controller.
- 7) Dispose of the used battery properly according to applicable rules or regulations. Do not dispose of lithium batteries with ordinary household trash.

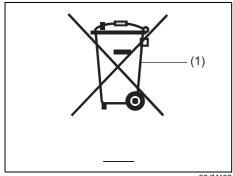

80JM133

(1) Crossed-out wheeled bin symbol

The crossed-out wheeled bin symbol (1) indicates that a used battery should be collected separately from ordinary household trash.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate battery disposal. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling of the used battery, consult with a Maruti Suzuki authorized workshop.

Security System

The security system is armed after you close and lock all doors (including engine hood and tailgate) by using the keyless entry system transmitter, keyless push start system remote controller or request switch.

Once the system is armed, any attempt to open a door by using any other means (*) than the keyless entry system transmitter, keyless push start system remote controller or request switch, or open the engine hood will cause the alarm to be triggered.

- The key
- The lock knob on a door

NOTE:


- The security system generates alarms when any of the predetermined conditions is met. However, the system does not have any function of blocking unauthorized entry into the vehicle.
- Always use the keyless entry system transmitter, keyless push start system remote controller or request switch to unlock the doors when the security system has been armed. Using a key instead will trigger the alarm.
- If a person who does not know the security system is going to drive the vehicle, we recommend you explain the system and its operation to the person. Mistakenly triggering the alarm may cause a nuisance to others

 Even if the security system is armed, you should still be careful to guard against theft. Do not leave money or valuable things in the vehicle.

How to Arm the Security System

Lock all doors (including engine hood and tailgate) using the keyless entry system transmitter, keyless push start system remote controller or request switch.

When the system is armed, the indicator (1) continues to blink at intervals of approximately 2 seconds.

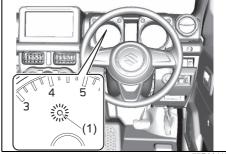

77R3011

NOTE:

- To prevent the alarm from being accidentally triggered, avoid arming it while anyone remains inside the vehicle. The alarm will be triggered if any person inside opens the door, tailgate, engine hood, or the warning may be triggered.
- The security system is not armed when all doors are locked using the key from

- outside, using the door lock knobs or the central door locking switch from inside.
- If any door is not operated within approximately 30 seconds after the doors have been unlocked using the keyless entry system transmitter, keyless push start system remote controller or request switch, the doors are automatically locked again. When the doors are locked, the security system will be armed.
- If the security system indicator (1) blinks when the ignition switch is in the "ON" position or the ignition mode is "ON", there may be something wrong with the security system. Ask your Maruti Suzuki authorized workshop for inspection.

How to Disarm the Security System Simply unlock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch. The security system indicator will go out, indicating that the security system is disarmed.

How to Stop the Alarm

Should the alarm be triggered accidentally, the alarm will stop by the following operations.

- Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON in case of emergency.
- Unlock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch.

NOTE:

- Even after the alarm has stopped, if you lock the doors using the keyless entry system transmitter, keyless push start system remote controller or request switch, the security system will be rearmed.
- If you disconnect the battery while the security system is in the armed condition or the alarm is actually in operation, the alarm will be re-triggered when the battery is reconnected.
- Even after the alarm has stopped at the end of the predetermined operation time, it will be triggered again if any of the doors, tailgate or engine hood is opened, without disarming the security system.

Checking Whether the Alarm has Been Triggered During Parking

If the alarm was triggered and you then turn the ignition switch to "ON" position or the ignition mode is ON the security system indicator will blink rapidly for about 8 seconds and a buzzer will beep 4 times during this period. If this happens, check whether the vehicle has been broken into while you were away from it.

Security System Indication


- If any of the doors or tailgate are opened without unlocking by the keyless entry system transmitter, keyless push start system remote controller or request switch, all turn signal lights start to blink and the interior buzzer beeps intermittently. After 5 seconds, the siren will sound for about 27.5 seconds. The security system indicator continues to blink during this time.
- If the engine hood is opened, all turn signal lights blink, and the siren sounds for about 27.5 seconds. The security system indicator continues to blink during this time.

Windows

Electric Window Controls


The electric windows can only be operated when the ignition switch is in "ON" position or the ignition mode is ON.

Front

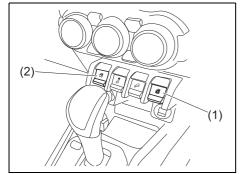

80T030150


The center console has a switch (1) to operate the driver's window, and a switch (2) to operate the front passenger's window.

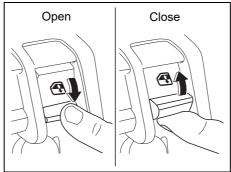

78RB02007


To open a window, push the switch. To close the window, lift up the switch.

The driver's window has AUTO-DOWN and AUTO-UP (if equipped) features for greater convenience (at toll booths or drive-through restaurants, for example). These features allow the driver to open or close the window without holding the window switch in DOWN or UP position. Press down or lift up the driver's window switch completely and release it. To stop the window before it reaches the FULL-DOWN or FULL-UP position, pull up or push down the switch briefly.

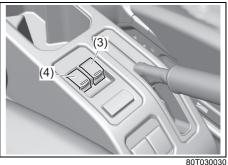

(0)

The floor console has switches (3) and (4) to operate the rear left and right passenger windows.

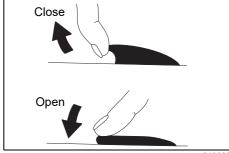

81A009

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

Off-delay timer function for the driver's window

After you turn the ignition switch to "ACC" or "LOCK" position or press the engine switch to change ON mode to ACC or LOCK (OFF) mode, you can open or close the driver's window within 30 seconds.

NOTE:


Even within 30 seconds, if the driver's door or the passenger's door is opened, you cannot open or close the driver's window.

Rear



80T03005

The rear passenger's door has a switch (5) to operate the passenger's window.

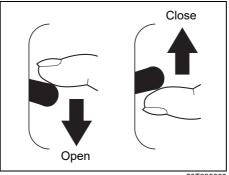

80T030060

To open a window, push the top part of the switch. To close the window, lift up the top part of the switch.

WARNING

- When opening or closing a window, a part of body such as hands, legs and neck may be caught by the window and an accident may occur. When you operate a window, observe the following precautions:
 - A driver and the other passengers should be careful when opening or closing a window.
 - Do not allow a child to operate the window switches.
 - You should always lock the passenger's window operation when there are children in the vehicle.
 Children can be seriously injured if they get part of their body caught by the window during operation.
 Refer to "Window Lock Switch" in this section for details.
 - When you leave your vehicle, make sure to turn the ignition switch to "LOCK" or press the engine switch to change the ignition mode to OFF. Then, carry your key with you and take a child or children out of the vehicle.

(Continued)

WARNING

(Continued)

- When you open or close the front passenger's window or the rear windows on the driver's side, check that the other passengers and children do not take their hands and faces outside the vehicle, before the window operation.
 Also, make sure to inform them that you will perform the window operation.
- When you operate the electric window controls from the outside of the window, your hands or neck may be caught by the window and an accident may occur. Do not operate the electric window controls from the outside of the window.

NOTE:

If you drive with one of the rear windows open, you may hear a loud sound caused by air vibration. To reduce the sound, open the driver's or front passenger's window, or narrow the rear window opening.

Window Lock Switch



80T030040

The floor console also has a lock switch for the rear passenger's window(s). When you push in the lock switch, the rear passenger's window(s) cannot be raised or lowered by operating any of the switches (3), (4) or (5). To restore normal operation, release the lock switch by pushing it again.

Pinching Prevention Function

The driver's window is equipped with a pinching prevention function. This function detects a foreign object that is caught in the window as it is being closed by AUTO-UP feature, which allows you to close the window without holding the window switch in UP position, and stops the window from closing to prevent damage.

WARNING

The function may not detect the object depending on shape, size, hardness and position of the object caught by the closing window. This may cause severe injury.

Be very careful when opening or closing the windows.

A CAUTION

- The pinching prevention function does not operate while you are holding the window switch in UP position.
- The pinching prevention function may not detect an object caught in the window just before the window is fully closed.

NOTE:

Even if you cannot close the window by the AUTO-UP feature because there may be something wrong with the pinching prevention function, you can close the window by holding the window switch in UP position. If you drive in extreme off-road condition, the pinching prevention function may operate accidentally because the window reacts to vehicle jolting.

Pinching prevention function initialization

When you disconnect and reconnect the lead-acid battery or replace the fuse, the function will be deactivated. In this condition, the AUTO-DOWN feature will be deactivated, while the AUTO-UP feature may remain activated. The pinching prevention function needs to be initialized.

To initialize the pinching prevention function, use the following procedure:


- 1) Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.
- 2) Open the driver's window fully by holding the window switch in DOWN position
- 3) Close the driver's window by holding the switch in UP position, and keep holding the switch for 2 seconds after the window is fully closed.
- 4) Check the driver's window to see if the AUTO-DOWN/UP feature works.

WARNING


As the pinching prevention function will not operate until its initialization is completed, an accident may occur. Make sure to perform the pinching prevention function initialization.

If the AUTO-DOWN/UP feature will not work after initialization, there might be something wrong with the pinching prevention function. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Lighting Control Lever Automatic Light Operation (if equipped)

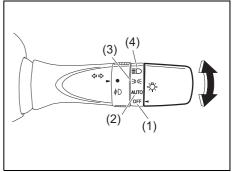

80T030360

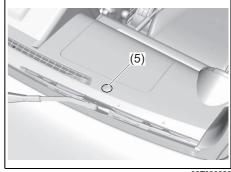

Your vehicle's lighting system is controlled by two main systems: the lighting switch and the auto-on headlight system (when the lighting switch is in "AUTO" position). The two systems work together to operate your lights as shown in the following chart:

ON: Lights ON

LIGHT: When it is light around the light sensor (5). DARK: When it is dark around the light sensor (5).

Lighting switch position	Main lights to be operated	Ignition switch in the "LOCK" or "ACC" position / Ignition mode LOCK (OFF) or ACC		Ignition switch in the "ON" position / Ignition mode ON	
•		LIGHT	DARK	LIGHT	DARK
(1) OFF	Position lights, Tail lights	_	_	_	-
	Headlights	_	_	_	_
(2) AUTO	Position lights, Tail lights	_	_	_	ON
	Headlights	-	-	-	ON
(3) ₹0 0€	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	-	-	-	_
(4) ≣□	Position lights, Tail lights	ON	ON	ON	ON
	Headlights	ON	ON	ON	ON

To turn the lights on or off, twist the knob on the end of the lever. There are four positions:

OFF (1)

All lights are off.

AUTO (2)

This function works when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. The headlights and position lights are turned on and off automatically according to the amount of outside light detected by a sensor. They go out automatically when you turn the ignition switch to "ACC" or "LOCK" position or change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch.

The light sensor (5) for sensing the amount of outside light is installed on the passenger's seat side of instrument panel.

A CAUTION

If the light sensor area of the windshield is covered with mud, ice, or other similar substances, the headlights and position lights may be turned on even when it is still light outside.

NOTE:


- Avoid covering the light sensor area of the windshield with a sticker. The sticker may impair the performance of the sensor and make the system unable to control operation of the lights correctly.
- If you turned the ignition switch to "ON" position or changed the ignition mode to ON by pressing the engine switch and "AUTO" position remains selected, the headlights and position lights come on automatically as it gets dark outside, even with the engine not running. Leaving the lights lit for a long time may lead to a completely discharged battery.

=00€ (3)

Front position lights, tail lights, license plate light and instrument lights are on, but headlights are off.

≣○ (4)


Front position lights, tail lights, license plate light, instrument lights and headlights are on.

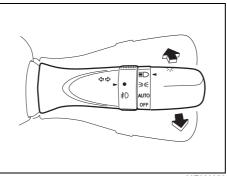

80T030370

With the headlights on, push the lever forward to switch to the high beams (main beams) and pull the lever toward you to switch to the low beams. When the high beams (main beams) are on, a light on the instrument cluster will come on. To momentarily activate the high beams (main beams) as a passing signal, pull the lever slightly toward you and release it when you have completed the signal.

Auto-on headlight system

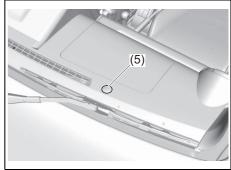

80T03028

The auto-on headlight system automatically turns on all lights that are operated by the lighting switch, when the following three conditions are all met.

Conditions for auto-on headlight system operation:

- 1) It is dark around the light sensor (5).
- 2) The lighting switch is in "AUTO" position.
- 3) You turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON.

This system is activated by a signal from the light sensor (5) on the passenger side of instrument panel. Do not cover the sensor (5). Otherwise, the system will not work correctly.

WARNING

It takes about 5 seconds for the light sensor to react to a change in lighting conditions. To help avoid an accident due to reduced visibility, turn on your headlights before driving into a tunnel, parking structure, etc.

NOTE:

The light sensor reacts even to infrared rays, so it may operate incorrectly when there are strong infrared rays.

Light Reminder Buzzer

The interior buzzer continuously beeps if you open the driver's door without turning off the headlights and position lights. This function is triggered under the following condition:


The headlights and/or position lights are on even after the ignition switch is turned to "LOCK" position, or the engine switch is pressed to change the ignition mode to LOCK (OFF).

The buzzer stops sounding when you turn off the headlights and position lights.

NOTE:

A message is indicated on the information display in the instrument cluster while the buzzer is sounding.

Front Fog Light Switch (if equipped)

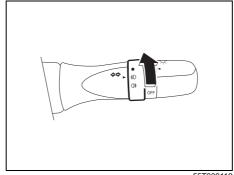


55T030110

To turn the front fog light on, twist the knob as shown in the illustration with the position lights, tail lights and/or the headlights are on. When the front fog light is on, an indicator light on the instrument cluster will come on.

NOTE:

In some countries the lighting operation may be different from the above description according to local regulations.

Headlight Leveling Switch

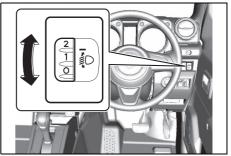


80T030190

Level the headlight beam according to the load condition of your vehicle by turning this switch. The chart shows the appropriate switch position for different vehicle load conditions.

Vehicle Load Condition	Switch Position
Driver only	0
Driver + 1 passenger (in front seat)	0
Driver + 3 passengers, no cargo	1.5
Driver + 3 passengers, cargo added	2.0
Driver + full cargo	3.5

Headlight Washer Switch (if equipped)

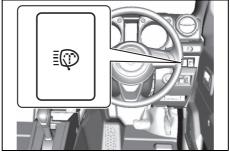

80T030220


With the ignition switch in the "ON" or the ignition mode ON and the headlights are turned on, push the headlight washer switch to wash the headlight lenses. Washer fluid is sprayed for half a second. If necessary, push the switch again.

Under the same conditions, if you operate the windshield washer two or more times successively at short intervals, the headlight washers also operate automatically but only once at the same time as the first windshield washer operation.

Turn Signal Control Lever

You can use the turn signal control lever when the ignition switch is in "ON" position or the engine switch is in ON mode.

Turn Signal Operation

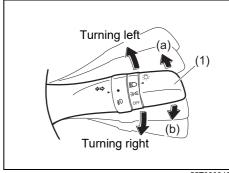

55T030340

With the ignition switch in "ON" position or the ignition mode ON, move the lever upward or downward to activate the right or left turn signals.


- Move the turn signal control lever (1) as follows:
 - Turning left: Move the lever upward.
 - Turning right: Move the lever downward
- When you move the lever, the turn signal lights and the turn signal light indicators on the instrument cluster will flash simultaneously.

- When you move the lever to its original position, the turn signal lights and the turn signal light indicators on the instrument cluster will be turned off.
- When changing lanes, if you lightly press the turn signal control lever in the directions (a) or (b) in which you want to change lanes, the turn signal lights and turn signal light indicators on the instrument cluster will flash only while the turn signal control lever is pressed.
- The turn signal control lever in the above figure is a typical example; the actual equipment depends on the vehicle type.

NOTE:

If the angle which you turn the steering wheel is small, the lever will not automatically returned to its original position. In this case, return the lever to its original position by your hand.

Lane change signal

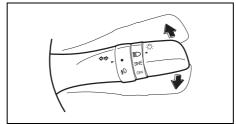

55T030510


Move the lever partially upward or downward to turn right or left and hold the lever in the moved position.

- The turn signal and its indicator flash while the lever is held at the moved position.
- The turn signal and its indicator flash 3 times even if you returned the lever immediately after the activation.

NOTE:

- The turn signal and its indicator can be set whether they flash 3 times after the turn signal lever is returned via the information display. Refer to "Information Display" in "INSTRUMENT CLUSTER" section.
- You can customize the setting for the number of flashing times of the turn signal and its indicator (1 to 4 times).
 Please ask your Maruti Suzuki authorized workshop for the customization.

Hazard Warning Switch

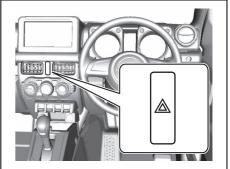

77R30850

You can use the hazard warning switch to warn the other drivers of possible risk of traffic hazard when you park your vehicle in case of emergency.

- Push the hazard warning switch to activate the hazard warning lights. The turn signal lights and the turn signal indicators on the instrument cluster will flash simultaneously.
- Push the switch again to turn off the hazard warning switch.
- The instrument panel in the above figure is a typical example; the actual equipment depends on the vehicle type.

NOTICE

If you use the hazard warning switch for many hours with the engine stopped, the lead-acid battery may run out.

Do not use the hazard warning switch for many hours with the engine stopped.

Windshield Wiper and Washer Lever

When the ignition switch is in "ON" position or the ignition mode is ON, you can use the wiper/washer lever.

A CAUTION

In cold weather, the sprayed washer fluid on the glass may get frozen and it may cause poor visibility to a driver. Use the defroster to warm the glass and spray the washer fluid. Refer to "Heating And Air Conditioning" in the "OTHER CONTROLS AND EQUIPMENT" section.

NOTICE

- If you use the wipers with the glass dried, the glass and the wiper blade rubbers may be damaged. When the glass is dry, use the washer fluid and then use wipers.
- If you operate the wipers with the wiper blades stuck on the glass, the wiper blade rubbers may be damaged or the wipers may be broken. When the wiper blades are stuck on the glass, do not operate the wipers.
- If you use the washer when the washer fluid cannot be sprayed enough, the washer pump may be broken. When the washer fluid cannot be sprayed enough, turn off the washer switch.

When the operative wipers suddenly stop


When the wipers are under heavy load such as covered by snow and the temperature of the wiper motor becomes high. the breaker will be activated and the wipers will temporarily stop to protect the wiper motor from overheating.

If this happens, perform the following operations:

- 1) Stop the vehicle in a safe place, and turn the ignition switch to "ACC" or "LOCK" position or press the engine switch to change the ignition mode to ACC or LOCK (OFF).
- 2) Move the wiper lever and switch to "OFF" position.
- 3) Remove obstacles such as snow on the wipers.
- 4) After a while, when the temperature of the wiper motor becomes low enough, the breaker will be reset automatically and you can use the wipers.

If you cannot use the wipers after a while, there may be another problem. Ask your Maruti Suzuki authorized workshop to have the wipers inspected.


Windshield Wipers

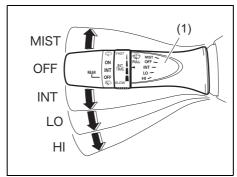

52R30460

You can operate the windshield wipers by moving the lever (1) upward or downward.


MIST	Temporary operation only while the lever is up		
OFF	Off		
INT	Intermittent operation		
LO	Low speed operation		
HI High speed operation			

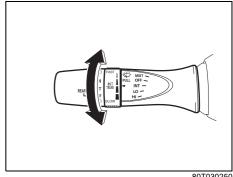

80T030250

The lever is equipped with the "INT TIME" control. Turn the control forward or rearward to adjust the intermittent wiper operation to the desired interval.

Windshield Washer

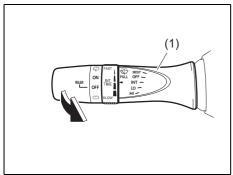

81P31000

If you pull the lever (1) toward you, the windshield washer fluid will be sprayed and the windshield wipers will automatically operate a few times.

▲ WARNING


- To prevent windshield icing in cold weather, turn on the defroster to heat the windshield before and during windshield washer use.
- Do not use radiator antifreeze in the windshield washer reservoir. It can severely impair visibility when sprayed on the windshield, and can also damage your vehicle's paint.

NOTICE

To help prevent damage to the windshield wiper and washer system components, you should take the following precautions:

- Do not continue to hold in the lever when there is no windshield washer fluid being sprayed or the washer motor can be damaged.
- Do not attempt to remove dirt from a dry windshield with the wipers or you can damage the windshield and the wiper blades. Always wet the windshield with washer fluid before operating the wipers.
- Clear ice or packed snow from the wiper blades before using the wipers.
- Check the washer fluid level regularly. Check it often when the weather is bad.

Rear Window Wiper

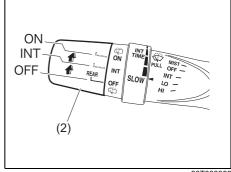

80T030350


You can operate the rear window wiper by twisting the lever (2) as shown in the illustration.

ON	Normal operation	
INT	Intermittent operation	
OFF	Off	

NOTICE

Clear ice or snow from the rear window and rear wiper blade before using the rear wiper. Accumulated ice or snow could prevent the wiper blade from moving, causing damage to the wiper motor.

Rear Window Washer

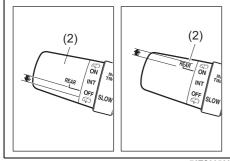


76TS30560

- If you twist the lever (2) in the direction
 of

 and align it to

 (washer) position
 above "ON" position, the rear window
 washer fluid will be sprayed and the rear
 wiper will operate simultaneously. If you
 release your hand from the lever, it will
 return to "ON" position.
- If you twist the lever (2) in the direction
 of and align it to □ (washer) position
 below "OFF" position, the rear window
 washer fluid will be sprayed and the rear
 wiper will operate simultaneously. If
 you release your hand from the lever, it
 will return to "OFF" position.


Horn

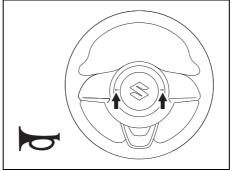

80TM03001


Press the horn button of the steering wheel to sound the horn.

Heated Rear Window Switch Type 1

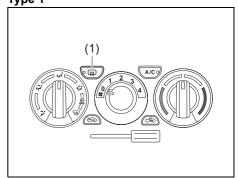

80T030320

Type 2

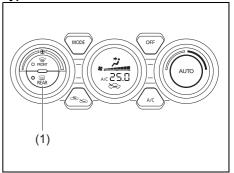

78RB02064

When the rear window is misted, push this switch (1) to clear the window.


An indicator light will come on when the defogger is on. The defogger will work only when the engine is running. To turn off the defogger, push the switch (1) again.

NOTICE

The heated rear window use a large amount of electricity. Turn off the switch after the window have become clear.

NOTE:

- The defogger will work only when the engine is running.
- The defogger will automatically turn off after the defogger remains on for 15 minutes to prevent discharging of the leadacid battery.

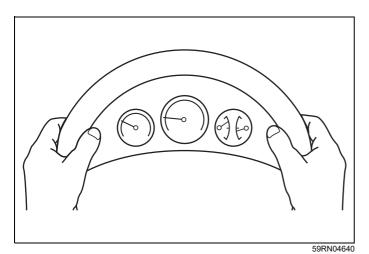


Instrument Cluster	4-1
Information Switch (if equipped)	4-3
Information Display	4-4
Warning and Indicator Lights	4-2

Instrument Cluster

- (1) Speedometer

- (2) Tachometer(3) Information display(4) Trip meter selector knob
- (5) Indicator selector knob(6) Warning and indicator lights

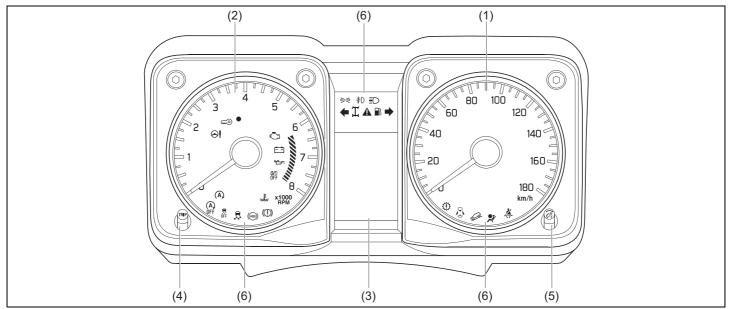

80TM04001

Speedometer

The speedometer indicates vehicle speed.

Tachometer


The tachometer indicates engine speed in revolutions per minute.

NOTICE

Never drive the vehicle with the engine revving in the red zone or severe engine damage can result. Keep the engine speed below the red zone even when downshifting to a lower gear position.

Refer to "Downshifting maximum allowable speeds" in "OPERATING YOUR VEHICLE" section.

Fuel Gauge

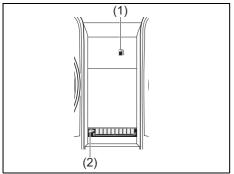

78RB02036

When the ignition switch is in "ON" position or the ignition mode is ON, this gauge gives an approximate indication of the amount of fuel in the fuel tank. "F" stands for full and "E" stands for empty.

• If the indicator shows only one segment to "E", refill the tank as soon as possible.

If the last segment blinks, it means that the fuel is almost empty. If the low fuel warning light (1) comes on, fill the fuel tank immediately. Refer to "Low fuel warning light" in "Warning and indicator lights" in this section for details. The mark (2) indicates that the fuel filler door is located on the right side of the vehicle.


NOTICE

To minimize the possibility of damage to catalytic converter or other components of the vehicle, avoid driving the vehicle near empty fuel tank level.

Brightness Control



80TM04004

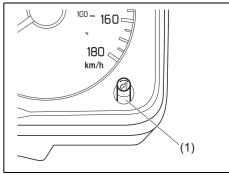

80TM04005

When the ignition switch is in "ON" position or the ignition mode is ON, the instrument panel lights come on.

Your vehicle has a system to automatically dim the brightness of the instrument panel lights when the position lights or headlights are on.

When the position lights and/or headlights are on, you can adjust the meter illumination brightness.

To increase the brightness of the instrument panel lights, turn the indicator selector knob (1) clockwise. To reduce the brightness of the instrument panel lights, turn the indicator selector knob (1) counterclockwise.

▲ WARNING


Do not adjust the brightness of the instrument panel lights while driving. Otherwise, you could lose control of the vehicle.

NOTE:

- If you do not turn the knob within several seconds, the brightness control display will be canceled automatically.
- When you reconnect the lead-acid battery, the brightness of the instrument panel lights will be reinitialized. Readjust the brightness according to your preference.
- If you adjust to the maximum brightness level when the position lights or headlights are on, the following functions will be cancelled.
 - The function which automatically dims the brightness of instrument panel lights
 - The function which operates with the brightness control, except maximum brightness level

Information Switch (if equipped)

You can use the information switch to switch the display indication when the ignition switch is in "ON" position and the vehicle is stationary.

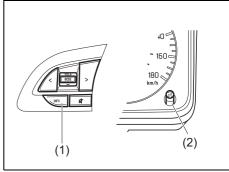

78RB02099

- (1) Information switch
- (2) Indicator selector knob

To switch to the setting mode

- 1) Push and hold the information switch (1) when the vehicle is stationary.
- 2) After the display of setting mode is shown, select the setting item that you want to change by turning the indicator selector knob (2) left or right. Refer to "Setting mode" in this section for details.

NOTE:

If you switch to the setting mode while either of the following items is shown on the information display, the current value will be reset. If you do not want to reset its value, push the indicator selector knob (2) quickly beforehand and switch to the other item.

- Average fuel consumption
- · Driving time
- Average speed

To exit the setting mode

To exit the setting mode, select "Back" and push the indicator selector knob (2) or push the information switch (1) quickly.


NOTE:

You can exit the setting mode by either of the following operations:

- Turn the ignition switch to "ACC" or "LOCK" position or change the ignition mode to ACC or LOCK (OFF) by pressing the engine switch.
- Start driving your vehicle.


Information Display

The information display is shown when the ignition switch is in "ON" position or the ignition mode is ON.

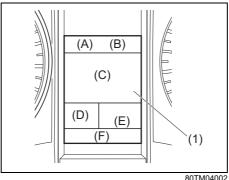

80 I M04002

(1) Information display

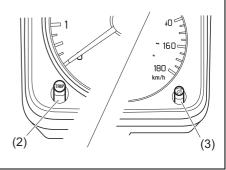

78RB02039

- (2) Trip meter selector knob
- (3) Indicator selector knob

The information display shows the following information.

Display (A)

Clock

Display (B)

Thermometer

Display (C)

Warning and indicator messages / Fuel consumption / Driving range / Average speed / Driving time / Cruise control (if equipped)


Display (D)

Selector position (for Automatic transmission models) / Gearshift indicator (if equipped)

Display (E)

Trip meter / Odometer

Display (F) Fuel gauge

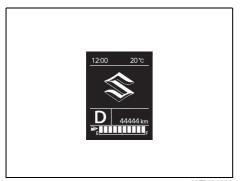

80TM04003

When the ignition switch is turned "ON" position or the ignition mode is ON, the message shown in the above illustration will appear on the display for several seconds.

Some warning and indicator messages may appear on the display when the ignition switch is in "ACC" or "LOCK" position or the ignition mode is ACC or LOCK (OFF).

Clock

When the ignition switch is turned "ON" position or the ignition mode is ON, the display (A) shows the time.

To set the clock, follow "Setting mode" instructions in this section.

WARNING

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Thermometer

When the ignition switch is in "ON" position or the ignition mode is ON, the display (B) shows the thermometer.

The thermometer indicates the outside temperature.



78RB02040


If the outside temperature nears freezing condition, the mark (a) will appear on the display.

NOTE:

- The outside temperature indication is not the actual outside temperature when driving at low speed, or when stopped.
- If there is something wrong with the thermometer, or just after the ignition switch is turned "ON" or changed the ignition mode to ON, the display may not indicate the outside temperature.

When the display (C) shows the driving range, you can change the unit of temperature.


To change the unit of temperature, refer to "Setting mode" in this section.

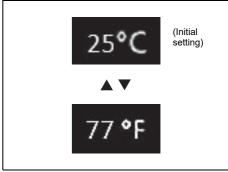

52RM20880

Fuel Consumption / Driving Range / Average Speed / Driving Time

When there are no warning or indicator messages on the display (C), you can select one of the following indications to appear on the display: instantaneous fuel consumption, average fuel consumption, driving range, average speed, driving time or no indication.

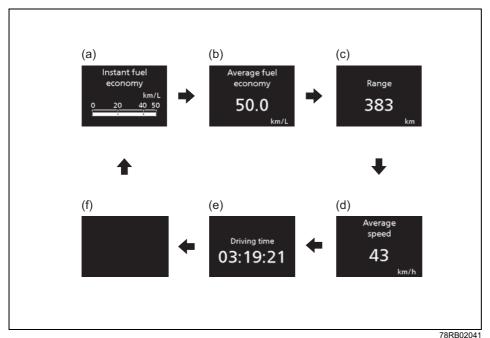

- (a) Instantaneous fuel consumption
- (b) Average fuel consumption
- (c) Driving range
- (d) Average speed
- (e) Driving time
- (f) No indication

To switch the display indication, push the indicator selector knob (3) quickly.

NOTE:

The value of fuel consumption, driving range and average speed shown on the display are affected by the following conditions:

- road condition
- · surrounding traffic condition
- driving condition
- · vehicle condition
- a malfunction which causes the malfunction indicator light to come on or blinks

011002041

Instantaneous fuel consumption

The display shows instantaneous fuel consumption with a bar graph only when the vehicle is moving.

NOTE:

- The display does not show the bar graph unless the vehicle is moving.
- Depending on the vehicle's specification, the fuel consumption units of initial setting are indicated as L/100km, km/L.
- The indicated maximum value of instantaneous fuel consumption is one of the followings. No more than the maximum value will be indicated on the display even if the actual instantaneous fuel consumption is higher.
 - For L/100km setting: 30
 - For km/L setting: 50
- The indication on the display may be delayed if fuel consumption is greatly affected by driving conditions.
- The display shows estimated values. Indications may not be the same as actual values

Average fuel consumption

If you previously selected average fuel consumption setting, the display shows average fuel consumption from the last reset to the present when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average fuel consumption will be shown after driving for a period of time.

You can select the timing to reset the value of average fuel consumption by one of the following three methods;

- Reset after refuel: the value of average fuel consumption will be reset automatically by refueling.
- Reset with trip meter A: the value of average fuel consumption will be reset automatically by resetting trip meter A.
- Reset manually: the value of average fuel consumption will be reset by pushing and holding the indicator selector knob (3) when the display indicates the average fuel consumption.

To change the timing to reset the value of average fuel consumption, refer to "Setting mode" in this section.

NOTE:

If you add only a small amount of fuel when you select "Reset after refuel", the average fuel consumption value may not be reset.

Driving range

If you selected driving range the last time you drove the vehicle, the display indicates "---" for a few seconds and then indicates the current driving range when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.

The driving range shown in the display is an indicative unit of the approximate distance you can drive until the fuel gauge indicates "E", based on current driving conditions and current fuel level in the fuel tank.

When the low fuel warning light comes on, the display "---" will appear.

If the low fuel warning light comes on, fill the fuel tank immediately regardless of the value of driving range shown in the display.

When you refuel, the driving range is updated. However, if you only add a small amount of fuel, the correct value will not be displayed.

NOTE:

- If you refuel when the ignition switch is "ON" or the ignition mode is ON, the driving range may not indicate the correct value.
- When you reconnect the terminals to the lead-acid battery, the value of driving range will be shown after driving for a period of time.

 If there are substantial changes in the driving pattern or vehicle usage, the displayed range may vary significantly.

Average speed

If you selected average speed the last time you drove the vehicle, the display indicates the last value of average speed from previous driving when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON. Unless you reset the value of average speed, the display indicates the value of average speed which includes average speed during previous driving.

To reset the value of average speed, push and hold the indicator selector knob (3) for a while when the display indicates an average speed. The display shows "---" and then indicates a new average speed after driving for a short time.

NOTE:

When you reconnect the terminals to the lead-acid battery, the value of average speed will be shown after driving for a period of time.

Driving time

The display shows the total amount of driving time since the indication was reset.

 
 To reset the driving time, push and hold the indicator selector knob (3) for a while when the display shows the driving time.

NOTE:

- When you reset the indication or reconnect the terminals to the lead-acid battery, the driving time will be shown after driving for a while.
- The indicated maximum value of driving time is 99:59:59. No more than the maximum value will be indicated on the display until you reset the driving time.

Selector Position (for Automatic transmission vehicles) / Gearshift Indicator (for Manual transmission vehicles)

The display (D) shows some of the following indications.



80T040090


- (4) Selector position
- (5) Gearshift indicator

Refer to "Gearshift indicator" in "OPERAT-ING YOUR VEHICLE" section.

Trip Meter / Odometer

The display (E) shows one of the following indications; odometer, trip meter A or trip meter B.

To switch the display indication (E), push the trip meter selector knob (2).

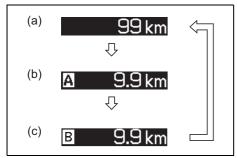

80SM02040



- (a) Odometer
- (b) Trip meter A
- (c) Trip meter B

WARNING

Push the trip meter selector

If you attempt to adjust the display while driving, you could lose control of the vehicle.

Do not attempt to adjust the display while driving.

Trip meter

The trip meter can be used to measure the distance traveled on short trips or between fuel stops.

You can use trip meter A or trip meter B independently.

To reset the trip meter, push and hold the trip meter selector knob (2) until the display shows 0.0.

NOTE:

The indicated maximum value of the trip meter is 9999.9. When you run past the maximum value, the indicated value will return to 0.0.

Odometer

The odometer records the total distance the vehicle has been driven.

NOTICE

Keep track of your odometer reading and check the maintenance schedule regularly for required services. Increased wear or damage to certain parts can result from failure to perform required services at the proper mileage intervals.

Fuel Gauge

The display (F) shows the fuel gauge. Refer to "Fuel gauge" in this section.

Setting Mode

When the ignition switch is in "ON" position or the ignition mode is ON and the vehicle is stationary, you can enter the setting mode of the information display by pushing and holding the indicator selector knob (3) for a while.

- To select the setting that you want to change, turn the indicator selector knob (3) left or right.
- To change the setting, push the indicator selector knob (3).
- To exit the setting mode, select "Back" and push the indicator selector knob (3).



78RB02096

NOTE:

The currently selected setting item is surrounded by a frame.

NOTE:

- If you push and hold the indicator selector knob (3) to enter the setting mode when the display (C) shows average fuel consumption or average speed, driving time, the value will be reset simultaneously. If you do not want to reset the value, push the indicator selector knob quickly to switch the indication of the display.
- If you turn the ignition switch, press the engine switch or start to move the vehicle when the display is in the setting mode, the setting mode will be canceled automatically.

Distance unit

(Odometer / trip meter / driving range / average speed distance unit setting)

You can change the units in which odometer / trip meter / driving range / average speed distance is displayed.

Fuel economy (Fuel consumption unit setting)

You can change the units that fuel consumption is displayed in.

Language

You can change the language of the information display.

Fuel reset

(Average fuel consumption reset setting)

You can change when the value of average fuel consumption is reset.

Temperature

(Temperature unit setting)

You can change the units that temperature is displayed in.

 To change the temperature unit, select "Temperature" in "Setting mode". Then, select "°C" or "°F".

NOTE:

When you change the units that temperature is displayed in, the automatic heating and air conditioning system temperature display units will be changed automatically.

Clock setting (Adjusting the clock)

- Adjust the clock by selecting "Clock setting" in "Setting mode". Then, select "Adjust Clock".
- To change the hour indication, turn the indicator selector knob (3) left or right repeatedly when the hour indication appears as reversed color. To change the hour indication quickly, turn and hold indicator selector knob (3). To set the hour indication, push the indicator selector knob (3) and the minute indication appears as reversed color.
- To change the minute indication, turn the indicator selector knob (3) left or right repeatedly when the minute indication appears as reversed color. To change the minute indication quickly, turn and hold indicator selector knob (3). To set the minute indication, push the indicator selector knob (3).

(Selecting 12H/24H format)

 Switch the time indication between 12hour and 24-hour format by selecting "Clock setting" in "Setting mode". Then, select "12H" or "24H".

Door lock (Door lock setting) (Auto lock)

- Manual Lock: Disable the automatic door locking function
- Speed Sync: Lock all doors when the vehicle speed reaches 15 km/h (default setting)
- Gear shift sync: (if equipped)
 Lock all doors when the gearshift lever is in other than "P" position.

(Auto unlock)

- Sync Off:
 Disable the automatic door unlocking function (default setting)
- IGN-OFF Sync: (vehicle with keyless push start system) Unlock all doors when the engine switch is pressed to change the ignition mode to LOCK (OFF)
- IGN-OFF Sync: (vehicle without keyless push start system) Unlock all doors when the ignition switch
- is turned to "LOCK" position
 Gear shift sync:
 (for automatic transmission vehicle)
 Unlock all doors when the gearshift lever
 is moved from other position to "P" position.

(Alarm)

 You can turn off or on the siren sound when the door(s) is(are) locked or unlocked.

Lights

(Lane change setting)

The turn signal and its indicator can be set whether they flash three times even if you return the turn signal control lever shortly after operating it.

- To change the lane change setting, select "Lane change" in "Setting mode". Then, select "ON" or "OFF"
- If you want to change the number of flashing, consult with a Maruti Suzuki authorized workshop.

IS A/C (ENG A-STOP system setting)

- When using the automatic heating and air conditioning system (if equipped), you can select one of the following engine auto stop settings.
 - Standard
 - Economy
 - Comfort
- When "Economy" is selected, engine auto stop condition is eased, compared with "Standard". As engine auto stop condition will occur more frequently, the stop time will be longer, leading to reduction of fuel consumption.
- When "Comfort" is selected, engine auto stop condition becomes severe, compared with "Standard". As engine auto stop condition will occur less frequently,

the stop time will be shorter, leading to more comfortable cabin condition by air conditioner.

Default (Initialization setting)

If you select "YES" and push the indicator selector knob (3), all settings will be reinitialized.

Warning and Indicator Messages

The display shows warning and indicator messages to let you know about certain vehicle problems.

In some cases, the internal buzzer may also sound at the same time to alert you.

If warning and indicator messages appear on the display, follow the messages.

Master warning indicator light



80P0382

When the display shows warning and indicator messages, the master warning indicator light may also blink.

NOTE:

- When the problem that causes a message to appear is corrected, the message will disappear.
- If a message is displayed, and other problems requiring a message occur, the message for each of the problems will be alternately displayed about every 5 seconds.

 When you push and hold the indicator selector knob (3) for several seconds while a message is displayed, the message will disappear temporarily. If the problem that caused the message is not corrected, the message will appear again after several seconds.

Warning and indicator messages

When ignition switch is in "ACC" or "LOCK" position or ignition mode is ACC or LOCK (OFF)

All models

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
80T040280	Off	Off	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly.
E0 05 LIGHTS ON 61MM0A172	Blinks	Continuous beep (from interior buzzer)	The headlights and/or the position lights are left on. Turn them off.

Vehicle with keyless push start system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
IGNITION SWITCH POSITION 61MM0A163	Off	Off	This message is displayed when ACC position is selected as the ignition mode. *1
PUSH START SWITCH 75RM214	Off	Off	The brake pedal is depressed. Press the engine switch to start the engine.
Manual transmission PRESS BRAKE AND CLUTCH TO START	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

^{*1:}This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Automatic Transmission PRESS BRAKE SHIFT TO P TO START	Off	Off	The engine switch is pressed with the gear- shift lever in a position other than "P" or "N" or without depressing the brake pedal. Shift into "P" and depress the brake pedal.
Automatic Transmission P GEARSHIFT NOT IN PARK 75RM221	Off	Off	The engine switch is pressed with the gearshift lever in a position other than "P". Shift into "P" and depress the brake pedal.
SERVICE STEERING LOCK SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
SERVICE START SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.
KEY FOB NOT DETECTED 75RM216	Blinks	Beep (two times from interior/exterior buzzer)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.
PLACE KEY FOB ON START SWITCH 75RM217			

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
KEY FOB NOT DETECTED 75RM216	Blinks	Beep (five times from interior/exterior buzzer) and then Beep (one time from interior buzzer)	When the engine switch was in ACC or ON mode, the remote controller was detected. However, when you started the vehicle, the remote controller was not detected. Bring the remote controller in the detectable area and try to push the engine switch again.
PLACE KEY FOB ON START SWITCH 75RM217			
KEY FOB NOT DETECTED 75RM216	Blinks	Beep (five times from exterior buzzer)	When you started the engine or the engine switch is in ACC or ON mode, you opened or closed any of the doors and the remote controller was out of the detectable area. Bring the remote controller in the detectable area.

When ignition switch is in "ON" position or ignition mode is ON

All models

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
80T040280	Blinks - (only while driving)	Beep (one time from interior buzzer) (only while driving)	A door or tailgate is not properly closed. Stop the vehicle in a safe place and close the door or tailgate properly. *1
RELEASE PARKING BRAKE 75RM268	Blinks	Continuous beep (from interior buzzer)	The parking brake is not released. Stop the vehicle in a safe place and release the parking brake.
LOW FUEL 75RM213	Off	Beep (one time from interior buzzer)	Fuel level is low. Refill it as soon as possible. *1

^{*1:} This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
ICE POSSIBLE DRIVE WITH CARE 78RB02047	Off	Off	The road may be icy. Drive very carefully. *1
ESP SERVICE ESP SYSTEM 75RM223	Blinks	Beep (one time from interior buzzer)	There may be a problem with ESP [®] system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
Hill hold control system / Hill descent control system ESP HILL HOLD DISABLE	Blinks	Beep (one time from interior buzzer)	There may be a problem with hill hold control system or hill descent control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

^{*1:} This message will disappear for a while even if the problem that caused the message to appear is not corrected.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Hill hold control system ESP HILL HOLD DISABLE 75RM224	Blinks	Beep (one time from interior buzzer)	When the transfer lever is in "4L" position and ESP® OFF switch is pushed and turned off the ESP® systems, the hill hold control system is deactivated and this message appears. This is not a malfunction and check that the hill hold control system is deactivated.

Vehicle with keyless push start system

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
ON IGNITION SWITCH POSITION 75RM218	Off	Off	This message is displayed when ON position is selected as the ignition mode. *1
PUSH START SWITCH 75RM214	Off	Off	The brake pedal is depressed. Press the engine switch to start the engine.
Manual transmission PRESS BRAKE AND CLUTCH TO START	Off	Off	The engine switch is pressed without depressing the brake and clutch pedals. Try again as instructed by the message.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
Automatic Transmission PRESS BRAKE SHIFT TO P TO START	Off	Off	The engine switch is pressed with the gearshift lever in a position other than "P" or "N" or without depressing the brake pedal. Shift into "P" and depress the brake pedal.
SERVICE STEERING LOCK SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the steering lock system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.
TRN. STEERING WHEEL TO RELEASE LOCK 75RM219	Blinks	Beep (one time from interior buzzer)	The steering lock is not disengaged. While lightly turning the steering wheel in left and right directions, press the engine switch again.

Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
SERVICE START SYSTEM	Blinks	Beep (one time from interior buzzer)	There is a problem with the immobilizer/keyless push start system. Also, the vehicle battery voltage may be decreased. When the message is displayed even if you start the engine with normal voltage of the vehicle battery, have your vehicle inspected by a Maruti Suzuki authorized workshop.
KEY FOB LOW BATTERY	Off	Off	The remote controller battery is about to become flat. Replace the battery. *1

^{*1:}This message will disappear for a while even if the problem that caused the message to appear is not corrected.


Warning and indicator message	Master warning indicator light	Sound	Cause and remedy
KEY FOB NOT DETECTED 75RM	Blinks	Beep (two times from interior/exterior buzzer)	The remote controller may be outside the vehicle or its battery may be discharged. Bring the remote controller in the vehicle or touch the engine switch with the remote controller. If the message still appears, replace the remote controller battery.
PLACE KEY FOB ON START SWITCH 75RM	17		

Warning and Indicator Lights

NOTE:

If warning and indicator lights blink or come on, the corresponding messages may be shown on the information display.

 Brake System Warning Light



82K170

Three different types of operations exist depending on the vehicle's specification.

- The light comes on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. The light comes on when the parking brake is engaged with the ignition mode ON.
- 2) The light comes on when under either or both of above two conditions.

The light also comes on when the fluid in the brake fluid reservoir falls below the specified level.

The light should go out after starting the engine and fully releasing the parking brake, if the fluid level in the brake fluid reservoir is adequate.

The light also comes on together with the ABS warning light when the rear brake force control function (proportioning valve function) of the ABS system fails.

If the brake system warning light comes on while you are driving the vehicle, it may mean that there is something wrong with the vehicle's brake system. If this happens, you should:

1) Pull off the road and stop carefully.

WARNING

Remember that stopping distance may be longer, you may have to push harder on the pedal, and the pedal may go down farther than normal.

- 2) Test the brakes by carefully starting and stopping on the shoulder of the road.
- 3) If you determine that it is safe, drive the vehicle cautiously at low speed to the nearest Maruti Suzuki authorized workshop for repairs or tow the vehicle to the nearest Maruti Suzuki authorized workshop for repairs.

WARNING

If any of the following conditions occur, you should immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.

- If the brake system warning light does not go out after the engine has been started and the parking brake has been fully released.
- If the brake system warning light does not come on when the ignition switch is turned "ON" or the engine switch is pressed to change the ignition mode to ON.
- If the brake system warning light comes on at any time during vehicle operation.

NOTE:

 
Because the brake system is self-adjusting, the fluid level will drop as the brake pads become worn. Replenishing the brake fluid reservoir is considered normal periodic maintenance.

NOTE:

(Parking Brake Reminder Buzzer)

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without releasing the parking brake. Make sure that the parking brake is fully released and the brake system warning light turns off.

Anti-lock Brake System (ABS) Warning Light



80J127

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If the light stays on, or comes on when driving, there may be something wrong with the ABS.

If this happens:

- 1) Pull off the road and stop carefully.
- 2) Turn the ignition switch to "LOCK" position or change the ignition mode to LOCK (OFF) by pressing the engine switch and then start the engine again.

If the warning light comes on briefly then turns off, the system is normal. If the warning light still stays on, the system will be something wrong.

If the light and the brake system warning light stay on, or come on simultaneously when driving, your ABS system is equipped with the rear brake force control function (proportioning valve function) and there may be something wrong with both the rear brake force control function and anti-lock function of the ABS system.

If one of these happens, have the system inspected by a Maruti Suzuki authorized workshop.

If the ABS becomes inoperative, the brake system will function as an ordinary brake system that does not have this ABS system.

For details of ABS system, refer to "Anti-Lock Brake System (ABS)" in the "OPER-ATING YOUR VEHICLE" section.

ESP[®] Warning Light



52KM133

FSP[®] is a registered trademark of Mercedes-Benz Group AG.

This light blinks 5 times per second when one of the ESP® systems other than ABS is activated. If this light blinks, drive carefully.

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working. If the light stays on, or comes on when driving and remains on, there may be something wrong with the ESP® systems (other than ABS). You should have your vehicle inspected by a Maruti Suzuki authorized workshop.

For details of the ESP® systems, refer to "Electronic Stability Program (ESP®)" in the "OPERATING YOUR VEHICLE" section.

▲ WARNING

The ESP[®] systems cannot prevent accidents. Always drive carefully.

ESP[®] OFF Indicator Light



57L30045

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working.

When the ESP® OFF switch is pushed to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light comes on and stays on.

For details of the ESP[®] systems, refer to "Electronic Stability Program (ESP[®])" in the "OPERATING YOUR VEHICLE" section.

NOTE:

- If the vehicle speed is greater than approximately 30 km/h, the ESP[®] systems (other than ABS) will be activated automatically and the light will go out.
- When the transfer lever is in "4L" (4-wheel drive low range) position, the ESP® system (other than ABS) will be canceled automatically. The light will come on and stay on.

Hill Descent Control Indicator Light



79K050

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

For details of the hill descent control system, refer to "Hill descent control system" in the "OPERATING YOUR VEHICLE" section.

Engine Oil Pressure Warning Light



80J223

 
This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started. The light will come on and remain on if there is insufficient oil pressure. If the light comes on when driving, pull off the road as soon as you can and stop the engine.

Check the oil level and add oil if necessary. If there is enough oil, the lubrication system should be inspected by a Maruti Suzuki authorized workshop before you drive the vehicle again.

NOTICE

- If you operate the engine with this light on, severe engine damage can result.
- Do not rely on the engine oil pressure warning light to indicate the need to add oil. Be sure to periodically check the engine oil level.

Charge Warning Light



80J226

This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started. The light will come on and remain on if there is something wrong with the battery charging system. If the light comes on when the engine is running, the charging system should be inspected immediately by a Maruti Suzuki authorized workshop.

Seat belt reminder light



60G049

When the driver and/or passenger (front passenger and/or rear passenger*) do(does) not buckle his or her seat belt, this light will come on and/or blink. For details of the seat belt reminder, refer to "Seat belts and child restraint systems" section.

*: If equipped

Airbag Warning Light



63J030

 
This light blinks or comes on for several seconds when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, so you can check if the light is working.

The light will come on and stay on if there is a problem in the airbag system or the seat belt pretensioner system.

WARNING

If the airbag warning light does not blink or come on briefly when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, stays on for more than 6 seconds, or comes on while driving, the airbag system or the seat belt pretensioner system may not work properly, which could result in serious injury in the event of a crash. Have both systems inspected by a Maruti Suzuki authorized workshop.

Malfunction Indicator Light



80J222

Your vehicle has a computer-controlled emission control system. A malfunction indicator light is provided on the instrument panel to indicate when it is necessary to have the emission control system serviced. The malfunction indicator light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, to let you know the light is working and goes out when the engine is started.

If the malfunction indicator light comes on or blinks when the engine is running, there is a damage in the emission control system.

Bring the vehicle to a Maruti Suzuki authorized workshop to have the damage fixed.

Also, if this light comes on when the engine is running, there is a problem with the automatic transmission system. Ask vour Maruti Suzuki authorized workshop to inspect the system.

WARNING

If this light blinks, stop your vehicle immediately in a safe place to avoid catalyst's melting problem since there may be a misfire in the engine.

- · Do not drive or stop over such as withered grasses.
- · Drive slowly if required to move the vehicle.

NOTICE

Continuing to drive the vehicle when the malfunction indicator light is on or blinking can cause permanent damage to the vehicle's emission control system, and can affect fuel economy and driveability.

Transmission Warning Light (Automatic Transmission models)



80.1219

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on for several seconds so you can check that the light is working.

If this light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, there is a problem with the automatic transmission system. If this light comes on or blinks, stop the vehicle in a safe place and contact a Maruti Suzuki authorized workshop. If the light comes on or blinks again after the light goes out, have the system inspected by a Maruti Suzuki authorized workshop.

Immobilizer / Keyless Push Start **System Warning Light**



80JM122

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, the light comes on briefly so you can check that the light is working.

If this light blinks or stays on, there is a problem with the system.

If this light still blinks or stays on even if you start the engine with normal voltage of the vehicle battery, ask your Maruti Suzuki authorized workshop for inspection.

Open Door Warning Light



54G391

This light remains on until all doors (including the tailgate) are completely closed.

If any door (including the tailgate) is open when the vehicle is moving, a ding sounds to remind you to close all doors completely.

Low Fuel Warning Light



54G343

If this light comes on, refuel the fuel tank as soon as possible. When this light comes on, a ding sounds once to remind you to refuel. If you do not refuel, a ding sounds every time when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON.

NOTE:

The activation point of this light varies depending on road conditions (for example, slope or curve) and driving conditions because of fuel movement in the tank.

Electric Power Steering Light



80J408

This light comes on when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, and goes out when the engine is started.

If this light comes on while driving, the power steering system may not work properly. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- Following operations of the steering wheel while parking or driving at a very lowspeed may have steering effort bigger gradually. This is not a malfunction of the steering system, but the power steering control system limits the power assist in order to prevent them from overheating.
 - The steering wheel is operated very often.
 - The steering wheel is kept in a fully turned position for a long while.

When the power steering control system cool down, the power steering system back to the original condition.

However, repeating these operations could cause the power steering system damaged.

- If the power steering system does not work properly, you will feel heavier to steer but you still will be able to steer.
- If the steering is operated, you may hear a noise. This is normal and indicates that the power steering system works properly.

Low Engine Coolant Temperature Light (blue color)



54G344

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on and stays on if the engine is cold, and goes off after the engine warms up.

If this light still stays on after the engine warms up, there is a problem with the sensor.

Have your vehicle inspected by a Maruti Suzuki authorized workshop.

High Engine Coolant Temperature Warning Light (red color)



54G344

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly so you can check that the light is working. If this light blinks while driving, it means the engine is running hot. If the light stays on after blinking, then the engine is overheating. To avoid actual overheating, if this light blinks or stays on while driving, follow the instructions in the "If the Engine Overheats" of "EMERGENCY SERVICE" section.

NOTICE

Continuing to drive the vehicle when engine overheating is indicated can result in severe engine damage.

Turn Signal Indicators



59RN04690

When you turn on the left or right turn signals, the corresponding green arrow on the instrument panel will blink along with the respective turn signal lights. When you turn on the hazard warning switch, both arrows will blink along with all of the turn signal lights.

NOTE:

If any abnormality of the turn signals is observed, such as fast blinking, there may be a malfunction in the turn signal system. Ask your Maruti Suzuki authorized workshop to inspect the system.

Main Beam (High beam) Indicator Light



80.1212

This indicator comes on when headlight main beams (high beams) are turned on.

Illumination Indicator Light



64J045

This indicator light comes on while the position lights, tail light and/or the head-lights are on.

Front Fog Light Indicator Light (if equipped)



74P30830

The front fog light indicator light comes on when the front fog light operates.

Overdrive OFF Switch Light (if equipped)

O/D OFF

76TS40680

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert the transmission to the 3-speed mode, push in the overdrive off switch and release it.

To return the transmission to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to "ACC" position or the engine switch is pressed to change the ignition mode to ACC, the transmission in the 3-speed mode is converted to the 4-speed mode automatically. The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
 - Some engine braking is provided

For details, refer to "Overdrive off switch" in "OPERATING YOUR VEHICLE" section.

4WD Indicator Light



78RB02078

This indicator light comes on when the transfer gear and the air locking hubs are switched to 4-wheel drive condition ("4H" or "4L").

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this 4WD indicator light will come on for a while and then this light will turned on or off according to the drive condition.

If 4WD indicator light continues to blink, there may be a malfunction of the system. If so, have your vehicle inspected by a Maruti Suzuki authorized workshop.

When you shift the transfer lever from "2H" position to "4H" position at a speed of 100 km/h or more, this indicator light blinks.

When you shift transfer lever again while changing the drive condition, this indicator blinks.

NOTE:

When the drive condition is 4-wheel drive condition and the engine is not running with the ignition switch turned "ON" or the ignition mode to ON, this 4WD indicator light will come on for a while and then blink. In this situation, when you start the engine and this indicator light comes on, the system does not indicate a malfunction.

ENG A-STOP Indicator Light



72M00032

When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly to let you know the light is working.

When the engine stops automatically, this light comes on.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in the "OPERATING YOUR VEHICLE" section.

ENG A-STOP OFF Indicator Light



62R0352

 
When the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON, this light comes on briefly if the system works properly.

When you push the ENG A-STOP OFF switch, this light comes on.

If this light blinks when driving, there may be something wrong with the ENG A-STOP system. You should have the system inspected by a Maruti Suzuki authorized workshop.

For details, refer to "ENG A-STOP System (Engine Auto Stop Start System)" in the "OPERATING YOUR VEHICLE" section.

Security System Indicator



82K269

For details about the security system, refer to "Security System" in the "BEFORE DRIVING" section.

INSTRUMENT CLUSTER		
MEMO		



59RN05760

OPERATING YOUR VEHICLE

Daily Inspection Checklist	. 5-1
Ignition Switch (Vehicle without Keyless	
Push Start System)	. 5-3
Engine Switch (Vehicle with Keyless	
Push Start System)	. 5-5
Immobilizer System	. 5-7
Pedal	. 5-9
Keyless Push Start System (if equipped)	. 5-10
Starting / Stopping Engine (Vehicle without Keyless	
Push Start System)	. 5-13
Starting / Stopping Engine (Vehicle with Keyless	
Push Start System)	. 5-15
ENG A-STOP System	
(Engine Auto Stop Start System)	. 5-19
Air Conditioning System Settings by	
ENG A-STOP System	
Parking Brake Lever	. 5-29
Precaution for Parking	. 5-30
Using Transmission	. 5-33
Gearshift Indicator (if equipped)	. 5-37
Transfer lever	
Cruise Control (if equipped)	. 5-45
Parking Sensors	. 5-47
Rearview Camera	
Electronic Stability Program (ESP®)	. 5-56
Braking	. 5-63
Anti-lock Brake System (ABS)	

Daily Inspection Checklist Before Driving



59RN05750

- Check that the windows, mirrors, lights and reflectors are clean and unobstructed.
- 2) Visually check the tyres for the following points:
 - the depth of the tread groove
 - abnormal wear, cracks and damage
 - loose wheel nuts
 - existence of foreign material such as nails, stones, etc.

Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.

3) Look for fluid and oil leakage.

NOTE:

It is normal for water to drip from the air conditioning system while and after use.

- 4) Check that the hood is fully closed and latched.
- Check the headlights, turn signal lights, brake lights and horn for proper operation.
- 6) Adjust the seat and head restraint.
- Check the brake pedal feeling and the adjustment condition for the parking brake lever or pedal. Refer to "Brake" in "INSPECTION AND MAINTENANCE" section for details
- 8) Adjust the mirrors.
- 9) Check that you and all the passengers have properly fastened the seat belts.
- 10)Check that all the warning lights come on as the ignition switch is turned to "ON" position or the press the engine switch to change the ignition mode to ON.
- 11)Check all the gauges.
- 12)Check that the brake system warning light turns off when the parking brake is released.

Once a week, or each time you fill your fuel tank, or before a long distance driving (like highway driving) perform the following under-hood checks:

- · Engine oil level
- Coolant level
- · Brake fluid level
- · Battery fluid (acid) level
- · Windshield washer fluid level
- · Hood latch operation

Pull the hood release lever inside the vehicle. Check that you cannot open the hood further without releasing the secondary latch. Close the hood securely after checking for proper latch operation. See the item "All latches, hinges and locks" of "CHAS-SIS AND BODY" in "Maintenance Schedule" in "INSPECTION AND MAINTENANCE" section for lubrication schedule.

WARNING

Check that the hood is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

Once a month, or each time you fill your fuel tank, check the tyre pressure using a tyre pressure gauge. Also check the tyre pressure of the spare tyre.

When You Notice the Following Symptoms




80J009

A CAUTION

If you keep using your vehicle in the following conditions, malfunction and an accident may occur. Consult with a Maruti Suzuki authorized workshop.

- Leaked oil or other liquid appears on the ground below the vehicle.
- Brake fluid level is low.
- There are unusual odors, sounds or vibrations.
- The feeling of operating the steering wheel, the acceleration or the brakes is different than usual.

Check the Tyre Pressure

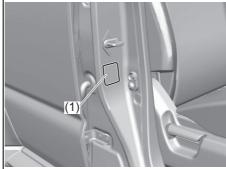


80T090180

- Periodically check and adjust the tyre pressure. The specified tyre pressure for the tyres of this vehicle can be confirmed by checking the tyre information label (1) affixed to the opening of the driver's door.
- Driving with insufficient tyre pressure can cause the sides of the tyre to wear, in addition to decreasing fuel efficiency.

WARNING

 Driving with extremely low tyre pressure can cause a tyre blowout (bursting) and may result in an accident. Do not drive with extremely low tyre pressure.

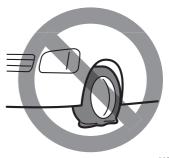

69RHS173

- If the specified tyre pressure is not maintained, the full performance of the vehicle cannot be achieved and the following could occur, leading to accidents or malfunctions. Adjust the tyre pressure as specified.
 - Decreased driving stability
 - Longer distance required for braking

(Continued)

WARNING

(Continued)

- Accurate tyre rotation speed cannot be detected, which interferes with the following functions:
 - ABS
 - Electronic stability program (ESP®)

To adjust the tire pressure, refer to "Tyres" in "INSPECTION AND MAINTENANCE" section.

Check the Exhaust Pipe




80J011

Periodically check the exhaust pipes for holes or cracks

WARNING

If leaks in exhaust pipes are present, exhaust gas could enter the vehicle and possibly cause carbon monoxide poisoning. If you feel that something is abnormal, consult with a Maruti Suzuki authorized workshop.

Ignition Switch (Vehicle without Keyless Push Start System)

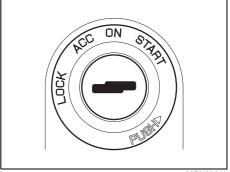


68PH00310

The ignition switch has the following four positions:

LOCK

This is the normal parking position. It is the only position in which the key can be removed.

Manual transmission

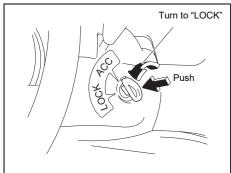

55T050010

Manual transmission vehicles:

You must push in the key to turn it to "LOCK" position. It locks the ignition, and prevents normal use of the steering wheel after the key is removed.

· Automatic transmission vehicles:

The gearshift lever must be in "P" (Park) position to turn the key to "LOCK" position. It locks the ignition and prevents normal use of the steering wheel and gearshift lever.

To release the steering lock, insert the key and turn it clockwise to one of the other positions. If you have trouble turning the key to unlock the steering wheel, try turning the steering wheel slightly to the right or left while turning the key.

ACC

Accessories such as the radio can operate, but the engine is off.

ON


This is the normal operating position. All electrical systems are on.

START

This is the position for starting the engine using the starter motor. The key should be released from this position as soon as the engine starts.

Ignition key reminder

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

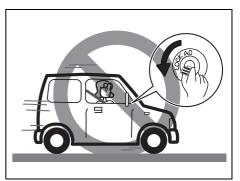

55T050020

WARNING

 Never return the ignition switch to "LOCK" position and remove the ignition key while the vehicle is moving. The steering wheel will lock and you will not be able to steer the vehicle.

(Continued)

WARNING


(Continued)

• Always return the ignition switch to "LOCK" position and remove the ignition key when leaving the vehicle even only for a short time. Also do not leave children alone in a parked vehicle. Unattended children could cause accidental movement of the vehicle or could tamper with power windows. They also could suffer from heat stroke in warm or hot weather. These could result in severe injury or even death.

NOTICE

Do not leave the ignition switch in "ON" position if the engine is not running as the lead-acid battery will discharge.

Engine Switch (Vehicle with Keyless Push Start System)

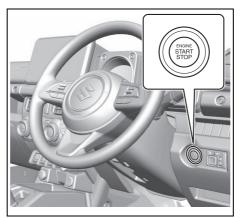

80T050990

LOCK (OFF)

This mode is for parking the vehicle. When this mode is selected by pressing the engine switch and then any door (including the tailgate) is opened or closed, the steering will be locked automatically.

ACC

Press the engine switch to select this ignition mode to use such electric equipment as the audio system, outside rearview mirrors and accessory socket with the engine off. When this position is selected, the information display in the instrument cluster shows the following message.




61MM0A163

ON

With the engine off

You can use such electric equipment as the power windows and wipers with the engine off. When this ignition mode is selected by pressing the engine switch, the information display in the instrument cluster shows the following message.

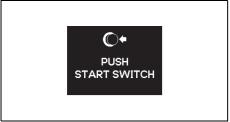

75RM214

· With the engine on

All electric equipment is operational. The vehicle can be driven when you have selected this ignition mode by pressing the engine switch.

START

Manual transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after shifting to "N" (Neutral) and depressing the brake and clutch pedals.

Automatic transmission vehicles:

Provided you have the keyless push start system remote controller with you, the engine automatically starts when you press the engine switch to select this ignition mode after placing the gearshift lever in "P" (Park) position and depressing the brake pedal. (If you need to restart the engine while the vehicle is moving, shift into "N".)

NOTICE

Do not leave the engine switch in ACC or ON mode when the engine is not running. Avoid using the radio or other electric accessories for a long time when the engine switch is in ACC or ON mode when the engine is not running, otherwise the lead-acid battery may discharge.

NOTE:

 The steering will be unlocked when you press the engine switch to change the ignition mode from LOCK (OFF) to ACC or ON.

- You do not need to keep the engine switch pressed until the engine starts.
- In the presence of strong radio wave or noise, you may not be able to change the ignition mode to ACC or ON or to start the engine using the engine switch. In this case, the information display in the instrument cluster will show the following message.



75RM216

OPERATING YOUR VEHICLE

Unreleased Steering Lock Warning

If the steering lock remains engaged when you press the engine switch to change the ignition mode to ON, the information display in the instrument cluster shows the following message and you cannot start the engine. If this happens, press the engine switch, turning the steering wheel to right or left.



80T050010



NOTE:

The steering lock may not be released and the immobilizer / keyless push start system warning light turns on if some load is applied on the steering wheel. If this happens, turn the steering wheel system to the right or left to relieve it from the load before you press the engine switch again to change to the desired ignition mode.

Immobilizer System

This system is designed to help prevent vehicle theft by electronically disabling the engine starting system.

The engine can be started only with your vehicle's original immobilizer ignition key or keyless push start system remote controller, which has an electronic identification code programmed in it. The key or remote controller communicates the identification code to the vehicle when the ignition switch is turned to "ON" position or the engine switch is pressed to change the ignition mode to ON. If you need to make spare keys or remote controllers, consult with a Maruti Suzuki authorized workshop. The vehicle must be programmed with the correct identification code for the spare. A key made by an ordinary locksmith will not work.

In the case you can start the engine, when you turn the ignition switch to "LOCK" position or press the engine switch to change the ignition mode to ON, the immobilizer system will be released and the immobilizer/keyless push start system warning light will turn on for about 2 seconds and then it will turn off

When you turn the ignition switch to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF), the immobilizer system will operate.

NOTICE

If the immobilizer system is modified or removed, it cannot be properly operated. Do not modify or remove the immobilizer system.

NOTE:

This immobilizer system is maintenance-free.

Immobilizer / Keyless Push Start System Warning Light



80JM12

If the immobilizer/keyless push start system warning light blinks when the ignition switch is in "ON" position or the ignition mode is ON, the engine will not start.

NOTE:

If the immobilizer/keyless push start system warning light blinks or comes on, a message may be shown on the information display.

For vehicles without a keyless push start system

If this light blinks, turn the ignition switch to "LOCK" position, and then turn it back to "ON" position.

If the light still blinks after the ignition switch is turned back to "ON" position, there may be something wrong with your key or with the immobilizer system. Ask your Maruti Suzuki authorized workshop for inspection.

For vehicles with a keyless push start system

If this light blinks, change the ignition mode to LOCK (OFF), and then change it back to ON. Also refer to "If the master warning indicator light blinks and the engine cannot be started" in "Starting / stopping engine (vehicle with keyless push start system) (if equipped)" in "OPERATING YOUR VEHICLE" section.

If the light still blinks after the ignition mode is changed back to ON, there may be something wrong with your key or with the immobilizer system. Ask your Maruti Suzuki authorized workshop for inspection.

The immobilizer/keyless push start system warning light may also blink if the remote controller is not in the vehicle when you close the door or attempt to start the engine.

NOTE:

- If you lose your immobilizer ignition key or remote controller, ask your Maruti Suzuki authorized workshop as soon as possible to deactivate the lost one, and to make a new key or remote controller.
- If you own other vehicles with immobilizer keys, keep those keys away from the ignition switch or the engine switch when using your Maruti Suzuki vehicle. Otherwise, the engine may not be started because they may interfere with your Maruti Suzuki vehicle's immobilizer system.
- If you attach any metal objects to the immobilizer key or remote controller, it may not start the engine.

NOTICE

The immobilizer key and remote controller are sensitive electronic instruments. To avoid damaging them:


- Do not expose them to impacts, moisture or high temperature such as on the dashboard under direct sunlight.
- Keep them away from magnetic objects.

Ignition Key Reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition keyhole when the driver's door is opened.


Pedal

Manual transmission

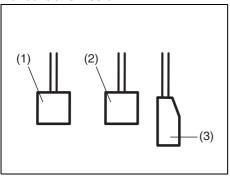

80J2121

Automatic transmission

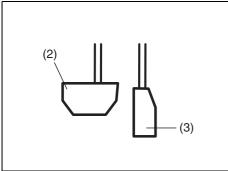

80J2122

Clutch Pedal (1)

A clutch pedal is used to disengage the driving force to the wheels when starting the engine, stopping, or shifting the gearshift lever. Depressing the pedal disengages the clutch.

▲ WARNING

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal (2)

Your vehicle is equipped with either front and rear disc brakes or front disc brakes and rear drum brakes. Depressing a brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as temperature, humidity, snow or dust, etc.

WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by a Maruti Suzuki authorized workshop.

WARNING

Do not apply brakes continuously or rest your foot on the brake pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal (3)

An accelerator pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.


NOTE:

Your vehicle is equipped with Brake Override System. If you depress both the accelerator pedal and the brake pedal simultaneously, the engine power output may be suppressed.

Keyless Push Start System (if equipped)

Provided the keyless push start system remote controller is within the interior workable area, you can use the engine switch for starting the engine and selecting an ignition mode (ACC or ON). In addition, the following functions can be used:

- Keyless entry function. Refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section for details.
- · Locking and unlocking doors (including the tailgate) using a request switch. Refer to "Keyless Push Start System Remote Controller" in "BFFORF DRIV-ING" section for details.
- Immobilizer (anti-theft) function. Refer to "Immobilizer System" in this section for details.

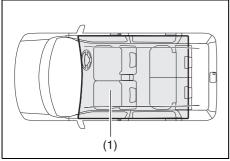

81M40230

(1) Interior workable area

The interior workable area is defined as all the interior spaces except for the space on the instrument panel or in the luggage compartment.


NOTE:

- Even when the remote controller is in the interior workable area, if it is in any of the following conditions, you may not be able to start the engine or select the ignition modes, and the remote controller outside warning may be given.
 - -The remote controller's battery is low.
 - -The remote controller is affected by strong radio wave or noise.
 - -The remote controller is in contact with or covered by a metallic object.
 - -The remote controller is in the secluded stowages such as the glove box or a door pocket.
 - -The remote controller is in the sun visor pocket or on the floor.
- · Even when the remote controller is outside the interior workable area, if it is in any of the following conditions, you may be able to start the engine or select the ignition mode. The remote controller outside warning may not be given at that time.
 - -The remote controller is outside the vehicle but very close to a door.
 - -The remote controller is on the instrument panel.

Engine Switch Illumination

The engine switch is illuminated (lit) in the following situations:

- · When the engine is off and the driver's door is open, or for 15 seconds after the driver's door is closed. The illumination will fade out after 15 seconds passed.
- While the headlights and/or the position lights are on, the illumination will turn on. The illumination will go out when the headlights and the position lights are turned off.

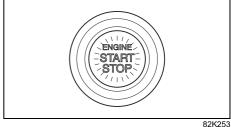

NOTE:

To save the lead-acid battery, the illumination will be automatically turned off when both of the following conditions are simultaneously met:

- · The headlights and the position lights are turned off.
- 15 minutes has elapsed since opening the driver's door.

OPERATING YOUR VEHICLE


Selection of Ignition Modes

Press the engine switch to select ACC or ON mode as follows when you use an electric accessory or check the operation of instrument cluster without running the engine.

NOTE:

When selecting the ignition modes, the information display in the instrument cluster show certain messages. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section.

1) Bring the keyless push start system remote controller with you and sit in the driver's seat.

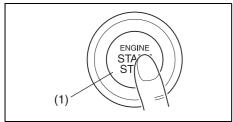


82K254

2) Manual transmission Without depressing the clutch pedal, press the engine switch (1). Automatic transmission - Without depressing the brake pedal, press the engine switch (1).


Every time you press the engine switch, the ignition mode changes as follows.

Manual transmission

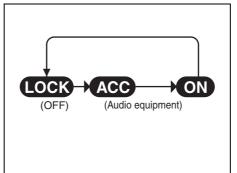

68PH00322


Automatic transmission

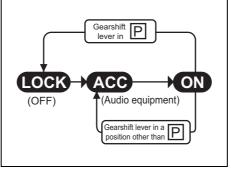

57L31006

If the master warning indicator light Λ blinks and the ignition modes cannot be selected

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the ignition modes still cannot be selected, the battery of the remote controller may be discharged. To select an ignition mode, you must then use the following method:

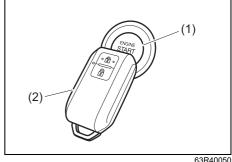

1) Manual transmission Without depressing the clutch pedal, push the engine switch (1).

Automatic transmission – Without depressing the brake pedal, press the engine switch (1).



75RM217

2) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds.

While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot select the ignition modes, there may be the other problem such as the discharged lead-acid battery. In this case, consult with a Maruti Suzuki authorized workshop.

NOTE:

- You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult with a Maruti Suzuki authorized workshop.
- If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.




75RM220

Remote Controller Outside Warning

When either of the following conditions is met, the system causes the remote controller outside warning by sounding the interior and exterior buzzers. At the same time, the immobilizer/keyless push start system warning light comes on, the master warning indicator light blinks and the information display in the instrument cluster will show the corresponding message.

- Any door is opened and then closed while the remote controller is not inside the vehicle and the engine is running or the ignition mode has been changed to ACC or ON by pressing the engine switch.
- The remote controller is not inside the vehicle when you attempt to start the engine after changing the ignition mode to ACC or ON by pressing the engine switch.

OPERATING YOUR VEHICLE

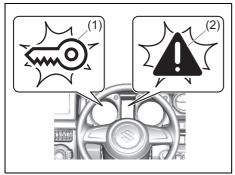

80T050050

- (1) Immobilizer/keyless push start system warning light (blinks)
- (2) Master warning indicator light (blinks)


If the warning is given, place the remote controller inside the vehicle as soon as possible.

 Any attempt to start the engine will fail while the warning is active. The message appearing in the information display in the instrument cluster will also indicate this condition. Refer to "Information Display" in the "INSTRUMENT CLUSTER" section for details. Normally, the immobilizer/keyless push start system warning light should go out and the master warning indicator light should stop blinking shortly after the remote controller is brought back inside the vehicle. If they remain lit and blinking, change the ignition mode to LOCK (OFF) by pressing the engine switch and then perform the engine starting operation. Refer to "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in this section.

NOTE:

Always keep the remote controller with you as the driver.

Starting / Stopping Engine (Vehicle without Keyless Push Start System) Starting Engine

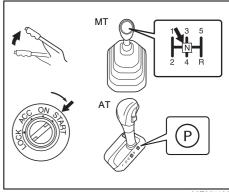

80T051100

- 1) Check that the parking brake is set fully.
- 2) Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.

- 3) Manual transmission vehicles: Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
 - Automatic transmission vehicles: If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). Hold the brake pedal fully depressed.
- 4) With your foot taken off the accelerator pedal, crank the engine by turning the ignition key to "START". Release the key immediately after the engine has started.

NOTICE

- For protection of a lead-acid battery and a starter motor, do not use the starter motor by turning the key to "START" for more than 12 seconds at a time. If the engine does not start, turn the key to "LOCK" position and wait for more than 30 seconds before trying again. If the engine does not start after several attempts, consult with a Maruti Suzuki authorized workshop.
- Automatic transmission vehicles: In case that you need to restart the engine while the vehicle is moving, shift into "N". Otherwise the engine and transmission can be damaged.

 (Continued)

NOTICE

(Continued)

 Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.

NOTE:

Automatic transmission vehicles: Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N" position.

Stopping Engine


WARNING

Except in cases of emergency, do not stop the engine while the vehicle is in motion. If you stop the engine while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine while driving.

NOTICE

Automatic transmission vehicles: If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.


Starting / Stopping Engine (Vehicle with Keyless Push Start System) Starting Engine

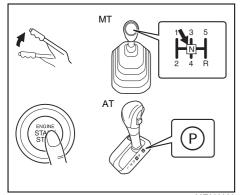

80T050060

- 1) Check that the parking brake is set fully.
- Turn off such loads as the headlights and air conditioning system to facilitate starting of the engine.

- Manual transmission vehicles: Shift into "N" (Neutral). Hold the clutch pedal and brake pedal fully depressed.
 - Automatic transmission vehicles: If the gearshift lever is not in "P" (Park) position, shift into "P" (Park). Hold the brake pedal fully depressed.
- The "PUSH START SWITCH" message will appear in the information display in the instrument cluster.

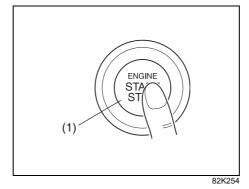

- 5) With your foot taken off the accelerator pedal, push the engine switch (1). When the engine is started, the starter motor will automatically stop.
 - Even if you fail to start the engine, the starter motor will stop turning automatically after approximately 12 seconds. In this case, press the engine switch to select LOCK (OFF) mode and restart the engine.

- If there is a problem with the system, the engine will not start automatically even if the switch is pressed. In case the starter motor does not turn or stops immediately, start the engine by the following procedure.
 - a. Press the engine switch to select the ON mode.
 - b. Perform the above procedure 1) to 3).
 - Keep the engine switch pressed until the engine starts. Release your finger from the engine switch after the engine has started.

NOTICE

- If the engine does not start, press the engine switch to select LOCK (OFF) mode and wait for more than 30 seconds before trying again, for protection of a lead-acid battery and a starter motor. If the engine does not start after several attempts, consult with a Maruti Suzuki authorized workshop.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill. This starting method could result in damage to the catalytic converter or damage to other parts.

NOTE:

- You do not need to keep the engine switch pressed to start the engine.
- Manual transmission vehicles:
 The engine of a manual transmission vehicle will not start unless the clutch pedal is depressed.
- Automatic transmission vehicles: Automatic transmission vehicles have a starter interlock device. The engine starts when the gearshift lever is in either "P" or "N" position.
- During the engine starting procedure, messages on the information display will help you. Refer to "Information display" in "INSTRUMENT CLUSTER" section for details.
- When the engine stalls in intersection and railway crossing etc., restart the engine by usual procedure.

Stopping Engine

- Depress the engine switch to stop the engine after the vehicle stopped completely.
- If the engine remains stopped for a while after it was stopped unexpectedly or was raced before stopping, a clicking sound may be heard from around the engine when it is restarted. This is not a malfunction. Always let the engine idle before stopping it.

WARNING

Except in cases of emergency, do not stop the engine while the vehicle is in motion. If you stop the engine while the vehicle is in motion, the steering wheel will lock and you will not be able to steer the vehicle. This may result in an accident. Avoid stopping the engine while driving.

NOTICE

Automatic transmission vehicles: If you stop the engine while the vehicle is in motion, the automatic transmission may be damaged. Avoid stopping the engine while driving.

Emergency Stop


In case of emergency, you can stop the engine by quickly pushing the engine switch more than 3 times, or pushing and holding the engine switch for more than 2 seconds while the vehicle is in motion.

NOTE:

Except in cases of emergency, do not stop the engine while the vehicle is in motion. The steering and braking operation will require more effort when the engine is stopped. Refer to "Braking" in this section.


If the Master Warning Indicator Light A Blinks and the Engine cannot be Started

Your keyless push start system remote controller may not be sensed as being within the interior workable area (refer to the related explanation in this section). Try again after checking that you have the remote controller with you. If the engine cannot be started, the battery of the remote controller may be discharged. To start the engine, you must then use the following method:

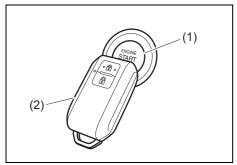

63R40050

 Check that the gearshift lever is in "P" (Park) position and keep depressing the brake pedal fully.

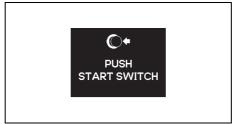

75RM214

2) If the above message is shown on the information display in the instrument cluster, press the engine switch (1).



75RM217

3) Within about 10 seconds while the master warning indicator light blinks and the information display in the instrument cluster shows the following message, touch the engine switch with the lock switch end of the remote controller (2) for about 2 seconds. While the master warning indicator light blinks, the immobilizer/keyless push system warning light will come on for about 5 seconds.

If you still cannot start the engine, there may be the other problem such as the discharged lead-acid battery. In this case, consult with a Maruti Suzuki authorized workshop.

NOTE:

 You may customize the system to cause the interior buzzer to sound once for warning that remote controller is out of sensing range. For this customization, consult with a Maruti Suzuki authorized workshop. If the battery of the remote controller is almost discharged, the information display in the instrument cluster shows the following message when you press the engine switch to change the ignition mode to ON. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details. For details on replacing the battery, refer to "Keyless Push Start System Remote Controller" in "BEFORE DRIVING" section.



75RM220

Returning Ignition Mode to LOCK (OFF)

Automatic transmission – To ensure safety, the ignition mode can be returned to LOCK (OFF) by pressing the engine switch only when the gearshift lever is placed in "P" position without pressing the knob button.

NOTE:

In the case of an automatic transmission, the ignition mode cannot be returned to LOCK (OFF) position if the gearshift lever is in any other position than "P".

Certain problems such as a fault in engine system may prevent the engine switch from going back to LOCK (OFF) mode. If this happens, have the vehicle inspected by a Maruti Suzuki authorized workshop after doing the following:

- Lock the doors using the key to prevent theft. (The request switches and the keyless push start system remote controller cannot be used to lock them.)
- Disconnect the negative cable from the lead-acid battery to prevent discharge.

LOCK (OFF) mode reminder buzzer

If the driver's door is opened without returning the ignition mode to LOCK (OFF) by pressing the engine switch, a buzzer sounds to warn you of this condition.

- If you open the driver's door after pressing the engine switch to change the ignition mode to ACC, the interior buzzer beeps intermittently.
- The buzzer will stop sounding if you then push the engine switch twice, thus bringing it back the ignition mode to LOCK (OFF).

NOTE:

Whenever you leave the vehicle, check that you have returned the ignition mode to LOCK (OFF) using the engine switch and then lock the doors. Without returning the ignition mode to LOCK (OFF), you cannot use a request switch or keyless push start system remote controller to lock the doors.

Steering lock warning buzzer

If the steering lock fails to engage due to a fault in the system when the ignition mode is turned to LOCK (OFF) by pressing the engine switch and any door (including the tailgate) is opened or closed, the interior buzzer will warn you of this condition with repeated short beeps. If this happens, have your vehicle inspected by a Maruti Suzuki authorized workshop.

ENG A-STOP System (Engine Auto Stop Start System)

The ENG A-STOP system (engine auto stop start system) automatically stops the engine while waiting briefly at a traffic light, etc., and automatically restarts the engine afterward. This system helps reduce emissions, improve fuel consumption and lower engine noise.

This system stops the engine temporarily under specific conditions. Before parking the vehicle for an extended period of time or leaving the vehicle, properly apply the parking brake and stop the engine with the engine switch.

Once the specific conditions are met, the engine will stop automatically after the vehicle has stopped. However, the engine will not be stopped automatically until confirmation of the system function is finished.

NOTE:

If your vehicle is equipped with automatic heating and air conditioning system, you can change the automatic engine stop condition via the information display. Refer to "Information display" in "INSTRUMENT CLUSTER" section.

WARNING

- Do not get out of the vehicle while the engine is automatically stopped by the ENG A-STOP system. Doing so may lead to an accident.
- If the engine does not restart automatically after having been stopped automatically by the ENG A-STOP system, push the engine switch to start the engine. Trying to move the vehicle when the engine has not yet restarted requires a strong force to turn the steering wheel or depress the brake pedal, potentially leading to an accident.

NOTICE

The vehicle equipped with this system uses a dedicated high-performance battery that supports ENG A-STOP system. Accordingly, observe the instructions listed below. If these instructions are not observed, the system may not actuate properly or the battery may die prematurely.

- When replacing the battery, use a Maruti Suzuki genuine battery specified in the Specification.
- Do not draw power from the battery terminals for electrical products.



72M2042


NOTE:

- Manual transmission vehicle If the driver's seat belt is unfastened and the driver's door is opened, the engine will stall.
- Automatic transmission vehicle If the driver's seat belt is unfastened, even if the brake pedal is pressed down, or the driver's door is opened, the engine will be restarted to warn you that the engine was stopped automatically by the ENG A-STOP system.

Automatic Stopping / Restarting of the Engine

Manual transmission vehicle

With the brake pedal depressed, decelerate the vehicle.

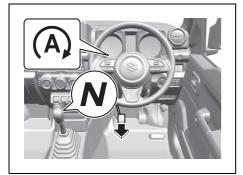

77R40690

- 2) After the vehicle has stopped with the clutch pedal depressed and the gearshift lever shifted to "N", and then release the clutch pedal, the engine will stop automatically. The ENG A-STOP indicator light (green) will come on.
- The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to "Conditions to stop the engine automatically" in this section
- During the automatic engine stop, the engine may shut down, accompanied by

an interior buzzer or restarted, to ensure safety.

For details, refer to "Precautions of When the Engine is Stopped Automatically" in this section.


NOTICE

- During the automatic engine stop, do not shift the gearshift lever to a position other than "N" without depressing the clutch pedal. If the gearshift lever is in a position other than "N", the engine will not restart automatically even if the clutch pedal is depressed.
- If the driver unfastens the seat belt, the engine does not restart automatically even if the clutch pedal is depressed. Also a buzzer will sound to alert the driver. In this case, fasten the seat belt.

NOTE:

During the automatic engine stop, electric equipment will be in the following conditions:

- The audio and other electrical component can be used during the automatic engine stop, but the air conditioner will switch to the fan mode.
- If the vehicle is equipped with automatic heating and air conditioning system, the fan speed will be limited during the automatic engine stop (only in the auto control mode) to keep the cabin airconditioned for a longer time.
- If the engine stalled by a rapid clutch operation, the engine will restart with the gear positioned "N" (neutral) and the clutch pedal depressed.

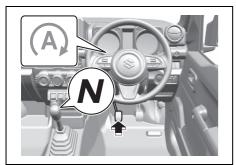

77R40700


 Regardless of whether the vehicle has stopped or not, depressing the clutch pedal will restart the engine and ENG A-STOP indicator light (green) will go off.

While the engine is stopped automatically, depressing the clutch pedal will restart the engine consuming fuel. Therefore, for fuel economy, it is recommended to depress the clutch pedal just before the vehicle start.

 Without depressing the clutch pedal, the engine may restart automatically if the automatic engine restart conditions are met.

For details, refer to "Conditions to restart the engine automatically" in this section.

Automatic transmission vehicles

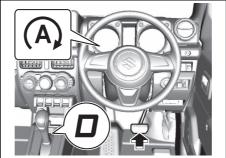


7R4060

- The engine will stop automatically if you stop the vehicle by depressing the brake pedal with the gearshift lever is in the "D" or "N" position. After the engine is stopped automatically, the idling stop indicator light (green) will come on.
 - The ENG A-STOP system will not stop the engine automatically if all the automatic engine stop conditions are not met. For details, refer to "Conditions to restart the engine automatically" in this section.
 - During the automatic engine stop, the engine may shut down, accompanied by an interior buzzer or restarted, to ensure safety.

NOTE:

- The engine is not stopped automatically when decelerating without depressing the brake pedal, for example, by using engine braking.
- Electrical components, such as the navigation system or the audio system, can be used while the engine has been stopped automatically, however, the air conditioner switches to the ventilation position.
- For the automatic heating and air conditioning system, airflow is limited (only under automatic operation) when the engine is stopped automatically, in order to improve the cooling and heating performance.

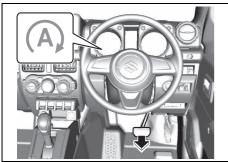

7R40610

- When you remove your foot from the brake pedal, the engine is restarted and the ENG A-STOP indicator light (green) goes off.
 - The engine is restarted automatically if the conditions to restart the engine automatically are met, even if the brake pedal is depressed.
 - For details on the conditions for automatically restarting the engine, refer to "Conditions to restart the engine automatically" in this section.
 - When restarting the engine, you can prevent the vehicle from creeping ahead and rolling downward on an uphill slope, by keeping force on the brake pedal temporarily.

NOTE:

- The hill hold control system is activated when the engine is restarted automatically.
- If a sound of audio system is loud, the sound may be interrupted when the engine is restarted. This is not a malfunction.

Precautions of When the Engine is Stopped Automatically

A WARNING

Do not perform any of the following operations while the engine has been stopped automatically. This may result in an accident.

	Operation/Vehicle Condition	Solution	
Common	 Engine hood opened The interior buzzer sounds 2 times. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off. 	To restart the engine, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position (for manual transmission) or "P" position (for automatic transmission). 2) Securely close the engine hood. 3) Turn the ignition switch or press the engine switch to restart the engine.	
Manual transmission	Driver's seat belt unfastened and driver's door opened The interior buzzer sounds 5 times. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes off.	 Before starting the vehicle, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "N" position. 2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch or the press the engine switch to stop the engine. 	
	Gearshift lever shifted to a position other than "N" without depressing the clutch pedal The interior buzzer sounds 2 times. After the engine is stopped automatically, it stalls. The ENG A-STOP indicator light (green) goes on.	The gearshift lever is placed returned to the "N" position.	

	Operation/Vehicle Condition	Solution
Auto- matic transmis- sion	Driver's seat belt unfastened, or driver's door opened The interior buzzer sounds 10 times. The engine is restarted automatically. The ENG A-STOP indicator light (green) blinks 5 times, then goes off.	 Before driving, close the door and buckle the seat belt. In addition, before getting out of the vehicle, follow the procedure below. 1) Set the parking brake firmly, and then place the gearshift lever in the "P" position. 2) When the vehicle will be stopped for a long time or when you will leave the vehicle unattended, turn the ignition switch or press the engine switch to stop the engine.

NOTE:

The following indicator lights in the instrument cluster do not come on when the engine is stopped automatically.

• Malfunction indicator light, electric power steering light, oil pressure light, charging light

Operating Conditions of ENG A-STOP System Standby conditions

If all of the following conditions are met while driving, the automatic engine stop will be permitted.

When the engine is started*

(Common	The engine is started with the engine hood securely closed.

^{*:} If the engine is started according to the procedures for the Jump-starting Instructions in "EMERGENCY SERVICE" section, the standby conditions are not met.

When driving

Common	 The ENG A-STOP system is not deactivated (OFF) (For details, refer to "ENG A-STOP OFF Switch" in this section.) The battery is charged more than a certain amount, and the temperature inside the battery is within the specified range (#1) The engine coolant temperature is within the specified range The driver's seat belt is fastened The driver's door is securely closed The engine hood is securely closed There is no signal to prevent stopping the engine from any electronic control systems other than the ENG A-STOP system (#2) The transfer lever is in "2H" position Automatic heating and air conditioning system> The air from the outlets is sufficiently cooled while cooling or sufficiently warmed while heating. The defroster is turned off.
Manual transmission	The gearshift lever is not in "R" position
Automatic transmission	 The gearshift lever is in the "D" or "N" position. The overdrive OFF switch light goes off.

^{#1:} If the battery is discharged, for example, if the vehicle has not been used for a long time or electrical components, such as the navigation system or audio system, have been used for a long time while the engine was stopped, it may take some time until the system can be in standby.

^{#2:} If any of the warning and indicator lights affecting the ENG A-STOP system come on, the engine will not be stopped automatically.

Conditions to stop the engine automatically

If all of the following conditions, the ENG A-ŚTOP indicator light (green) in the instrument cluster will illuminate when the vehicle is stopped and the engine will stop automatically.

Common	The ABS or ESP® system has not been activated Brake booster vacuum pressure is normal
Manual transmission	The gearshift lever is in "N" position The clutch pedal is released
Automatic transmission	The brake pedal is sufficiently depressed (#) The accelerator pedal is not depressed The vehicle is not stopped on a steep hill

^{#:} The engine may not be stopped automatically if the brake pedal was depressed lightly or strongly.

The engine may not stop automatically when the brake pedal is depressed lightly.

In this case, when the brake pedal is depressed additionally, the engine may stop automatically.

The driver can operate whether the engine stops automatically or not depending on how hard the brake pedal is pressed.

Conditions to restart the engine automatically

If any of the following vehicle conditions occur or operations are performed while the engine is stopped automatically, the engine is restarted automatically and the ENG A-STOP indicator light (green) goes off.

Common	The ENG A-STOP system is deactivated (OFF) The battery continues to be discharged (#1) A malfunction was detected in this system (#1) The negative pressure of the brake booster has dropped (#1) The vehicle starts to move on a slope, etc. (#1) Some time (2 minutes or so) has elapsed after the start of the automatic engine stop (#1) Shift the transfer lever into "4H" or "4L" position (#1) Automatic heating and air conditioning system> The temperature of the air from the air conditioner outlets changes greatly after the automatic engine stop, or the cooling and heating performance is insufficient (#1) The temperature selector was greatly set toward COOL while cooling or greatly set toward HOT while heating (#1) The defroster is turned on (#1)
Manual transmission	The clutch pedal is depressed.
Automatic transmission	 The driver releases the seat belt (#1, #2) The driver's door is opened (#1) The foot is removed from the brake pedal (#2) The accelerator pedal is depressed The gearshift lever is placed in the "P", "R", "L" or "2" position, or push the overdrive off switch and release the overdrive After the gearshift lever is placed in the "N" position, it is returned to the "D" position


#1:The ENG A-STOP indicator light (green) will blink and then go off

#2:The interior buzzer sounds intermittently (5 times).

#3:If the brake pedal is not fully depressed, the engine may be restarted automatically. The engine may not be stopped automatically when the brake pedal is depressed lightly, but the engine is stopped automatically by further depressing the brake pedal. The driver can operate whether idling stop is performed or not depending on how much the brake pedal is depressed.

ENG A-STOP OFF Switch

The ENG A-STOP system can be deactivated.

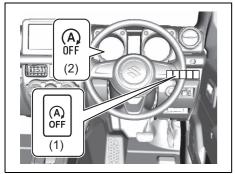

77R40620

- To deactivate the system, press the ENG A-STOP OFF switch (1) to turn on ENG A-STOP OFF light (2).
- To activate the system once again, press the switch (1) again to turn off the indicator.
- Every time the engine is stopped manually, the system is enabled again and the ENG A-STOP OFF light (2) goes off.

NOTE:

Pressing the ENG A-STOP OFF switch (1) during the automatic engine stop will restart the engine automatically and the ENG A-STOP OFF light (2) will come on.


ENG A-STOP OFF Indicator Light

 When you push the ENG A-STOP OFF switch, this light comes on.



56RM03012

- The ENG A-STOP OFF indicator light (orange) in the speedometer comes on or blinks in the following cases as well, and not only to warn you that the ENG A-STOP system is deactivated. If it blinks, have the vehicle inspected by a Maruti Suzuki authorized workshop.
 - If the system is operating normally when the engine switch is pressed to change the ignition mode to ON, the indicator light comes on for approximately 2 seconds, then goes off.
 - If there is something wrong with the system, or if it is time to replace the engine component (starter motor) or the lead-acid battery, the indicator light will blink when the engine switch is pressed to change the ignition mode to ON. (The ENG A-STOP system will not work properly.)

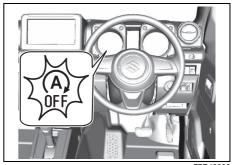

77R4063

NOTE:


If the indicator light blinks when the engine has stopped automatically by the ENG A-STOP system, the engine may restart or stall

Air Conditioning System Settings by ENG A-STOP System

When using the automatic heating and air conditioning system while the engine is stopped automatically by the ENG A-STOP system, you can select the settings via the setting mode of the information display.

For details on how to use the information display, refer to "Setting Mode" of "Information Display" in the "INSTRUMENT CLUSTER" section.

Parking Brake Lever

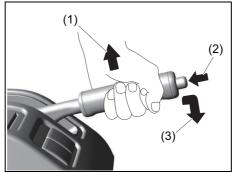

80T050070

- (1) To set
- (2) To release
- (3) To release

The parking brake lever is located between the front seats. To set the parking brake, depress the brake pedal and pull the parking brake lever all the way up. To release the parking brake, depress the brake pedal and pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

▲ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from overheating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected by a Maruti Suzuki authorized workshop.
- Always set the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, check that the gearshift lever is in one of the following positions:
 - 1st gear or "R" (Reverse) for manual transmission vehicles.
 - "P" (Park) for automatic transmission vehicles.

Remember, even though the transmission is in gear or in Park, you must set the parking brake fully.

(Continued)

WARNING

(Continued)

- When parking the vehicle in extremely cold weather, the following procedure should be used:
 - 1) Set the parking brake.
 - 2)Manual transmission turn off the engine, then shift into reverse or first gear. Auto (12) (Pork) and turn off the

into "P" (Park) and turn off the engine.

- 3) Get out of the vehicle and put chocks under the wheels.
- 4) Release the parking brake. When you return to your vehicle, first set the parking brake, and then remove the wheel chocks.
- Do not leave cigarette lighters, spray cans, soft drink cans or plastic articles (such as glasses, CD cases, etc.) in sun-heated vehicle. The temperature inside the vehicle may cause as follows:
 - Gas may leak from a cigarette lighter or spray can and may lead to a fire.
 - The glasses, plastic cards or CD cases, etc. may deform or crack.
 - Soft drink cans may fracture.

Parking Brake Reminder Buzzer

A buzzer sounds intermittently to remind you to release the parking brake if you start the vehicle without fully releasing the parking brake. Check that the parking brake is fully released and the brake system warning light turns off.

Precaution for Parking

When Moving the Vehicle

When moving the vehicle, start the engine.

WARNING

If you coast with the engine off, stronger force than normal is required when turning the steering wheel or depressing the brake pedal, resulting in an accident.

Do not coast on a downhill slope with the engine off.

When Taking a Nap in the Vehicle



69RHS172

Do not take a nap in the vehicle with the engine running.

WARNING

- Exhaust gases can enter the vehicle due to surrounding conditions and wind direction, possibly causing carbon monoxide poisoning.
- The gearshift lever could change unintentionally, or the accelerator pedal could be depressed accidentally, causing an accident.
- If you were to accidentally step on the accelerator pedal while you are asleep, the engine and the exhaust system could overheat, resulting in danger of fire.

With the Engine Running, the Cooling Fan (Radiator Fan) may Rotate Suddenly

The cooling fan (radiator fan) in the engine compartment may automatically stop and rotate depending on the conditions of the engine coolant temperature.

WARNING

If you get close to a rotating cooling fan (radiator fan), your hands, hair and clothing may get caught in it, resulting in personal injury.

With the engine running, even when the cooling fan (radiator fan) stops, it may automatically rotate.

Therefore, do not get close to the

When You Park the Vehicle Outside on a Snowy Day

cooling fan (radiator fan).

WARNING

- When you park the vehicle under the eaves or the trees, fallen snow may hit the vehicle's roof and it may be dented.
 - Do not park the vehicle under the eaves or the trees on a snowy day.
- If you park the vehicle outside on a snowy day, the wiper arms may be deformed and the wiper blades may be frozen on the windshield, because of the weight of snow.
 When you park the vehicle outside, raise the wiper arms.

Do not Park the Vehicle Near Flammable Materials




69RHS174

WARNING

If you park the vehicle near flammable materials, the exhaust pipes and exhaust gas will get hot, resulting in danger of fire.

Do not park the vehicle near flammable materials such as dry grass, paper waste and plywood.

When Leaving the Vehicle, Stop the Engine and Lock Doors

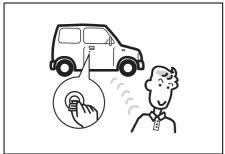

69RHS054

Even when leaving the vehicle for a short time, do not leave cash or valuables inside, as there is a risk of theft.

WARNING

If you leave the vehicle unattended with the engine running, problems such as fire or theft can occur. Do not leave the vehicle unattended with the engine running.

Do not Leave the Computer and the Mobile Phone in the Vehicle

There is the possibility of theft, or these items could become damaged due to moisture, humidity or temperature change.

Do not Leave Lighters and Eyeglasses in the Vehicle



69RHS175

WARNING


- · As the inside of the vehicle becomes hotter when parking in areas where strong sunlight causes increased temperature, there is the danger of spontaneous ignition of lighters or spray cans, fire due to explosion, the deformation or cracking of eyeglasses, plastic cards or CD cases, or the rupture of carbonated beverage cans. When parking in those areas, do not leave lighters, spray cans, plastic products (eyeglasses, plastic cards, CD cases, etc.) or carbonated beverage cans in the vehicle.
- When items get pushed around or when the seats are moved, it is possible that gas could escape and lead to a fire. Do not place accessories such lighters or spray cans with exposed operating parts in the glove box, in storage compartments, between the seats, on the floor, etc.

Using Transmission

WARNING

Do not hang any items on the gearshift lever and do not use the gearshift lever as a handrest. Otherwise, it could prevent proper operation of the gearshift lever and cause its malfunction, resulting in an accident.

Manual Transmission

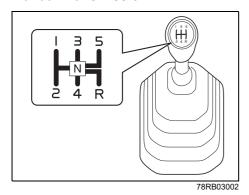

Starting off

To start off, depress the clutch pedal all the way to the floor and shift into 1st gear. After releasing the parking brake, gradually release the clutch. When you hear a change in the engine's sound, slowly press the accelerator while continuing to gradually release the clutch.

Shifting

All forward gears are synchronized and provide quiet and easy shifting. Always depress the clutch pedal all the way to the floor before shifting gears. Keep the engine speed from rising into the red zone of the tachometer.

Downshifting maximum allowable speeds

Transfer lever in "2H" or "4H" position

Downshifting	km/h		
2nd to 1st	20 (12)		
3rd to 2nd	80 (49)		
4th to 3rd	115 (71)		
5th to 4th	160 (99)*		

Transfer lever in "4L" position

Downshifting	km/h		
2nd to 1st	10 (6)		
3rd to 2nd	40 (24)		
4th to 3rd	55 (34)		
5th to 4th	80 (49)*		

*NOTE:

You may not accelerate to the maximum allowable speed because of the driving situation and/or the vehicle condition.

NOTICE

Do not downshift to a lower gear at the speed faster than the maximum allowable speeds for the next lower speed, or severe damage to engine and transmission can result.

WARNING

- Reduce your speed and downshift to a lower gear before going down a long or steep hill. A lower gear will allow the engine to provide braking. Avoid riding the brakes or they may overheat, resulting in brake failure.
- When driving on slippery roads, slow down before downshifting. Excessive and/or sudden changes in engine speed may cause loss of traction, which could cause you to lose control.

NOTICE


- Check that the vehicle is completely stationary before you shift into reverse.
- To help avoid clutch damage, do not use the clutch pedal as a footrest while driving or use the clutch to keep the vehicle stationary on a slope. Depress the clutch fully when shifting.
- When shifting or starting off, do not race the engine. Racing the engine can shorten engine life and cause negative effect to smooth shifting.

NOTE:

If it is difficult to engage reverse gear [R], follow below procedure.

- Put gear lever in neutral [N] position.
- Release clutch pedal once.
- Again depress the clutch pedal and shift from [N] to [R].

Automatic Transmission Gearshift lever

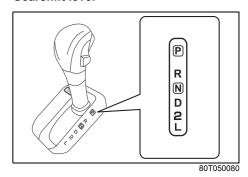

The gearshift lever is designed so that it cannot be shifted out of "P" position unless the ignition switch is in "ON" position and the brake pedal is depressed.

Use the gearshift lever positions as follows:

P (Park)

Use this position to lock the transmission when the vehicle is parked or when starting the engine. Shift into Park only when the vehicle is completely stationary.

R (Reverse)

Use this position to reverse the vehicle from stop. Make sure that vehicle is completely stationary before shifting into Reverse.

N (Neutral)

Use this position for starting the engine if the engine stalls and you need to restart it while the vehicle is moving. You may also shift into Neutral and depress the brake pedal to hold the vehicle stationary during idling.

D (Drive)

Use this position for all normal driving.

With the gearshift lever in "D" range you can get an automatic downshift by pressing the accelerator pedal. The higher the vehicle speed is, the more you need to press the accelerator pedal to get a downshift.

2 (Low 2)

Use this position to provide extra power when climbing hills, or to provide engine braking when going down hills.

L (Low 1)

Use this position to provide maximum power when climbing steep hills or driving through deep snow or mud, or to provide maximum engine braking when going down steep hills.

WARNING

Always depress the brake pedal before shifting from "P" (Park) (or "N" (Neutral) if the vehicle is stationary) to a forward or reverse gear, to help prevent the vehicle from moving unexpectedly when you shift.

A CAUTION

For the vehicles with the keyless push start system, if you cannot press the engine switch firmly, the engine may not start.

Even if you shift the gearshift lever into "R" or "D" position without the engine running, the vehicle does not move.


If you try to move your vehicle under the above-mentioned condition, the vehicle may move in unexpected directions on a slope, etc. This may cause an accident. When starting the engine, press the engine switch firmly. Also, make sure that the engine is running by checking engine sound or warning and indicator lights.

NOTE:

When you shift the gearshift lever into "P" and stop the engine before depressing the parking brake pedal, if you try to restart the engine and shift the gearshift lever into the

position other than "P", it may reduce gearshift lever capability, or unusual sound and shock may occur. However, this is not abnormal.

The gearshift lever has a lock mechanism to help prevent accidental shifting. Shift the gearshift lever as follows:

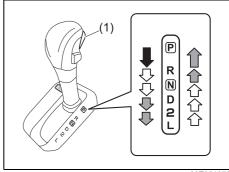

80T051070

(1) knob button

•	Shift with the knob button (1) pushed in and the brake pedal depressed.				
♦₽	Shift with the knob button (1) pushed in.				
♦	Shift without the knob button (1) pushed in.				


NOTICE

- Do not shift the gearshift lever into "R" while moving forward, or the transmission may be damaged. If you shift into "R" when the vehicle speed is over 10 km/h, the transmission will not shift into reverse.
- Be sure to take the following precautions to help avoid damage to the automatic transmission:
 - Make sure that the vehicle is completely stationary before shifting into "P" or "R".
 - Do not shift from "P" or "N" to "R", "D" or "L" when the engine is running above idle speed.
 - Do not rev the engine with the transmission in a drive position ("R", "D" or "L") and the front wheels not moving.
 - Do not use the accelerator to hold the vehicle on a hill. Use the vehicle's brakes.

NOTE:

- Always shift the gearshift lever without pushing in the knob button except when you shift from "P" to "R", from "D" to "2", from "2" to "L", from "N" to "R" or from "R" to "P". If you always push in the knob button when shifting the gearshift lever, you could shift into "P", "R", "2" or "L" by mistake.
- If driver's or passenger's knee hits the gearshift lever while driving, the lever could move and the gear could be changed unexpectedly.

Overdrive off switch

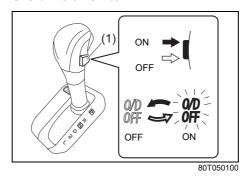

(1) Overdrive off switch

The transmission is a 4-speed (3-speed plus overdrive) automatic transmission. By operating the overdrive off switch, the transmission can be converted to a 3-speed automatic transmission that will not move to the overdrive position. To convert

the transmission to the 3-speed mode, push in the overdrive off switch and release it.


To return the transmission to the 4-speed mode, push in the overdrive off switch again.

When the ignition switch is turned to the "ACC" position, the transmission in the 3-speed mode is converted to the 4-speed mode automatically.

The 3-speed mode is suitable for the following driving conditions:

- Driving on hilly, winding roads
 - You can drive more smoothly with less frequent gear changing
- Going down a steep hill
- Some engine braking is provided

If you cannot Shift Automatic Transmission Gearshift Lever out of "P" (PARK)

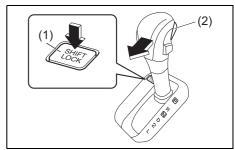

78RB03006

The automatic transmission vehicles have an electrically operated park-lock feature. If the vehicle's lead-acid battery is discharged, or there is some other electrical failure, the automatic transmission cannot be shifted out of Park in the normal way. Jump starting may correct the condition. If not, follow the procedure described below. This procedure will permit shifting the transmission out of Park.

- 1) Be sure the parking brake is firmly applied.
- 2) If the engine is running, stop the engine.
- Make sure the key is in "ON" or "ACC" position.
- 4) With the release button (1) pushed, push the knob button (2) and shift the gearshift lever to the desired position.

This procedure is for emergency use only. If repeated use of this procedure is necessary, or the procedure does not work as described, take the vehicle to a Maruti Suzuki authorized workshop for repair.

Gearshift Indicator (if equipped)



52RM30410

In the following cases, the gearshift indicator is indicated in the information display when the ignition switch is in "ON" position.

- When the gearshift lever is in a position other than "N" (Neutral).
- When the transfer lever is in "2H" or "4H" position.
- For vehicles equipped with the cruise control, when the system is not in use.

The electronic control system monitors driving condition (such as vehicle speed and/or engine revolution), and it shows which gear position is optimal for your driving with the indication on the display.

If UP/DOWN arrow is indicated in the display while driving, we recommend you to shift up or down the gear. It is the optimal gear position for a driving condition that reduces the over revolution and stress to the engine, and improves fuel consumption.

WARNING

The gearshift indicator is designed to indicate optimal gear position for your driving, however, a driver will not be relieved from the duty of care of driving operation or gear change with this indicator.

To drive safe, do not gaze the gearshift indicator, pay attention to your driving situation and shift up or down if necessary.


NOTE:

- The gearshift indicator is not indicated when the gear position is in "N" (Neutral).
- If you depress the clutch pedal while UP/DOWN arrow is indicated, the indication will disappear.
- In ordinary driving, UP arrow will disappear when you release your foot from the accelerator pedal.
 The indication of gearshift indicator timing may differ depending on the vehicle condition and/or driving situation even in the same vehicle speed and engine revolution.
- If any of the electrical systems such as ESP[®] system is working, the gearshift indicator will disappear temporarily.

Example of the gearshift indicator

Indication	Description
	Lower gear position is selected for the vehicle speed and/or engine revolution. Changing to a higher gear position is recommended. • In this case, shifting up is recommended.
•	Higher gear position is selected for the vehicle speed and/or engine revolution. Changing to a lower gear position is recommended. • In this case, shifting down is recommended.

Transfer Lever

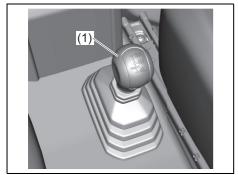


78RB03022

(1) Transfer lever


Your vehicle is equipped with the "ALL GRIP PRO" system that consists of a transfer case with a synchronizer (between 2WD-high and 4WD-high positions) and the air locking hubs. With this feature, you can shift the drive mode between 2-wheel drive high range and 4-wheel drive high range by shifting the "2H" or "4H" position. Stop the vehicle or reduce the speed to less than 100 km/h with the front wheels in the straight ahead position. Do not shift the transfer lever without depressing the accelerator pedal. Do not activate the cruise control system when shifting the transfer lever.

Free axle mechanism

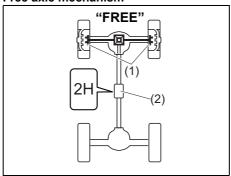

80T050140

Fixed axle mechanism

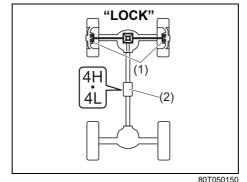


- (1) Air locking hubs
- (2) Transfer case

NOTE:

- The air locking hubs are activated by the vacuum of the engine and changed to shift the front wheel drive. The air locking hubs are not shifted when the engine is stopping. Several seconds are required from the operation of the transfer lever to the activation of air locking hubs.
- When the front tyres receive a big shock during running in 2-wheel drive position on the road surface of the big irregularity, etc, some noise may occur inside the air locking hubs afterwards. In this situation, stop the vehicle and then shift the transfer lever into "4H" position. After that, shift the transfer lever into "2H" position again.

Description of Transfer Lever Positions and Indicator Light

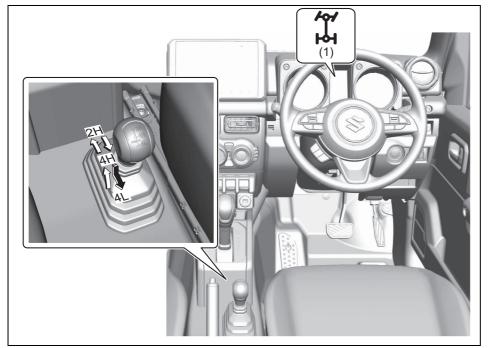

Shift the transfer lever without the lever pressed.

Shift the transfer lever with the lever pressed.

80T050160

(1) 4WD indicator light

Transfer lever	Wheel drive position	Indicator light	Description	
position		4WD indicator light	Description	
2H	2-wheel drive position	_	In this position, engine power is supplied to the rear axle only. Use this position for normal driving.	
4H	4-wheel drive high range position	101 178RB03024	In this position, engine power is supplied to the front and rear axles at normal speed, providing greater traction than 2-wheel drive. Use this position for off-road driving, or for driving on slippery roads (icy, snow-covered, muddy, etc.).	
4L	4-wheel drive low range position	/0/ I-0-1 78RB03024	In this position, engine power is supplied to the front and rear axles at reduced speed. Use this position for off-road driving on soft or slippery surfaces, or for climbing or descending steep, slippery hills.	

NOTICE

- Never operate your vehicle in "4H" or "4L" on dry pavement and, as much as possible, avoid using "4H" or "4L" on wet pavement, as this may seriously damage the drive train.
- If the transfer lever is returned to the original position while shifting the transfer lever, the drive train may be damaged.
- When you turn suddenly on a sharp curve, a side road, or a parking space in "4H" or "4L" position, the turning strength of the steering wheel will be growing big and tight corner braking phenomenon* may occur and result in accidents. 4-wheel drive system damage could also result.

^{*} Tight corner braking phenomenon is the similar situation to depress the brake when the drive train is in 4-wheel drive position ("4H" or "4L") and the steering wheel is turned suddenly and then the revolution difference between the front wheels and the rear wheels could not absorb.

Transfer Lever Operation

NOTICE

- Unevenly worn tyres can cause problems in the operation of the transfer lever. Be sure to rotate the tyres according to the maintenance schedule. Refer to "Tyres" and "Maintenance Schedule" in the "INSPECTION AND MAINTE-NANCE" section for proper tyre rotation procedures.
- If a problem exists during the shifting function, all lights of the 4WD indicator will blink continuously and the transfer lever operation will not work.


If the shift function does not work after trying the shifting operation several times, it may be the result of a system failure. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- When the temperature of 4-wheel drive system or the transmission is not warm under the low temperature, you may feel it hard to shift the transfer lever or gear noise may occur.
- Unless you can shift the transfer lever, drive your vehicle for a while and then shift the transfer lever again.

Operate the transfer lever according to the appropriate procedure described below:

From "2H" position to "4H" position From "4H" position to "2H" position

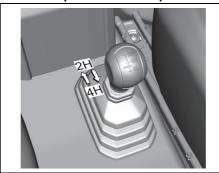

78RB03026

The transfer lever can be shifted when the vehicle is either stopped or moving. Position the front wheels straight ahead and shift the transfer lever from "2H" to "4H" or "4H" to "2H". If the vehicle is moving, the speed must be less than 100 km/h during this operation.

WARNING

Do not shift the transfer lever while the rear tyre is spinning. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTICE


Pay attention to shifting the transfer lever safely when driving your vehicle.

NOTE:

- After shifting the transfer lever from "2H" to "4H", check that the 4WD indicator light comes on.
- After shifting the transfer lever from "4H" to "2H", check that the 4WD indicator goes off.
- When 4WD indicator light is blinking after shifting the transfer lever to "4H" position, accelerate, slow down your vehicle or stop and reverse your vehicle a little to shift the transfer lever. Pay attention to the vehicles and the circumference toward or backward your vehicle when shifting the transfer lever.
- When you shift the transfer lever while turning the steering wheel or depressing the accelerator pedal, shifting the transfer lever may be difficult.
- Operate the transfer lever while driving at low speed if it may be difficult to shift the transfer lever from "2H" position to "4H" position when the vehicle is stopped.

- Shift the transfer lever again after decelerating or stopping the vehicle if it may be difficult to shift the transfer lever from "2H" position to "4H" position while driving or when the gear noise occurs.
- There may be a case to operate the transfer lever heavily when shifting the transfer lever from "4H" position to "2H" position while driving. In this case, position the front wheels straight ahead and drive for a while and then operate shifting the transfer lever again.
- When the transfer lever is shifted from 2H" position to "4H" position or from "4H" position to 2H" position and the air locking hubs are activated, the air conditioning system may not be operated for several seconds. This is not a malfunction.
- When the ignition switch is turned "ON" after the transfer lever is shifted from 2H" position to "4H" position or from "4H" position to 2H" position while stopping the engine, 4WD indicator light may blink This is not a malfunction

From "4H" position to "4L" position

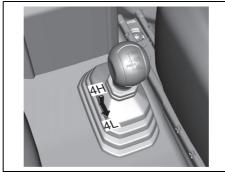

78RB03027

Stop the vehicle completely, place the transmission in "N" (Neutral) or depress the clutch pedal fully (if equipped), then shift the transfer lever from "4H" position to "4L" position by pressing the transfer lever.

WARNING

When you turn off the engine while the transfer is not finished to shift into "4L" position, follow instructions below.

- 1) Depress the brake pedal* fully.
- 2) Turn the ignition switch to "OFF" position or press the engine switch to change the ignition mode to OFF.
- * Depress the brake pedal until the engine is started again.
- Even though the gearshift lever is shifted into 1st gear or "R" (Reverse) gear for manual transmission vehicles or shifted into "P" (Park) position for automatic transmission vehicles, there may be a case that the wheels of the vehicle is not stationary.

When you turn off the engine in this situation, start the engine again and move the vehicle forward or backward slowly.

A CAUTION


- Do not operate the transfer lever while driving.
- Do not operate the transfer lever while making a left or right turn or while holding rear wheels slipped on icy, snow-covered, or muddy roads. Your vehicle may move to the unexpected direction. 4-wheel drive system may be also damaged.

NOTE:

- There may be a case that you will feel the difficulty to operate the transfer lever when shifting the transfer lever from "4H" position to "4L" position. Operate the transfer lever into "4L" position surely.
- When shifting the transfer lever from "4H" position to "4L" position, the buzzer will sound and the function of the ESP[®] system and the vehicle stability control system will be deactivated.
- There may be a case that shifting into "4L" position is not completed when the transfer system or the transmission is not warm in the cold weather. There may be a possibility of difficulty to shift especially for automatic transmission vehicles in the cold weather. Follow instructions below in this case and operate the transfer lever again.
 - Stop the vehicle completely.
 - Place the transmission in "N" (Neutral).
- Depress the brake pedal* fully.
- Release the parking brake.
- Turn the ignition switch to "OFF" position or press the engine switch to change the ignition mode to OFF.
- Shift the transfer lever from "4H" position to "4L" position by pressing the transfer lever.
- Check whether the vehicle can be moved by moving the vehicle forward or backward slowly.
 - * Depress the brake pedal until the engine is started again.

• There may be a case that it is difficult to operate the transfer lever or the gear noise occurs after driving the vehicle for a while in the cold weather. There may be a possibility of difficulty to shift the transfer lever from "4H" position to "4L" position. In this case, shift the transfer lever into "4H" position or "2H" position and then operate the transfer lever again after driving for a while.

From "4L" position to "4H" position

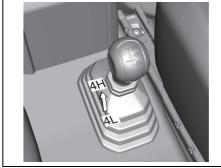

78RB0302

Stop the vehicle completely, place the transmission in "N" (Neutral) or depress the clutch pedal fully (manual transmission model), then shift the transfer lever from "4L" position to "4H" position.

Cruise Control (if equipped)

The cruise control system allows you to maintain a steady speed without keeping your foot on the accelerator pedal. The controls for operating the cruise control system are on the steering wheel.


You can use the cruise control system under the following conditions:

- · For manual transmission vehicle, the gear position is in 3rd, 4th or 5th
- For automatic transmission vehicle, the gearshift lever is in "D" position
- When the transfer lever is in "2H" or "4H" position
- When 4WD indicator light does not blink
- The vehicle speed is about 40 km/h or higher

▲ WARNING


To help avoid loss of vehicle control. do not use the cruise control system when driving in heavy traffic, on slipperv or winding roads, or on steep downhills.

Setting Cruising Speed Cruise control switch

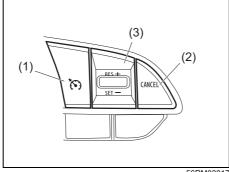

56RM03017

 - (1) Cruise switch
- (2) "CANCEL" switch
- (3) "RES +/SET -" switch



75RM115

- (4) Cruise indicator
- (5) "SET" indicator

- 1) Turn on the cruise control system by pushing cruise switch (1). When the cruise indicator (4) comes on, you can set cruising speed.
- 2) Accelerate or decelerate to the desired speed.
- 3) Push down the "RES +/SET -" switch (3), "SET" indicator (5) comes on. Take vour foot off the accelerator pedal and the set speed will be maintained.

▲ WARNING

If the cruising speed is set by accident, you cannot decelerate or could loose control of the vehicle. This could lead to an accident, resulting in severe injury or death.

Turn off the cruise control system and check that cruise indicator (4). "SET" indicator (5) is off when the system is not in use.

NOTE:

Established cruising speed may differ a little from the speed meter indication depending on the road conditions.

Changing Speed Temporarily

When the cruising speed is maintained, you can temporarily accelerate or decelerate.

To accelerate, depress the accelerator pedal. When you take your foot off the pedal, your vehicle will return to the set speed.

To decelerate, depress the brake pedal. The set speed will be canceled and "SET" indicator (5) will go off.

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5) again when vehicle speed is above 40 km/h. The vehicle will accelerate to the previously set speed and maintain its speed.

Changing Cruising Speed

Using the accelerator pedal

To reset at a faster cruising speed, accelerate to the desired speed using the accelerator pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

Using the brake pedal

To reset at a slower cruising speed, decelerate to the desired speed using the brake pedal and push down the "RES +/SET -" switch (3). The new speed will be maintained.

NOTE:

When the brake pedal is depressed, "SET" indicator (5) will go off until you reset the cruising speed.

Using "RES +/SET -" switch

To reset at a faster cruising speed, press repeatedly or hold push up the "RES +/SET -" switch (3). Vehicle speed will steadily increase. When you release the switch, the new speed will be maintained.

To reset at a slower cruising speed, press repeatedly or hold push down the "RES +/SET -" switch (3) until the vehicle has slowed to the desired speed, and then release the switch. The new speed will be maintained.

NOTE:

- You can adjust the set speed by approximately 1 km/h by pushing "RES +/SET " switch quickly.
- When the current vehicle speed is about 10 km/h or more faster than the previously set speed, the cruising speed cannot be decreased even if the "RES +/ SET –" switch (3) is pushed down.
- When the current vehicle speed is about 10 km/h or more slower than the previously set speed, the cruising speed cannot be increased even if the "RES +/ SET –" switch (3) is pushed up.

Canceling Cruise Control

"SET" indicator (5) will go off and the cruise control will be canceled temporarily with the following conditions:

- Push "CANCEL" switch (2)
- Depress the brake pedal
- For manual transmission, depress the clutch pedal
- For automatic transmission vehicle, the gear position is changed to "L"
- The vehicle speed falls more than about 20 percent from the set speed
- Any time the vehicle speed falls below 40 km/h
- When the vehicle skids and ESP[®] is activated
- · If the automatic brake system is working
- When the transfer lever is operated

To resume the previously set speed, push up the "RES +/SET -" switch (3) and turn on "SET" indicator (5). The vehicle speed must be above 40 km/h when the vehicle is not under the above conditions.

To turn off the cruise control system, push cruise switch (1) and check that the cruise indicator (4) is off.

Also, if the malfunction indicator light in the instrument cluster comes on or blinks, the cruise control system will be turned off.

NOTE:

If you turn off the cruise control system, the previously set speed in the memory is cleared. Reset your cruising speed again.

Parking Sensors

- The parking sensor system uses ultrasonic sensors to detect obstacles near the rear bumper. If obstacles are sensed while you are parking or moving the vehicle slowly, the system warns you by sounding a buzzer.
- The system emits an ultrasonic wave and the relevant sensor detects the return of the wave reflected by an obstacle. The system measures the time taken by the ultrasonic wave to reach the obstacle and return from it, from which it determines the obstacle's position.
- The parking sensor function can be used when you turn the ignition switch to "ON" position or the engine switch is pressed to change the ignition mode to "ON", the gearshift lever is in the reverse position (manual transmission models) or "R" position (automatic transmission models). This function is helpful in the following cases: pulling over to the curb; parallel-parking the vehicle; steering the vehicle into a garage; driving along an alley; and moving slowly in a place with obstacles

WARNING

- The parking sensor warns you of obstacles with buzzers. However, you must still pay full attention yourself while driving.
- The sensors can detect obstacles only within a limited area and only when the vehicle is moving within a limited speed range. So, in tricky areas, you must move the vehicle slowly while checking around it using your direct vision or rearview mirrors. There is increased risk of an accident if you control the vehicle relying only on the parking sensor.


NOTICE

Parking sensors are only for driver's assistance.

NOTE:

When the gearshift lever is shifted to the reverse position (manual transmission models) or "R" position (automatic transmission models), a buzzer will sound once.

Sensor Locations

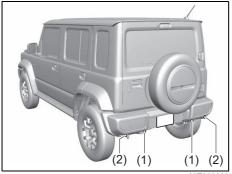

80T050680

- (1) Rear center sensors (2 places)
- (2) Rear corner sensors (2 places)

NOTICE

- Avoid hitting the sensor areas or directing the nozzle of a high-pressure car washer onto the sensor areas. Otherwise, the sensors may be damaged.
- If the bumper hits a hard object, the sensors on it may not work properly. If this occurs, have the sensors inspected by a Maruti Suzuki authorized workshop.

Working sensors

The sensors work depending on the gearshift lever position as follows:

Gearshift lever position		Manual transmission		Automatic transmission		Parking brake lever
		R	N, 1st – 5th	R	N, D or L	Diake level
Rear	Center	On	Off	On	Off	No relation
sensors	Corner	On	Off	On	Off	No relation

Upon detecting an obstacle, the parking sensor causes an interior buzzer to sound.


- A buzzer located behind the rear seat sounds when a sensor at the rear detects an obstacle.
- Warnings when obstacles are detected by rear sensors

Distance (approx.)		Buzzer
Center sensors	60–150 cm	Short beeps at long intervals
45–60 cm		Short beeps at short intervals
35–45 cm		Short beeps at very short intervals
Less than 35 cm		Continuous beep

NOTE:

- Buzzer will sound with a short delay after the detection of obstacles.
- If the system detects multiple obstacles simultaneously, however, the buzzers will sound only for the nearest obstacles.

Approximate areas where obstacles can be detected

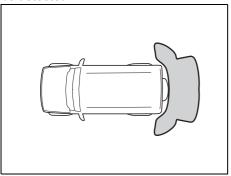

80T050690

- An obstacle within about 20 cm (8 in) from a sensor or just below a sensor is not detectable.
- The sensors can detect obstacles such as a wall up to about 1.5 m (5 ft) from the rear of vehicle.

WARNING

- Under the following conditions, the parking sensor system may not work normally because the sensors cannot detect obstacles correctly.
 - Sensors are covered with mud, ice or other materials (Such materials must be removed for normal operation).
 - Sensors are wet from water splashes or heavy rain.
 - Sensors are covered by a hand, sticker, accessory, etc.
 - There is an accessory or other object attached within the sensor's sensing area.
 - Items such as tow hooks, commercially available corner poles, radio antenna, etc. are installed on the bumper.
 - The height of the bumper is changed due to alteration to the suspension or other causes.
 - The sensor areas are extremely hot from direct sunlight or cold due to freezing weather.
 - The vehicle is on a rough surface, slope, gravel road or grass field.
 - The vehicle is at a steep angle.

(Continued)

WARNING

(Continued)

- Sensors have intercepted ultrasonic noise from another vehicle's horn, engine, air braking system (large vehicles), or parking sensor.
- Obstacles are too close to the sensors.
- Sensors are at an angle to a highly reflective object such as glass (Ultrasonic waves are not reflected back from the obstacle).
- Sensors may not be able to correctly detect the following types of obstacles:
 - Objects made of a thin material like wire netting and ropes.
- Square-shaped curbstones or other objects with sharp edges.
- Tall objects with a large upper part like a road sign.
- Low-profile objects such as curbstones.
- Sound-absorbing objects such as cotton and snow.

NOTE:

- Thin poles or obstacles lower than the sensors may become undetectable as the vehicle moves closer to them even if they have been detected from longer distances
- The system may calculate the distance to a road sign or similar obstacle to be shorter than the actual distance.

Parking Sensor System Malfunction

If there is a problem or warning regarding the parking sensor system, a buzzer inform it. Follow its instruction.

 The buzzer sounds intermittently. The indicated sensor is contaminated. Wipe it clean with a soft cloth. If the buzzer does not stop after wiping, there may be problem with the parking sensor system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Rearview Camera

When the gearshift lever is shifted to "R" position while the ignition switch is in "ON" position or the ignition mode is "ON", the rearview camera system automatically shows the view behind the vehicle on the display.

WARNING

The distance viewed in the rearview camera may differ from the actual distance according to the condition of road or the load the vehicle is carrying. Since the camera display area is also limited, backing up by only looking at the display may cause an accident or a crash with an object.

The rearview camera cannot replace the driver's attention. The driver alone is responsible for parking and similar driving maneuvers.


- Use the rearview camera only to provide driving assistance.
- Always drive carefully confirming the safety of the rear and the surrounding conditions by looking directly with your eyes and using the rear view mirror.
- Check that the trunk lid is securely closed when backing up.

NOTICE

If you use the rearview camera for a long time when the ignition switch is in "ON" position or the ignition mode is ON, but the engine is not running, the battery may discharge.

Do not leave the ignition switch in "ON" position or the ignition mode to ON for a long time when the engine is not running.

Rearview Camera Location

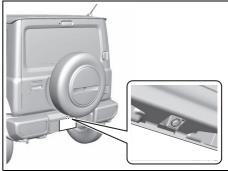

80T050700

(1) Rearview camera

The rearview camera is installed on the tailgate.

NOTICE

- The rearview camera is a precision instrument. If you strike the camera, it may be broken and cause damage resulting in a catch fire or a malfunction.
 - Do not strike the camera.
 - Do not remove snow or mud on the camera lens with a stick.
- If water enters the rearview camera, it may cause a malfunction or catch fire.
 - Do not use high pressure water around the camera.
- This lens is hard coated to prevent damage or discoloration. Damage or discoloration of lens may obscure the image.
 - Do not use a brush to clean lens.
 - Do not use alcohol, benzene or thinner to clean the lens.
 - Do not use wax on the camera lens.

NOTE:

If body wax gets on the camera lens, wipe off the wax with a clean cloth dampened with mild detergent diluted with water, and then wipe the lens with a dry cloth.

How to use Rearview Camera

- Turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to "ON".
- 2) Shift the gearshift lever in "R" position.
 - The display automatically shows the view behind the vehicle.
 - When the gearshift lever is shifted from "R" to another gearshift lever position, the display returns to the previous display.


NOTE:

The rearview camera display has first priority in any display mode. However, the rearview camera display does not show the rear view while the system is initializing.


Display Range of Rearview Camera

The rearview camera display shows the area behind the rear end of the bumper. The display cannot show objects which are close to the bumper or under the bumper. The rearview camera display cannot show obstacles which are higher than the camera. Upper parts of tall objects such as road signs cannot be viewed on the display.

Display range of rearview camera

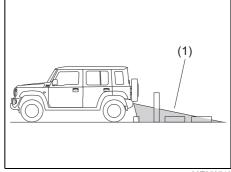

80T050710

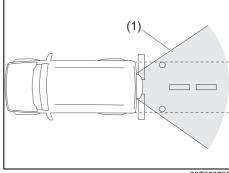

80T050720


(1) Display range

NOTE:

- Images shown on the display from the rearview camera are reversed images (mirror images).
- The colors of objects on the rearview camera may differ from the actual object colors.
- The rearview camera display may be difficult to see under the following conditions, but this is not a system malfunction.
 - In dark areas, on a rainy day or at night.
 - When the temperature around the lens is too high/low, or the camera is wet such as on a rainy day or during periods of high humidity (dew condensation may occur on the camera lens).
 - When a foreign object such as mud or a drop of water is stuck around the camera lens.
 - When strong light directly enters the camera (vertical lines may be seen on the display).
 - Under fluorescent light (The display may flicker).
 - When the outside temperature is low (the image on the display may be darkened).

How to Understand the Displayed Items on the Screen

The rearview camera display and following guide lines will be displayed on the screen.

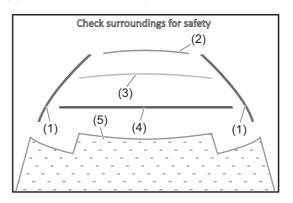

80T051090

- As each guide line is displayed towards road surface, the distance from your vehicle to an obstacle such as the parked vehicle near
 your vehicle is not accurately displayed.
- Trapezoidal guide lines for the distance and the vehicle width which are displayed on the screen are rough indications and they depend on the actual distance and vehicle width.
- If you modify suspensions or replace a tyre by undesignated tyre, the guide lines will not be accurately displayed.


No.	Item name	Displayed color	Contents
(1)	Guide line for the vehicle width (vertical line)	Purple	This shows the guide line of the position which is slightly outside of the vehicle width (including the width of outside rearview mirrors).

No.	Item name	Displayed color	Contents
(2)		Light blue	This shows the guide line of the position which is about 2 m (6.6 ft) backward from the center of bumper back-end.
(3)	Guide line for the distance	Yellow	This shows the guide line of the position which is about 1 m (3.3 ft) backward from the center of bumper back-end.
(4)		Red	This shows the guide line of the position which is about 0.5 m (1.6 ft) backward from the center of bumper back-end
(5)	Guide line for the vehicle body	Orange	This shows the guide line of the position of the vehicle body shape (including the spare wheel).

Rearview Camera Screen Indication

The distance viewed in the rearview camera may differ from the actual distance according to the condition of the road or the load the vehicle is carrying.

Uphill incline behind the vehicle

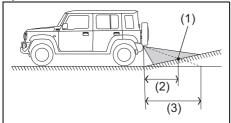


80T050730

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is an uphill incline behind the vehicle, the object shown on the display appears farther away than the actual distance.

Downhill incline behind the vehicle

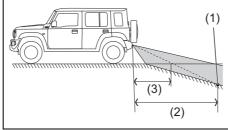

80T050740

- (1) Object
- (2) Actual distance
- (3) Distance on the display

When there is a downhill incline behind the vehicle, the object shown on the display appears closer than the actual distance.

If the rear view from the rearview camera is not shown or there is a poor image

- If the rear view from the rearview camera is not shown.
 - Check that the ignition switch is in "ON" position or the ignition mode is "ON".
 - Check that the gearshift lever is shifted to "R" position.

- If the image from the rearview camera is poor.
 - Check that the camera lens is not dirty.
 - Check that light from the sun or the beam of the headlights from the vehicle behind is not shining directly into the lens.

If the rearview camera system is still not working properly after checking the above, have the system inspected by a Maruti Suzuki authorized workshop as soon as possible.

Electronic Stability Program (ESP®)

ESP[®] is a registered trademark of Mercedes-Benz Group AG.

The Electronic Stability Program (ESP®) helps to control the vehicle during cornering if front wheels or rear wheels skid. It also assists you in maintaining traction while accelerating on loose or slippery road surfaces. It does this by regulating the engine's output, and by selectively applying the brakes. In addition, ESP® helps to avoid skidding by controlling braking pressure.

WARNING

The ESP® cannot enhance the vehicle's driving stability in all situations and does not control your vehicle's entire braking system. The ESP® cannot prevent accidents, including those resulting from excessive speed in turns, or hydroplaning. Only safe and attentive drive can prevent accidents.

The capabilities of an ESP[®]-equipped vehicle must never be used as a substitute for careful driving.

A CAUTION

- Observe the following points. Otherwise, ESP[®] may not operate properly or it may result in a malfunction.
 - Adjust the tyre pressure as specified.
 - When replacing tyres, use the same tyres with the size, type, and tread patterns.
 - Do not use the tyres which have excessively worn conditions.
 - Do not modify the suspension or the brake and do not change vehicle height or suspension hardness.
 - Do not drive the vehicle with suspension or brake excessively deteriorated.
 - Do not modify the engine or the muffler.
 - Do not install LSD (limited slip differential).
- When you install the snow chains, ESP[®] may not operate properly.

The ESP[®] has the following systems:

Anti-lock Brake System (ABS)

Refer to "Anti-lock Brake System (ABS)" in this section.

Brake Assist System

Refer to "Brake Assist System" in this section.

Traction Control System

The traction control system automatically helps prevent the spinning of wheels when the vehicle is started or accelerated on slippery road surfaces. The system operates only if it senses that some of the wheels are spinning or beginning to lose traction. When this happens, the system operates the front or rear brakes and reduces engine power to limit wheel spin.

NOTE:

You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.


Stability Control System

The vehicle stability control system helps provide integrated control of systems such as anti-lock brakes, traction control, engine control, etc. This system automatically controls the brakes and engine to help prevent the vehicle from skidding when cornering on a slippery road surface or when turning the steering wheel abruptly.

NOTE:

- If you perform the following operations, you may hear an operation sound or a clicking sound. This means that the ESP[®] system is in the self-check mode and this does not indicate a malfunction.
 - When ignition switch is turned to the "ON" position or pressing the engine switch to change the ignition mode to "ON"
 - When releasing your foot from the brake pedal, after the ignition switch is in "ON" position or the ignition mode is "ON" with the brake pedal depressed
 - When starting the engine
 - When starting the vehicle after starting the engine
- When engine revolutions is high and ESP[®] operates, you may feel the change of engine revolutions or vibration of vehicle body. However, this is normal.

ESP® Warning Light

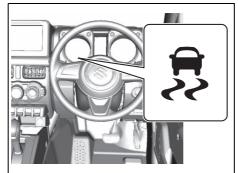

77R40170

- If there is a problem in the ESP[®] system with the ignition switch in "ON" position or the engine switch in ON mode, this light will come on. While this light comes on, the following situations will occur. In this case, ask your Maruti Suzuki authorized workshop for inspection.
 - The following functions will not work:
 - Traction control system
 - Stability control system
 - Hill descent control system
 - SUZUKI SAFTY SUPPORT
 - ENG A-STOP system
 - Hill hold control system may not work.
 - ABS will work.

- Depending on the malfunction condition, brake assist system may not work.
- If any of the following situations occurs, this light will blink at very short intervals of 0.2 seconds.
 - Traction control system is activated when starting or accelerating the vehicle
 - Stability control system is activated when making a sharp turn or whirling round
 - Hill descent control system is activated when going down steep hills
- If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to change the ignition mode to ON, this light will come on for about 2 seconds and then come off.


A CAUTION

If this light blinks at very short intervals, there is high possibility that the vehicle will be stuck or skid on a slippery road surface. In this case, drive the vehicle very carefully.

NOTE:

While this light comes on, traction control system and stability control system will not be activated. However, you can use ABS.

ESP® OFF Switch

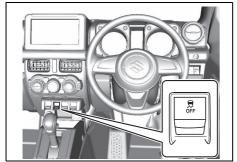

77R40180

(1) ESP® OFF switch

When the ESP® OFF switch located at the instrument panel is pushed and held to turn off the ESP® systems (other than ABS), the ESP® OFF indicator light in the instrument cluster comes on.

When you have turned the ESP[®] systems (other than ABS) off, turn them back on before resuming ordinary driving.

When you push the ÉSP® ÕFF switch again, the ESP® OFF indicator light will go out and all of the ESP® systems will be activated.

NOTE:

When you push and hold the ESP[®] OFF switch for a while with the transfer lever in "4L" position, the hill hold control system can be deactivate.



75RM223

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

 The ESP[®] system will not activate while this message is displayed.

ESP[®] OFF Indicator Light



77R40190

You should turn the ESP[®] on during your ordinary driving, so that you have the benefits of all of the ESP[®] systems.

It may be required to turn the ESP[®] systems (other than ABS) off if your vehicle is stuck in sand, mud, or snow, where wheel spin is necessary.

- If you press and hold the ESP[®] OFF switch with the ignition switch is in "ON" position or the ignition mode is "ON", this light will come on.
 - While this light comes on, traction control system and stability control system will not work.
- If the system is in normal condition, when you turn the ignition switch to "ON" position or press the engine switch to

change the ignition mode to ON, this light will come on for about 2 seconds and then come off.

NOTE:

- When the vehicle speed is greater than approximately 30 km/h, the ESP[®] systems (other than ABS) will turn on automatically and the ESP[®] OFF indicator light will go out.
- When the transfer gear is in "4L" (4-wheel drive low range) position, the ESP[®] systems (other than ABS) will be canceled to provide improved vehicle traction, and the ESP[®] OFF indicator light will come on.

When the transfer gear is in "4L" (4-wheel drive low range) position, brake traction control can be activated. Brake traction control brakes the spinning wheel to distribute drive power to the other wheels for increased climbing ability or for better performance on a rolling hill or a slippery surface.


Hill Descent Control System

The hill descent control system is designed to reduce the driver's workload when going down steep, rough and/or slippery hills where the vehicle cannot decelerate enough by engine braking alone. The hill descent control system helps to control vehicle speed by automatically engaging the vehicle's brakes, as needed, so you can concentrate on steering the vehicle.

WARNING

Do not rely excessively on the hill descent control system. The hill descent control system may not control the vehicle speed on a hill under all load or road conditions. Always be prepared to control vehicle speed by applying the brakes. Failure to pay attention and control vehicle speed using the brakes when necessary may result in loss of control or an accident.

Hill descent control switch

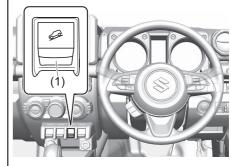

80T050800

(1) Hill descent control switch

To activate the hill descent control system:

- 1) Shift the transfer lever into 4-wheel drive high range position ("4H") or 4-wheel drive low range position ("4L").
- 2) Shift the gearshift lever into a forward gear or reverse gear.
- 3) Push the hill descent control switch (1) when the vehicle speed is under 25 km/h. The hill descent control indicator on the instrument cluster will come on and the hill descent control system will be activated.

4-wheel drive high range position

When the vehicle speed exceeds about 10 km/h without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 10 km/h.

4-wheel drive low range position

When the vehicle speed exceeds about 5 km/h without depressing the accelerator pedal, the hill descent control system applies the brakes automatically to maintain the vehicle speed at about 5 km/h.

- When braking, the brake/tail lights come on and the ESP[®] warning light blinks.
- When the vehicle speed exceeds about 35 km/h, the hill descent control system stops functioning and the hill descent control indicator goes blink. When the vehicle slows down below about 25 km/ h, the hill descent control system will be activated again and the hill descent control indicator will come on.

WARNING


- When the hill descent control system is used continuously for a long time, the temperature of the brake system may increase and the hill descent control system may be deactivated temporarily to protect the device of the brake system. The hill descent control indicator blinks to let you know the system is deactivated. Depress the brake pedal and stop the vehicle in a safe place. When the temperature of the brake system goes down, the hill descent control indicator will come on and the system is activated again.
- The hill descent control system may be activated when the gearshift lever is in "N" (Neutral) position, but engine braking will not work. Always use the hill descent control system with the gearshift lever in a forward gear or reverse gear.
- When using the hill descent control system, push the hill descent control switch and make sure that the hill descent control indicator light comes on and no warning message are indicated on the information display.

NOTE:

You may hear a sound coming from the engine when the hill descent control system is activated. This sound is normal and does not indicate a malfunction.

To turn off the hill descent control system, push the hill descent control switch and turn off the hill descent control indicator light.

Hill descent control indicator light

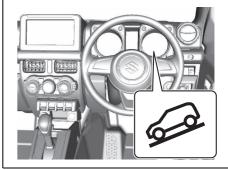

80T05082

When the ignition switch is in "ON" position or the ignition mode is ON, this light comes on briefly so you can check that the light is working.

When you push the hill descent control switch and the hill descent control operating conditions are fulfilled, the hill descent control indicator comes on. If the hill descent control indicator blinks, the hill descent control will not be activated.

If hill descent control indicator light comes on while not operating the hill descent control switch, or the indicator light does not come on after the switch is pushed, there is a problem in this system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

If the hill descent control indicator blinks when you push the hill descent control switch, check the following conditions.

- The transfer lever is in 4-wheel drive high range position ("4H") or 4-wheel drive low range position ("4L")
- The gearshift lever is in a forward gear or reverse gear
- The vehicle speed is under 25 km/h
- The brake system is under normal operating temperature

NOTE:

If any of the following conditions occur, there may be a problem with the hill descent control system or the ESP® system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

- The hill descent control indicator does not come on or blink when you push the hill descent control switch.
- The hill descent control indicator stays on when driving without pushing the hill descent control switch.



75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

You cannot activate the hill descent control system while this message is displayed.

Hill Hold Control System

The hill hold control system is designed to assist you in starting to move up hills. When you start to move up a hill, the system helps prevent the vehicle from rolling downward (for approximately 2 seconds) while you move your foot from the brake pedal to the accelerator pedal.

▲ WARNING

- Do not rely excessively on the hill hold control system. The hill hold control system may not prevent the vehicle from rolling downward on a hill under all load or road conditions. Always be prepared to depress the brake pedal to prevent the vehicle from rolling downward. Failure to pay attention and depress the brake pedal to hold the vehicle on a hill when necessary, may result in loss of control or an accident.
- The hill hold control system is not designed to stop the vehicle on a hill.

(Continued)

WARNING

(Continued)

- After you release your foot from the brake pedal, accelerate the vehicle to move up immediately. If you release your foot from the brake pedal over 2 seconds, the hill hold control system will be canceled. If so, the vehicle may roll downward, which can result in an accident depending on the degree of slope. And, the engine may stall and the power assist for the steering and brakes will not work so steering and braking will be much harder than usual which can result in an accident or vehicle damage.
- If you drive on the steep slope, the gravel, the snow-covered road, or the muddy road and the hill hold control system is activated, there may be a possibility that the wheels will be locked and then the vehicle may lose the control.

The hill hold control system activates for a maximum of about 2 seconds if your foot is moved from the brake pedal when the following conditions are all met.

- 1) The gearshift lever is in a forward gear or reverse gear.
- 2) The parking brake is released.
- 3) The vehicle is on an upward incline.

NOTE:

When the hill hold control system is activated, the following conditions may be found, but this is not a malfunction.

- You may hear a sound from the engine room.
- As brake pedal becomes heavy, it may be difficult for you to depress it.



75RM224

If the message shown in the above illustration appears on the information display, master warning indicator light blinks and the interior buzzer beeps, there may be a problem with the hill descent control system and the hill hold control system. Have your vehicle inspected by a Maruti Suzuki authorized workshop.


NOTE:

The hill hold control system will not activate while this message is displayed.

How to turn off Hill hold control system When driving on a steep slope, or a slippery road (icy, snow-covered, muddy, etc), it is possible to deactivate the hill hold control system.


To deactivate the hill hold control system:

 Make sure that the gear shift lever is in "N" (Neutral) position for manual transmission vehicles and automatic transmission vehicles.

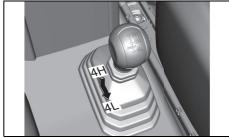

78RB03027

 Shift the transfer lever from 4-wheel high range position ("4H") to 4-wheel low range position ("4L").

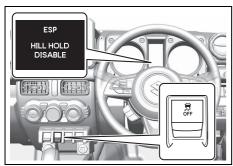


80T050940

3) When the ESP® OFF switch is pushed and held to turn off the ESP® system (other than ABS), the message is shown on the display for the vehicles with instrument cluster and the hill hold control system is deactivated.

NOTE:

- When the ESP[®] OFF switch is pushed again, the hill hold control system is activated again.
- When the hill hold control system is deactivated and the transfer lever is shifted from "4L" position to "4H" position, the hill hold control system is activated again.
- When the hill hold control system is deactivated, hill descent control system is also deactivated.

Braking

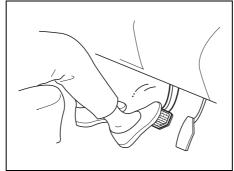

59RN05770

The distance needed to bring any vehicle to a halt increases with the speed of the vehicle. The braking distance needed, for example, at 60 km/h will be approximately 4 times greater than the braking distance needed at 30 km/h. Start to depress the brake pedal when there is plenty of distance between your vehicle and the stopping point, and slow down gradually.

WARNING

If water gets into the brake devices, brake performance may become poor and unpredictable. After driving through water or washing the underside of the vehicle, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

Power-assisted Brakes

Your vehicle has power-assisted brakes. If power assistance is lost due to a stalled engine or other failures, the system is still fully operational on reserve power and you can bring the vehicle to a complete stop by pressing the brake pedal once and holding it down. The reserve power is partly used up when you depress the brake pedal and reduces each time the pedal is pressed. Apply smooth and even pressure to the pedal. Do not pump the pedal.

WARNING

Even without reserve power in the brake system, you can still stop the vehicle by pressing the brake pedal harder than normally required. However, the stopping distance may be longer.

Brake Assist System

When you slam the brakes on, the brake assist system determines it to be an emergency stop and provides more powerful braking for a driver who cannot hold down the brake pedal firmly.

NOTE:

If you quickly and forcefully depress the brakes, you may hear clicking sound by the brake assist system operation. This is normal and indicates that the brake assist system is activated properly.

Anti-lock Brake System (ABS)

ABS will help you avoid skidding by electronically controlling braking pressure. It will also help you maintain steering control when braking on slippery surfaces or when braking hard.

The ABS works automatically, so you do not need any special braking technique. Just push the brake pedal down without pumping. The ABS will operate whenever it senses that the wheels are locking up. You may feel the brake pedal move a little while the ABS is operating.

WARNING

- Always check the surrounding conditions and drive the vehicle in a safe manner, as controlling the vehicle by ABS has limits and the system may not function properly depending on the surrounding conditions.
- If tyre grip performance is over the limit or hydroplaning occurs, ABS cannot work properly.

NOTE:

 If the ABS system is activated, you may hear a clunking noise and/or feel pulsating in the brake pedal. This is normal and indicates that the brake fluid pressure is being controlled properly. You may hear an operation sound when you start the engine or after the vehicle begins to move. This means that the above systems are in the self-check mode. This sound does not indicate a malfunction.

Braking Distance

ABS is not designed to shorten the stopping distance.

WARNING

- In the following situations, the braking distance required for a vehicle with ABS may be slightly greater than the one required for a vehicle without ABS, resulting in an accident. Drive the vehicle slowly and maintain ample distance between your vehicle and the vehicle in front of you.
 - When driving on rough roads such as unpaved or stone-paved roads
 - When driving on gravel roads or fresh snow roads
 - When driving over bumps on the roads such as joint seams
 - When passing over metal plates such as manholes
 - When snow chains are installed

NOTE:

- When applying sudden brake or applying brake on slippery roads, the braking distance required for a vehicle with ABS is almost the same as the one required for a vehicle without ABS.
- If you would like to suddenly apply brake, just push the brake pedal down firmly without pumping. Otherwise, the longer braking distance will be required.
- The ABS will not work if vehicle speed is under about 9 km/h. This depends on the road conditions.

Vibration and Sound during ABS Operation

When strongly depressing the brake pedal, you might feel vibration of the brake pedal, the steering wheel, and the vehicle body. This is due to ABS operation, and does not indicate a malfunction; continue strongly depressing the brake pedal at this time.

NOTE:

Immediately after starting the engine and beginning to drive, you might temporarily hear a motor sound. This means that the systems are in self-check mode. This sound does not indicate a malfunction.

Tyres


WARNING

ABS detects each wheel rotation speed via a sensor. If tyres or wheels other than those specified in the owner's manual are used for size, type, tread pattern, or if worn conditions of tyres are different, the correct wheel rotation speed cannot be detected and ABS will not work properly. This may result in an accident. When replacing tyres, use the tyres with the size, type, and tread patterns which are specified in this owner's manual.

Also, do not use the tyres which are excessively worn.


Situations where ABS may Activate by Chance when Applying Brake

· When driving on slippery roads

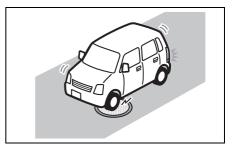


69RHS150


- Manholes

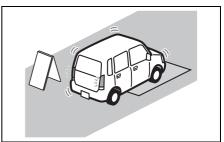

69RHS151

Metal plates in construction zones

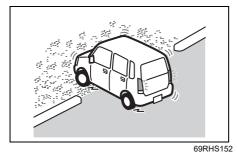

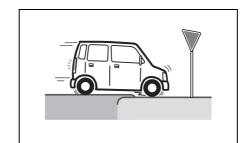


69RHS154

- Cobblestone

69RHS156

- Gravel roads
- When driving over joints in roads and other height differences

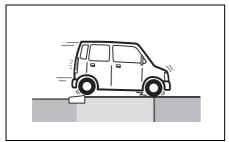

69RHS153

- Joints in roads


- Height differences in roads
- · When driving on rough roads



69RHS155

- Bumpy roads

ABS Warning Light

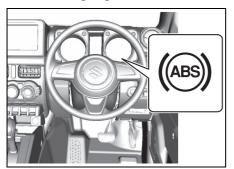

77R40200

If there is a problem in the ABS system with the ignition switch in "ON" position or the engine switch in ON mode, this light will come on.



54MN069

- (1) ABS warning light
- (2) Brake system warning light


NOTE:

- If the ABS warning light (1) on the instrument cluster comes on and stays on while driving, there may be a problem with the ABS system. Ask your Maruti Suzuki authorized workshop to inspect the ABS system immediately. If the ABS system becomes inoperative, the brake system will function as an ordinary brake system that has no ABS.
- If the ABS warning light (1) and the brake system warning light (2) on the instrument cluster simultaneously stay on or come on while driving, both antilock function and rear brake force control function (proportioning valve function) of the ABS system may have failed. If so, the rear wheels may easily skid or the vehicle can even spin in the worst case when braking on a slippery road or when hard braking even on a dry paved road. Ask your Maruti Suzuki authorized workshop to inspect the ABS system immediately. Drive carefully, avoiding hard braking as much as possible.

Braking Assist

This function assists you in applying more force when operating the brake. When sudden braking is applied, the time until the ABS comes into full effect is shortened.

- If you do not depress the brake pedal firmly, braking assist will not operate.
- Brake assist is not a device that provides control beyond the original braking performance.

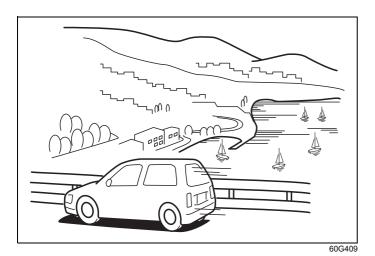

ADVICE FOR YOUR DRIVING

When Driving	6-1
Important Vehicle Design Features to Know	6-1
On-Paved Road Driving	6-2
Off-road Driving	6-10
Improving Fuel Economy	6-12
Precaution for Handling Vehicle	6-1
Running-in	6-1
Catalytic Converter	6-1

When Driving



59RN02300

WARNING

- Wear your seat belts at all times. Even though airbags are equipped at the front seating positions, the driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to "Seat belts and child restraint systems" in "FOR SAFE DRIVING" section for instructions on proper use of the seat belts.
- Never drive under the influence of alcohol or other drugs. Alcohol and drugs can seriously impair your ability to drive safely, greatly increasing the risk of injury to yourself and others. You should also avoid driving when you are tired, sick, irritated or under stress.

Important Vehicle Design Features to Know

WARNING

Your multipurpose vehicle has handling characteristics that differ from those of a conventional passenger car. For the safety of you and your passengers, please read the following section very carefully.

Multipurpose vehicles such as your new Maruti Suzuki have higher ground clearance and a narrower track than conventional passenger cars, to make them capable of performing in a wide variety of off-road applications. Specific design characteristics give them a higher center of gravity than ordinary cars. An advantage of the higher ground clearance is a better view of the road allowing you to anticipate problems. They are not designed for cornering at the same speed as conventional passenger cars any more than low-slung sports cars are designed to perform satisfactorily under off-road conditions. If at all possible, avoid sharp turns or abrupt maneuvers. As with other vehicles of this type, failure to operate this vehicle correctly may result in loss of control or vehicle rollover. Multipurpose vehicles have a significantly higher rollover rate than other types of vehicles. In a rollover collision, an unbelted person is significantly more likely to die than a person wearing a seat belt.

Important Differences Between Your Multipurpose Vehicle and Ordinary Passenger Cars

Higher Ground Clearance

The higher ground clearance of your vehicle enables it to clear off-road obstacles, such as rocks and tree stumps, that ordinary passenger cars cannot drive over. An unavoidable result of this higher ground clearance is that the vehicle also has a higher center of gravity. Consequently, your vehicle will handle differently than a vehicle with a lower center of gravity.

Narrower Body Width and Track

Your vehicle is narrower than the average passenger car so that it can pass through tight spaces. Without the essential characteristics described above: higher ground clearance, and narrower body width and track -your vehicle could not provide you with excellent off-road driving performance. However, it is also true that onroad driving, handling, and steering will be different from what drivers experience with a conventional passenger car.

On-Paved Road Driving

The data of accidents show that most rollover accidents for multi-purpose vehicles are caused when a driver loses control of the vehicle and leaves the paved portion of the roadway striking a ditch, curb or other off-road object that causes the vehicle to overturn. The following driving practices may reduce the risk of rollover.

Vehicle Slides Off-Road

You can reduce the risk of this kind of rollover accident by always keeping the vehicle under control. Typically, drivers lose control of vehicles, often resulting in rollover accidents, when the driver is impaired because of alcohol or other drugs, falls asleep at the wheel or is otherwise inattentive, or is driving too fast for the road conditions.

Rollovers On the Roadway

If, for any reason, your vehicle slides sideways or spins out of control at highway speeds, while on the paved portion of the roadway, the risk of rollover is greatly increased. This condition can be created when two or more wheels drop off onto the shoulder and you steer sharply in an attempt to reenter the roadway. To reduce the risk of rollover in these circumstances, if conditions permit, you should hold the steering wheel firmly and slow down before pulling back into the travel lanes with controlled steering movements.

All Types of Rollover Accidents

As with many kinds of automobile accidents, rollovers can be greatly reduced by doing what all prudent drivers should do, i.e., don't drink and drive, don't drive when tired and don't do anything behind the wheel that could cause a loss of attention to the driving task.

Additional guidelines are set out as follows for your on-road driving.

Know Your Vehicle

Take time to familiarize yourself with the unique handling characteristics of your vehicle by first driving around in an area away from traffic. Practice turning the vehicle at a variety of speeds and in different directions. Get a feel for the greater steering response that your vehicle has over a conventional car.

Wear Your Seat Belts at All Times

The driver and all passengers should be properly restrained at all times, using the seat belts provided. Refer to the "SEAT BELTS" in "FOR SAFE DRIVING" section for instructions on proper use of the seat belts.

Don't Make Sharp Turns

As mentioned before, small multipurpose vehicles have specific design characteristics that allow them to perform in a wide variety of applications. These characteristics also change the cornering behavior relative to conventional passenger cars. Remember, small multipurpose vehicles have more responsive steering and a higher center of gravity than conventional passenger cars. If at all possible, avoid making sharp turns in your vehicle.

Slow Down on Curves

Learn to approach curves cautiously and at a conservative speed. Do not attempt to take curves at the same speeds that you would in a vehicle with a lower center of gravity. Just as you would not drive a sports car on a trail, you should not attempt to drive your vehicle around curves like a sports car.

ADVICE FOR YOUR DRIVING

Start Driving after Carefully Checking the Surrounding Circumstances

Be sure to always fully check the safety of the surrounding circumstances before beginning to drive.



69RHS17

A CAUTION

You cannot check the safety of the surrounding circumstances enough only by the 360 view camera, the rear parking sensors and the inside mirror. When moving the vehicle forward or backward, check the safety of the surrounding circumstances by directly checking with your eyes.

Do not Race the Engine, and Do not Avoid Fast Starts and Rapid Acceleration Just after Engine Start

Refer to "Avoid Fast Starts, Rapid Acceleration and Hard Braking" and "Do not Race the Engine" in the "Improving Fuel Economy" section.

Do not Concentrate on a Mobile Phone or Navigation System



55T06004

WARNING

- Do not operate a mobile phone, etc. while driving. Being distracted by phone operation could lead to an accident.
- Do not operate navigation/audio equipment, etc. while driving. Otherwise, there is the danger of an accident due to being distracted.

Do not Reach Through the Steering Wheel



WARNING

Reaching through the steering wheel could interfere with steering wheel operation and result in an accident.

Do not Drive with Your Foot on the **Brake Pedal**

A CAUTION

Driving with your foot resting on the brake pedal could cause brake parts to become worn out more quickly than normal or cause brake components to overheat, making them less effective.

When Depressing the Accelerator Pedal and the Brake Pedal Simultaneously

NOTE:

If you depress both the accelerator pedal and the brake pedal simultaneously while driving, the engine power output may be suppressed.

Do not Shift the Gearshift Lever into "N" (Neutral) while Driving



69RHS180

A CAUTION

Do not put the gearshift lever into the "N" (Neutral) position while driving, except in times of emergency, as this disengages engine braking, which could result in an accident.

ADVICE FOR YOUR DRIVING

What Should You Do in Case of Malfunction or Emergency?

· Warning light turns on

Stop immediately in a safe place and take corrective action.

For details, refer to "Warning Lights and Indicators" in the "QUICK GUIDE" section or "Warning and indicator messages" in the "INSTRUMENT CLUSTER".

You feel strong shock from under the floor

Immediately stop in a safe place and check whether there is brake fluid leakage or fuel leakage, and also check whether there is any abnormality in the exhaust pipe, etc. If any abnormality is found, consult with a Maruti Suzuki authorized workshop.

Sudden tyre puncture

Grasp the steering wheel firmly, carefully apply the brake, slowly reduce speed, and stop in a safe place.

You feel that the brake pedal is heavy to use

Via engine vacuum pressure, the vehicle utilizes a brake booster to reduce the force necessary for depressing the brake pedal. If this engine vacuum pressure decreases, you may feel as if the brakes require more force than usual to depress, but this is not abnormal. Depress the brake pedal as strongly as you need to.

Metallic screeching sound is heard from the brakes

Promptly consult with a Maruti Suzuki authorized workshop. The disk brake pads (Maruti Suzuki genuine parts) are designed to emit a creaking/screeching sound as a function to warn the wear, as they have almost reached usage limit and replacement timing.

▲ WARNING


The brakes could be losing their ability to function normally, which could result in an accident.

If you hear a metallic creaking/ screeching sound, do not continue driving.

Use Engine Brake on a Long Downhill Slope

Use engine braking(*) in tandem with regular braking when driving on a long downhill slope. Release the accelerator pedal and shift down according to vehicle speed.


Manual transmission vehicles

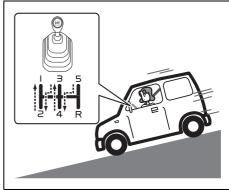

80T060010

For manual transmission vehicle, shift down to a lower gear one by one.

Automatic transmission vehicles

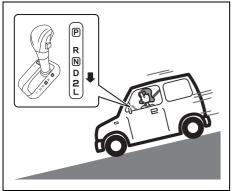

80T060020

For automatic transmission vehicle, turn off the overdrive (O/D) switch or shift the gearshift lever into "2" or "L".

*: Engine braking is a braking effect that occurs when you release your foot from the accelerator pedal while driving. The lower the gear, the greater the effect of engine braking becomes.

WARNING

Continuously depressing the brake pedal could cause the brakes to overheat, possibly rendering them ineffective.

When Side Wind Is Strong



At a tunnel exit, on a bridge, or when a large truck passes you, your vehicle might be blown slightly sideways by side wind. Do not panic. Firmly grasp the steering wheel, gradually reduce speed, and regain your intended course.

Drive Slowly on a Slippery Road Surface



59RN06030

Under wet road conditions you should drive at a lower speed than on dry roads due to possible slippage of tyres during braking. When driving on icy, snow-covered, or muddy roads, reduce your speed and avoid sudden acceleration, abrupt braking, or sharp steering movements. Use 4-wheel drive high range (4H) for better traction.

NOTICE

Never operate your vehicle in "4H" or "4L" on dry pavement and, as much as possible, avoid using "4H" or "4L" on wet pavement, as this puts severe stress on the drive train, especially during tight cornering, and can damage it. Also, you may have some difficulty in steering.

Do not Drive on Puddles at High Speed



69RHS182

A CAUTION

When driving on puddles or on wet road surfaces at high speed, a thin surface of water is built between the wheels and the road surface, and the wheels may float. This is called as hydroplaning, which leads to a loss of control in the steering wheel and the brakes and possibly results in an accident.

Check Brake Effectiveness after Driving on Puddles or Washing a Vehicle



72,120360

- After verifying the safety of the surroundings, depress the brake pedal several times at low speed and check the brake effectiveness.
- If the brake effectiveness is still poor, depress the brake pedal at low speed gently and repeatedly until the brake effectiveness is fully recovered, to dry the brake equipment.

Do not Drive Through Deep or Rushing water



61M0075

Driving in deep or rushing water can be hazardous. You could lose control of the vehicle and the occupants could drown. Also, your vehicle could be seriously damaged. To avoid these risks, observe the following instructions and precautions.

 Do not drive through deep or rushing water. Deep or rushing water, such as fast-moving streams or floodwaters, could carry your vehicle away from your intended path. The water is too deep if it covers your wheel hubs, axles, or exhaust tailpipe. Know the depth of the water before you attempt to drive through it. If the vehicle goes across the river unavoidably, follow the instructions below before going across the river.

- 1) Confirm the depth of the river and the terrain.
- Select the place which is less than 30cm in depth of water. Go across the river to a right angle for the river or lower part of the river
- Drive slowly at less than 5 km/h not to raise the wave and go across the river immediately to avoid operating the gearshift lever.

If the vehicle goes across the river that is more than 30 cm in depth of water unavoidably, stop the vehicle in a safe place while checking the brake effectiveness. Then, ask your Maruti Suzuki authorized workshop to check the following inspection items.

- Function of brake
- Function of electrical components
- Changes of oil level and quality for engine, transmission and differential. In case that the oil is turbid whitely, water has been mixed in the oil and an oil change is required.
- Lubricant condition of the bearings, suspension joints, etc.
- If water blocks the tailpipe, the engine may not start or run. If the water is deep enough to get drawn into the engine intake system, the engine will be badly damaged.

- Submerged brakes will have poor braking performance. Drive slowly and carefully. Driving slowly will also help avoid water splashing onto the ignition system, which could cause the engine to stall.
- Even when driving through shallow or still waters, drive carefully since the water may be hiding ground hazards such as holes, ditches, or bumps.

WARNING

In addition to following the driving tips in this section, it is important to observe the following precautions for on-road and off-road driving.

- Driver and passengers should wear seat belts at all times.
- Do not let anyone else drive your vehicle unless they are also aware of the vehicle characteristics and handling differences described in this section.
- Avoid loaning your vehicle to anyone unless you accompany them.
- Make sure your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in the "INSPECTION AND MAINTENANCE" section for details.

(Continued)

WARNING

(Continued)

- Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the "SPECIFICA-TIONS" section.
- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will raise the center of gravity of the vehicle and change its handling characteristics.
- After driving through water, mud, or sandy ground, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness. If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.
- After extended operation in mud, sand, or water, have the brakes, bearings and joint parts etc. Ask your Maruti Suzuki authorized workshop for inspection as soon as possible.


Highway Driving

When driving at highway speeds, pay attention to the following:

- Stopping distance progressively increases with vehicle speed. Apply the brakes far enough ahead of the stopping point to allow for the extra stopping distance.
- On rainy days, hydroplaning can occur. Hydroplaning is the loss of direct contact between the road surface and the vehicle's tyres due to a water film forming between them. Steering or braking the vehicle during hydroplaning can be very difficult, and loss of control can occur. Keep speed down when the road surface is wet.
- At high speeds, the vehicle may be affected by side winds. Therefore, reduce speed and be prepared for unexpected buffeting, which can occur at the exits of tunnels, when passing by a cut of a hill, or when being overtaken by large vehicles, etc.


Driving on Hills

Manual transmission vehicles

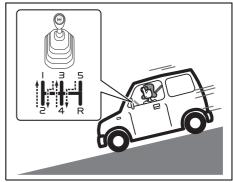

80T060010

Automatic transmission vehicles

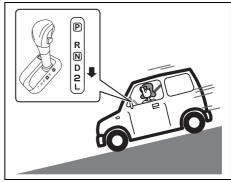

80T060020

- When driving on steep hills, the vehicle may begin to slow down and show a lack of power. If this happens, you should shift to a lower gear so that the engine will again be operating in its higher power range. Shift rapidly to prevent the vehicle from losing momentum.
- When driving down a hill, the engine should be used for braking by shifting to the next lower gear.

WARNING

Do not hold the brake pedal down too long or too often while going down a steep or long hill. This could cause the brakes to overheat, resulting in reduced braking efficiency. Failure to take this precaution could result in loss of vehicle control.

NOTICE

When descending a downhill, Never turn the ignition key to "LOCK" position or press the engine switch to change the ignition mode to LOCK (OFF). Emission control system and automatic transmission damage may result.

Off-road Driving

Your vehicle has specific design characteristics for off-road driving. When you leave the paved road, you will encounter driving surfaces of all kinds which may change continually as you drive. In most cases, off-road driving requires the use of 4-wheel drive.

Use Caution on Steep Inclines

Always inspect hills before you attempt to drive up them. Know what is on the other side and how you will get back down. If you have any doubt that it is safe, do not attempt to drive over a hill. Never drive your vehicle up an extremely steep incline. Coming down a steep hill can be trickier than getting up one. Keep the vehicle heading straight down the hill and use low gear. Do not lock the brakes. If the vehicle begins to slide, accelerate slightly to regain steering control.

Do not Drive Across the Side of Hills

Driving across the side of a hill can be extremely hazardous. Most of the vehicle's weight will be transferred to the downhill tyres, which could result in the vehicle rolling sideways. Whenever possible, avoid this potential hazard. Also, if you have to exit your vehicle on a side-hill, always get out on the uphill side.

Wear Your Seat Belts at All Times

You and your passengers should use the seat belts at all times when driving off-road. For proper seat belt use, refer to the "Seat Belts" in "FOR SAFE DRIVING" section in this manual.

Avoid Sudden Reactions in Mud, Ice. or Snow

Be careful when off-road conditions are slippery. Reduce your speed and avoid sudden movements of the vehicle. Be aware that driving in deep snow or mud can cause a loss of traction and an increase in the resistance to the vehicle's forward motion. Use 4WD low gear (4L) and maintain a steady but moderate speed with a light touch on the steering wheel and brakes

ADVICE FOR YOUR DRIVING

Snow chains

Snow chains should only be used if they are needed to increase traction or are required by law. Check that the chains you use are the correct size for your vehicle's tyres.

Also check that there is enough clearance between the fenders and the chains as installed on the tyres.

Install the chains on the rear tyres tightly, according to the chain manufacturer's instructions. Retighten the chains after driving about 1.0 km if necessary. With the chains installed, drive slowly.

NOTICE

If you hear the chains hitting against the vehicle body while driving, stop and tighten them.

Do not Drive in the Field Covered with Grown Grass



69RHS181

Do not drive in the field covered with grown grass If you drive in the field covered with grass, it may cause accident or fire or vehicle damage by getting caught in grown grass.

WARNING

If loose grass, etc. becomes entangled in drive train parts or exhaust pipes, drive train components might become damaged or fire may result.

If Your Vehicle Gets Stuck

If your vehicle gets stuck in snow, mud, or sand, follow the directions below:

- Shift the transfer shift lever into the "4L" position.
 - Refer to "Transfer Lever" in "OPARAT-ING YOUR VEHICLE" section for details.
- 2) Shift the transmission back and forth between a forward range (or first gear for manual transmission) and reverse. This will create a rocking motion which may give you enough momentum to free the vehicle. Press gently on the accelerator to keep wheel spin to a minimum. Remove your foot from the accelerator while shifting.
 - Do not race the engine. Excessive wheel spin will cause the tyres to dig deeper, making it more difficult to free the vehicle.
- If your vehicle remains stuck after a few minutes of rocking, get another vehicle to pull you out.

▲ WARNING

Do not allow anyone to stand near the vehicle when you are rocking it, and do not spin the wheels faster than an indicated 40 km/h on the speedometer. Personal injury and/or vehicle damage may result from spinning the wheels too fast.

(Continued)

WARNING

(Continued)



55T060070

- In addition to following the driving tips in this section, it is important to observe the following precautions.
 - Check that your tyres are in good condition and always maintain the specified tyre pressure. Refer to "Tyres" in "INSPECTION AND MAINTENANCE" section for details.
 - Do not use tyres other than those specified by Maruti Suzuki. Never use different sizes or types of tyres on the front and rear wheels. For information regarding the specified tyres, refer to the tyre information label located on the driver's door lock pillar.

(Continued)

WARNING

(Continued)

- Never use oversized tyres or special shock absorbers and springs to raise (jack up) your vehicle. This will change the handling characteristics. Oversized tyres may also rub against the fender over bumps, causing vehicle damage or tyre failure.
- After driving through water, test the brakes while driving at a slow speed to see if they have maintained their normal effectiveness.
 If the brakes are less effective than normal, dry them by repeatedly applying the brakes while driving slowly until the brakes have regained their normal effectiveness.

NOTICE

- Release the accelerator pedal when operating the gearshift lever or the transfer lever. Operating the gearshift lever or the transfer lever with the engine racing can damage the gears and the free axle mechanism.
- Do not continue rocking the vehicle for more than a few minutes. Prolonged rocking can cause engine overheating, transmission, transfer case, axles, propeller shaft or differential damage, or tyre damage.

Improving Fuel Economy

NOTE:

Fuel economy (mileage) of the vehicle may vary due to several factors i.e. driving habits- gear change pattern, usage of A.C, Air pressure in the tyres, wind speed, traffic conditions, fuel quality-non adulterated standard fuel, maintenance of vehicle, road conditions, braking etc.

The following instructions will help you improve fuel economy.

Keep Tyre Pressures Correct

Under-inflation of the tyres can waste fuel due to increased running resistance of the tyres. Keep your tyres inflated to the correct pressure shown on the label on the driver's side door or the driver's door lock pillar.

Keep Weight to a Minimum

The heavier the load is, the more fuel the vehicle consumes. Unload any unnecessary luggage or cargo.

Avoid Excessive idling

If you park your vehicle for more than one minute, stop the engine and start it again later. When warming up a cold engine, do not allow the engine to idle or apply full throttle until the engine has reached operating temperature. Allow the engine to warm up by driving.

ADVICE FOR YOUR DRIVING

Avoid Fast Starts, Rapid Acceleration and Hard Braking

Avoid fast starts

Fast starts away from lights or stop signs will consume fuel unnecessarily and shorten engine life. Start off slowly.

Avoid unnecessary stops

Avoid unnecessary deceleration and stopping. Try to maintain a moderate, steady speed whenever possible. Slowing down and then accelerating again uses more fuel.

Keep a steady cruising speed

Drive at a constant speed that road and traffic conditions will permit.

Do not Race the Engine



69RHS060

Revving the engine only consumes extra fuel and has no benefit.


NOTICE

Immediately after starting, the engine is often not yet fully warmed up. Therefore, revving the engine, starting to drive suddenly, or rapid acceleration can cause engine failure.

Drive with an Appropriate Gear for **Vehicle Speed**

Running the vehicle at a high engine rotation speed by using a low-speed gear will result in poor fuel economy. Use the correct gear according to the vehicle speed.

Keep the Air Cleaner Clean

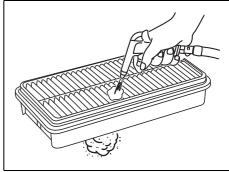

59RN06050

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

Precaution for Handling Vehicle

Do not Apply Strong Force to Exterior Parts

NOTICE

Do not apply strong force to the body panel, front and rear bumper, side sill splash guards, etc. These forces can cause damage to these exterior parts.

Be Careful of Uneven Road Surface

NOTICE

In the following cases, the bumper or the lower part of the vehicle could get damaged. Ensure proper care.

- Entering the areas where there is uneven road surface, such as road shoulder
- Driving on roads with grooves, bumps or potholes

Do not Modify Your Vehicle Illegally



69RHS184

WARNING

 If you modify your vehicle illegally, there is a danger of a fire or an accident. Illegal modifications might adversely affect handling, performance or durability. Also, this could even violate laws and ordinances.

Do not install unsuitable parts to your vehicle or do not make your own adjustments or wiring.

(Continued)

▲ WARNING

(Continued)

 Do not use wheels or wheel nuts other than specified Maruti Suzuki genuine products. Doing so could lead to accidents, such as nuts loosening and the wheel coming off while driving. Also, fuel consumption and driving stability could worsen, or it could result in other malfunctions.

NOTICE

When installing or removing electrical equipment such as radio equipment, navigation, audio equipment or electronic toll control equipment, consult with a Maruti Suzuki authorized workshop. Also, do not operate electrical equipment directly from the battery terminals or connect ground wires directly. Otherwise, there is a danger of hindering the functioning of electronic components, causing fire, malfunction, battery runout, etc.

(Continued)

NOTICE

(Continued)

 Only a troubleshooting device designed for inspection and maintenance for this model can be connected to the vehicle's onboard diagnostics system. Connecting a device other than that specified could hinder the functioning of electronic components and cause battery runout, etc.

When Installing, Removing and Repairing Parts

WARNING

The SRS airbag system and the seat belt pretensioner system could activate unexpectedly or could be rendered ineffective if the parts that affect their functions are adjusted or arranged. In the following cases, these systems will be adversely affected. Consult with a Maruti Suzuki authorized workshop beforehand.

- When removing the steering wheel and conducting repairs around the steering wheel, etc.
- When conducting repairs around the center console, around the instrument cluster, under the front seats or to electrical wiring
- When installing audio equipment, etc.
- When conducting sheet metal painting or repairs around the dashboard
- When replacing the front seats or conducting repairs around the seats
- Repairs around the front pillar, the back pillar or the roof side
- When conducting repairs around the center pillar

Be Careful When Placing Accessories



69RHS185

WARNING

Do not attach accessories to the window glasses. Accessories and suction cups could hinder vision, or a suction cup could act as a lens and cause a fire. Also, if an airbag is activated, such accessories could be ejected outward within the vehicle, possibly resulting in injury.

When Spilling Drinks or Liquids

WARNING

Do not allow liquids to spill, splash or spray inside the vehicle. The following items could malfunction, or fire could result. In the case of spilling drinks, etc., promptly consult with a Maruti Suzuki authorized workshop.

- SRS airbag system
- Audio equipment
- Electrical parts such as switches and wiring
- Movable parts such as the gearshift lever or seat belt buckles

NOTICE

The sensor of the seat belt reminder is built into the front passenger's seat cushion.

If you spill liquid such as soft drinks or juice, the sensor of the seat belt reminder may be damaged.

If you spill any liquid on the seat cushion, immediately wipe it with a soft cloth.

When Replacing Engine Oil Replace engine oil regularly



54M3143

- If the vehicle is normally used, replace the engine oil and filter every 15,000 km or every 12 months, whichever is earlier.
- When the vehicle is used under severe driving conditions, the engine oil and filter replacement is required earlier than the case that the vehicle is normally used.

NOTICE

Observe the periods designed for the engine oil and filter replacement. Degraded oil or clogged filters can cause engine malfunction or abnormal noise. For replacement, consult with a Maruti Suzuki authorized workshop.

Specification and viscosity of engine oil As performance factors such as fuel consumption depend on the engine oil used, use oil that satisfies the specifications in the following Table 1 and Table 2. Using Maruti Suzuki genuine oil is recommended.

Table 1

Specif	Oil quality	
API(*1)	ILSAC(*2)	
SP	GF-6	
SN	_	
SM	_	
SL	_	

Table 2

For India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16

Except for India

Specification	All vehicles
Viscosity: SAE(*3)	0W-16, 0W-20, 5W-30, 10W-30, 10W-40, 15W-40, 20W-40

- *1: The API standard is determined by the American Petroleum Institute and represents the quality grade of engine oil.
- *2: The ILSAC standard is an engine oil standard for automobiles, established by the International Lubricant Specification Advisory Committee, and is based on the API standard while indicating even higher performance specifications such as for fuel conservation and durability.
- *3: SAE viscosity is a standard that determines the viscosity of lubricating oil. The number on the left side (the number with a "W") means the viscosity at low temperature. The smaller this figure is, the stronger the oil resistance to coldness is and the better the engine start capability is. The number on the right side means the viscosity at high temperature. The larger this figure is, the stronger the oil resistance to heat is and the better the engine protection performance is.


Running-in

NOTICE

The future performance and reliability of the engine depends on the care and restraint exercised during its early life. It is especially important to observe the following precautions during the first 960 km of vehicle operation.

- After starting, do not race the engine. Warm it up gradually.
- Avoid prolonged vehicle operation at a constant speed. Moving parts will break in better if you vary your speed.
- · Start off from a stop slowly. Avoid full throttle starts.
- Avoid hard braking, especially during the first 320 km of driving.
- · Do not drive slowly with the transmission in a high gear.
- Drive the vehicle at moderate engine speeds.
- Do not tow a trailer during the first 960 km of vehicle operation.

Catalytic Converter

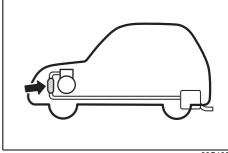

80G106

The purpose of the catalytic converter is to minimize the amount of harmful pollutants in your vehicle's exhaust. Use of leaded fuel in vehicles equipped with catalytic converters is prohibited, because lead deactivates the pollutant-reducing components of the catalyst system.

The converter is designed to last the life of the vehicle under normal usage and when unleaded fuel is used. No special maintenance is required on the converter. However, it is very important to keep the engine properly tuned. Engine misfiring, which can result from an improperly tuned engine, may cause overheating of the catalytic converter. This may result in permanent heat damage to the catalytic converter and other vehicle components.

NOTICE

To minimize the possibility of catalytic converter or other vehicle damage:

- Maintain the engine in the proper operating condition.
- In the event of an engine malfunction, particularly one involving engine misfire or other apparent loss of performance, have the vehicle serviced promptly.
- Do not turn off the engine or interrupt the ignition when the transmission is in gear and the vehicle is in motion.
- Do not try to start the engine by pushing or towing the vehicle, or coasting down a hill.
- Do not idle the engine with any spark plug wires disconnected or removed, such as during diagnostic testing.
- Do not idle the vehicle for prolonged periods if idling seems rough or there are other malfunctions.
- Do not allow the fuel tank to get near the empty level.




59RN06060

▲ WARNING

Be careful where you park and drive; the catalytic converter and other exhaust components can get very hot. As with any vehicle, do not park or operate this vehicle in areas where combustible materials such as dry grass or leaves can come in contact with a hot exhaust system.

ADVICE FOR YOUR DRIVING	
MEMO	

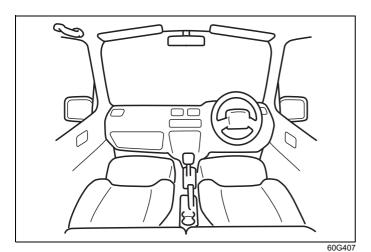

Fuel Filler Opening	7-1
Refueling	
Hood	7-4
Sun Visor	7-6
Interior Light	7-7
Accessory Socket	
Drink Holder	
Storage Area	7-12
Assist Grips	
Ride-in Assist Grip	
Footrest (if equipped)	
Door Pocket	
USB Socket	
Seatback Pocket	
Frame Hooks	7-15
Heating and Air Conditioning System	7-17
Manual Heating and Air Conditioning System	
Automatic Heating and Air Conditioning System	
(climate control)	7-25
Radio Antenna	
Installation of Radio Frequency Transmitters	
Audio Function	
Remote Audio Controls (if equipped)	7-33

Fuel Filler Opening

Make sure to read "Refueling" in this section.

WARNING


Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

Fuel Filler Door




80T070270

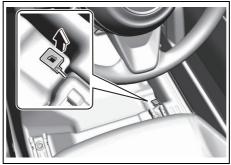


A fuel filler cap is located on the right rear side of the vehicle. The fuel filler door can be unlocked by pulling up the opener lever located on the outboard lower side of the driver's seat and locked by simply closing the door.

Fuel Filler Cap

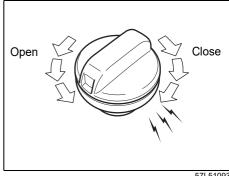

57L51093

- · To open the fuel filler cap, turn it counterclockwise.
- · To close the fuel filler cap, turn it clockwise until you hear more than 2 clicks.

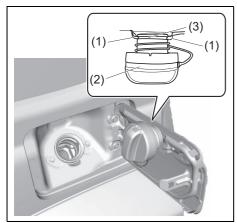

80T070410

NOTE:

The cap holder (1) holds the fuel filler cap (2) by hooking the groove (3) when refueling.

WARNING

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, close the fuel filler cap until you hear more than 2 clicks.
- If you use the fuel cap other than a genuine Maruti Suzuki cap, it may cause fuel leakage. Do not use the fuel cap other than a genuine Maruti Suzuki cap.

Refueling

Watch Out for Fire



69RHS186

WARNING

Be sure to observe the following points when refueling. Otherwise, gasoline may catch a fire from fuel and it may cause a fire.

- Always stop the engine first.
- Close all the doors and windows when refueling.
- As gasoline is highly flammable, open sparks such as lit cigarettes are strictly prohibited.

When Refueling at a Self-service Gas Station

WARNING

When refueling at a self-service gas station, be sure to observe the following points.

- If substantial static electricity is accumulated within your body, a spark could ignite fuel vapors and possibly cause burns. Before opening the fuel filler cap, discharge any static electricity* that might have accumulated in your body, by touching a metal part of the vehicle body or the gas pump machine. In addition, do not re-enter the vehicle while refueling, as static electricity could be charged to your body again.
- Do not allow others who have not discharged their static electricity to come close to the fuel filler opening.
 - *Take special care when air is dry, as this can cause your body to become charged with static electricity more easily. In addition, wearing layers of clothing can generate static electricity due to the friction of the fibers.

(Continued)

WARNING

(Continued)

- If you open the fuel filler cap suddenly, fuel may be under pressure and may spray out. Loosen the fuel filler cap slowly. After air deflating sound stops, open the fuel filler cap.
- If you do not insert the fuel filler nozzle securely into the fuel filler opening, fuel may spill out. Insert the fuel filler nozzle securely into the fuel filler opening until it stops.
- Pull the gas pump filler nozzle lever until it stops.

(Continued)

WARNING

(Continued)



69RHS070

- If you continue to refuel after the automatic stop to top up the tank, fuel could overflow. When the automatic stop function of gas pump filler nozzle is activated, stop refueling.
 - *Depending on the type of gas pump machine being used, the automatic stop function could activate early and refueling might not be possible. Please follow the instructions of the employees at the gas station.

(Continued)

WARNING

(Continued)

- If fuel spills out, an accident such as a fire may occur. Also, if you leave spilled fuel as it is, it may cause paint staining, discoloration or cracking. Be careful not to spill out fuel. If you spill it out, wipe it off with a soft cloth.
- If the fuel filler cap is not closed securely, it may cause fuel leakage or a fire. After refueling, return the fuel filler nozzle to its original position and close the fuel filler cap until you hear more than 2 clicks.
- Fuel contains substances harmful to the human body. Do not breathe in vaporized fuel.
- In addition, be sure to observe all the warnings posted at the gas station.

Use Unleaded Gasoline Only

NOTICE

Using leaded gasoline, low-quality gasoline or other types of fuel (such as alcohol and diesel oil) can cause harmful effects to the engine and fuel delivery system.

Do not use fuel other than unleaded gasoline.

Hood


WARNING

- As the hood is heavy, if a child tries to open or close it, the child may get injured. Do not allow a child to open or close the hood.
- As the engine compartment becomes hot, it may cause burns.
 When opening the hood, do not allow a child to come close to the hood.
- If you leave any tool or cloth in the engine compartment, it may cause a malfunction. Also, as the engine compartment becomes hot, it may result in vehicle fire. Do not leave any tool or cloth for inspection or cleaning in the engine compartment.

A CAUTION


If you come close to a running drive belt or a cooling fan (radiator fan), hands, hair, clothing, etc. may be caught and you may get injured. When the engine is running, keep away from the drive belt or the cooling fan (radiator fan).

Opening the Hood

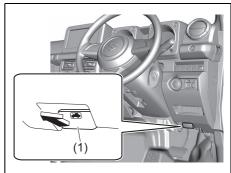

77R50040

 Pull up the hood release lever (1) located under the driver's side instrument panel in the outboard position. This will disengage the hood lock halfway.

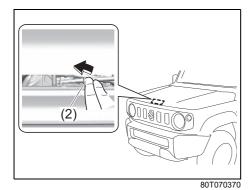

2) Push the under-hood release lever (2) sideways with your finger, as shown in the illustration. While pushing the lever. lift up the hood.

A CAUTION


The under-hood release lever can be hot enough to burn your finger while the engine is running or right after the engine stopped.

If you try to open the hood while the engine is running or right after the engine stopped, touch the underhood release lever after it becomes cool enough.

NOTICE

If you lift up the hood with the wiper arms raised, the wiper arms and the hood may get damaged.

Do not lift up the hood with the wiper arms raised.

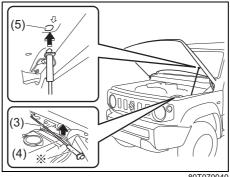

80T070040

3) While holding the hood, pull the prop rod (3) out from the holding clip (4), and then insert the end of the rod into the designated hole (5).


A CAUTION

- The prop rod can be hot enough to burn your finger while the engine is running or right after the engine stopped. If you would like to use the prop rod while the engine is running or right after the engine stopped, touch the prop rod after it becomes cool enough.
- If the prop rod slips out, you may get caught in the closing hood. Insert the end of the prop rod into the hole securely.
- The prop rod may slip out when the hood is blown by wind. If this occurs, you may get caught in the closing hood. Be very careful when you open the hood on a windy day.

NOTF.

When you pull out the prop rod from the holding clip, hold the **x** part.

Closing the Hood

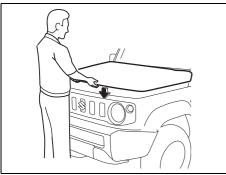

80T070050

- Lift up the hood slightly and remove the prop rod from the hole. Put the prop rod back into the holding clip.
- Lower the hood to about 20 cm above the hood latch, and then let it drop down. Check that the hood is securely latched after closing.

WARNING

If the hood is not fully closed, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident. Check that the hood is fully closed and latched before driving.

A CAUTION


When closing the hood, the occupant's body such as hands may get caught in the hood and get injured. Also, pushing on the hood from the top may damage it.

When closing the hood, check that no part of the occupant's body such as hands is in the path of the hood.

NOTICE

Pushing on the hood from the top may damage it.

Sun Visor

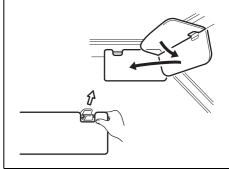


79,1161

The sun visors can be pulled down to block glare coming through the windshield, or they can be unhooked and turned to the side to block glare coming through the side window.

NOTICE

When unhooking and hooking a sun visor, handle it by the hard plastic parts or the sun visor can be damaged.

Card Holder

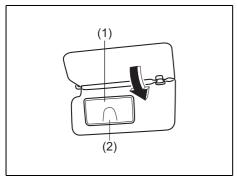

78RB05008


- (1) Mirror cover
- (2) Card holder

You can put a card in the card holder (2) on the back of the sun visor.

NOTICE

If you park your vehicle outdoors in direct sunlight in hot weather, the inside of the vehicle will become hot. The heat may distort or crack a card. When you park your vehicle outdoors in direct sunlight or in hot weather, do not leave plastic cards in the card holder.

Vanity Mirror

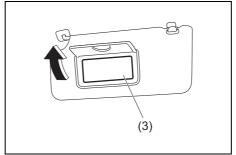

78RB05009

(3) Vanity mirror

To use the vanity mirror (3) on the back of the sun visor, pull up the mirror cover (1).

WARNING


- · If you use the vanity mirror while driving, you may lost control of the vehicle, resulting in an accident. Do not use the vanity mirror while drivina.
- · Do not place any object on the location where an airbag is stored or come close to the location where airbag is stored, when using a vanity mirror. Doing so may cause the airbag to deploy and cause serious injury due to the impact of airbag.

Interior Light

NOTICE

If you turn on the interior light for a long time with the engine stopped, the lead-acid battery may discharge. Do not turn on the interior light for a long time with the engine stopped.

Front

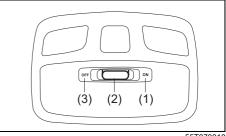

55T070010

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position or the ignition mode is LOCK (OFF).
- The hazard warning lights, the position lights and the headlights are off.
- 15 minutes passed after the light is turned on.

DOOR (2)

The light comes on when the door is opened. After closing all doors, the light will remain on for about 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After removing the key from the ignition switch or press the engine switch to change the ignition mode to LOCK (OFF), the light will turn on for about 15 seconds and then fade out.

NOTE:


The light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

- The ignition switch is in "LOCK" position or the ignition mode is LOCK (OFF).
- About 15 minutes passed after the light is turned on.

OFF (3)

The light remains off even when the door is opened.

Center

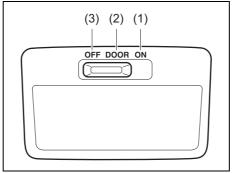

80T070400

This light switch has three positions which function as described below:

ON (1)

The light comes on and stays on regardless of whether the door is open or closed.

NOTE:

If your vehicle is equipped with the keyless push start system or the keyless entry system, the light will automatically be turned off to prevent the lead-acid battery from discharging when the following conditions are simultaneously met:

The ignition switch is in the "LOCK" position, or the ignition mode is LOCK (OFF).

- The hazard warning lights, the position lights and the headlights are off.
- After 15 minutes of the light on.


DOOR (2)

- The light comes on when the door is opened. After closing all doors, the light will remain on for 15 seconds and then fade out. If you insert the key, or press the engine switch to change the ignition mode to ACC or ON during this time, the light will start to fade out immediately. After removing the key from the ignition switch or press the engine switch to change the ignition mode to "LOCK" (OFF), the light will turn on for 15 seconds and then fade out.
- When the ignition switch is in LOCK position, or the ignition mode is LOCK (OFF), to prevent the lead-acid battery from discharging, the light will automatically be turned off when a period of 15 minutes has elapsed after any of the doors (including the tailgate) is opened and other operations are not done.

OFF (3)

The light remains off even when the door is opened.


Luggage Compartment Light

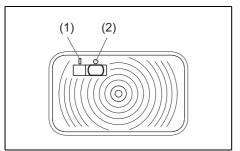

68PM00510

When you open the tailgate with the luggage compartment light switch in the "ON" position (1), the light comes on for about 15 minutes.

When the luggage compartment light switch is in the "OFF" position (2), the light remains off regardless of whether the tail-gate is open or close.

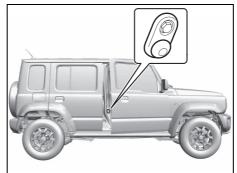


80T070290

NOTE:


The number of doors involved in the lighting operation of the interior light depends on the vehicle specification. If there is a switch (rubber protrusion) at the door opening as shown, the door is involved in the lighting operation. The tailgate is also involved in this operation even without the rubber protrusion.

Accessory Socket Center Console

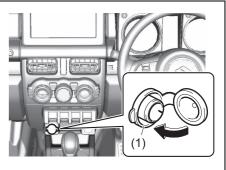

77R50140

Luggage Compartment

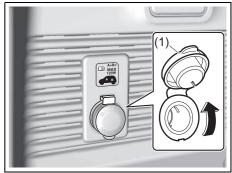

80T070250

The accessory socket will work when the ignition switch is in "ACC" or "ON" position or the engine switch is in ACC or ON mode.

This socket can be used to provide 12 volt/ 120 watt/10 ampere power for electrical accessories. Check that the rubber cap remains on the socket when the socket is not in use.

When using the accessory socket, open the rubber cap (1).

▲ WARNING

When the accessory socket is not in use, closed the rubber cap. If any foreign material enters the accessory socket, it may cause a malfunction or short circuit.

NOTICE

- To prevent the fuse from being blown, when using sockets at the same time, do not exceed the total combined power capacity of 12 volt/120 watt/10 ampere.
- Use of inappropriate electrical accessories can cause damage to your vehicle's electrical system. Check that any electrical accessories you use are designed to plug into this type of socket.

(Continued)

NOTICE

(Continued)

- Check that the cap remains on the socket when the socket is not in use.
- When the ignition switch is in "LOCK" position or the ignition mode to LOCK (OFF) during using the accessory socket, the following accidents may occur;
 - the audio or navigation system does not turn off.
 - the keyless entry system does not work, etc.

If they occur, disconnect the item from the accessory socket and check whether the electrical equipments work properly.

If the problem persists, ask your Maruti Suzuki authorized workshop for inspection.

Drink Holder



80T070260

Use the drink holder to put a cup with a lid or a bottle with a cap. Also, you can put small articles in the drink holder.

WARNING


Failure to take the precautions listed below could cause personal injury or vehicle damage.

- Be careful when you are using the cup holders to hold a cup containing hot liquid. Spilling out hot liquid can cause burn injury.
- Do not use the cup holders to hold sharp-edged, hard or breakable objects. Objects in the cup holders may be thrown about during a sudden stop or impact, and could cause personal injury.
- Be careful not to spill liquid or insert any foreign materials into the moving part of the gearshift lever, or any electrical components. Liquid or foreign materials may damage these parts.
- If you spill, or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- If you place the keyless remote controller in a drink holder or a bottle holder, it may not be detected.
- If you spill or drop liquid accidentally, have your vehicle inspected by a Maruti Suzuki authorized workshop.

Storage Area

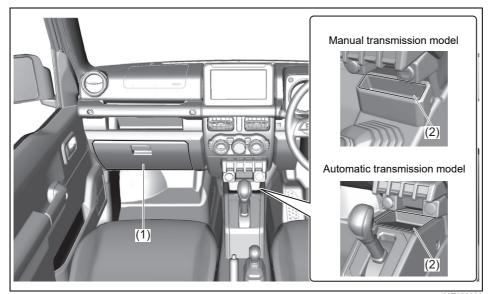

80T070080

- (1) Glove box
- (2) Floor console tray

Each item in the figure is a typical example; the actual equipment depends on the vehicle type.

WARNING

- If any object gets caught in the brake pedal or the accelerator pedal, you may not operate the pedal properly, resulting in an accident. If you use a storage area without a lid, do not place the object which may fall out while driving.
- If there is any object within the area where the front passenger's airbag could inflate, the object may be thrown out or the front passenger's airbag may not inflate properly. Do not place a big object on the instrument panel tray.


A CAUTION

If you use a storage area with a lid, do not drive the vehicle with the lid open. In acceleration, a sudden braking or an collision, your body may be hit by the lid or the object which falls out from the storage area.

NOTE:

If you place the keyless remote controller in any of storage areas, it may not be detected.

Using Storage Area with a Lid Glove box

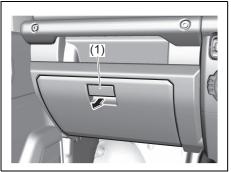


80T070090

- To open the glove box, pull the latch lever (1).
- To close it, push the lid until it is latched securely.

WARNING

- Never drive with the glove box lid open. It could cause injury if an accident occurs.
- Do not leave cigarette lighters or spray cans in the glove box. If a cigarette lighter or spray can is in a place such as the glove box, it may light accidentally when luggage is loaded, causing a fire.

Assist Grips

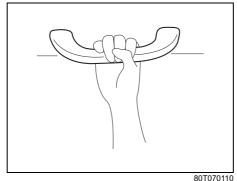

801070110

Assist grips are provided for convenience.

NOTICE

To avoid damaging the assist grip and the molded headlining, do not hang down the assist grip.

Ride-in Assist Grip




77R50220

Ride-in assist grip (1) provides solid support for the front passenger when entering or exiting the vehicle.

WARNING

- Do not put any objects between the passenger side of the dashboard and the ride-in assist grip. When the passenger's airbag is inflated, objects may be flown toward the passenger and may cause serious injury.
- Front passenger should not grip the ride-in assist grip while seating. In this situation, the passenger would be too close to the inflating airbag, and may suffer severe injury.


Footrest (if equipped)

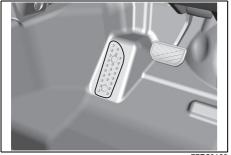

77R50160

Use the footrest as a support for your left foot only.

Door Pocket

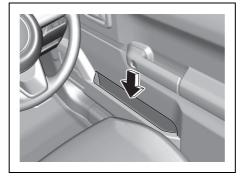

80T070130

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.


A CAUTION

- If an accident occurs, objects such as bottles, cans, etc. in the door pocket can injure the occupants.
 Do not put hard or breakable objects in the door pocket.
- If you grab and pull the door pocket, it may be broken, resulting in personal injury. When closing a door, do not grab and pull the door pocket.

NOTE:

If you place the keyless remote controller in a door pocket, it may not be detected.

USB Socket

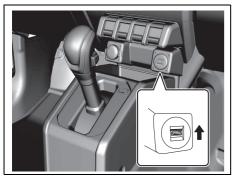

80T070060


Open the cover, and then connect your portable digital music player, etc. to this socket to enjoy music through the vehicle's audio system. Refer to the supplementary manual for details.

WARNING

If foreign material enters the USB socket, a malfunction or a short circuit may occur.

Always close the cover when the USB socket is not in use.

Seatback Pocket

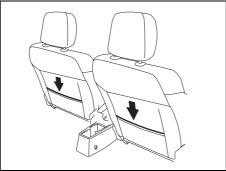

80T070230

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

A CAUTION

- If an accident occurs, objects such as bottles, cans, etc. can injure the occupants in the rear seat. Do not put hard or breakable objects in the pocket.
- If you put sharp or heavy objects in the pocket, the seat may be damaged. Do not put sharp or heavy objects in the pocket.

Frame Hooks

It is not recommended that you use the frame hooks for towing another vehicle. They were originally designed to tow your vehicle in emergency situation.

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.


WARNING

Observe the following instructions when using frame hooks. The frame hook or vehicle body may break and cause serious injury or damage:

- Do not use the frame hooks for towing another vehicle.
- Avoid pulling the vehicle to get out of severe snowy, muddy or sandy conditions, sudden starts or erratic driving maneuvers which could cause excessive stress on the frame hook.

In such case, we recommend that you contact a professional service.


Front

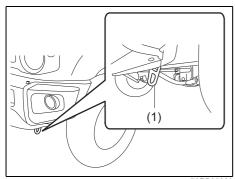

78RB05023

NOTICE

When you use the frame hook (1), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, or the vehicle body. Do not sudden accelerate.

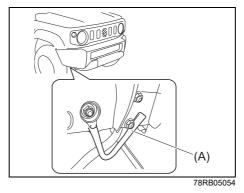


The hook (A) is provided for trailer or train transport purposes only.

NOTICE

Do not use the hook (A) in emergency situation. If you use this hook (A), the hook or the vehicle may be damaged.

Rear

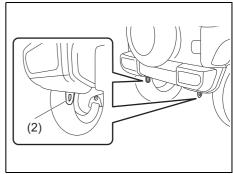

78RB05024

NOTICE

When you use the frame hook (2), avoid the driving that gives significant physical shock on hook. Such operation can damage the hook, the vehicle body or the drive system.


- Do not sudden accelerate.
- Do not tow the vehicle heavier than your vehicle.

Heating and Air Conditioning System

There are two types of heating and air conditioning systems as follows:

- Manual heating and air conditioning system
- Automatic heating and air conditioning system (climate control)


Air Outlet

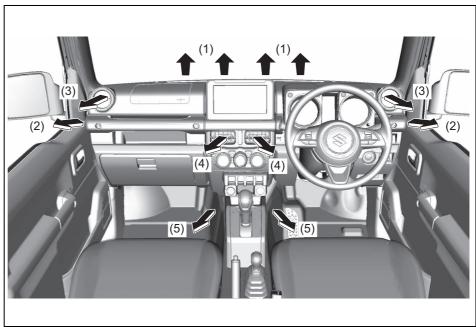

80T070150

- (1) Windshield defroster outlet
- (2) Side defroster outlet
- (3) Side outlet
- (4) Center outlet
- (5) Floor outlet


Center outlet

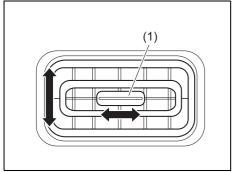

78RB05027

Move the knob (1) vertically or horizontally, to adjust the direction of airflow as desired.

Side outlet

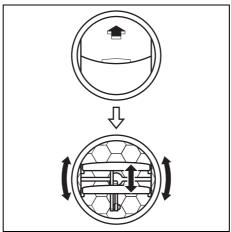

78RB05026


When open, air comes out regardless of the air flow selector position.

A CAUTION

Prolonged exposure to hot air from the heater or air conditioner could result in low temperature burns. All vehicle occupants, particularly children, the elderly, those with special needs, individuals with delicate skin, and sleeping individuals, should maintain sufficient distance from the air outlets to prevent prolonged exposure to hot airflow.

Manual Heating and Air Conditioning System

Description of Controls

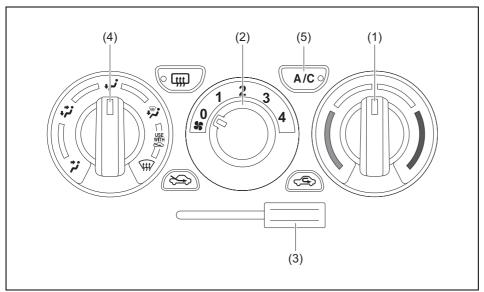

80T070390

 
- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Air conditioning switch

Temperature selector (1)

This is used to adjust the temperature.

Blower speed selector (2)
This is used to turn on the blower and to select blower speed.

Air intake selector (3)



78RM50020

This selector is used to select the following modes.

FRESH AIR (a)

When this mode is selected by moving the lever to the position of (a) in the above illustration, outside air comes in.


RECIRCULATED AIR (b)

When this mode is selected by moving the lever to the position of (b) in the above illustration, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as in a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated.

Therefore, you should occasionally select FRESH AIR.

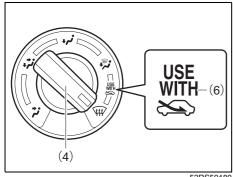


52RS50180

NOTE:

The mark of "USE WITH" (6)

To clear fog on the windshield and/or the side windows quickly, set the air flow selector (4) to "HEAT & DEFROST" or "DEFROST" and air intake selector (3) to "FRESH AIR". These positioning will clear the fogged windshield and/or the side windows faster than the "RECIRCULATED AIR".


Air flow selector (4)

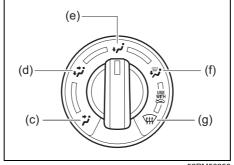

52RM50250

This is used to select one of the following functions.


VENTILATION (c)

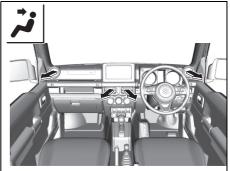

80T070160

Temperature-controlled air comes out of the center and side air outlets.


BI-LEVEL (d)

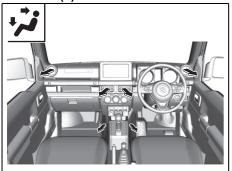

80T070170

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (e)

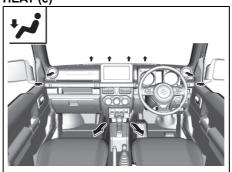

80T070180

Temperature-controlled air comes out of the floor outlets and the side outlets, also comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

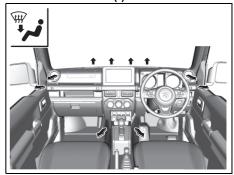

80T070190

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.

DEFROST (g)

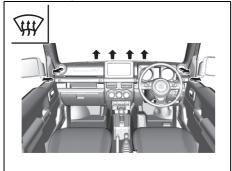

80T070200

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

Air conditioning switch (5)

To turn on the air conditioning system, set the blower speed selector to a position other than off and push in "A/C" switch. With this "A/C" switch operation, a indicator light will come on when the air conditioning system is working. To turn off the air conditioning system, push "A/C" switch again.

During operation of the air conditioner, you may notice slight changes in engine speed. These changes are normal, the system is designed so that the compressor turns on or off to maintain the desired temperature.

Less operation of the compressor results in better fuel economy.

System Operating Instructions

Natural ventilation

Select VENTILATION and FRESH AIR, the temperature selector to the desired temperature position, and the blower speed selector to off. Fresh air will flow through the vehicle during driving.

Forced ventilation

The base settings are the same as for natural ventilation except you set the blower speed selector to a position other than off.

Normal heating (using outside air)

Select HEAT and FRESH AIR, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Setting the blower speed selector to a higher blower speed position increases heating efficiency.

Quick heating (using recirculated air)

The base settings are the same as for normal heating except you select RECIRCU-LATED AIR. If you use this heating method for an extended period of time, the air in the vehicle may become contaminated and the windows can become misty. Therefore, use this method only for quick heating and change to the normal heating method as soon as possible.

Head cooled/Feet warmed heating

Select BI-LEVEL and FRESH AÏR, the temperature selector to the desired temperature position, and the blower speed selector to the desired blower speed position. Unless the temperature selector is in the fully cold position or fully hot position, the air that comes out of the center and side outlets will be cooler than the air that comes out of the floor outlets.

Normal cooling

Set the air flow selector to VENTILATION, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position, and turn on "A/C" switch. Setting the blower speed selector to a higher blower speed position increases cooling efficiency.

You can switch the air intake selector to either FRESH AIR or RECIRCULATED AIR as you desire. Choosing RECIRCULATED AIR increases cooling efficiency.

Quick cooling (using recirculated air)

The base settings are the same as for normal cooling except you select RECIRCU-LATED AIR and the highest blower speed.

NOTE:


 If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle can become contaminated and the windows tend to get misted. Therefore, you should select FRESH AIR whenever possible. If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly while you operate the air conditioner with the air intake selector at FRESH AIR and the blower at high speed.

Dehumidifying

Set the air flow selector to a desired air flow selector position, the temperature selector to the desired temperature position and the blower speed selector to the desired blower speed position. Also select FRESH AIR and turn on "A/C" switch.

NOTE:

Because the air conditioner dehumidifies the air, turning it on will help keep the windows clear, even when blowing heated air using DEFROST or HEAT & DEFROST functions.

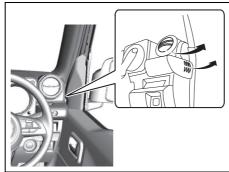

80T070240

NOTE:

If you need maximum defrosting:

- select DEFROST and FRESH AIR.
- · set the blower speed selector to high.
- adjust the temperature selector to the hot end.
- · turn on "A/C" switch, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP System

- If the cooling and heating performance can no longer perform at a sufficient level due to automatically stopping engine, press the ENG A-STOP OFF switch to deactivate the ENG A-STOP system. (The engine will automatically restart and the air conditioning performance will be restored.)
- If the windshield and/or the driver's side/ passenger side door windows are fogged during the automatic engine stop, stop the ENG A-STOP system and restart the engine. Then, turn the air flow selector (4) to change the air flow to the HEAT & DEFROST or DEFROST position to defog the windows.

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section.

(For models with air conditioner refrigerant R-134a)

NOTE:


Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE

Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.


Automatic Heating and Air Conditioning System (climate control)

Description of Controls

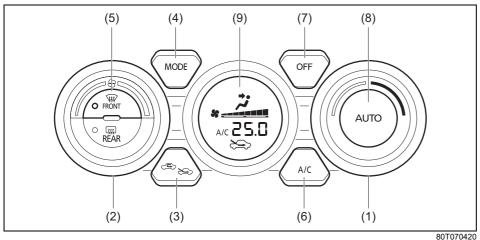

- (1) Temperature selector
- (2) Blower speed selector
- (3) Air intake selector
- (4) Air flow selector
- (5) Defrost switch
- (6) Air conditioning switch
- (7) "OFF" switch
- (8) "AUTO" switch
- (9) Display

Temperature selector (1)

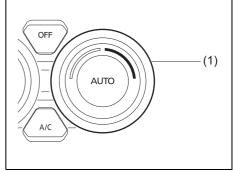

78RB05037

Turn the temperature selector (1) to adjust the temperature.


NOTE:

If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling. The temperature of the air from the outlets may change suddenly while "LO" or "HI" is displayed, but this is normal.

NOTE:

When you change the unit of temperature in the information display, the unit of temperature in the air conditioning system will be changed. Refer to "Information Display" in "INSTRUMENT CLUSTER" section for details.

Blower speed selector (2)

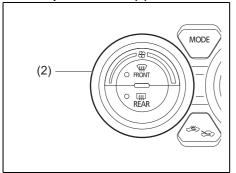


78RB05038

The blower speed selector (2) is used to turn on the blower and to select blower speed.

If "AUTO" switch (8) is pushed, the blower speed will vary automatically as the climate control system maintains the selected temperature.

Air intake selector (3)

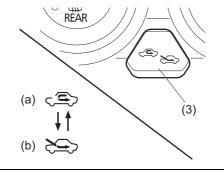

78RB05039

Push the air intake selector (3) to change between the recirculated air and fresh air mode.

If "AUTO" switch (8) is pushed, the air intake will vary automatically as the climate control system maintains the selected temperature.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

RECIRCULATED AIR (a)

When this mode is selected, inside air is recirculated. This mode is suitable when driving through dusty or polluted air such as a tunnel, or when attempting to quickly cool down or warm up the interior or to reduce unwanted odor from entering the vehicle.

FRESH AIR (b)

When this mode is selected, outside air is introduced.


FRESH AIR and RECIRCULATED AIR are selected alternately each time the air intake selector is pushed.

NOTE:

If you select RECIRCULATED AIR for an extended period of time, the air in the vehicle may become contaminated.


Therefore, you should occasionally select FRESH AIR.

Air flow selector (4)

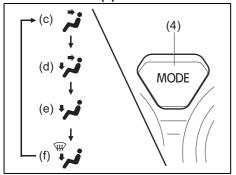


78RB05040

VENTILATION (c)

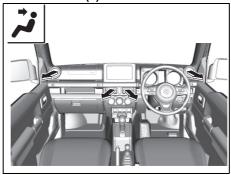

80T070160

BI-LEVEL (d)

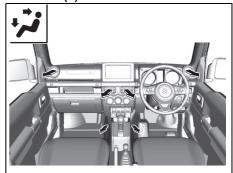

80T070170


Push the air flow selector (4) to change among the following functions. The indication of the selected mode appears in the display.

If "AUTO" switch (8) is pushed, the air flow will vary automatically as the climate control system maintains the selected temperature.

Temperature-controlled air comes out of the center and side outlets.

Temperature-controlled air comes out of the floor outlets and cooler air comes out of the center and side outlets. When the temperature selector (1) is in the fully cold position or fully hot position, however, the air from the floor outlets and the air from the center and side outlets will be the same temperature.


HEAT (e)

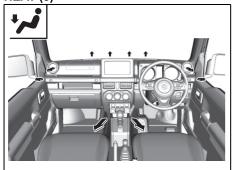

80T070180

Temperature-controlled air comes out of the floor outlets and the side outlets, a small amount of air comes out of the windshield defroster outlets and also comes slightly out of the side defroster outlets.


HEAT & DEFROST (f)

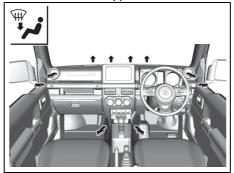

80T070190

Temperature-controlled air comes out of the floor outlets, the windshield defroster outlets, the side defroster outlets and the side outlets.


Defrost switch (5)

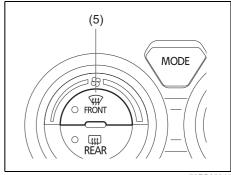

78RB05045

Push the defrost switch (5) to turn on the defroster.

DEFROST

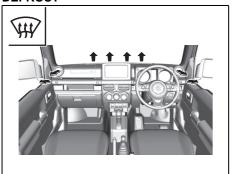


80T070200

Temperature-controlled air comes out of the windshield defroster outlets, the side defroster outlets and the side outlets.

NOTE:

When the defrost switch (5) is pushed to turn on the defroster, the air conditioning system will operate and FRESH AIR mode will be selected automatically. In very cold weather, however, the air conditioning system will not operate.

Air conditioning switch (6)

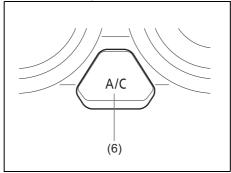


78RB05047

The air conditioning switch (6) is used to turn on and off the air conditioning system only when the blower is on. To turn on the air conditioning system, push in the switch and "A/C" will appear in the display. To turn off the air conditioning system, push in the switch again and "A/C" will go off.

System Operating Instructions

Automatic operation

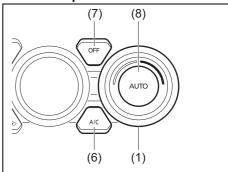

78RB05048

You can let the climate control system work automatically. To set the system for fully-automatic operation, follow the procedure below.

- 1) Start the engine.
- 2) Push "AUTO" switch (8).
- 3) Set the desired temperature by turning the temperature selector (1).

The blower speed, air intake and air flow are controlled automatically to maintain the set temperature. However, the air flow is not changed to DEFROST position automatically.

NOTE:

When the recirculated air mode is selected, the automatic operation system is deactivated even if you push "AUTO" switch (8).

You can use the air conditioning switch (6) to manually turn the air conditioner on or off according to your preference. When you turn the air conditioning switch off, the climate control system cannot lower the inside temperature below outside temperature.

To turn the climate control system off, push "OFF" switch (7).

NOTE:


If "AUTO" in the display blinks, there is a problem in the heating system and/or air conditioning system. You should have the system inspected by a Maruti Suzuki authorized workshop.

NOTE:


- To find the temperature at which you are most comfortable, start with the 22°C (72°F) or 25°C (75°F) setting. (the temperature vary depending on vehicle specifications.).
- If you turn the temperature selector (1) until "HI" or "LO" appears on the display, the climate control system will operate at maximum heating or cooling and the blower will run at full speed.
- To avoid blowing cold air in cold weather or hot air in hot weather, the system will delay turning on the blower until warmed or cooled air is available.
- If your vehicle has been left in the sun with the windows closed, it will cool faster if you open the windows briefly.
- Even under the automatic operation, you can set individual selectors to the manual

mode. The manually selected functions are maintained, and the other functions remain under automatic operation.

- If the windshield and/or the front door windows are fogged, push the defrost switch (5) to turn on the defroster, or push the air flow selector (4) to change the air flow to HEAT & DEFROST position to defog the windows.
- To return the blower speed selector (2), air intake selector (3), and air flow selector (4) to automatic operation, push "AUTO" switch (8).

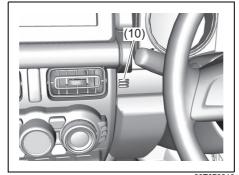

80T070210

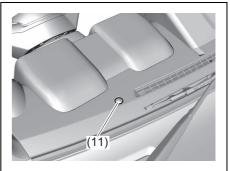


80T070220

Be careful not to cover the interior temperature sensor (10) located between the steering wheel and the climate control panel, or the solar sensor (11) located at the top of the passenger's side dashboard. These sensors are used by the automatic system to regulate temperature.

Manual operation

You can manually control the climate control system. Set the selectors to the desired positions.

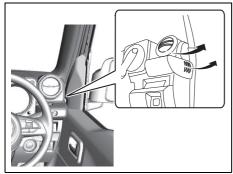

80T070240

NOTE:

If you need maximum defrosting:

- push the defrost switch (5) to turn on the defroster (the air conditioning system will operate and FRESH AIR mode will be selected automatically),
- set the blower speed selector to high,
- adjust the temperature selector to "HI" indication on the display, and
- adjust the side outlets so the air blows on the side windows.

Models with ENG A-STOP system

If the cooling and heating performance is insufficient when the engine is stopped automatically, push the ENG A-STOP OFF switch to deactivate the ENG A-STOP system. (The engine is restarted automatically, and the cooling and heating performance is restored.)

 If the windshield and/or front door windows are fogged, push the defrost switch. (When the defrost switch is pushed, the engine is restarted automatically and the defroster is turned on.)

Maintenance

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.

If your air conditioner is equipped with air filters, clean or replace them as specified in "Maintenance schedule" in "INSPECTION AND MAINTENANCE" section. Have this job done by a Maruti Suzuki authorized workshop as the lower glove box must be lowered for this job.

(For models with air conditioner refrigerant R-134a)

NOTE:

Your vehicle uses the air conditioning refrigerant HFC-134a, commonly called R-134a. R-134a replaced R-12 around 1993 for automotive applications. Other refrigerants are available, including recycled R-12, but only R-134a should be used in your vehicle.

NOTICE


Using the wrong refrigerant may damage your air conditioning system. Use R-134a only. Do not mix or replace the R-134a with other refrigerants.

How to Use Air Conditioning System Effectively

Parking under the blazing sun

After parking for a long time under the blazing sun, the interior temperature can become very high. Use the air conditioning system, with the windows or doors opened to ventilate the interior.

Radio Antenna Removal and Installation

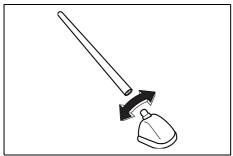

63J055

The radio antenna on the roof is removable. To remove the antenna, turn it counterclockwise. To reinstall the antenna, turn it clockwise firmly by hand.

NOTICE

To avoid damage to the radio antenna:

- Remove the antenna when using an automatic car wash.
- Remove the antenna when the antenna hits anything such as a low ceiling in a parking garage or putting a car cover over your vehicle.
- Remove the antenna when parking your vehicle for a long time on a snowy day.

Installation of Radio Frequency Transmitters

We recommend that you always ask an authorized Maruti Suzuki workshop about frequency band, max output power, antenna position of vehicle and specific conditions for installation and/or use before installing a radio transmitter in your vehicle. Such equipments may cause the electronic control system to malfunction if they are incorrectly installed or they are not suited for the vehicle.

Audio Function

When Using Audio System with Appropriate Volume not to Disturb Safe Driving

- When playing music or other audio, if a mobile phone is used inside or nearby the vehicle, noise may be heard from the speakers. This does not indicate a malfunction.
- Navigation and audio equipment may not function properly if they are interfered with unauthorized radio waves.
- For further information about the features of the navigation or audio equipment, refer to the instruction manuals.

WARNING

If you operate the navigation or audio equipment, you may be distracted by them, resulting in an accident. Do not operate the navigation or audio equipment while driving.

NOTICE

While the engine is stopped, using the navigation or audio equipment for a long period of time may cause the lead-acid battery to run out.

Do not use the navigation or audio equipment for a long period of time while the engine is stopped.

NOTE:


Due to poor quality of FM/AM signal, some disturbance/noise may be heard from speakers. It is recommended to switch off the tuner system to prevent the said disturbance/noise in the speaker.

Remote Audio Controls (if equipped)

Controlling basic functions of the audio system is available using the switches on the steering wheel.

The remote audio switches are available when the ignition switch is in "ACC" or "ON" position or engine switch is in ACC or ON mode.

- For operation of an audio system or a navigation system, refer to the supplementary manual, provided along with it.
- The operating procedure may be different depending on an audio system or a navigation system.

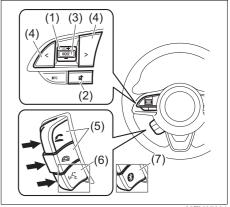

80TM07001

- (1) Volume switch
- (2) Mute switch
- (3) "MODE" switch
- (4) Select switch
- (5) Hands-free switch
- (6) Voice recognition switch (if equipped)
- (7) Bluetooth® setup switch (if equipped)

NOTE:

To use the button (5), (6) or (7), press each button in the arrow direction as shown in the illustration.

Volume Switch (1)

You can adjust volume with this switch.

- To increase the volume, press "+" side.
- To decrease the volume, press "-" side.
- The volume will continue to increase or decrease until this switch is released.

Mute Switch (2)

To mute this sound, press the switch (2).

"MODE" Switch (3)

Every time you press this switch, the audio modes such as radio, etc. will be switched in order.

Depending on a navigation system or an audio systems, you can turn on the system by pressing this switch, even when the equipment itself is turned off.

Select Switch (4)

Every time you press this switch, you can select broadcast station or music according to your preference, along with the currently selected mode.

Hands-free Switch (5)

You can use this switch for the equipment which has the hands-free function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

Voice Recognition Switch (6)* (if equipped)

You can use this switch for the equipment which has the voice recognition function. To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

*: When using Apple CarPlay[®] or Android Auto[™] on infotainment system

Apple CarPlay[®] may not be available in your country or region.

For details about Apple CarPlay, visit the following site: http://www.apple.com/ios/carplay

nttp://www.appie.com/ios/carpiay

Android Auto™ may not be available in your country or region.

For details about Android Auto, please refer to the Google support site: http://support.google.com/androidauto

Bluetooth® Setup Switch (7) (if equipped)

To use the function, you need to set up for the equipment. Refer to the supplementary manual for details.

Bluetooth


The Bluetooth[®] word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Ink.

Stop using this unit and a Bluetooth® ready device whenever requested.

This unit shares the communication frequency with other private or public wireless communication equipment such as a wireless LAN and other wireless communication radios.

You should stop using this unit immediately whenever you are notified that your unit disturbs other wireless communication.

OTHER CONTROLS AND EQUIPMENT	•	
MEMO		

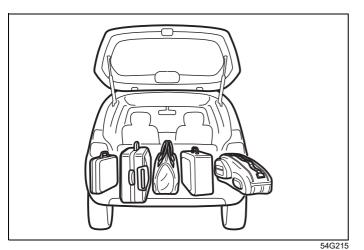

VEHICLE LOADING AND TOWING

Vehicle Loading	8-	1
Trailer Towing		

Vehicle Loading

Your vehicle was designed for specific weight capacities. The weight capacities of your vehicle are indicated by the Gross Vehicle Weight Rating (GVWR) and the Permissible maximum Axle Weight (PAW, front and rear). The GVWR and PAW (front and rear) are listed in the "SPECIFICATIONS" section.

GVWR – Maximum permissible overall weight of the fully loaded vehicle (including all the occupants, accessories and cargo plus the trailer nose weight if towing a trailer).

PAW – (Front and Rear) Maximum permissible weight on an individual axle.

Actual weight of the loaded vehicle and actual loads at the front and rear axles can only be determined by weighing the vehicle. Compare these weights to the GVWR and PAW (front and rear). If the gross vehicle weight or the load on either axle exceeds these ratings, you must remove enough weight to bring the load down to the rated capacity.

WARNING


- Never overload your vehicle. The gross vehicle weight (sum of the weights of the vehicle, all the occupants, accessories, cargo plus trailer nose weight if towing a trailer) must never exceed the Gross Vehicle Weight Rating (GVWR). In addition, never distribute a load so that the weight on either the front or rear axle exceeds the Permissible maximum Axle Weight (PAW).
- Always distribute cargo evenly. To avoid personal injury or damage to your vehicle, always secure cargo to prevent it from shifting if the vehicle moves suddenly. Place heavier objects on the floor and as far forward in the cargo area as possible. Never pile cargo higher than the top of the seat backs.

Trailer Towing

Your vehicle was originally designed to carry people and a normal amount of cargo. Do not to tow a trailer.

NOTE:

If your vehicle needs to be towed in an emergency, refer to "Towing your vehicle" in "EMERGENCY SERVICE" section.

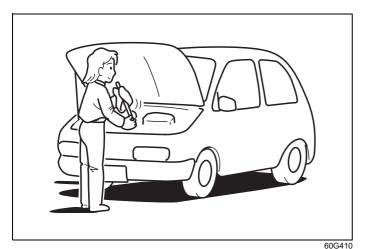

Maintenance Schedule	9-2
Periodic Maintenance Schedule	9-2
Drive Belt	9-7
Engine Oil and Filter	9-7
Engine Coolant	9-11
Air Cleaner	
Spark Plugs	9-13
Automatic Transmission Fluid	
Gear Oil	9-16
Clutch	9-18
Brakes	9-19
Steering Wheel	9-22
Tyres	9-23
Battery	9-25
Fuses	9-28
Headlight Aiming	9-31
Bulb Replacement	9-32
Headlight Washer Fluid	9-41
Wiper Blades	
Windshield Washer Fluid	9-45
Air Conditioning System	9-46
Preparation Before Winter Season	9-48



59RN05750

WARNING

Take extreme care when working on your vehicle to prevent accidental injury. Carefully observe the following precautions:

 To prevent damage or unintended activation of the airbag system or seat belt pretensioner system, check that the lead-acid battery is disconnected and the ignition switch has been in "LOCK" position or the ignition mode has been in LOCK (OFF) position for at least 90 seconds before performing any electrical service work on your Maruti Suzuki vehicle. Do not touch airbag system components, seat belt pretensioner system components or wires.

The wires are wrapped with yellow tape or yellow tubing, and the couplers are yellow for easy identification.

• Do not leave the engine running in garages or other confined areas.

(Continued)

WARNING

(Continued)

- When the engine is running, keep hands, clothing, tools, and other objects away from the fan and drive belt. Even though the fan may not be moving, it can automatically turn on without warning.
- When it is necessary to perform service work with the engine running, check that the parking brake is set fully and the transmission is in Neutral (for manual transmission vehicles) or Park (for automatic transmission vehicles)
- Do not touch ignition wires or other ignition system parts when starting the engine or when the engine is running, or you could receive an electric shock.
- Be careful not to touch a hot engine, exhaust manifold and pipes, muffler, radiator and water hoses.
- Do not allow smoking, sparks, or flames around fuel or the battery.
 Flammable fumes are present.

(Continued)

WARNING

(Continued)

- Do not get under your vehicle if it is supported only with the portable jack provided in your vehicle.
- Be careful not to cause accidental short circuits between the positive and negative battery terminals.
- Keep used oil, coolant, and other fluids away from children and pets.
 Dispose of used fluids properly; never pour them on the ground, into sewers, etc.

Maintenance Schedule

The following table shows the times when you should perform regular maintenance on your vehicle. This table shows in kilometers and months when you should perform inspections, adjustments, lubrication and other services.

WARNING

MARUTI SUZUKI recommends that maintenance on your Maruti Suzuki vehicle should be performed by a Maruti Suzuki authorized workshop.

Periodic Maintenance Schedule

"C": Clean

"R": Replace or Change

"I": Inspect, clean, adjust, lubricate or

replace as necessary

"L": Lubricate

"T": Tighten to Specified Torque

"O": Rotate

NOTE:

This table includes services as scheduled up to 80,000 km mileage. Beyond 80,000 km, carry out the same services at the same intervals respectively.

			FREE	INSPEC	TION	PERIODIC MAINTENANCE AT COST						
odome	II: This interval should be judged by ter reading or months, whichever comes	km (x1000)	1	5	10	20	30	40	50	60	70	80
first.		months	1	6	12	24	36	48	60	72	84	96
ENGIN	IE				ı	ı						
1-1.	Water pump drive belt (Wear)		_	_	I	I	I	ı	I	I	I	R
1-2.	Engine Coolent (Loyel Lookage)	First time:	Replac	e at 1,00,	,000 km c	or 60 mor	nths whic	never cor	nes first			
1-2.	Engine Coolant (Level, Leakage) Second time and after:		Replac	e at 40,00	00 km or	24 month	ns whiche	ver come	es first			
1-3.	Engine oil, engine oil filter and drain plu	g gasket (Level, Leakage)	- 1	I	R	R	R	R	R	R	R	R
1-4.	Cooling system hoses and connections	(Leakage and Damage)	- 1	I	I	I	I	I	I	I	I	- 1
1-5.	Engine Mounting & manifold fixing (Loos	se, Damage)	_	_	ı	_	I	-	- 1	_	L	-
1-6.	Valve Clearance			_	_	_	I	_	_	- 1	_	_
1-7.	Exhaust System (Noise, Leakage etc.)			I	_	- 1	-	ı	_	- 1	-	- 1
1-8.				I	-	I	-	I	-	I	-	- 1
IGNITI	ON			•	•	•	•			•		•
2-1.	Ignition wire (Damage, Deterioration)		_	_	-	I	_	ı	-	- 1	-	I
2-2.	Spark Plug (Nickel Plug)		_	_	_	_	_	R	_	_	-	R
FUEL												
		Paved-road	Clean a	after ever	y 5,000 k	m Repla	ce after e	very 40,0	000 km			
3-1.	Air cleaner filter element	Dt. 0	Clean a	after ever	y 2,500 k	m or as r	equired.	Replace	after ever	y 40,000	km	
		Dusty Condition	Replac	e more fr	equently	if dust co	ndition is	severe.				
3-2.	Fuel tank cap, fuel lines and connections	s (Leakage and Damage)	_	- 1	_	_	_	ı	_	_	_	I
3-3.	Fuel Filter	· · · · · · · · · · · · · · · · · · ·	Replac	e after ev	ery 1,00,	000 km c	or 120 mc	nths whi	chever co	mes first		
3-4.				_		_	_	I	_	_	_	1
CLUTO	CH AND TRANSMISSION											
4-1.	Clutch fluid (Level, Leakage)		ı	I	I	- 1	I	ı	I	I	ı	I
4-1.	Ciuteri liulu (Level, Leakage)	Replace after every 40,000 km or 24 months whichever comes first										
4-2.	Clutch slipping (Dragging or Excess Dar	nage)	I	I	ı	I	I	1	I	I	I	1

Ī.,			FREE	INSPE	CTION	PERIODIC MAINTENANCE AT COST						
Inter	val: This interval should be judged by odome- eading or months, whichever comes first.	km (xl000)	1	5	10	20	30	40	50	60	70	80
		months	1	6	12	24	36	48	60	72	84	96
4-3.	Manual Transmission Oil (Level, Leakage)		I	I	ı	ı	I	ı	I	ı	I	I
4-4.	Automatic Transmission Fluid (Level, Leakag	je)	Replace	e at 1,65,	000 km d	or 11 year	rs whiche	ever come	es first		•	
4-5.	Transfer Oil (4WD) (Level, Leakage)		- 1	I	I	I	I	- 1	I	- 1		I
4-0.	Transfer On (444b) (Eevel, Eeakage)		Replace	e after ev	ery 1,50,	000 km c	or 120 mc	onths whi	chever co	omes firs	t	
4-6.	Rear Differential Oil (4WD) (Level, Leakage)		I	I	I	I	I	I	I	I	I	ı
. 0.	Treat Emererman em (TVE) (Eevel, Eeanage)		Replace	e after ev	ery 1,50,	000 km c	or 120 mc	onths whi	chever c	omes firs	t	
4-7.	Automatic Transmission cooling system hose	s and pipe (Leakage and Damage)	- 1	I	1	- 1	- 1	- 1	- 1	- 1	I	I
4-8.	Gear shifter (Operation)		- 1	1	- 1	- 1	I	- 1	I	- 1	ı	- 1
DRI	/E SHAFT											
5-1.	Drive shaft noise		- 1	- 1	- 1	- 1	- 1	- 1	- 1	- 1	- 1	ı
5-2.	Drive shaft boot / Propeller shafts (boot dama	age)	-	I	I	I	I	- 1	- 1	- 1	ı	ı
BRA	KE											
6-1.	Brake Fluid (Level, Leakage)		- 1	1	- 1	I	I	I	I	I	I	I
0-1.	Blake Fluid (Level, Leakage)		Replace after every 40,000 km or 24 months whichever comes first									
6-2.	Brake pedal (Pedal - floor carpet clearance)		I	I	I	I	I	I	I	I	I	I
6-3.	Parking brake lever and cable (Play, Damage	e)	ı	ı	ı	ı	ı	ı	ı	ı	ı	Ι
6-4.	Brake disc and pad (Wear)		-	ı	I	- 1	- 1	- 1	- 1	- 1	I	I
6-5.	Brake drum and shoes (Wear)		_	_	ı	ı	ı	ı	ı	ı	ı	Τ
6-6.	Brake hoses and pipes (Fluid leakage, Dama	age)	- 1	ı	I	I	1	I	1	I	I	I
6-7.	Master cylinder, wheel cylinder and caliper piston (Fluid leakage, Boot/Seal damage)			I	I	I	I	1	I	1	I	I
WHE	EL		•		•	•	•	•	•	•	•	
7-1.	Tires (Air pressure, Abnormal wear, Crack ar	nd Rotation)	I	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O	I&O
7-2.	Wheels (Damage)		- 1	ı	ı	ı	1	I	1	I	ı	I
7-3.	Front/Rear wheel bearing (Loose, Damage)		I	I	I	ı	I	I	I	I	I	I
		•		•								

			FRE	INSPEC	CTION		PER	ODIC MA	AINTENA	NCE AT	COST	
eter re	al: This interval should be judged by odom- eading or months, whichever comes first.	km (xl000)	1	5	10	20	30	40	50	60	70	80
	g	months	1	6	12	24	36	48	60	72	84	96
FROM	NT / REAR SUSPENSION											
8-1.	Suspension strut (Oil leakage, Damage)		I	I	I	I	I	I	I	I	I	I
8-2.	Suspension arms / Knuckle support and To	orsion rods (Loose, Damage)	_	ı	I	1	ı	I	ı	1	I	I
8-3.	Rear spring (Damage)		I	ı	I	I	ı	I	I	I	I	I
8-4.	Shock absorbers (Oil leakage, Damage)			1	ı	1	1	I	- 1	1	I	- 1
8-5.	All bolts and nuts (Loose)			Т	Т	Т	Т	Т	Т	Т	Т	Т
STEE	RING											
9-1.	Steering wheel (Play, Loose)			I	I	I	I	I	I	I	I	I
9-2.	All rods and arms (Loose, Damage, Wear)		I	ı	I	ı	ı	I	I	ı	I	I
9-3.	Tilt Steering (Operation)		I	ı	I	I	ı	I	ı	ı	I	ı
ELEC	TRICAL											
10-1.	Battery - electrolyte (Level, leakage) and v	oltage	I	ı	I	ı	ı	I	I	ı	I	ı
10-2.	Wiring harness connection (Loose, Damage)			ı	ı	ı	ı	I	I	ı	I	ı
10-3.	3. Lighting system (Operation, Stains, Damage)			ı	I	I	ı	I	I	1	I	ı
10-4.	4. Wiper (Operation)			ı	I	1	ı	I	I	1	I	I
10-5.	Horn (Operation)			ı	I	I	ı	I	I	1	I	I
10-6.	AUX, USB and accessory socket (if equipped) (Operation)			ı	I	ı	ı	I	ı	ı	I	ı

WARNING

The shock absorbers are filled with high pressure gas. Never attempt to disassemble them or throw them into a fire. Avoid storing them near a heater or heating device. When scrapping the absorber, the gas must be released from the absorber safely. Ask your Maruti Suzuki authorized workshop for assistance.

		FREE INSPECTION				PERI	ODIC MA	AINTENA	NCE AT (COST	
Interval: This interval should be judged by odometer reading or months, whichever comes first.	km (xl000)	1	5	10	20	30	40	50	60	70	80
,	months	1	6	12	24	36	48	60	72	84	96
BODY											
11-1. All chassis bolts and nuts (Tighten)		-	Т	Т	Т	Т	Т	Т	Т	Т	Т
11-2. All latches, hinges and locks (Function)		I	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L	I&L
ROAD TEST											
12-1. Operation of Brakes, gear shifting and spe	12-1. Operation of Brakes, gear shifting and speedometer			I	- 1	- 1	I	I	I	- 1	I
12-2. Body and chassis noise	2-2. Body and chassis noise			- 1	- 1	- 1	- 1	- 1	- 1	- 1	I
AIR CONDITIONER											
13-1. Check belt tension		1	- 1	- 1	- 1	- 1	I	- 1	- 1	- 1	I
13-2. Tighten compressor mounting bolt		-	Т	Т	Т	Т	Т	Т	Т	Т	Т
13-3. All hose joint (Check, Tighten)		I	- 1	- 1	- 1	- 1	- 1	- 1	- 1	- 1	I
13-4. Check functioning of Recirculating flap		I	ı	I	ı	ı	I	I	I	1	I
13-5. Clean condenser with low pressure water			С	С	С	С	С	С	С	С	С
13-6. Check belt for frayed edges			ı	I	ı	ı	I	I	I	1	I
13-7. Check all mounting bolts	3-7. Check all mounting bolts			ı	I	ı	I	I	ı	ı	I
13-8. Air conditioner filter element	B. Air conditioner filter element			I	I	R	I	I	R	I	I

Drive Belt


WARNING

When the engine is running, keep hands, hair, clothing, tools, etc. away from the moving fan and drive belts.

Check that the drive belt tension is correct while the engine is stopped. If the belt is too loose, insufficient battery charging, engine overheating, poor air conditioning, or excessive belt wear can result. When you push the belt with your thumb midpoint between the pulleys, there should be a deflection according to the following chart.

The belts should also be examined to ensure that they are not damaged.

If you need to replace or adjust the belt have it done by a Maruti Suzuki authorized workshop.

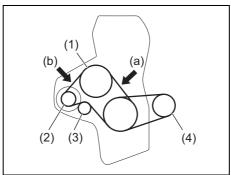

78RB07001

- (1) Water pump (2) Generator
- (3) Idler pulley
- (4) Air conditioner compressor

 
Drive belt deflection (100 N)

- (a) New:
 - 4.8 5.9 mm Readjustment: 6.2 - 7.1 mm
- (b) New:

3.2 - 4.1 mm Readjustment: 4.4 - 5.0 mm

Engine Oil and Filter Specified Oil

For India



56RM07013

(1) Preferred


For India, check that the engine oil you use comes under the quality classification of API SN. Select the appropriate oil viscosity according to the above chart.

For India, be sure that the engine oil you use comes under the quality classification as listed below.

- · API SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

Except for India

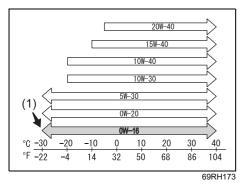

(1) Preferred

Except for India, be sure that the engine oil you use comes under the quality classification as listed below.


- API SL, SM, SN, SP
- ILSAC GF-6

SAE 0W-16 (1) is the best choice for good fuel economy and good startability in cold weather.

NOTE:

- We recommend that you use Maruti Suzuki genuine oil. To purchase it, see a Maruti Suzuki authorized workshop.
- The replacement timing varies with the type of engine oil that you choose. Refer to "Maintenance schedule" in this section for corresponding maintenance schedule.

Oil Level Check

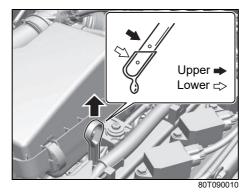


It is important to keep the engine oil at the correct level for proper lubrication of your vehicle's engine. Check the oil level with the vehicle on a level surface. The oil level indication may be inaccurate if the vehicle is on a slope. The oil level should be checked either before starting the engine or at least 5 minutes after stopping the engine.

Pull out the oil dipstick, wipe the oil off with a clean cloth, insert the dipstick all the way into the engine, and then remove it again. The oil on the stick should be between the upper and lower limits shown on the stick. If the oil level indication is near the lower limit, add enough oil to raise the level to the upper limit.

NOTICE

Failure to check the oil level regularly could lead to serious engine trouble due to insufficient oil.

Refilling

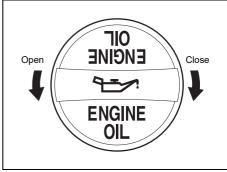


55T090140

Remove the oil filler cap and pour oil slowly through the filler hole to bring the oil level to the upper limit on the dipstick. Be careful not to overfill the oil. Too much oil is almost as bad as too little oil. After refilling, start the engine and allow it to idle for about a minute. Stop the engine, wait about 5 minutes and check the oil level again.


Changing Engine Oil and Filter

Drain the engine oil while the engine is still warm.

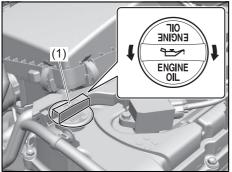

80T090020

1) Remove the oil filler cap (1).

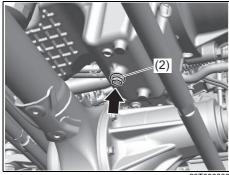

80T09003

- 2) Place a drain pan under the drain plug.
- 3) Using a wrench, remove the drain plug(2) and drain the engine oil.

A CAUTION

The engine oil temperature may be high enough to burn your fingers when the drain plug is loosened. Wait until the drain plug is cool enough to touch with your bare hands.

WARNING

Engine oil can be hazardous. Children and pets may be harmed by swallowing new or used oil. Keep new and used oil and used oil filters away from children and pets.

Repeated, prolonged contact with used engine oil may cause skin cancer.

Brief contact with used oil may irritate skin.

To minimize your exposure to used oil, wear a long-sleeve shirt and moisture-proof gloves (such as dishwashing gloves) when changing oil. If oil contacts your skin, wash thoroughly with soap and water.

Launder any clothing or rags if it is with oil.

Recycle or properly dispose of used oil and oil filters.


4) Reinstall the drain plug with new gasket. Tighten the plug with a wrench to the specified torque.

Tightening torque for drain plug: 35 Nm (3.6 kg-m)

NOTE:


Ask your Maruti Suzuki authorized workshop for changing engine oil and filter if you have difficulties.

Oil Filter Replacement

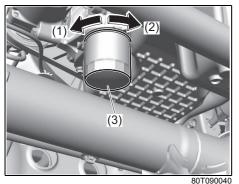

- 00
- (1) Loosen (counterclockwise)
- (2) Tighten (clockwise)
- 1) Using an oil filter wrench, turn the oil filter (3) counterclockwise and remove it.
- Using a clean rag, wipe off the mounting surface on the engine where the new filter will be seated.
- Smear a small amount of engine oil around the rubber gasket of the new oil filter.
- Screw the new filter by hand until the filter gasket contacts the mounting surface.

Tightening (viewed from filter top)

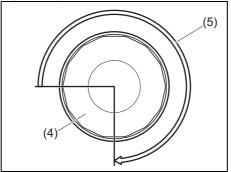

80T090050

- (4) Oil filter
- (5) 3/4 turn

NOTICE

To tighten the oil filter properly, it is important to accurately identify the position at which the filter gasket first contacts the mounting surface.

5) Turn the oil filter clockwise as specified below from the point of contact with the mounting surface (or to the specified torque) using an oil filter wrench.

Tightening torque for oil filter: 3/4 turn or 14 Nm (1.4 kg-m)

NOTICE

To prevent oil leakage, check that the oil filter is tight, but do not overtighten it.

Refilling with Oil and Oil Leakage Check

- 1) Pour oil through the filler hole and install the filler cap.
 - For the approximate capacity of the oil, refer to "Recommended fuel / lubricants and capacities (approx.)" in "SPECIFICATIONS" section.
- Start the engine and carefully check the oil filter and the drain plug for leakage. Run the engine at various speeds for at least 5 minutes.
- Stop the engine and wait about 5 minutes. Check the oil level again and add oil if necessary. Check for leakage again.

NOTICE

- When replacing the oil filter, it is recommended that you use a genuine Maruti Suzuki replacement filter. If you use an aftermarket filter, check that it is of equivalent quality and follow the manufacturer's instructions.
- Oil leakage from the periphery of the oil filter or drain plug indicate incorrect installation or gasket damage. If you find any leakage or are not sure that the filter has been properly tightened, have your vehicle inspected by a Maruti Suzuki authorized workshop.

Engine Coolant

Selection of Coolant

To maintain optimum performance and durability of your engine, use Maruti Suzuki genuine coolant or equivalent.

This type of coolant is the best for cooling system for the following reasons:

- The coolant helps maintain proper engine temperature.
- It gives proper protection against freezing and boiling.
- It gives proper protection against corrosion and rust.

Failure to use the proper coolant can damage your cooling system. Your Maruti Suzuki authorized workshop can help you select the proper coolant.

NOTICE

SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

NOTICE

To avoid damaging your cooling system:

- Always use a high quality ethylene glycol base non-silicate type coolant diluted with distilled water or deionized water at the correct mixture concentration.
- Check that the proper mix is 50/50 coolant to distilled water or deionized water and in no case higher than 50/50. Concentrations greater than 50/50 coolant to distilled water or deionized water will cause overheating conditions.
- Do not use straight coolant nor plain water.
- Do not add extra inhibitors or additives. They may not be compatible with your cooling system.
- Do not mix different types of base coolants. Doing so may result in accelerated seal wear and/or the possibility of severe overheating and extensive engine/automatic transmission damage.

Coolant Level Check

Check the coolant level at the reservoir tank, not at the radiator. With the engine cool, the coolant level should be between "FULL" and "LOW" marks.

Adding Coolant


WARNING

Swallowing engine coolant can cause severe injury or death. Inhaling coolant mist or vapors or getting coolant in your eyes could result in severe injury.

- Do not drink antifreeze or coolant solution. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician.
- Avoid inhaling coolant mist or hot vapors. If inhaled, remove to a fresh air area.
- If coolant gets in the eyes, flush with water and seek medical attention.
- · Wash thoroughly after handling coolant.
- · Keep engine coolant out of the reach of children and pets.

NOTICE

SUZUKI LLC: Super (Blue) coolant; This coolant is already diluted to the proper percentage. Do not dilute with distilled water additionally. Doing so may result in the possibility of freezing and/or overheating coolant.

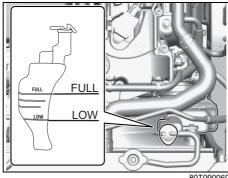

80T090060

If the coolant level is below "LOW" mark. coolant should be added. While the engine is cool, remove the reservoir tank cap and add coolant until the reservoir tank level reaches "FULL" mark. Never fill the reservoir tank above "FULL" mark.

NOTICE


When putting the cap on the reservoir tank, line up the mark on the cap and the mark on the tank. Failure to follow this can result in coolant leakage.

Coolant Replacement

Since special procedures are required, ask vour Maruti Suzuki authorized workshop for this job.

Air Cleaner

If the air cleaner is clogged with dust, there will be greater intake resistance, resulting in decreased power output and increased fuel consumption.

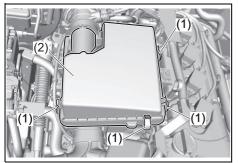


80T090070

- 1) Unclamp the side clamps (1).
- 2) Hold up the air cleaner upper case (2).
- 3) Remove the element from the air cleaner case. If it appears to be dirty, clean or replace it with a new one.
- 4) Reinstall the air cleaner case securely.

Spark Plugs

Spark Plug Replacement and Inspection

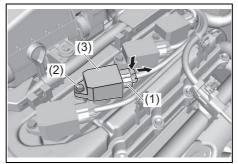


80T090080

To access the spark plug:

- 1) Disconnect the coupler (1) while pushing the release lever.
- 2) Remove the bolt (2).
- 3) Pull out the ignition coil (3) straight.

NOTE:


During installation, check that the wires, couplers, sealing rubber of air cleaner chassis and washers, are correctly returned in place.

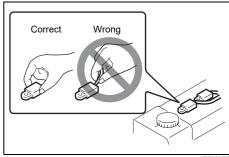

78K179

NOTICE


- When pulling out the ignition coils, do not pull on the cable. Pulling on the cable can damage it.
- When servicing the iridium/platinum spark plugs (slender center electrode type plugs), do not touch the center electrode, as it is easy to be damaged.

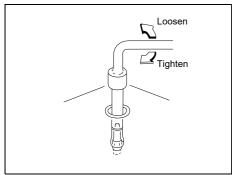

60G160S

NOTICE

- When installing the spark plugs, screw them in with your fingers to avoid stripping the threads. Tighten the spark plugs with a torque wrench to 17.5 Nm (1.7 kgm). Do not allow contaminants to enter the engine through the spark plug holes when the plugs are removed.
- Never use spark plugs with the wrong thread size.

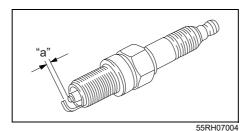

a"·

Spark plug gap "a":

KR6A-10 0.95-1.05mm

NOTICE

When replacing spark plugs, you should use the brand and type specified for your vehicle. For the specified plugs, refer to "SPECIFICATIONS" section in the end of this book. If you wish to use a brand of spark plug other than the specified plugs, consult with a Maruti Suzuki authorized workshop.

Automatic Transmission Fluid

Specified Fluid

Use an automatic transmission fluid SUZUKI ATF3317 or Mobil ATF3309.

Fluid Level Check

When checking the automatic transmission fluid level, perform it when the fluid temperature is 70 to 80 °C (158 to 176°F). If the fluid temperature can not be measured, ask your Maruti Suzuki authorized workshop for this job.

NOTICE

Driving with too much or too little fluid can damage the transmission.

You must check the fluid level with the automatic transmission fluid at normal operating temperature.

To check the fluid level:


- To warm up the transmission fluid, drive the vehicle or idle the engine until the engine coolant temperature light (blue color) goes off.
- 2) Then drive for ten more minutes.

NOTICE

Be sure to use the specified automatic transmission fluid. Using automatic transmission fluid other than SUZUKI ATF3317 or Mobil ATF3309 may damage the automatic transmission of your vehicle.

NOTE:

Do not check the fluid level if you have just driven the vehicle for a long time at high speed, or if you have driven in city traffic in hot weather. Wait until the fluid cools down (about 30 minutes), or the fluid level indication will not be correct.

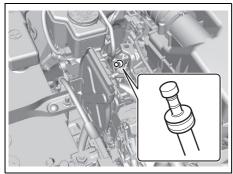


80T090090

- 3) Park your vehicle on level ground.
- 4) Apply the parking brake and then start the engine in "P" (Park). Let it idle for

- two minutes and keep it running during the fluid level check.
- 5) With your foot on the brake pedal, move the gearshift lever through each gear, pausing for about three seconds in each range. Then move it back to the "P" (Park) position.


WARNING

Be sure to depress the brake pedal when moving the gearshift lever, or the vehicle can move suddenly.

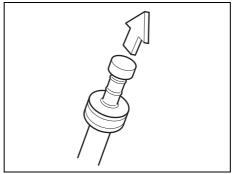

81PN159

 Remove the dipstick, clean it and push it back in until the cap seats. Then pull out the dipstick. Check both sides of the dipstick, and read the lowest level. The fluid level should be between the two marks on the dipstick.

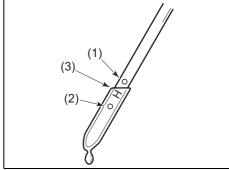

78RB07055

- (1) FULL
- (2) LOW
- (3) The lowest point = Fluid level
- 8) Add just enough specified fluid through the dipstick hole to fill the transmission oil to the proper level.

NOTICE

After checking or adding oil, be sure to insert the dipstick securely.

Changing Oil

Since special procedures, materials, and tools are required to change the automatic transmission oil, ask your Maruti Suzuki authorized workshop for this job.

 
Gear Oil

Manual Transmission Oil / transfer Oil / Front/rear Differential Oil

When adding gear oil, use gear oil with the appropriate viscosity and grade as shown in the chart below.

We highly recommend you use "MARUTI GENUINE GEAR OIL 75W" for manual transmission oil and transfer oil.


Manual transmission oil/Transfer oil



54P120706

We highly recommend you use "MARUTI GENUINE GEAR OIL 75W-85" for front/rear differential oil.

 
Front/rear differential oil



78RB07007

Gear Oil Level Check


Manual transmission

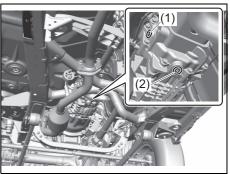

80T090100

- (1) Oil filler and level plug
- (2) Oil drain plug


Transfer

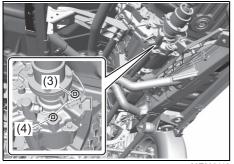

80T090110

- (3) Oil filter and level plug
- (4) Oil drain plug

Front/rear differential

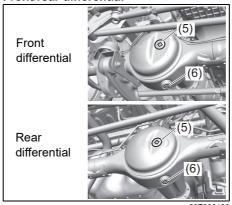

30T090120

- (5) Oil filter and level plug
- (6) Oil drain plug

To check the gear oil level, use the following procedure:

- Park the vehicle on a level surface with the parking brake applied. Then, stop the engine.
- 2) Remove the oil filler and level plug.

For the manual transmission;

3) If gear oil flows from the plug hole, the oil level is correct. Reinstall the plug. If gear oil does not flow from the plug hole, add oil through the filler plug hole until oil flows a little from the plug hole. For the transfer and front/rear differential;

- Check the inside of the hole with your finger. If the oil level comes up to the bottom of the plug hole, the oil level is correct. If so, reinstall the plug.
- 4) If the oil level is low, add gear oil through the oil filler and level plug hole until the oil level reaches the bottom of the filler hole, and then reinstall the plug.

Tightening torque for oil filler and level plug

Manual transmission (1)(2): 23 Nm (2.3 kg-m)

Transfer (3)(4): 23 Nm (2.3 kg-m)

Front/rear differential (5)(6): (5)50 Nm (5.0 kg-m) (6)55 Nm (5.6 kg-m)

A CAUTION

After driving the vehicle, the gear oil temperature may be high enough to burn you. Wait until the oil filler and level plug are cool enough to touch with your bare hands before inspecting gear oil level.

NOTICE


Be sure to use new plug with new gasket to avoid looseness of the plug and oil leakage.

Gear Oil Change

Since special procedures, materials and tools are required, ask your Maruti Suzuki authorized workshop for this job.

Clutch

Clutch Pedal

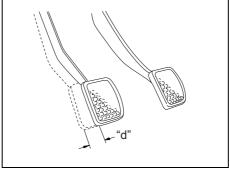


54G274

Clutch pedal play "d": MAX 10 mm

Measure the clutch pedal play by moving the clutch pedal with your hand and measuring the distance it moves until you feel slight resistance. The play in the clutch pedal should be less than the specified values. If the play is more than the above, or clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop.

Clutch Fluid

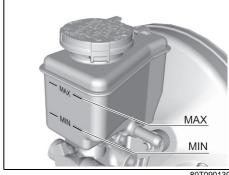

80T090130

Check the clutch pedal for smooth operation and clutch fluid level from time to time. If clutch dragging is felt with the pedal fully depressed, have the clutch inspected by a Maruti Suzuki authorized workshop. If the clutch fluid level is near "MIN" line. fill it up to "MAX" line with DOT3 or SAF J1703 brake fluid.

NOTICE

Clutch fluid is supplied from brake fluid reservoir. If your clutch fluid level is increased or near the "MIN" line, there is a possibility of clutch or brake fluid leakage or abnormal wear of clutch. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Brakes

Brake Fluid



80T090130

Check the brake fluid level by looking at the reservoir in the engine compartment. Check that the fluid level is between "MAX" and "MIN" lines

WARNING

- Failure to follow the guidelines below can result in personal injury or serious trouble in the brake system.
 - If the brake fluid in the reservoir drops below a certain level, the brake warning light on the instrument cluster will come on (the engine must be running with the parking brake fully disengaged). Should the light come on, immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.
 - A rapid fluid loss indicates leakage in the brake system. In this case, immediately ask your Maruti Suzuki authorized workshop to inspect the brake system.
 - Do not use any fluid other than DOT3 or SAE J1703 brake fluid.
 Do not use reclaimed fluid or fluid that has been stored in old or open containers. It is essential that foreign particles and other liquids are kept out of the brake fluid reservoir.

(Continued)

WARNING

(Continued)

 Brake fluid is harmful or fatal if swallowed, and harmful if it comes in contact with skin or eyes. If swallowed, do not induce vomiting. Immediately contact a poison control center or a physician. If brake fluid gets in eyes, flush eyes with water and seek medical attention. Wash thoroughly after handling. Solution can be poisonous to animals. Keep out of reach of children and animals.

NOTICE

- If your brake fluid level is near the "MIN" line, there is a possibility of brake pad and/or shoe wear and brake fluid leakage. In this case, ask your Maruti Suzuki authorized workshop to inspect the brake system.
- Brake fluid can damage painted surfaces. Be careful when refilling the reservoir.


NOTE:

- The fluid level can be expected to gradually fall as the brake pad and/or shoe wear.
- Brake fluid absorbs water over time and brake fluid with high water content may cause vapor lock or brake system malfunction.

Replace the brake fluid according to the maintenance schedule in this owner's manual.

Brake Pedal

Check brake pedal stroke. If the stroke is so large, have the brake system inspected by a Maruti Suzuki authorized workshop. If you doubt the brake pedal is at its normal height, check it as follows:

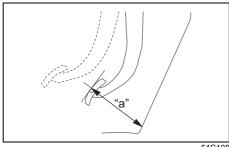

54G108

Minimum distance between brake pedal and floor carpet "a"


89 mm

With the engine running, measure the distance between the brake pedal and floor carpet when the pedal is depressed with approximately 30 kg of force. The minimum distance required is as specified. Since your vehicle's brake system is self-adjusting, there is no need for pedal adjustment.

If the pedal to floor carpet distance as measured above is less than the minimum distance required, have your vehicle inspected by a Maruti Suzuki authorized workshop.

NOTE:

- When measuring the distance between the brake pedal and floor wall, be sure not to include the floor mat or rubber on the floor carpet in your measurement.
- Measure the distance at the brake pedal's side facing toward the driver's door.

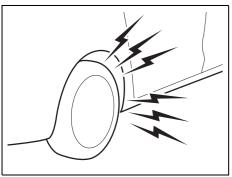

52RM70500

WARNING

If the brake pad lining becomes worn and it has reached its minimum thickness, squealing noise sounds during braking.

If you hear this noise, have your vehicle inspected by a Maruti Suzuki authorized workshop.


Continued driving with this condition can cause an accident.

A CAUTION

If you experience any of the following problems with your vehicle's brake system, have your vehicle inspected by a Maruti Suzuki authorized workshop.

- Poor braking performance
- Uneven braking (brakes not working uniformly on all wheels)
- Excessive pedal travel
- Brake dragging

Parking Brake

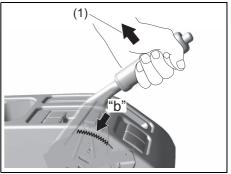


80T090140

Ratchet tooth specification "b": 4th – 9th Lever pull force (1): 200 N (20 kg)

Check the parking brake for proper adjustment by counting the number of clicks made by the ratchet teeth as you slowly pull up on the parking brake lever to the point of full engagement. The parking brake lever should stop between the specified ratchet teeth and the rear wheels should be securely locked. If the parking brake is not properly adjusted or the brakes drag is suspected even after the lever has been fully released, have the parking brake inspected and/or adjusted by a Maruti Suzuki authorized workshop.


Brake Discs and Brake Drums Brake disc

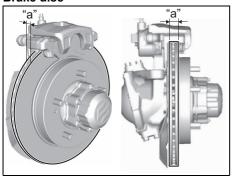

80T090150

Brake location	Minimum thickness "a"
Front wheels	15.0 mm

Brake drum

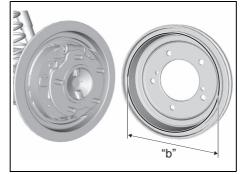


80T090160

Brake location	Maximum inner diameter "b"
Rear wheels	222 mm

If the measured thickness or inner diameter of the most worn part falls below or exceeds the value indicated above, the parts should be replaced with a new one. The measurement involves disassembling each brake and requires the use of a micrometer or caliper, which must be done according to the instructions described in the relevant service manual or available from the relevant repair information site.

Steering Wheel

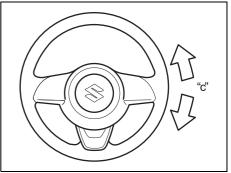


78RB07012

Steering wheel play "c": 0-30 mm

Check the free play of the steering wheel by gently turning it from left to right and measuring the distance that it moves before you feel slight resistance. The play should be between the specified values.

Check that the steering wheel turns easily and smoothly without rattling by turning it all the way to the right and to the left while driving very slowly in an open area. If the amount of free play is not as specified or you find anything else to be wrong, an inspection must be performed by a Maruti Suzuki authorized workshop.

Tyres

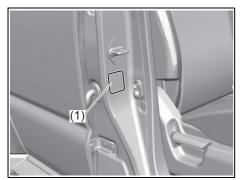

80T090180

The front and rear tyre pressure specifications are listed in the tyre information label (1). Both front and rear tyres should have the specified tyre pressure.

Note that the value does not apply to the compact spare tyre, if equipped.

Tyre Inspection

Inspect your vehicle's tyres at least once a month or before long trip by performing the following checks:


 Measure the air pressure with a tyre gauge. Adjust the pressure if necessary.

WARNING

- Air pressures should be checked when the tyres are cold or you may get inaccurate readings.
- Check the tyre pressure from time to time while inflating the tyre gradually, until the specified pressure is obtained.
- Never under-inflate or over-inflate the tyres.

Under-inflation can cause unusual handling characteristics or can cause the rim to slip on the tyre bead, resulting in an accident or damage to the tyre or rim.

Over-inflation can cause the tyre to burst, resulting in personal injury. Over-inflation can also cause unusual handling characteristics which may result in an accident.

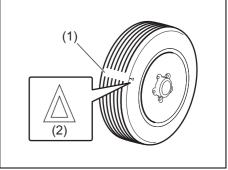

80T090190

- (1) Tread wear indicator
- (2) Indicator location mark
- 2) Check that the depth of the tread groove is more than 1.6 mm. To help you check this, the tyres have moldedin tread wear indicators in the grooves. When the indicators appear on the tread surface, the remaining depth of the tread is 1.6 mm or less and the tyre should be replaced.
- Check for abnormal wear, cracks and damage. Any tyres with cracks or other damage should be replaced. If any tyres show abnormal wear, have them inspected by a Maruti Suzuki authorized workshop.

A CAUTION

Hitting curbs and running over rocks can damage tyres and affect wheel alignment. Have tyres and wheel alignment checked periodically by a Maruti Suzuki authorized workshop.

- 4) Check for loose wheel nuts.
- 5) Check that there are no nails, stones or other objects sticking into the tyres.

WARNING

 Your Maruti Suzuki vehicle is equipped with tyres which are all the same type and size. This is important to ensure proper steering and handling of the vehicle. Never mix tyres of different size or type on the four wheels of your vehicle. The size and type of tyres used should be only those approved by Maruti Suzuki as standard or optional equipment for your vehicle.

(Continued)

WARNING


(Continued)

- Replacing the wheels and tyres equipped on your vehicle with certain combinations of aftermarket wheels and tyres can significantly change the steering and handling characteristics of your vehicle.
- Therefore, use only those wheel and tyre combinations approved by Maruti Suzuki as standard or optional equipment for your vehicle.

NOTICE


- Replacing the original tyres with tyres of a different size may result in false speedometer or odometer readings. Check with a Maruti Suzuki authorized workshop before purchasing replacement tyres that differ in size from the original tyres.
- Replacing a tyre with one of a different size, or using different brands among the four tyres can result in damage to the drive train.

Tyre Rotation 5-tyre rotation

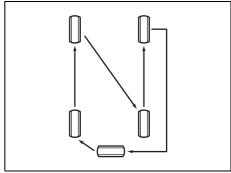

80T090200

4-tyre rotation

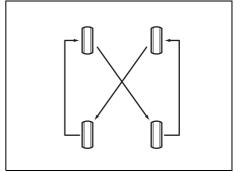

65D459

To avoid uneven wear of your tyres and to prolong their life, rotate the tyres as illustrated. Tyres should be rotated every 10000 km. After rotation, adjust front and rear tyre pressures to the specification listed on your vehicle's Tyre Information Label.

NOTE:

 To change the tyres, refer to "Changing Wheels" in "EMERGENCY SERVICE" section.

Wheel Balancing

If the vehicle vibrates abnormally on smooth road, have the wheel balanced at a Maruti Suzuki authorized workshop.

Wheel Alignment

In case of abnormal tyre wear or pulling towards one side, have the wheel aligned at a Maruti Suzuki authorized workshop.

Tubeless Tyres

The vehicle is equipped with Tubeless Tyres. In tubeless tyre, a thin layer of butyl rubber is used for lining the inside of the tubeless tyre. This layer is to prevent air loss and fulfilling the purpose of tube. The air pressure is maintained by the sealing between tyre bead and wheel rim. Tubeless tyres are having advantage of slow air loss and preventing sudden deflation while driving.


Care and maintenance tips for tubeless tyres

- Always maintain recommended inflation pressure. Driving continuously at low inflation pressure can lead to tyre damage.
- In case any leakage is found, check for any nail penetration/valve core damage or rim bent. Damaged wheel must not be used.
- 3) In case tyre has run at low pressure, it must be inspected for any defect.
- Whenever new tyre is fitted, replace the valve.
- If continuous high speed driving is required, increase tyres pressure by 5 psi over recommended inflation pressure.
- 6) Never run the tyre beyond TWI (Tread wear indicator). The tyre is recommended to be replaced when the remaining tread has worn to this point. The indicators are spaced across the tread around the tyre marked by a triangular symbol (TWI).
- Always prefer tubeless tyre mounting machine. In case of manual mountingtyre/wheel rim damage may occur.
- In case of any problem, please get in touch with a Maruti Suzuki authorized workshop.

Battery

WARNING

- Batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- When checking or servicing the battery, disconnect the negative cable. Be careful not to cause a short circuit by allowing metal objects to contact the battery posts and the vehicle at the same time.
- To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions in "EMERGENCY SERVICE" section if it is necessary to jump-start your vehicle.
- Diluted sulfuric acid spilled from battery can cause blindness or severe burns. Use proper eye protection and gloves. Flush eyes or body with ample water and get medical care immediately if suffered. Keep batteries out of reach of children.

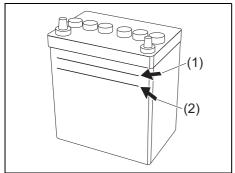

80T090530

For maintenance-free battery (cap-less type), you need not add water. For traditional type battery, which has water filler caps, the level of the battery solution must be kept between the upper level line "MAX" (1) and the lower level line "MIN" (2) at all times. If the level is found to be below the lower level line (2), add distilled water to the upper level line (1). You should periodically check the battery, battery terminals, and battery hold-down bracket for corrosion. Remove corrosion using a stiff brush and ammonia mixed with water, or baking soda mixed with water. After removing corrosion, rinse with clean water.

If your vehicle is not going to be driven for a month or longer, disconnect the cable from the negative terminal of the battery to help prevent discharge.

WARNING

If the battery is used with battery level being less than the lower level line "MIN" (2), it may cause reduced battery life, an exothermic heat, or an explosion by hydrogen gas occurring from the battery. Do not use the battery with battery level being less than the lower level line "MIN" (2).

NOTICE

 If the battery liquid is added more than the upper level line "MAX" (1), liquid may leak by vibrations during driving or liquid may spray out in some case depending on the condition of battery charging. These may cause damage to the parts near the battery. If the battery liquid overspills, immediately wash away with water. Do not add the battery liquid more than the upper level line "MAX" (1).

(Continued)

NOTICE


(Continued)

 If your vehicle is equipped with the ENG A-STOP system and the battery which is exclusive for the ENG A-STOP system is used, only use the specified type of battery for ENG A-STOP system. Refer to "SPECIFICATIONS" section for details. Otherwise, you could damage your vehicle, and the ENG A-STOP system could not be available. If a vehicle battery has to be replaced, consult with a Maruti Suzuki authorized workshop.

NOTE:

The battery liquid is consumed when the battery is used. If the level is found to be less than the center of upper level "MAX" (1) and lower level "MIN" (2), add distilled water till it reaches the upper level line "MAX" (1).

Replacement of the battery

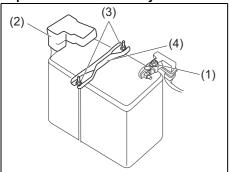

78RB07019

To remove the battery:

- 1) Disconnect the negative cable (1).
- 2) Disconnect the positive cable (2).
- 3) Remove the retainer nuts (3) and remove the retainer (4).

To install the battery:

- Install the battery in the reverse order of removal.
- 2) Tighten the bracket bolt and battery cables securely.

NOTE:

- When the battery is disconnected, some of the vehicle's functions will be initialized and/or deactivated.
 - These functions must be required to reset after the battery is reconnected.
- Do not disconnect the battery terminals for at least one minute after the ignition switch is turned off, or the engine switch is pressed to change the ignition mode to "LOCK" (OFF).


WARNING

Batteries contain toxic substances including sulfuric acid and lead. They could have potential negative consequences for the environment and human health. Used batteries must be disposed of or recycled according to applicable rules or regulations and must not be disposed of with ordinary household trash. Make sure not to tip over the battery when you remove it from the vehicle. Otherwise, sulfuric acid could run out and you might get injury.

NOTICE

After stopping the engine, controller and system are operated for a while. Therefore, before removing the battery, wait for more than one minute after turning the ignition switch to "OFF" or changing the ignition mode to "LOCK" (OFF).

(Battery label)

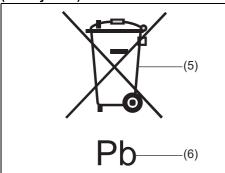

51KM042

- (5) Crossed-out wheeled bin symbol
- (6) Chemical symbol of "Pb"

The crossed-out wheeled bin symbol (5) located on the battery label indicates that the used battery should be collected separately from ordinary household trash. The chemical symbol of "Pb" (6) indicates the battery contains more than 0.004% lead.

By ensuring the used battery is disposed of or recycled correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate trash handling of the battery. The recycling of materials will help to conserve natural resources. For more detailed information about disposing of or recycling the used battery, consult with a Maruti Suzuki authorized workshop.

Fuses

Your vehicle has three types of fuses, as described below:

Main fuse

The main fuse takes current directly from the lead-acid battery.


Primary fuses

These fuses are between the main fuse and individual fuses, and are for electrical load groups.

Individual fuses

These fuses are for individual electrical circuits.


To remove a fuse, use the fuse puller provided in the fuse box cover.

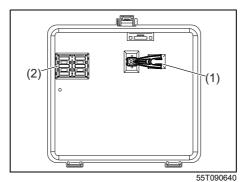

(1) Fuse puller

(2) Spare fuse


Fuses in Engine Compartment

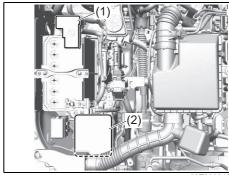

80T09021


- (1) Main fuse box
- (2) Relay box

Main fuse box

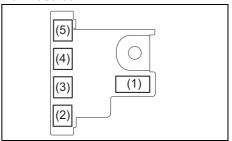

78RB07022

Relay box

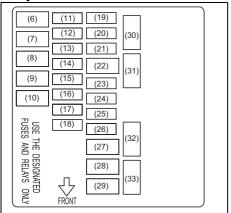

78RB07023


MAIN	MAIN FUSE / PRIMARY FUSE								
(1)	120 A	FL1							
(2)	100 A	FL2							
(3)	80 A	SPARE							
(4)	100 A	FL4							
(5)	50 A	FL5							
(6)	50 A	Ignition switch							
(7)	40 A	ABS motor							
(8)	_	Blank							

(9)	30 A	Blower fan
(10)	30 A	Starter motor
(11)	30 A	Headlight cleaner
(12)	15 A	Headlight (Right)
(13)	15 A	Headlight (Left)
(14)	25 A	ABS/ESP [®] control module
(15)	30 A	DCDC 1
(16)	-	Blank
(17)	25 A	Headlight high
(18)	30 A	Back up
(19)	30 A	DCDC 2
(20)	15 A	Fuel injection
(21)	15 A	Transmission
(22)	50 A	Ignition sw2
(23)	10 A	A/C compressor
(24)	10 A	4WD
(25)	20 A	Front fog light
(26)	_	Blank
(27)	40 A	Power steering
(28)	_	Blank
(29)	40 A	Radiator fan

(30)	5 A	T/M 2
(31)	5 A	Starter motor signal
(32)	15 A	Headlight high (Left)
(33)	15 A	Headlight high (Right)

The main fuse, primary fuses and some of the individual fuses are located in the engine compartment. If the main fuse blows, no electrical component will function. If a primary fuse blows, no electrical component in the corresponding load group will function. When replacing the main fuse, a primary fuse or an individual fuse, use a genuine Maruti Suzuki replacement parts or equivalent for individual fuses.

To remove a fuse, use the fuse puller provided in the fuse box. The amperage of each fuse is shown in the back of the fuse box cover.

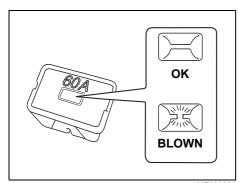

55T090620

WARNING

If the main fuse or a primary fuse blows, have your vehicle inspected by a Maruti Suzuki authorized workshop. Always use a genuine Maruti Suzuki replacement. Never use a substitute such as a wire even for a temporary repair, or extensive electrical damage and a fire can result.


NOTE:

Check that the fuse box always carries spare fuses.

Fuses Under Dashboard




80T090220

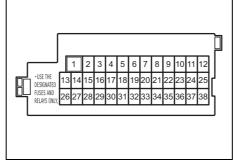

80P0185

PRIMARY FUSE		
(1)	30 A	Power window
(2)	10 A	Meter
(3)	15 A	Ignition coil
(4)	5 A	Ignition-1 signal 2
(5)	20 A	Blank
(6)	20 A	Blank
(7)	-	Blank
(8)	20 A	Door lock
(9)	15 A	Steering lock
(10)	10 A	Hazard
(11)	5 A	A-STOP
(12)	10 A	Rear fog lamp
(13)	5 A	ABS/ESP [®] control module
(14)	15 A	Seat heater
(15)	5 A	Ignition-1 signal 3
(16)	10 A	Dome light-2
(17)	5 A	Dome light
(18)	15 A	Radio
(19)	5 A	CONT
(20)	5 A	Key 2

20 A	Power window timer
5 A	Key
15 A	Horn
5 A	Tail light (Left)
10 A	Tail light
10 A	Airbag
10 A	Ignition-1 signal
10 A	Back-up light
5 A	ACC-3
20 A	Rear defogger
10 A	Heated mirror
15 A	ACC-2
5 A	ACC
10 A	Rear wiper
5 A	Ignition-2 signal
15 A	Washer
25 A	Front wiper
10 A	Stop light
	5 A 15 A 10 A 10 A 10 A 20 A 10 A 5 A 10 A 5 A 15 A 25 A

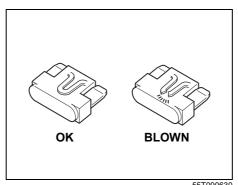

55T090630

WARNING

Always replace a blown fuse with a fuse of the correct amperage. Never use a substitute such as aluminum foil or wire to replace a blown fuse. If you replace a fuse and the new one blows in a short period of time, you may have a major electrical problem. Have your vehicle inspected by a Maruti Suzuki authorized workshop.

Headlight Aiming

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

ITEM: Lights

No.


WATT-

AGE

BULB

No.

Bulb Replacement

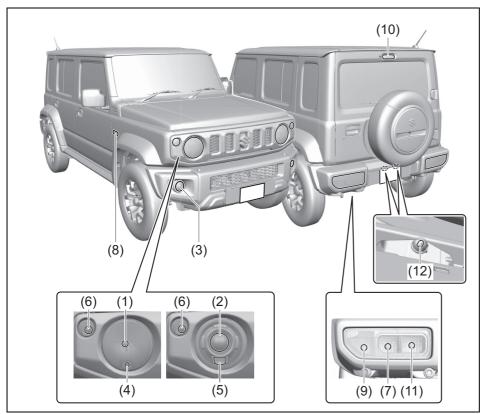

(1)	Headlight		12V 60/55W	H4	
(2)	Headlight*1		LED	-	
(3)	Front fog light		12V 19W	H16	
(4)	Position light		12V5W	W5W	
(5)	Position light*1		LED	-	
(6)	Turn	Front	12V	W21W	
(7)	signal light	Rear	21W	WY21W	
(8)	Side turn signal light		12V 5W	ı	
(9)	Tail / brake light		12V 21/ 5W	W21/ 5W	
(10)	High-mount stop light*1		LED	-	
(11)	Reversing light		12V21W	W21W	
(12)	License light	plate	12V5W	W5W	
If you need to replace the following lights					

If you need to replace the following lights indicated in the above table, consult with a Maruti Suzuki authorized workshop.

^{*1:} Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

A CAUTION

- Light bulbs can be hot enough to burn your finger right after turning off lights. This is true especially for halogen headlight bulbs. Replace the bulbs after they become cool enough.
- The headlight bulbs are filled with pressurized halogen gas. They can burst and injure you if they are hit or dropped. Handle them carefully.
- To avoid injury by sharp-edged parts of the body, wear gloves and a long-sleeved shirt when replacing light bulbs.

NOTICE

- The oils from your skin may cause a halogen bulb to overheat and burst when the lights are on. Grasp a new bulb with a clean cloth.
- Frequent bulb replacement indicates the need for an inspection of the electrical system. This should be carried out by a Maruti Suzuki authorized workshop.
- During bulb replacement always use same bulb number as used in vehicle which is imprinted on the said bulb/unit and/or mentioned in this section.

NOTE:

The inner surface of lens such as the headlights or the rear combination lights may be clouded or dew condensation may occur by driving on a rainy day or washing the vehicle. This is a temporary phenomenon caused by temperature difference between the inside and the outside of the lights. (This is the same phenomenon as the windows are clouded on a rainy day.) Also, it sometimes seems that water gets into the lights because of waterdrop on the edge of the lens. This is a temporary phenomenon caused by water adherence to the outside of the lights.

The above-mentioned phenomena are not vehicle malfunction.

However, if water is piled up in the lights or large waterdrop adheres to the inner surface of lens, have the vehicle inspected by a Maruti Suzuki authorized workshop.

Non-disassembled Type Lights

Since the lights shown below are non-disassemble type, you cannot replace a light. Replace the target assembly if any light is defective.

If you need to replace the assembly, ask your Maruti Suzuki authorized workshop.


- Headlight (LED type) (if equipped)
- Position light (vehicle with LED headlights)
- Side turn signal light on fender
- High mount stop light

Headlights

LED type


Since special procedures are required, it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement.

Halogen type

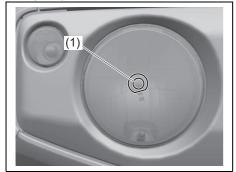


80T090460

(1) Bulb

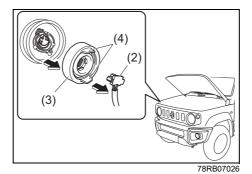


 Open the engine hood while the engine is stopped. Disconnect the coupler (2). Remove the sealing rubber (3) by pulling the grip (4).

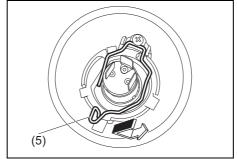

78RB07027

 Push the retaining spring (5) forward and unhook it. Then remove the bulb. Install a new bulb in the reverse order of removal.

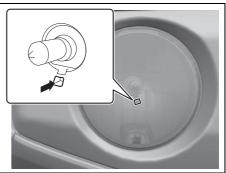


80T090470

NOTE: You can see the position of retaining spring from the hole of headlight.

Front Turn Signal Light and Front Position Light

For front LED position light (if equipped), it is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement since special procedures are required.


Vehicle with the halogen headlights

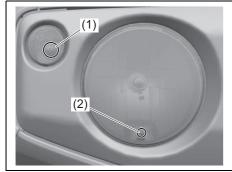

80T090440


- (1) Front turn signal light
- (2) Front position light

Vehicle with the LED headlights

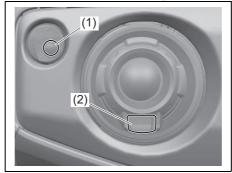


80T090450

- (1) Front turn signal light
- (2) Front LED position light

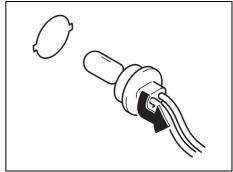

80T090390


 Open the engine hood while the engine is stopped. To remove the bulb holder of the front turn signal light or the front position light (for vehicle with halogen headlights) from the light housing, turn the holder counterclockwise and pull it out.

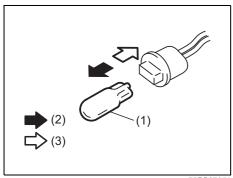

78RB07051

- (2) Removal
- (3) Installation
- To remove and install the bulb of the front position light (1), simply pull out or push in the bulb.

Side Turn Signal Light

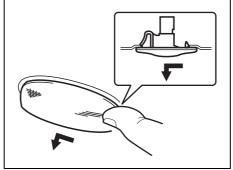


78RB07031

Since the bulb is built-in type, replace it as the light assembly. Remove the light assembly by sliding the light housing leftward with your finger.

Front Fog Light (if equipped)


 Start the engine. Turn the steering wheel to the opposite side of the fog light to be replaced to replace the bulb easily. Then turn off the engine.

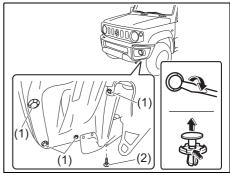

80T090540


2) Remove the clips (1) and screw (2) at the bottom of bumper.

For removing the clip, use a flat-bladed screwdriver as shown in the illustration.

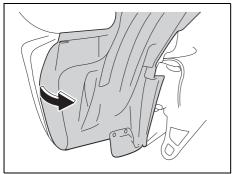

78RB07033


Open the end of the cover inside the fender.

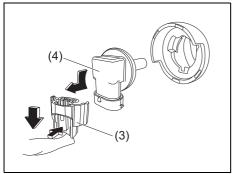

52R70140


 Disconnect the coupler (3) by pushing the lock release. Turn the bulb holder (4) counterclockwise and remove it.

Rear Combination Light

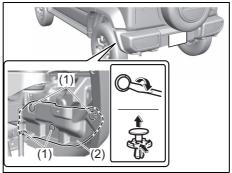


80T090400

1) Remove the clips (1) and then remove the cover (2).

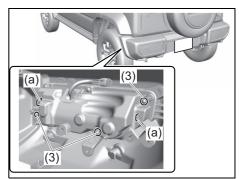

80T090410


2) Remove the nuts (3) and pull the rear combination light from the rear bumper by pushing the hooks (a).

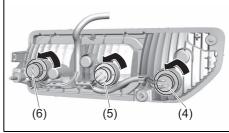

80T090430


- (4) Tail / brake light
- (5) Rear turn signal light
- (6) Reversing light

 To remove the bulb holder of the above light from the light housing, turn the holder counterclockwise and pull it out.

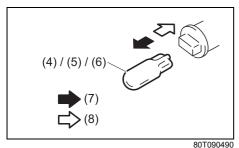


- (7) Removal
- (8) Installation
- To remove and install the bulb of the tail / brake light (4), the rear turn signal light (5), the reversing light (6), simply pull out or push in the bulb.

License Plate Light

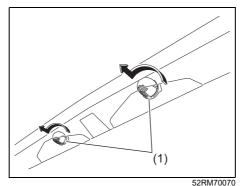

1) Remove the cover (1) by turning it counterclockwise.

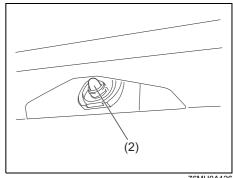

76MH0A126


 To remove and install the bulb of the license plate light (2), simply pull out or push in the bulb.

High-mount Stop Light

LED is used. It is recommended that you take your vehicle to a Maruti Suzuki authorized workshop for light replacement since special procedures are required.


Interior Light

Front

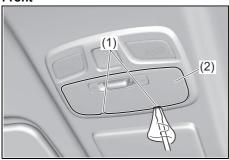


80T090280

To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notches (1), and then remove the lens (2).

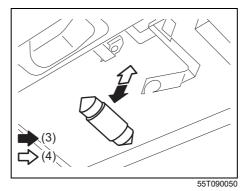


- (3) Removal
- (4) Installation
- 2) Pull the bulb out and then insert a new one.
- After replacing the bulb, install the center interior light lens in the reverse order of removal.

Center

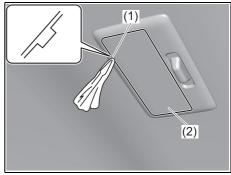

55T090460


To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

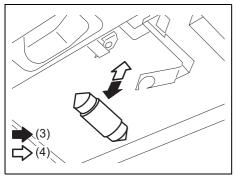

55T090050


- (3) Removal
- (4) Installation
- 2) Pull the bulb out and then insert a new one.
- After replacing the bulb, install the center interior light lens in the reverse order of removal.

Luggage compartment (if equipped)

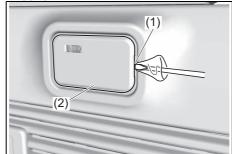

80T090290


To prevent scratches, insert a commercially available flat-blade screwdriver covered with a soft cloth into the notch (1), and then remove the lens (2).

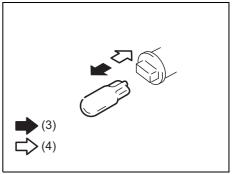

55T090040

- (3) Removal
- (4) Install
- 2) Pull the bulb out and then insert a new one.
- After replacing the bulb, install the luggage compartment light lens in the reverse order of removal.

Headlight Washer Fluid

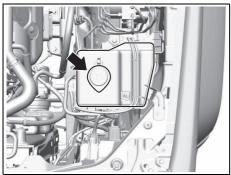

Check that there is washer fluid in the tank in the engine room. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

· Do not use radiator antifreeze in the windshield washer reservoir. This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.

(Continued)

WARNING

(Continued)

• Do not add washer fluid when the engine is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE

- Damage may result if the washer motor is operated with no fluid in the washer tank.
- · In winter season, be sure to remove snow or ice on the nozzle at the front bumper before operating headlight washer.
- · To avoid the frozen damage to the nozzle of the headlight washer, be sure to use the specific washer fluid.

Wiper Blades



59RN09450

If the wiper blades become brittle or damaged, or make streaks when wiping, replace the wiper blades.

To install new wiper blades, follow the procedures below.


NOTICE

To avoid scratching or breaking the window, do not let the wiper arm strike the window while replacing the wiper blade.


NOTE:

Some wiper blades may be different from the ones described here depending on vehicle specifications. If so, consult with a Maruti Suzuki authorized workshop for proper replacement method.


For Windshield Wipers

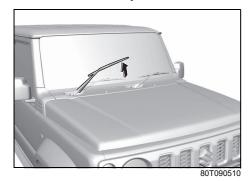


 Hold the wiper arm away from the window.

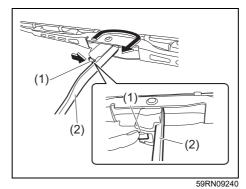


 Squeeze lock (1) towards wiper arm (2) and remove the wiper frame from the arm as shown.

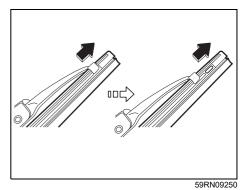

3) Unlock the lock end of the wiper blade and slide the blade out as shown.

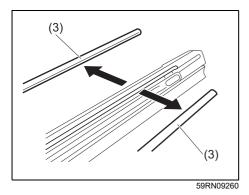


- (3) Retainer
- 4) If the new blade is provided without the two metal retainers, move them from the old blade to the new one.

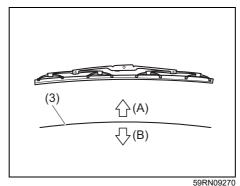

- (A) Up
- (B) Down

NOTE:

When you install the metal retainers (3), make sure the direction of metal retainers as shown in the above illustration.

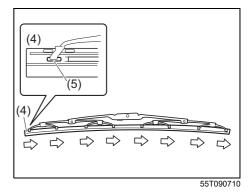


- (4) Locked end
- 5) Install the new blade in the reverse order of removal, with the locked end positioned toward the wiper arm. Make sure the blade is properly retained by all the hooks. Lock the blade end into place.
- 6) Reinstall wiper frame to arm, making sure that the lock lever is snapped securely into the arm.

NOTICE

Fit the stopper side (5) of the wiper blade in the driver's seat side. Otherwise, the wiper blade may be misaligned while the wiper operates.

For Rear Window Wiper

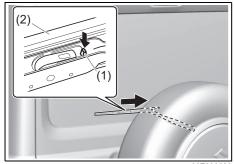


80T090520

- (1) Lock end
- (2) Wiper blade
- Lift the rear wiper arm a little from the rear window. Remove the wiper frame from the rear wiper arm by pushing the lock end (1) from the side of wiper blade frame and then by pushing the wiper frame to the direction of the arrow with the lock end (1) free from locking in the above illustration.


NOTE:

Return the rear wiper arm slowly after removing the rear wiper blade.

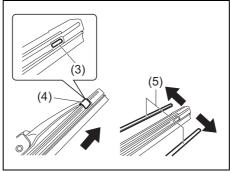


77R60050

- (3) Stopper
- (4) Hook
- (5) Retainer
- Pull and remove the wiper blade from the wiper frame until the stopper (3) of the wiper frame is taken out of the hook (4). Remove the retainers (5) from the wiper blade.

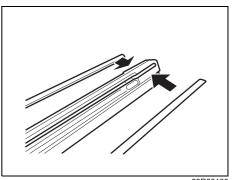


63R60160

 If the new blade is provided without the two metal retainers, install them from the old blade to the new one.

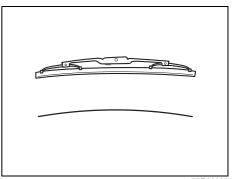


77R60030

4) Install the retainers along the direction of camber as shown in the illustration.

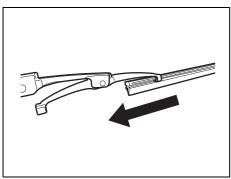

63R60180


5) Slide the new wiper blade into the wiper frame. When installing the wiper blade, put into the side that has no stopper on the wiper blade.

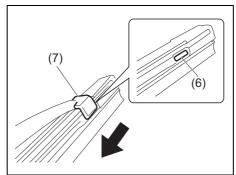

80T100110

- (6) Stopper (7) Hook
- 6) Fix the wiper blade securely by pushing the hook (7) into the stopper (6).
- Reinstall the wiper frame to the rear wiper arm in the reverse order of removal. Make sure that the rear wiper blade is installed securely.

Windshield Washer Fluid

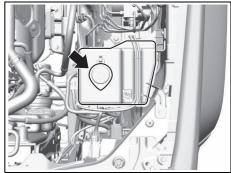

80T090300

Check that there is washer fluid in the tank in the engine room. Refill it if necessary. Use a good quality windshield washer fluid, diluted with water as necessary.

WARNING

- Do not use radiator antifreeze in the windshield washer reservoir.
 This can severely impair visibility when sprayed on the windshield, and also can damage your vehicle's paint.
- Do not add washer fluid when the engine is hot or operating as washer fluid contains alcohol and may catch fire if spilled on the engine, etc.

NOTICE


- Damage may result if the washer motor is operated with no fluid in the washer tank.
- Avoid use of hard water to prevent building of lime scale on the vehicle.

Air Conditioning System

If you do not use the air conditioner for a long period, such as during winter, it may not give the best performance when you start using it again. To help maintain optimum performance and durability of your air conditioner, it needs to be run periodically. Operate the air conditioner at least once a month for one minute with the engine idling. This circulates the refrigerant and oil and helps protect the internal components.


Air Conditioner Filter Replacement

Since special procedures are required, ask your Maruti Suzuki authorized workshop for this job.

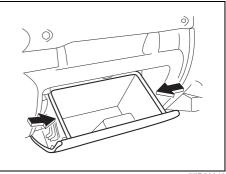


77R50340

 To approach the air conditioner filter, remove the glove box by pressing both sides of the glove box inward and pulling it out.

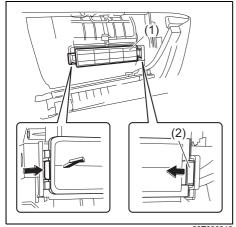

80T090310


- 2) Unlock the holder (1) and release it from the air conditioner unit.
- 3) Slide the tab (2) of the holder (1) in an arrow direction and remove the holder.

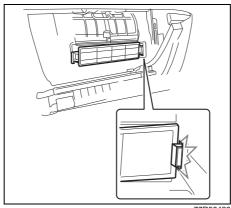

77R50420

NOTICE

Do not apply excessive force to the tab when removing the holder. Otherwise, the tab may be damaged.

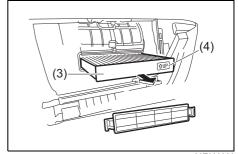

80T090320

4) Pull out the air conditioner filter (3)

NOTE:

When you install a new filter, check that the UP mark (4) faces upward.

Preparation Before Winter Season

Windshield Washer Fluid

To prevent windshield washer fluid from freezing, dilute it by the ratio according to outside temperature.

Lead-acid Battery

Check the liquid measure and the specific gravity of lead-acid battery. When it becomes cold, the battery performance gets worse. Also, it becomes difficult to start the engine by the weak battery. Refer to "Battery" in the "INSPECTION AND MAINTENANCE" section.


Engine Coolant

To prevent the inside of engine from corroding and freezing, use the designated engine coolant. Refer to "Specifications" in the "SPECIFICATIONS" section.

NOTE:

To check the concentration of engine coolant or replace it, ask your Maruti Suzuki authorized workshop.

Winter Tyres and Chocks

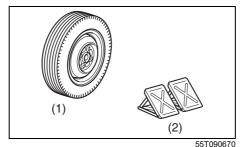

_

(1) Winter tyre (2) Chock

Winter tyres and chocks are necessary to drive on the snow roads or the frozen roads.

Before Your Driving Snow on the Roof



80 130

Remove snow on the roof before your driving. If you do not remove it, snow may fall during your driving and it may hinder your view.


Frozen Wiper Blades



65P60060

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the wiper blades forcedly when ice stays freezing, the wiper rubbers may be damaged and the wiper blades may be broken.

Snow and Frost on the Window Glasses

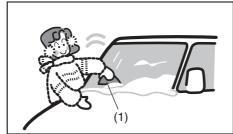

82K261

Use the plastic board (1). You can remove snow and frost not to damage the window glasses.

Frozen Outside Rearview Mirrors




65P60070

Melt ice by pouring lukewarm water. After melting it, wipe off water to prevent refreezing. If you operate the outside rearview mirrors forcedly when ice stays freezing, the outside rearview mirrors may be broken.

NOTICE

- For the outside rearview mirror folding switch, check if you can move the mirrors by your hands first. Then, operate the switch. If you repeat to operate the switch when ice stays freezing, the mirrors may be broken.
- For the remote folding mirrors, deactivate the function of the remote folding mirrors in the cold condition where the outside rearview mirrors are frozen. If you repeat to operate them when ice stays freezing, the mirrors may be broken.

Frozen Doors

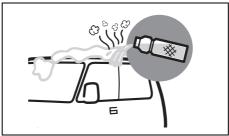

65P60080

Pour lukewarm water except the keyhole on the door. After opening the door, wipe off water. If you open the door forcedly when ice stays freezing, the rubbers around the door may be come off and broken.

Snow Attaching to Shoes



80J312

Remove snow attaching to shoes before getting in your vehicle. If you do not remove it, you may slip when operating the pedals and the window glasses may mist easily because of high humidity inside the vehicle.

When Parking the Vehicle Outside




80J315

NOTICE

- If you park the vehicle under eaves or trees, the roof of the vehicle may be dented by accumulated snow or fallen snow.
 - When it is snowing, do not park the vehicle under eaves or trees.
- If you park the vehicle outside when it is snowing, the wiper arms may be deformed or the wiper blades may be frozen on the windshield by snow weight. Raise the wiper arms away from the windshield when parking the vehicle.

EMERGENCY SERVICE

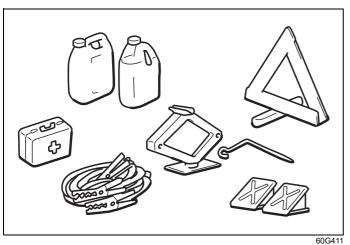


EMERGENCY SERVICE

Towing Your Vehicle	10-1
Jacking Instructions	
Changing Wheels	10-7
Jump-starting Instructions	10-10
Running Out of Battery	10-11
If You Get a Flat Tyre While Driving	10-11
Engine Trouble: Starter Does not Operate	10-12
Engine Trouble: Does not Start	10-12
Engine Trouble: Overheating	10-13
Warning Triangle	10-14

EMERGENCY SERVICE

Towing Your Vehicle

If you need to have your vehicle towed, contact a professional service. A Maruti Suzuki authorized workshop can provide you with detailed towing instructions.

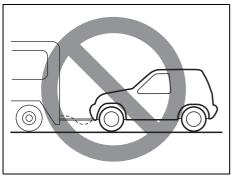


54G586

WARNING

When you tow your vehicle, refer to the following instructions to avoid accidents and damage to your vehicle. In addition, be sure to observe government and local requirements regarding vehicle lighting and trailer hitches or tow bars.

WARNING

A safety chain should always be used when you tow your vehicle.

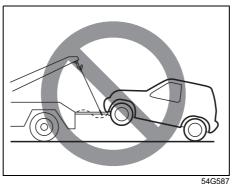

NOTICE


Do not tow your vehicle with the rear wheels directly on the ground (and the transmission in neutral). If you do, the transmission will be damaged fatally.

NOTICE

Observe the following instructions when towing your vehicle.

- · To help avoid damage to your vehicle during towing, proper equipment and towing procedures must be used.
- · Using the frame hook, tow your vehicle on paved roads for short distances at low speed.

Before towing

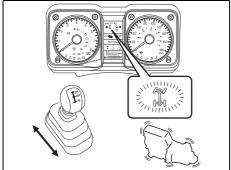


80TM1000

If you tow your vehicle with the front wheels on the ground, shift the transmission into Neutral and make sure the 4WD indicator on the instrument cluster comes on when you use the transfer lever to shift into 4-wheel drive high range position ("4H") and goes off when you use the transfer lever to shift into 2-wheel high drive position ("2H") with the engine running. If the 4WD indicator does not come on or it does not go off, that means, the airlocking hubs cannot be locked or unlocked, the vehicle must be towed with the front wheels lifted and the rear wheels on a dolly.

Towing a Disabled Vehicle


If your vehicle is disabled, and if the steering and drive train are in good condition (and the engine can be started for 4WD vehicles), the vehicle can be towed according to the instructions in this section. Your vehicle may also be towed by a tow truck with the front or rear wheels lifted, according to the instructions below.

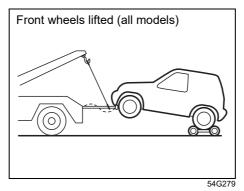

Front wheels lifted

Your vehicle may be towed by a tow truck with the front wheels lifted and a dolly under the rear wheels.

EMERGENCY SERVICE

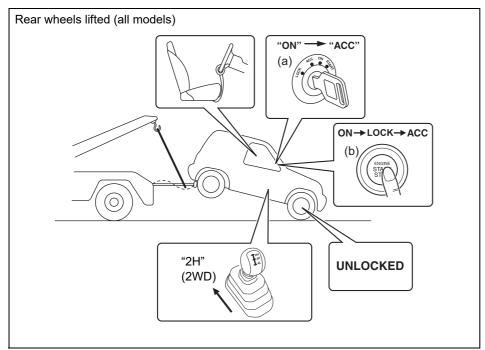

80T100060

- (a) Vehicle without keyless push start system
- (b) Vehicle with keyless push start system

Rear wheels lifted

Your vehicle may be towed by a tow truck with the rear wheels lifted and the front wheels on the ground. Towing speed should not exceed 90 km/h (56 mph).

For this type of towing:

- Shift the manual transmission to Neutral or the automatic transmission to "P" position and start the engine.
- 2) Shift the transfer lever to 2WD position ("2H").
- 3) Make sure the 4WD indicator on the instrument cluster is turned off.

NOTICE

If the air-locking hubs cannot be unlocked, tow the vehicle with the rear wheels lifted and a dolly under the front wheels.

4) Turn the ignition key to the "ACC" position or change the ignition mode to ACC to stop the engine and to unlock the steering wheel.

NOTICE

The steering column lock is not strong enough to withstand shocks transmitted from the front wheels during towing.


5) Make sure the front wheels are facing straight forward and secure the steering wheel with a steering wheel clamping device designed for towing service.

Jacking Instructions

- 1) Place the vehicle on level, hard ground.
- 2) Set the parking brake firmly and shift into "P" (Park) if your vehicle has an automatic transmission, or shift into "R" (Reverse) if your vehicle has a manual transmission.


WARNING

- Be sure to shift into "P" (Park) for an automatic transmission vehicle, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.
- Turn on the hazard warning switch if your vehicle is near traffic.

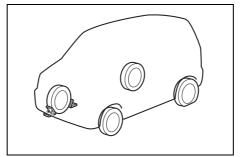


59RN10010

 Block the front and rear of the wheel diagonally opposite to the wheel being lifted

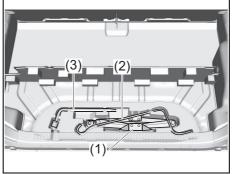

80T100070


5) Prepare the jack (1), jack handle (2) and wheel wrench (3).

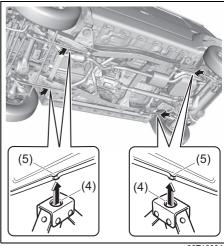

80T100040

- 6) Position the jack as shown in the illustration. Turn the jack handle mounting part clockwise by hand to unfold the jack and lightly contacts the jack-head hole (4) to the suspension arm boss (5) beneath the vehicle body.
- Check that the jack-head hole (4) fits in the suspension arm boss (5) by shaking the jack-head lightly by hand.

EMERGENCY SERVICE

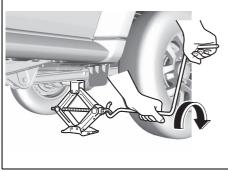

80T100050

- 8) Install the jack handle to the jack.
- Turn the jack handle and carefully lift the vehicle until the tyre is slightly off the ground. Do not raise the vehicle more than necessary.

WARNING

- Use the jack only to change wheels on level, hard ground.
- Never jack up the vehicle on an inclined surface.
- Never raise the vehicle with the jack in a location other than between the frame bosses near the wheel to be changed.
- Make sure that the jack is raised at least 25 mm before it contacts the boss. Use of the jack when it is within 25 mm of being fully collapsed may result in failure of the jack.
- Do not use wooden blocks or similar objects as a jack underlay.
- No person should place any portion of their body under a vehicle that is supported by a jack. Never place your hands or feet under the raised vehicle when it is supported by a jack.
- Never run the engine when the vehicle is supported by the jack and never allow passengers to remain in the vehicle.


Raising Vehicle with Garage Jack

- Apply the garage jack to one of the points indicated below.
- Always support the raised vehicle with jack stands (commercially available) at the points indicated below.
- (1) Front
- (2) Jack stand
- (3) Rear
- (4) Garage jack
- (5) Jacking point for garage jack

WARNING

As the vehicle may get damaged or an accident may occur, observe the following points.

- Observe the designated points shown in the illustration.
- When holding the lifted vehicle, use the jack stand.
- When jacking up the front side or the rear side only, put a chock (commercially available) on front and back of the grounded tyre.

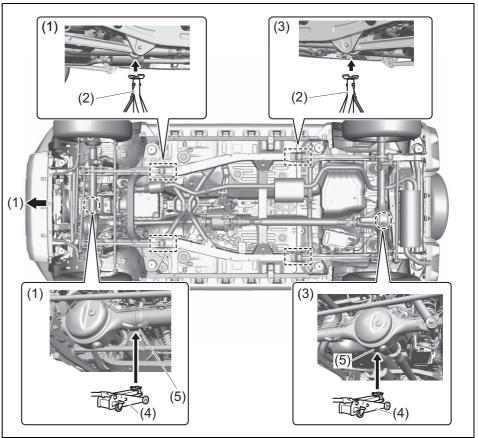


80T100030

Changing Wheels

WARNING


Never change a wheel in traffic lane. Always move the vehicle off the road on level, hard ground away from traffic for changing a wheel. For any further assistance contact your nearest Maruti Suzuki authorized workshop.

To change a wheel, use the following procedure:

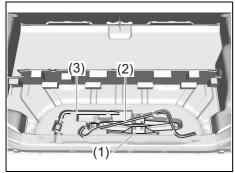

80T100070


1) Prepare the jack (1), jack handle (2), wheel wrench (3).

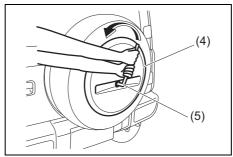

80T070520


2) Remove the spare wheel half cover (4).
 Remove the center nut by turning it counterclockwise with the wheel

wrench (5).

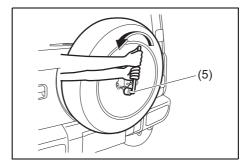

80T070530

 Remove three wheel nuts of the spare wheel by turning them counterclockwise with the wheel wrench (5).

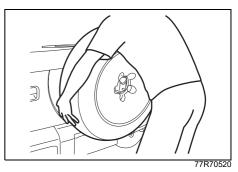

4) Remove the spare wheel with both hands

NOTICE

Carefully lower the spare wheel to the ground.

- 5) Loosen the wheel nuts, but do not remove them.
- 6) Jack up the vehicle (refer to the "Jacking Instructions" in this section).


WARNING

- Shift into "P" (Park) for an automatic transmission, or into "R" (Reverse) for a manual transmission vehicle when you jack up the vehicle.
- Never jack up the vehicle with the transmission in "N" (Neutral). Otherwise, unstable jack may cause an accident.

A CAUTION


Immediately after the vehicle has been driven, the wheels, the wheel nuts and the area around the brakes might be extremely hot. Touching these areas may cause burn injury Do not touch these areas, immediately after the vehicle has been driven.

7) Remove the wheel nuts and wheel.

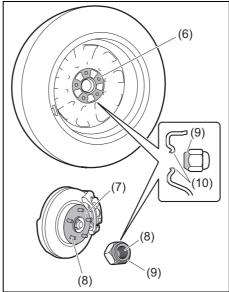

80T100090

- 8) Before installing the new wheel, clean any mud or dirt off from the surface of the wheel (6), hub (7), thread part (8), surface of the wheel nuts (9) and surface of the wheel holes (10) with a clean cloth. Clean the hub carefully; it may be hot from driving.
- 9) Install the new wheel and replace the wheel nuts. Tighten each nut snugly by hand until the wheel is securely seated on the hub.

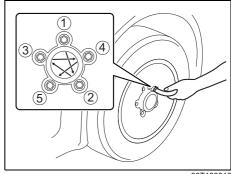

80T100010


Tightening torque for wheel nut: 100 Nm (10.0 kg-m, 72.3 lb-ft)

10)Lower the jack and fully tighten the nuts in a crisscross fashion with a wrench as shown in the illustration.

WARNING

Use genuine wheel nuts and tighten them to the specified torque as soon as possible after changing wheels. Incorrect wheel nuts or improperly tightened wheel nuts may come loose or fall off, which can result in an accident. If you do not have a torque wrench, have the wheel nut torque checked by a Maruti Suzuki authorized workshop.

EMERGENCY SERVICE

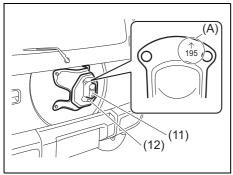


80T070510

- 11)Check the direction of the bracket (11) attached to the spare wheel carrier (12).
 - The "195" mark (A) should be facing up.


NOTE:

If you install the bracket upside down, the center nut of the spare wheel half cover will not tighten securely.

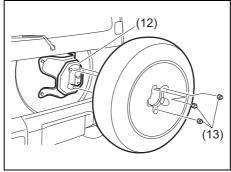

80T070540

- 12)Install the spare wheel to the spare wheel carrier (12).
 - Hold the spare wheel firmly in both hands and align the bolts of the spare wheel carrier (12) with the wheel holes (three locations).
- 13)Tighten the wheel nuts (13) evenly and securely with the wheel wrench.
- 14)Check that the wheel nuts (13) are securely tighten.

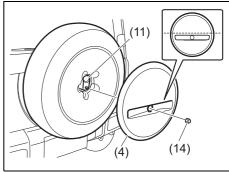

80T070550

- 15)Install the spare wheel half cover (4).
 - Align the hole of the spare wheel half cover with the bolt of the bracket (11) so that the hole of the cover is positioned below the center of the spare wheel half cover as shown in the illustration.
 - Tighten the center nut (14) securely with the wheel wrench.

NOTICE

Do not tighten the nut more than necessary. The spare wheel half cover may be damaged.

Jump-starting Instructions

WARNING


- · Never attempt to jump-start your vehicle if the lead-acid battery appears to be frozen. Batteries in this condition may explode.
- · When making jump lead connections, check that your hands and the jump leads remain clear from pulleys, belts or fans.
- · Lead-acid batteries produce flammable hydrogen gas. Keep flames and sparks away from the battery or an explosion may occur. Never smoke when working near the battery.
- · If the booster battery you use for jump-starting is installed in another vehicle, check that the two vehicles are not touching each other.
- If your lead-acid battery discharges repeatedly, for no apparent reason, have your vehicle inspected by a Maruti Suzuki authorized workshop.
- · To avoid harm to yourself or damage to your vehicle or battery, follow the jump-starting instructions below.

If you are in doubt, call for qualified road service.

NOTICE

Your vehicle should not be started by pushing or towing. This starting method could result in permanent damage to the catalytic converter. Use jump leads to start a vehicle with a weak or flat battery.

- 1) Use only a 12-volt lead-acid battery to jump-start your vehicle. Position the good 12-volt lead-acid battery close to your vehicle so that the jump leads will reach both batteries. When using a battery installed on another vehicle, check that two vehicles do not touch each other. Set the parking brakes fully on both vehicles.
- 2) Turn off all vehicle accessories, except those necessary for safety reasons (for example, headlights or hazard lights).

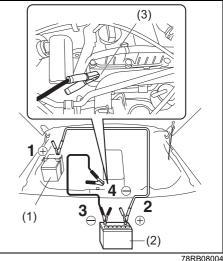

- 3) Connect jump leads as follows:
 - 1. Connect one end of the first jump lead to the positive (+) terminal of the discharged battery (1).
 - 2. Connect the other end to the positive (+) terminal of the booster battery
 - 3. Connect one end of the second jump lead to the negative (-) terminal of the booster battery (2).
 - 4. Make the final connection to an unpainted, heavy metal part (3) of engine cylinder head in the vehicle with the discharged battery (1).

WARNING

Never connect the jump lead directly to the negative (-) terminal of the discharged battery, or an explosion may occur.

A CAUTION

Connect the jump lead to the engine mount bolt securely. If the jump lead disconnects from the engine mount bolt because of vibration at the start of the engine, the jump lead could be caught in the drive belts.

- 4) If the booster battery you are using is fitted to another vehicle, start the engine of the vehicle with the booster battery. Run the engine at moderate speed.
- 5) Start the engine of the vehicle with the discharged battery.
- Remove the jump leads in the exact reverse order in which you connected them.

Running Out of Battery

In the following cases, the lead-acid battery is running out.

- The starter does not engage when attempting to turn on the engine. Or, the starter rotation is too weak to make the engine start.
- The headlight illumination is extremely low or the horn volume is low.

If You Get a Flat Tyre While Driving

Firmly hold the steering wheel and carefully apply the brakes to slow down the vehicle and stop it in a safe place.

Engine Trouble: Starter Does not Operate

- 1) Try turning the ignition switch to "START" position or try pressing the engine switch to change the ignition mode to START with the headlights turned on to determine the lead-acid battery condition. If the headlights go excessively dim or go off, it usually means that either the lead-acid battery is discharged or the battery terminal contact is poor. Recharge the lead-acid battery or correct battery terminal contact as necessary.
- 2) If the headlights remain bright, check the fuses. If the reason for failure of the starter is not obvious, there may be a major electrical problem. Have the vehicle inspected by a Maruti Suzuki authorized workshop.

Engine Trouble: Does not Start

Make sure that your vehicle has enough fuel and battery.

If the engine does not start under very cold condition, press the accelerator pedal all the way to the floor and hold it while cranking the engine.

Refer to "Starting / Stopping Engine (Vehicle without Keyless Push Start System)" or "Starting / Stopping Engine (Vehicle with Keyless Push Start System)" in "OPERATING YOUR VEHICLE" section.

If the engine still does not start have your vehicle inspected by a Maruti Suzuki authorized workshop.

 Do not operate the starter motor for more than 12 seconds.

(Vehicle with keyless push start system)

NOTE:

If the engine refuses to start, the starter motor automatically stops after a certain period of time. After the starter motor has automatically stopped or if there is anything abnormal in the engine starting system, the starter motor runs only while the engine switch is held pressed.

Engine Trouble: Overheating

The engine could overheat temporarily under severe driving conditions. If the high engine coolant temperature warning light comes on as overheating during driving:

- 1) Turn off the air conditioner.
- 2) Take the vehicle to a safe place and park.
- Run the engine at a normal idle speed for a few minutes until the high engine coolant temperature warning light goes off.

WARNING

If you see or hear escaping steam, stop the vehicle in a safe place and immediately turn off the engine to cool it. Do not open the hood when steam is present. When the steam can no longer be seen or heard, open the hood to see if the coolant is still boiling. If it is, you must wait until it stops boiling before you proceed.

If the high engine coolant temperature warning light does not go off:

- Turn off the engine and check that the water pump belt and pulleys are not damaged or slipping. If any abnormality is found, correct it.
- 2) Check the coolant level in the reservoir. If it is found to be lower than "LOW" line, check radiator, water pump, radiator hoses and heater hoses for leakage. If leakage that may cause overheating is found, do not run the engine until these problems have been corrected.
- If leakage is not found, carefully add coolant to the reservoir and then the radiator, if necessary. (Refer to "Engine Coolant" in "INSPECTION AND MAIN-TENANCE" section.)

NOTE:

If engine overheats and you are not sure what to do, consult with a Maruti Suzuki authorized workshop.

 


79J007

WARNING


- It is hazardous to remove the radiator cap when the water temperature is high, because scalding fluid and steam may be blown out under pressure. The cap should only be taken off when the coolant temperature has lowered.
- To help prevent personal injury, keep hands, tools and clothing away from the engine cooling fan and air-conditioner fan. These electric fans can automatically turn on without warning.

Warning Triangle




55T100010

In case of vehicle break-down or during emergency stopping, where, your vehicle could become a potential traffic hazard, keep the warning triangle, provided with your vehicle, on the road free from any obstacles behind your vehicle so as to warn the approaching traffic, at an approximate distance of 50–100 m (164–328 ft). The reflecting side of the triangle should face the oncoming traffic. Please activate the hazard warning lamps before alighting the vehicle to keep the warning triangle.

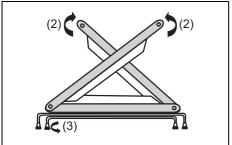

55T100020


- Remove the warning triangle carefully from the cover as shown by arrow (1).
- Open both the reflector arms as shown by arrow (2) and lock the arms with each other with the clip provided in the right arm. Open the bottom stand in counter clock-wise direction as shown by arrow (3). Position the warning triangle behind the vehicle on a plain surface.
- Reverse the removal procedure for keeping inside the cover.

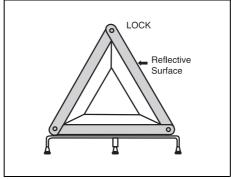

55T100030

EMERGENCY SERVICE						
MEMO						

APPEARANCE CARE

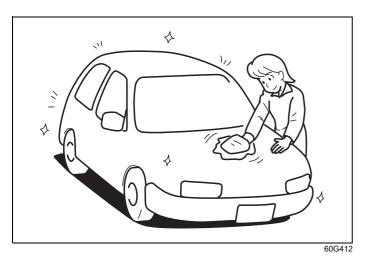

APPEARANCE CARE

Corrosion Prevention	11-1
Cleaning Exterior	11-2
Cleaning Interior	11-7

Corrosion Prevention

It is important to take good care of your vehicle to protect it from corrosion. Listed below are instructions for how to maintain your vehicle to prevent corrosion. Please read and follow these instructions carefully.

Important Information about Corrosion

Common causes of corrosion

- Accumulation of road salt, dirt, moisture or chemicals in hard-to-reach areas of the vehicle underbody or frame.
- Chipping, scratches and any damage to treated or painted metal surfaces resulting from minor accidents or abrasion by stones and gravel.
- 3) Any or all of the below mentioned points:
- · Continuous exposure to sunlight.
- Hard water & sea water coming in contact with vehicle.
- · Foot rubbing (skirting).

Environmental conditions which accelerate corrosion

- Road salt, dust control chemicals, sea breeze or industrial pollution will all accelerate the corrosion of metal.
- High humidity will increase the rate of corrosion particularly when the temperature range is just above the freezing point.

- Moisture in certain areas of a vehicle for an extended period of time may promote corrosion even when other body sections are completely dry.
- 4) High temperatures will cause an accelerated rate of corrosion to parts of the vehicle which are not well-ventilated to permit quick drying.

This information illustrates the necessity of keeping your vehicle (particularly the underbody) as clean and dry as possible. It is equally important to repair any damage to the paint or protective coatings as soon as possible.

How to Help Prevent Corrosion

WARNING

Do not apply additional undercoating or rust preventive coating on or around exhaust system components such as the catalytic converter and the exhaust pipes. It may catch a fire if the undercoating substance becomes overheated.

Wash your vehicle frequently

The best way to preserve the finish on your vehicle and to help avoid corrosion is to keep it clean with frequent washing. Wash your vehicle at least once during the winter and once immediately after the winter. Keep your vehicle, particularly the underside, as clean and dry as possible. If you frequently drive on salted roads, your vehicle should be washed at least once a month during the winter. If you live near the ocean, your vehicle should be washed at least once a month throughout the year.

For washing instructions, refer to "Cleaning Exterior" in this section.

Remove foreign material deposits

Foreign materials such as salts, chemicals, road oil or tar, tree sap, bird droppings and industrial fall-out may damage the finish of your vehicle if it is left on painted surfaces. Remove these types of deposits as quickly as possible. If these deposits are difficult to wash off, an additional cleaner may be required. Check that any cleaner you use is not harmful to painted surfaces and is specifically intended for your purposes. Follow the manufacturer's directions when using these special cleaners.

Repair finish damage

Carefully examine your vehicle for damage to the painted surfaces. Should you find any chips or scratches in the paint, touch them up immediately to prevent corrosion from starting. If the chips or scratches have gone through to the bare metal, have a qualified body shop make the repair.

Keep passenger and luggage compartments clean

Moisture, dirt or mud can accumulate under the floor mats and may cause corrosion. Occasionally, check under these mats to ensure that this area is clean and dry. More frequent checks are necessary if the vehicle is used for off-road driving or in wet weather.

Certain cargos such as chemicals, fertilizers, cleaners, salts, etc. are extremely corrosive by nature. These products should be transported in sealed containers. If they are spilled or leaked, clean and dry the area immediately.

Park your vehicle in a dry, well-ventilated area

Park your vehicle to save it from continuous exposure to direct sunlight. Do not park your vehicle in a damp, poorly-ventilated area. If you often wash your vehicle in the garage and place it there in wet condition, your garage may be damp. The high humidity in the garage may cause or accelerate corrosion. A wet vehicle may corrode even in a heated garage if the ventilation is poor.

Use mud and gravel shields

Use mud and gravel shields

The use of mud and gravel shields will help protect your vehicle, especially if you frequently drive on gravel or salted roads. Full-size shields, which extend as close to the road as is practical, are the best. The fittings for such shields should also be corrosion resistant. Please check with your Maruti Suzuki authorized workshop for information on these shields.

Cleaning Exterior

For Keeping the Paintwork Beautiful

To keep your vehicle's beautiful appearance for a long term, daily care is important.

- For parking and storing the vehicle, we recommend garages with good ventilation and locations with roofs.
- The following situations may cause rusting and discoloration of the paint. Wash your vehicle promptly.
 - When driving in coastal areas or on roads sprayed with antifreeze agent (Wash the underside of the vehicle and around the wheel wells especially)
 - When bird droppings, dead insects, sap, iron dust, soot or smoke residue, coal tar, etc., adhere to the paint or when the vehicle gets wet with acid rain
 - When the vehicle is dirty with dust or mud
- Give the vehicle a wax about once a month or whenever the water-repelling ability of the painted surfaces has declined. Follow all instructions on the package of the wax (sold separately).

APPEARANCE CARE

NOTE:

Do not use wax on plastic parts that are not coated. Waxing these surfaces could result in a whitened or uneven appearance.



80J302

 Chips from flying rocks, scratches, etc. can cause rust. Repair these areas as soon as possible.

NOTICE

- When repairing scratches on painted surfaces, consult with a Maruti Suzuki authorized workshop. Using an inappropriate material for repair could cause damage to the paint.
- It is important that your vehicle be kept clean and free from dirt. Failure to keep your vehicle clean may result in fading of the paint or corrosion to various parts of the vehicle body.

Washing

WARNING

- Never attempt to wash and wax your vehicle with the engine running.
- When cleaning the underside of the body and fender, where there may be sharp-edged parts, wear gloves and a long-sleeved shirt to protect your hands and arms from being cut.
- After washing your vehicle, carefully test the brakes before driving to check that they have maintained their normal effectiveness.

NOTICE


84S09240

 When washing or waxing the vehicle, do not lean on the vehicle body or do not push it hard.
 This might cause it to deform.

(Continued)

NOTICE

(Continued)

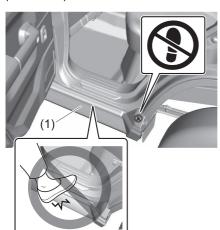

80T030330

 When washing or waxing the vehicle, do not put your foot on the side sill splash guard (1).
 This might cause it to damage.

Washing by hand



0J303

When washing the vehicle, park it in the place where direct sunlight does not fall on it as much as possible and follow the instructions below:


 Flush the underside of body and wheel housings with pressurized water to remove mud and debris. Use plenty of water.

NOTICE

When washing the vehicle:

- Avoid directing steam or hot water of more than 80°C (176°F) on plastic parts.
- Getting water or other liquids into the engine components may cause an engine starting problem or an electrical components to fail.

To avoid damaging engine components, do not spray the engine components with water or other liquids.

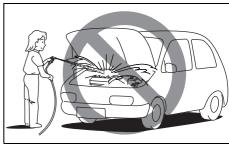

80TM11001

2) Rinse the body to loosen the dirt. Remove dirt and mud from the body exterior with running water. You may use a soft sponge or brush. Do not use hard materials which can scratch the paint or plastic. Remember that the headlight covers or lenses are made of plastic in many cases.

NOTICE

To avoid damage to the paint or plastic surface, do not wipe the dirt off without ample water. Follow the above procedure.

APPEARANCE CARE

3) Wash the entire exterior with a mild detergent or car wash soap using a sponge or soft cloth. The sponge or cloth should be frequently soaked in the soap solution.

NOTICE

When using a commercial car wash product, observe the cautions specified by the manufacturer. Never use strong household detergents or soaps.

- 4) Once the dirt has been completely removed, rinse off the detergent with running water.
- Wipe off the vehicle body with a wet chamois or cloth and allow it to dry in the shade.
- 6) Check carefully for damage to painted surfaces. If there is any damage, touch up the damage following the procedure below:
 - 1. Clean all damaged spots and allow them to dry.
 - Stir the paint and touch up the damaged spots lightly using a small brush.
 - 3. Allow the paint to dry completely.

Washing by an automatic car wash

NOTICE

If you use an automatic car wash, check that your vehicle's body parts, such as antenna, cannot be damaged. If you are in doubt, consult the car wash operator for advice.

Washing by a high-pressure cleaner

NOTICE

If you use a high-pressure cleaner, keep away the nozzle from your vehicle sufficiently.

- Pointing the nozzle to the surrounding parts of camera can allow water to enter the camera.
 - This may cause a fire, malfunction, dew condensation, etc.
- For vehicle with rear view camera, do not point to the nozzle to the camera.
- Bringing the nozzle to your vehicle too close or pointing the nozzle to the opening of front grill or bumper etc. can cause damage and malfunction of the vehicle body and parts.
- Pointing the nozzle to door glasses and door frames can allow water to enter the cabin.

Caring for the Windshield

If an oil film, etc. adheres to the windshield and the windshield wipers cannot clean it, use a glass cleaner (sold separately) to clean the windshield by hand.

Caring for Lights

Wash the lens part of light and wipe it off with a soft cloth.

NOTICE

- Do not use the detergent including organic solvent on the lens surface of the light. The lens surface may be cracked.
 - If you use the detergent including organic solvent, rinse it off with ample water.
- Do not wipe the lens surface by wax or a hard brush. This may damage the lens or hasten its deterioration.

Caring for Cameras

Wash the lens part of camera and wipe it off with a soft cloth. If the lens part is very dirty, use a mild detergent.

NOTICE


- Using alcohol, benzine, thinner etc. to wipe the camera may cause discoloration.
 - When you wipe the camera, do not use alcohol, benzine, thinner etc.
- Hard coating is used for the lens of camera not to be easily scratched. However, if you use the brush for a vehicle, it may be difficult for you to see the image on the camera. Be very careful not to scratch the lens.
- The resin cover of the camera may be damaged if an organic solvent adheres to the camera.
 Do not let organic solvent, body wax, oil film remover, or glass coating agent adhere to the product.
- If the camera is subjected to a sudden temperature change, it may be damaged.
 - Do not expose the camera to sudden temperature changes such as melting frozen snow with hot water.

Caring for Aluminum Wheels

NOTE:

- Do not use an acidic or alkaline detergent, or a cleaner containing petroleum solvent to wash aluminum wheels. These types of cleaners will cause permanent spots, discoloration and cracks on the finished surface and damage to the center cap.
- Do not use a bristle brush and a soap containing an abrasive material. These will damage the finished surface.

Waxing

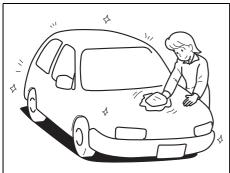

60G412

After washing the vehicle, waxing and polishing are recommended to further protect and beautify the paint.

- Only use waxes and polishes of good quality.
- When using waxes and polishes, observe the precautions specified by the manufacturers

Cleaning Interior

- Clean out any dirt, sand, etc. using a vacuum cleaner, or wipe off the surfaces using a soft cloth moistened with cold or lukewarm water. If the interior is left dirty, scratches can occur.
- Quickly clean off any liquids such as those from air fresheners or spilled beverages by using tissue paper or a soft cloth. Leaving spilled liquids can cause staining, discoloration or cracking.

WARNING

 Do not spray the interior with water or other liquids. If the navigation equipment, audio components, switches, wiring under the floor, or other electrical parts become wet, there is a risk of fire or malfunction, and the SRS airbag system could fail to function normally.

If you pour water or spill a drink in the vehicle, consult with a Maruti Suzuki authorized workshop as soon as possible for inspection.

NOTICE

- Do not use chemical products containing the following ingredients.
 Doing so may cause staining, discoloration, deformation, or a deterioration in strength, etc.
 - Solvents such as benzine, gasoline, thinner, or sticker peeling agents
 - Acidic or alkaline detergents
 - Bleaches or dyes
- Do not use chemical products that include silicone for cleaning the areas around the air conditioner, electronic equipment such as the audio or navigation systems or switches. Contact with silicone may cause them to malfunction.
- Do not leave colored leather goods, furs, vinyl articles, etc. in your vehicle for long periods. Doing so could cause discoloration or deformation of the interior.

NOTE:

To prevent liquid-based air fresheners from spilling, it is recommended to fix their containers in place, or use solid-type air fresheners instead.

Vinyl Upholstery

Prepare a solution of soap or mild detergent dissolved in warm water. Apply the solution to the vinyl with a sponge or soft cloth and let it soak for a few minutes to loosen dirt.

Rub the surface with a clean, damp cloth to remove dirt and the soap solution. If some dirt still remains on the surface, repeat this procedure.

Fabric Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial fabric cleaner for tougher stains. If you use a fabric cleaner, carefully follow the manufacturer's instructions and precautions.

Leather Upholstery

Remove loose dirt with a vacuum cleaner. Using a mild soap or saddle soap solution, wipe dirt off with a clean damp soft cloth. To remove soap, wipe the areas again with a soft cloth dampened with water. Wipe the areas dry with a soft dry cloth. Repeat this until the dirt or stain is removed, or use a commercial leather cleaner for tougher dirt or stains. If you use a leather cleaner, carefully follow the manufacturer's instructions and precautions. Do not use solvent type cleaners or abrasive cleaners.

NOTE:

- In order to keep the leather upholstery looking good, it should be cleaned at least twice a year.
- If the leather upholstery becomes wet, immediately wipe it dry with a tissue paper or a soft cloth. Water may cause the leather to harden and shrink if it is not wiped off.
- When parking on sunny days, select a shady place or use a sunshade. If the leather upholstery is exposed to the direct sunlight for a long time, it may discolor and shrink.
- As is common with natural materials, leather is inherently irregular in grain and cowhide has spots in its natural state. These do not affect the performance of the leather in any way.

Seat Belts

Clean seat belts with mild soap and water. Do not use bleach or dye on the belts. They may weaken the fabric of the belts.

Vinyl Floor Mats

Ordinary dirt can be removed from vinyl with water or the mild soap. Use a brush to help loosen dirt. After the dirt is loosened, rinse the mat thoroughly with water and dry it in the shade.

Carpets

Remove the dirt and soil as much as possible with a vacuum cleaner. Using a mild soap solution, rub stained areas with a clean damp cloth. To remove soap, rub the areas again with a cloth dampened with water. Repeat this until the stain is removed, or use a commercial carpet cleaner for tougher stains. If you use a carpet cleaner, carefully follow the manufacturer's instructions and precautions.


APPEARANCE CARE

Instrument Panel and Console

Remove loose dirt with a vacuum cleaner. Gently wipe dirt off with a tightly squeezed damp clean cloth. Repeat this until the dirt is removed.

WARNING

Do not use chemical products that contain silicon to wipe electrical components such as the air conditioning system, audio, navigation system, or other switches. These will cause damage to the components. Do not spray water or any liquid directly on instrument cluster or any other electrical or electronic components. This may cause damage and/or lead to non-functioning of the part or may cause fire.

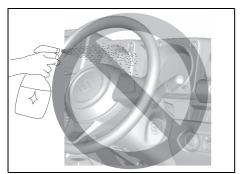


80TM11002

Inside of the Tailgate Window

NOTE:

Wipe the window along the antenna wires or heat wires by a soft cloth dampened with water to avoid damaging these wires.

SPECIFICATIONS

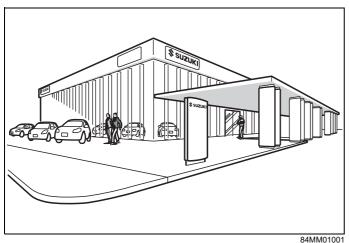


SPECIFICATIONS

Vehicle Identification	. 12-1
FASTag (if equipped)	. 12-2
High Security Registration Plate (HSRP) (if applicable) .	. 12-3
Fuel Recommendation	. 12-4
Specifications	. 12-

SPECIFICATIONS


Vehicle Identification

Chassis Serial Number

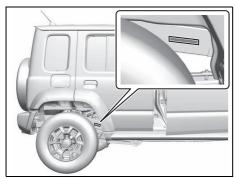

80T120030

tion plate.

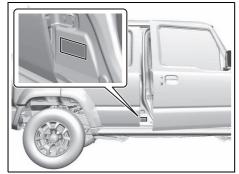


80T120040

The chassis and/or engine serial numbers are used to register the vehicle. They are also used to assist a Maruti Suzuki authorized workshop when ordering or referring to special service information. Whenever you have occasion to consult a Maruti Suzuki authorized workshop, remember to identify your vehicle with this number. Should you find the number difficult to

read, you will also find it on the identifica-

Engine Serial Number

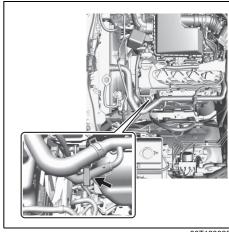


80T120020

The engine serial number is stamped on the cylinder block as shown in the illustration.

FASTag (if equipped)

As per Ministry of Road Transport and Highways, the FASTag (1) is mandatory for each vehicle for the purpose of electronic toll collection or any other purpose as may be defined by the Government of India.

In case of any damage to FASTag or replacement of front windscreen, please contact your nearest Maruti Suzuki authorized workshop.

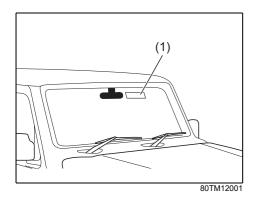


As seen from inside of the vehicle



NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

As seen from outside of the vehicle

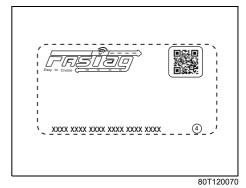

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual device mounted on vehicle may be different.

NOTE:

- Any attempt to remove the tag from the windscreen will result in permanent damage to the tag.
- Use of chemical cleaners to clean the windscreen area where the tag is mounted can damage the tag.
- Use of any sharp objects on the tag can damage the tag.


High Security Registration Plate (HSRP) (if applicable)

As per Ministry of Road Transport and Highways, every new vehicle must have HSRP.

HSRP contains;

- Front and rear HSRP, which will be fitted with 2 snap-locks each on number plate area.
- Third license plate on front windshield.


Third License Plate

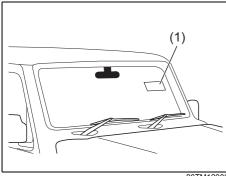

80TM12002

(1) Third license plate

Third license plate - As seen from outside of the vehicle

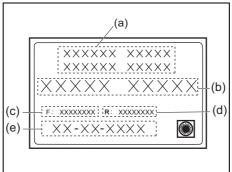

80T120090

- (a) HSRP issuing authority name
- (b) Vehicle registration number
- (c) Unique laser number Front plate
- (d) Unique laser number Rear plate
- (e) Date of 1st registration
- (in DD-MM-YYYY format)
- (f) Green strips (BS6 vehicle)

NOTE:

The picture shown is for indicative purpose only. Internal structure of actual label mounted on vehicle may be different.

NOTE:

 Any attempt to remove the third license plate from the windscreen will result in permanent damage to the label.

- Use of chemical cleaners to clean the windscreen area where the label is mounted can damage the same.
- Use of any sharp objects on the label can damage the label.
- In the event of any replacement of the third license plate, may please contact the approved authority.

Third license plate - As seen from inside of the vehicle

Notice

It is unlawful for any person to duplicate, alter, change, deface, destroy, multilate, remove, tear down this Third Registration Plate Sticker, except if done by authority of law. Do not wipe with harsh abrasive materials, detergents, etc. as it may deface or damage this Sticker.

80T120100

NOTE:

The picture shown is for indicative purpose only.

NOTE:

Color of third license plate (back) is as per HSRP regulation as defined by Ministry of Road Transport and highways.

Fuel Recommendation Petrol Engine

To avoid damaging catalytic converter, you must use unleaded petrol with an octane number (RON) of 91 or higher.

Gasoline/Ethanol blends

Blends of unleaded gasoline and ethanol (grain alcohol), also known as gasohol, are commercially available in certain areas. Blends of this type are recommended for this vehicle if they are no more than 10% ethanol. The vehicle may also be plied with blend of no more than 20% ethanol.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using 20% ethanol blend, you should switch back to blend of no more than 10% ethanol.

Gasoline containing MTBE

Unleaded gasoline containing MTBE (methyl tertiary butyl ether) may be used in your vehicle if the MTBE content is not greater than 15%. This oxygenated fuel does not contain alcohol.

A CAUTION

Use of spurious, low quality, adulterated fuel can cause damage to the engine and engine auxilliaries, affect functioning of engine and degrade engine performance including but not limited to engine seizure.

NOTICE

- The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in
- leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when initial vent blowback occurs, if using an alternative non-automatic system.
- Be careful not to spill fuel containing alcohol while refueling. If fuel is spilled on the vehicle body, wipe it up immediately. Fuels containing alcohol can cause paint damage, which is not covered under the New Vehicle Limited Warranty.

SPECIFICATIONS

Specifications

NOTE:

Specifications are subject to change without notice.

M/T: Manual transmission A/T: Automatic transmission

ITEM: Dimensions		UNIT: mm	
Overall length		3820 (Front bumper to rear bumper) 3865 (Front bumper to spare tyre) 3985 (Front bumper to spare wheel half cover)	
Overall width		1645	
Overall height		1720	
Wheelbase		2590	
Track Front		1395	
Track	Rear	1405	

ITEM: Mass (weight)		UNIT: kg
M/T		1195–1200
Curb mass (weight)	A/T	1205–1210
Gross vehicle mass (weight) rating		1545
Permissible maximum Axle Weight Front Rear		765
		880

ITEM: Engine	
Туре	K15B
Number of cylinders	4
Bore	74.0 mm
Stroke	85.0 mm
Piston displacement	1462 cm ³
Compression ratio	10.0: 1

ITEM: Electrical	
Standard spark plug	NGK KR6A-10
Battery	12V ISS N55 ^{*1} 20HR 45AH CCA 480A(JIS)
Fuses	See "INSPECTION AND MAINTENANCE" section

^{*1:} Your vehicle is equipped with a lead-acid battery for exclusive use of the ENG A-STOP system.

When replacing the lead-acid battery, make sure to select the specified type for ENG A-STOP system. Consult with a Maruti Suzuki authorized workshop for replacing the lead-acid battery.

SPECIFICATIONS

ITEM: Recommended fuel / lubricants and capacities (approx.)		
Fuel	See "FUEL RECOMMENDATION" section	40 L
Engine oil	Classification: API SN or SP ILSAC GF–6 Viscosity: SAE 0W–16	3.6 L (replacement with oil filter)
Engine coolant	SUZUKI LLC: Super (Blue) Coolant	4.8 L (including reservoir tank)

ITEM: Recommended fuel / lubricants and capacities (approx.)			
Manual transmis	ssion oil	MARUTI GENUINE GEAR OIL 75W	1.2 L
Automatic trans	tomatic transmission oil SUZUKI ATF 3317 or Mobil ATF3309		5.7 L
Differential oil	Front	SUZUKI SUPER GEAR OIL 75W-85 SYNTHETIC	1.6 L
Dillerential oil	Rear	- SUZUKI SUPER GEAR OIL 75W-65 STITTHETIC	1.3 L
Transfer oil SUZUKI GEAR OIL 75W-85		SUZUKI GEAR OIL 75W-85	1.21 L
Brake fluid / Clu	tch fluid	MARUTI GENUINE BRAKE FLUID (MGBF) or DOT 3.	Refill to the proper oil level according to the instructions in "INSPECTION AND MAINTE-NANCE" section.
Windshield was	her fluid	-	4.0 L

ITEM: Wheels and tyres			
Tyre size, front and rear	195/80R15 96S ^{*1}		
Rim size	with steel wheels	15X5 1/2J	
KIII Size	with aluminum wheels	15X5 1/2J	
Tyre pressures		For the specified tyre pressure, see the tyre information label located on the driver's door lock pillar.	
Recommended snow chain	Radial thickness: 20 mm, axia	Radial thickness: 20 mm, axial thickness: 20mm	
Recommended snow tyre	195/80R15 ^{*2}		

^{*1} If you cannot prepare tyres with the specified load index rate and speed symbol, prepare tyres with higher load index rate and speed symbol.

- *2 If you prepare snow tyres;
 - Check that they are tyres of the same size, structure and load capacity as the originally installed tyres.
 - Mount the snow tyres on all four wheels.
 - Understand that the maximum permissible speed of snow tyres is generally less than the originally installed tyres.

Consult with a Maruti Suzuki authorized workshop for further information.

ITEM: Lights		WATTAGE	BULB No.
Interior light	Front	12V 10W	C10W
	Center	12V 10W	C10W
	Luggage compartment	12V 5W	W5W

[•] If you need to replace the following bulbs indicated in the above table, consult with a Maruti Suzuki authorized workshop.

^{*1} Since the lights are non-disassemble type, you cannot replace a bulb. Replace the target assembly if any light is defective.

SPECIFICATIONS		
MEMO		

■ MARUTI SUZUKI AUTHORISED DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SUZUKI NEXA DEALER WORKSHOP : SALES, SERVICE, WARRANTY & SPARE PARTS

■ MARUTI SERVICE MASTER (MSM) : SERVICE, WARRANTY & SPARE PARTS
■ MARUTI SERVICE ZONE (MSZ) : SERVICE, WARRANTY & SPARE PARTS
■ MARUTI AUTHORISE SERVICE STATIONS (MASS) : (A) CATEGORY MASS. (STMARKER)

MARUTI AUTHORISED SERVICE STATIONS (MASSs) : 'A' CATEGORY MASSs (**MARKED)

Free & paid Service, Major repairs & Accidental repairs

'B' CATEGORY MASSS (* MARKED)
Free & paid Service & Major repairs
'C' CATEGORY MASSS (##MARKED)
Free & paid Service & Minor repairs
'D' CATEGORY MASSS (#MARKED)

Free Service & Minor repairs

NOTE:

Certain MASSs are not authorised to undertake Warranty jobs. Customers are requested to approach only Maruti Suzuki Authorised Dealer Workshop / Maruti Suzuki Nexa Dealer Workshop / Maruti Service Master / Maruti Service Zone for Warranty jobs.

The charges and services may vary depending upon service network and location.

For latest Service Network details kindly visit <u>www.marutisuzuki.com</u> or contact our regional office / area office as mentioned below.

REGIONAL OFFICE	AREA COVERED
REGIONAL OFFICE (NORTH-I) MARUTI SUZUKI INDIA LIMITED 2nd FLOOR, 157 DIVINE , RAJPUR ROAD, DEHRADUN, UTTARAKHAND - 248001 PH:- 0135-2738549	UTTARAKHAND AND PART OF U.P.
REGIONAL OFFICE (NORTH-II) MARUTI SUZUKI INDIA LIMITED SCO: 39-40, SECTOR 8C, MADHYA MARG, CHANDIGARH - 1600\$- PH. NO 0172-2780056	PUNJAB, CHANDIGARH, PANCHKULA, ZIRAKPUR, MOHALI, JAMMU AND KASHMIR & LADAKH
REGIONAL OFFICE (NORTH-III) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, SUMMIT, PLOT NÓ. TCG 3/3, VIBHUTI KHAND, GOMTI NAGAR – LUCKNOW - 226010	PART OF U.P.
REGIONAL OFFICE (NORTH-IV) MARUTI SUZUKI INDIA LIMITED S.C.O. 81, FIRST FLOOR, SECTOR 5, PANCHKULA (HARYANA)-134109 PH : (0172) 2590056, 2580056	PART OF HARYANA AND HIMACHAL PRADESH
REGIONAL OFFICE (EAST-I) MARUTI SUZUKI INDIA LIMITED PLOT NO IID/15, ACTION AREA IID, NEW TOWN KOLKATA-700156	WEST BENGAL, SIKKIM, ANDAMAN & NICOBAR
REGIONAL OFFICE (EAST-II) MARUTI SUZUKI INDIA LIMITED 4TH FLOOR, ROHINI, OPP. HOTEL APSARA, 56, CIRCULAR ROAD, LALPUR RANCHI - 834001, JHARKHAND PH.: - 0651-2563931/61	BIHAR, JHARKHAND
REGIONAL OFFICE (EAST-III) MARUTI SUZUKI INDIA LIMITED 5A, 5TH FLOOR, PEACE ENCLAVE 724, ULUBARI, G.S.ROAD, GUWAHATI-781007 (ASSAM) TELE: 0361-2734308/10/11/12	ARUNACHAL PRADESH, ASSAM, MANIPUR, MEGHALYA, MIZORAM, NAGALAND, TRIPURA

SERVICE NETWORK (AS ON 31.05.2022)

REGIONAL OFFICE (WEST-I) MARUTI SUZUKI INDIA LIMITED A2, TOWER A, FIRST FLOOR, EMBASSY 247, LBS MARG, VIKHROLI WEST MUMBAI 400083 PH NO – 022 - 45042300	PART OF MAHARASHTRA AND GOA
REGIONAL OFFICE (WEST-II) MARUTI SUZUKI INDIA LIMITED SACRED WORLD, 7TH FLOOR, NORTH BLOCK, UNIT NUMBER 708-715; JAGTAP CHOWK, WANAWADI, PUNE – 411 040 (MAHARASHTRA) PH. (020) 26856037 / 38 / 39	PART OF MAHARASHTRA
REGIONAL OFFICE (WEST-III) MARUTI SUZUKI INDIA LIMITED 211-213, 2ND FLOOR, ISCON MALL, ABOVE STAR INDIA BAZAR, SATELLITE, AHMEDABAD - 380015 PH NO - 079 – 40036660	GUJARAT, DADRA & NAGAR HAVELI, DAMAN AND DIU
REGIONAL OFFICE (SOUTH-I) MARUTI SUZUKI INDIA LIMITED 7TH FLOOR, CAPITAL TOWERS, # 180, KODAMBAKKAM HIGH ROAD, NUNGAMBAKKAM, CHENNAI – 600034 PH 044 - 28233050 – 53	TAMILNADU AND PONDICHERY
REGIONAL OFFICE (SOUTH-II) MARUTI SUZUKI INDIA LIMITED #204, 2ND FLOOR, EMBASSY CLASSIC BUILDING,VITTAL MALLYA ROAD,BANGALORE- 560001, KARNATAKA. PH: (080) 41120018	KARNATAKA
REGIONAL OFFICE (SOUTH-III) MARUTI SUZUKI INDIA LIMITED 2ND FLOOR, TUTUS TOWERS, 32/1787 NH47- BYE PASS, PADIVATTOM, COCHIN- 682024	KERALA
REGIONAL OFFICE (SOUTH EAST-I) MARUTI SUZUKI INDIA LIMITD 101-102 FIRST FLOOR MAHAVIR CHAMBERS, LIBERTY SQUARE STANZA, HIMAYATH NAGAR, HYDERABAD-500029, TELANGANA CONTACT NO: 040-667299999	ANDHRA PRADESH, TELANGANA
REGIONAL OFFICE (SOUTH EAST-II) MARUTI SUZUKI INDIA LIMITED UTKAL SIGNATURE, UNIT NO. 605 & 606 (6TH FLOOR) NH-5, PAHAL, CUTTACK-BHUBANESWAR ROAD, BHUBANESWAR-752101, ODISHA PH. 0674-2914129, 0674-2914139 & 0674-2914229	ODISHA AND CHHATTISGARH
REGIONAL OFFICE (CENTRAL-I & II) MARUTI SUZUKI INDIA LIMITED Nelson Mandela Marg,Vasant Kunj II, Vasant Kunj, New Delhi, Delhi - 110070	DELHI
REGIONAL OFFICE (CENTRAL-III) MARUTI SUZUKI INDIA LIMITED 7TH POOJA TOWER, 3 GOPALPURA BYEPASS, TONK ROAD JAIPUR (RAJASTHAN)- 302018, CONTACT NO.: 0141-2550888	RAJASTHAN
REGIONAL OFFICE (CENTRAL-IV) MARUTI SUZUKI INDIA LIMITED 3RD FLOOR, COMMERCE HOUSE, 7 RACE COURSE ROAD INDORE (M.P) PIN CODE: 452001 CONTACT NO.: 07314069481/852/385.	MADHYA PRADESH
·	

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Agra	Maruti Suzuki India Limited, 7th Floor, B-15/8, Shri Vrindavan Tower, Sanjay Place, Agra-282001 Ph:-0562-4052646/47	
Bhopal	Maruti Suzuki India Limited, 522, 5th Floor Corporate Zone, Ashima Mall, Hoshangabad Road, Bhopal (M.P) Pin Code: 462 026 Contact: 0755 6051555	
Calicut	Maruti Suzuki India Limited,1st Floor, Central Arcade, Mini-Bypass Road, Puthiyara, Calicut- 673004, Phone: 0495-2723151	
Coimbatore	Maruti Suzuki India Limited, Srivari Gokul Towers, First floor, (East wing), No.108/3, Race course, Coimbatore - 641018 Ph 0422-2221091	
Hubli	Maruti Suzuki India Limited, Shiva Avenue, 2nd Floor, Gokul Road, Hubli - 580030, Ph: 0836-4259447	
Jammu	Maruti Suzuki India Limited, Hall no: 315, A2,3rd Floor, South Block, Bahu Plaza, Jammu-180012 M: 9622066444/9622524343	
Ludhiana	Maruti Suzuki India Limited, SCO No. 16/17, 4Th Floor, Fortune Chambers, Feroze Gandhi Market, Ludhiana-141001, Ph: 0161-4649764	
Madurai	Maruti Suzuki India Limited, 3rd floor, ADR towers, Kalavasal, Theni Bye pass road, Madurai-625016 Ph 0452-4200203	
Mangalore	Maruti Suzuki India Limited, F - 4,5,6, 1st Floor, Classic Gateway, Mahaveer Circle Pumpwell Mangalore – 575002 Ph. 0824 - 4112111	

SERVICE NETWORK (AS ON 31.05.2022)

DETAILS OF AREA OFFICES		
Area Office Location	Area Office Address	
Nagpur	Maruti Suzuki India Limited, Plot No.244, 1st Floor, Narayani House, Hill Road, Dharampeth Extension, Nagpur - 440010 (Maharashtra) Ph. (0712) 2225808	
Nashik	Maruti Suzuki India Limited, Plot No.202, Rushiraj Towers, Jehan Circle, Gangapur Road, Nashik - 422 005 (Maharashtra) Ph. (0253) 6698551	
Patna	Maruti Suzuki India Limited, 307-308, Vasundhara Metro Mall, Rajapur Pul, East Boring Canal Road, Patna - 800001, Bihar Phone - 0612-2559145	
Raipur	Maruti Suzuki India Limited, 629-630, Magneto Offizo, Magneto The Mall, Labhandi, Raipur, Chhattisgarh, Pin - 492001 Ph 0771-4039643	
Siliguri	Maruti Suzuki India Limited, Unit 401, 4th Floor, Quantum Siliguri, Parivahan Nagar, Matigara Siliguri - 734010 West Bengal	
Surat	Maruti Suzuki India Limited, 304, Shivalik Western, Above TGB Restaurant, L.P. Savani Road, Adajan Surat - 395009	
Trivandrum	Maruti Suzuki India Limited, 8th Floor, KEK Tower, Opp. Police Head Quarters, Vazhuthacadu, Trivandrum - 695010, Phone:- 0471-2322366	
Udaipur	Maruti Suzuki India Limited, 302 & 303, 3rd Floor. Manglam's Fun Square, Durga Nursery Road. Udaipur, (Rajasthan) 313001	
Vijayawada	Maruti Suzuki India Limited, Vaishinavi Complex, 4th Floor, Unit 2,Opposite Executive Club, Vijayawada, -530002,	
Visakhapatnam	Maruti Suzuki India Limited, Door No. 10-50-58/1, 3rd Floor, Waltair Main Road, Ramnagar, Above westside store, RK Estates, Visakhapatnam-530002, Andhra Pradesh Contact No: 0891 2745299	

ANDHRA PRADESH

ANANTHAPUR

SRI DURGA (1BNA-1B-01), NO.124, SOMALADODDI, ANANTHAPUR, ANDRA PRADESH - 515004 PH:9885183851

GUNTUR

JAYLAXMI (G5NA-G5-01), D-NO:199/2. OPP.AUTONAGAR, NH 16, VJA - GNT SERVICE ROAD, GUNTUR, ANDHRA PRADESH - 522001 PH:9959844644.

KAKINADA

VARUN MOTORS (W7NA-W7-01), BHASKARA GARDENS JAGANDHAPURAM ,KAKINADA -533016

PH:9885313744.

KURNOOL

MSA MOTORS (C2NA-C2-01), PLOT NO. 1, 1A, 2, 2A. WARD NO. 96. NH 44. AUTO NAGAR. KURNOOL, ANDHRA PRADESH 518003 - 518003 PH:9912826682

NELLORE

BHARGAVI AUTO (A8NA-A8-01), SURVEY NO 245B, CHEMUDUGUNTA VILLAGE, NH-16. ADJACENT TO SRIDS KALYANA MANDAPAM, NELLORE, ANDHRA PRADESH - 524002 PH:8886682222.

ONGOLE

JAYALAXMI (8YNA-8Y-01), SURVEY NO:194/2, BESIDE NH 5. MUKTHINUTHALAPADU, ONGOLE, ANDHRA PRADESH - 523225 - 523225 PH:9492133433

RAJAHMUNDRY

SB MOTORS (C5NA-C5-01), D.NO:84-1-12. PADMAVATI NAGAR, BESIDE ONGC BASE COMPLEX: NH-45: RAJAHMUNDRY. ANDRAPRADESH-533106. - 533016 PH:9248727888.

SRIKAKULAM

VARUN MOTORS (W6NA-W6-01), PEDDAPADU ROAD, ARASAVALLI POST, SRIKAKULAM DISTRICT, ANDHRA PRADESH - 532401 PH:9885317344.

VIJAYAWADA

VARUN MOTORS (26NA-26-01), OPP TO PRIYA PICKLES, BANDAR ROAD, PORANKI, VIJAYAWADA, ANDRAPRADESH-521137. -521137 PH:6309955655.

PARAMSHIVA MOTORS (26NB-26-01), NO. 20-1-34, C K REDDY ROAD, AYODHYA NAGAR, VIJAYAWADA, ANDRAPRADESH- 520003, -520003 PH:9866551078.

VARUN MOTORS (26NA-26-02), DOOR NO1-1-153.REVENUE WARD NO.1.BLOCK NO3.VIDHYADARARPURAM.VIJAYAWADA -520012 PH:9989477120.

VISAKHAPATNAM

 VARUN MOTORS (46NA-46-01), DOOR NO 38-22-27, SURVEY NO 39, KAPARADA VILLAGE, INDUSTRIAL ESTATE, VISHAKHAPATNAM -533016 PH:9885317344.

VIZIANAGARAM

JAYABHERI AUTO (N8NA-N8-01), OPPOSITE RELIANCE MART, BALAJI JUNCTION, 100 FEET RING ROAD VIZIANAGARAM - 535002 PH:08340833999.

ASSAM

BONGAIGAON

BHARATI MOTORS (7NNA-7N-01), CHAPAGURI RD, NEAR POST OFFICE, NORTH BONGAIGAON, AMGURI, BONGAIGAON, ASSAM 783380 - 783380 PH:7002350887.

DIBRUGARH

VISHAL CAR WORLD (C1NA-C1-01). MOHPUALIMORA GOHAIN GAON, A.T ROAD. DIBRUGARH, ASSAM - 786008 PH :8000900008

GUWAHATI

PODDAR AUTO (09NA-09-01), AT ROAD KAMAKHYA GATE , GUWHATI , KAMRUP-781009 - 781009 PH:8085957586.

BIMAL AUTO (09NB-'09-01), DREAMLAND APPARTMENT.NAHRANI PATH. DISPUR LAST GATE, GUWAHATI - 781006 (ASSAM) - 781006 PH:9864074525.

JORHAT

RD MOTOR (G9NB-G9-01), M/S R D MOTORS PVT LTD . DHAPKATA, NEAR TINALI, JORHAT -785006 - 785006 PH :7002099547

SILCHAR

JAIN UDHYOG (J2NA-J2-01), R.S. PATTA NO.149, DAG NO.579, MOUZA RONGPUR, SILCHAR, ASSAM - 788009 PH:9436121557.

TEZPUR

RD MOTOR (T1NA-T1-01), SOLAGAN VILLAGE, GOROIMARI, SONABEEL BEFORE MAA KALYANI PETROL PUMP. TEZPUR -784105 -784105 PH:9836872710.

TINSUKIA

VISHAL CAR WORLD (J4NA-J4-01), NEXA SHOWROOM (BESIDE VISHAL BIKER'S WORLD), A.T. ROAD, LAIPULI, TINSUKIA, ASSAM -786183 - 786183 PH:9864211022.

BIHAR

GAYA

KARLO MOTORS (Y6NA-Y6-01), GAYA DOBHI MAIN ROAD, NEAR DOMUHAN, BODHGAYA, PIN -824231 RIHAR - 824231 PH:9934096400.

PATNA

ALANKAR AUTOMOBILES (15NA-15-01), OPP.RUPASPUR THANA, BAILEY ROAD NEAR GOLA ROAD, PATNA - 800002 PH:9199427707

REESHAV AUTOMOBILES (15NB-15-01). MUKDUMPUR.DIGHA.90 NO GATE, PATNA -800012

PH:7369944132.

SHRI GOPAL (15NC-`15-01), BIKHACHAK ANISHABAD NEW BYPASS ROAD, OPPOSITE SITA RAM COMMUNITY HALL, PATNA, BIHAR -800002 - 800002 PH:9113746967

PURNEA

SIMANCHAL (6VNA-6V-01), DAMKA CHOWK KISHANGAN I ROAD NH-31 GUAI BRAGH PURNEA BIHAR - 854326 PH:9334710055.

CHANDIGARH

CHANDIGARH

AUTOPACE (FEB) (07NA-07-01), PLOT NO. 37. INDUSTRIAL AREA - PHASE 1, CHANDIGARH -160002

PH:7087119861.

NAVDESH AUTO (07NE-07-01), PLOT NO 182/11, INDUSTRIAL AREA PHASE 1, CHANDIGARH -160002

PH:8827057534

CHHATTISGARH

MAHAMAYA (AENA-AE-01), AJAB NAGAR.MAHATHMA GANDHI ROAD.AMBIKAPUR - 497001 PH:9516609632.

BILASPUR

AMBIKAPUR

SATYA AUTOMOBILES (C3NB-C3-01), PLOT NO 53, SECTOR C, SIRGITTI INDUSTRIAL AREA, BII ASPUR, CHHATTISGARH - 495001 PH:6372803057.

KORBA

SATYA AUTOMOBILES (UZNB-UZ-01), SHED NO 10. PART OF KHASRA NO 885, INDUSTRIAL AREA, RAJGAMAR ROAD, KORBA (C.G) - 495677 PH:9993092051

RAIPUR

32. SPARSH (50NA-50-01), NEAR TCI GODOWN, NH-6, CHANDANDIH, TATIBANDH, RAIPUR, CHATTISGARH - 492029 PH:9926626662.

SKY AUTOMOBILES (50NB-50-01), NEXA MAGNETO, LABHANDHI, G. E. ROAD, RAIPUR -

PH:9425204051.

DELHI

DELHI

RANA MOTORS (08NE-08-01), B-242, OKHLA INDUSTRIAL AREA PHASE 1, OKHLA, NEW DELHI - 110020 PH:7290030289 9290030288.

TR SAWHNEY (08NN-08-01), C-46, OKHLA INDUSTRIAL AREA PHASE 2, OKHLA NEW DELHI - 110020 PH:9953350008.

PLATINUM MOTORS (08NO-08-01), PLOT NO-H4.BLOCK-B1.MOHAN CO-OPERATIVE INDEX.MATHURA ROAD.PIN-110044 - 110044 PH:9811386000, 8860200000.

MAGIC AUTO (08NA-08-01), CISF GATE NO 1. D-21, CORPORATE PARK, NEAR DWARKA SEC-8 METRO STATION, NEW DELHI - 110075 PH:9873052000.

AAA VEHICLEADES (08NW-08-01), BLOCK C, NAJAFGARH ROAD INDUSTRIAL AREA, NEW DELHI, DELHI 110015 - 110015 PH:8750611111.

COMPETENT AUTO (08NF-08-01), PLOT NO-34.RAJASTHAN UDYOG NAGAR, GT AKRNAL ROAD DELHI - 110033 PH:9932049425.

JAGMOHAN MOTORS (08NX-08-01). C133-136(PART, PHASE I, INDUSTRIAL AREA, MANGOLPURI S BLOCK, NEW DELHI, DELHI 110083 - 110083 PH:9812259000

GOA

MARGAON (GOA)

41. CHOWGULE INDUSTRIES (34NB-34-01), SY. NO. 267/1, NEXT TO ARLEM RTO, ARLEM, RAIA. SALCETE - (GOA) - 403720. - 403720 PH:9850966950

PORVORIM(PANJIM)

Nexa Workshop (AS ON 31.05.2023)

 SAI SERVICE (3AIN-34-01), EMPRESSA INDUSTRIAL CHODANKAR, SURVEY NO. 114/2, SALVADOR DO MUNDO, PORVORIM, BARADEX, GOA - 403521 PH: 022-61841111, 8291941070.

GUJARAT

AHEMADABAD

- STAR LINE CARS (01NE-01-01), PLOT NO 236, GIDC, NARODA, AHMEDABAD, GUJARAT. 382 330 - 382330 PH:7436003235.
- PEGASUS (01NG-01-01), PLOT NO 9, OPP RABARI COLONY BRTS STOP, CTM, NAROL-NARODA HIGHWAY, NH-8, AHMEDABAD, GUJARAT. - 380026 PH: 9909023000.
- POPULAR WHEELERS (01NC-01-01), T P 20, F P 78, OPPOSITE SUN SQUARE COMPLEX OFF, C G ROAD, NEAR HL COLLEGE, NAVRANGURA GULBAI TEKRA, AHMEDABAD, GUJARAT -380009 PH 9925203344.

ANAND

 AMAR CARS (F7NA-F7-01), SURVEY NO 1583, PLOT NO 144, NEAR GANESH CROSSING, ANAND SOJITRA ROAD, ANAND, GUJARAT -388001 PH:9925407666.

BHARUCH

 RAVIRATNA (F8NA-F8-01), SURVEY NO 185/3, NH8, ZARDESHWAR, BHARUCH, GUJARAT. -392001
 PH :9727700823.

BHAVNAGAR

 KIRAN MOTORS (C9NB-C9-01), RAMDEV SOCIETY, CHITRA GIDC, BHAVNAGAR -GUJARAT - 364001 PH :9924123973

BHUJ

 KD MOTORS (P5NA-P5-01), 33, UMA PARK, BEHIND MARUTI SUZUKI SHOWROOM, MIRZAPAR HIGHWAY, BHUJ - 370040 PH:9879898799.

GANDHIDHAM

 BM AUTO LINK (77NA-77-01), SURVEY NO 129/26, GALPADAR - ANJAR HIGHWAY, AIRPORT ROAD, GANDHIDHAM, KUTCH, GUJARAT - 370201 PH :7211120014.

GANDHINAGAR

 NANDA AUTOMOBILES (2BNA-2B-01), BLOCK NO 403, NR SANGATH GATEWAY, OPP RAISAN PETROL PUMP, KUDASAN, GANDHINAGAR, GUJARAT. - 382421 PH :9887641974.

GODHRA

 RB CARS (2CNA-2C-01), SURVEY NO. 38/2 PAIKE 1 PAIKE 2, LUNAWADA ROAD, OPP. GIDC, GODHRA - 389001 - 389001 PH:9925051444.

JUNAGARH

 PERFECT AUTO SERVICES (K8NA-K8-01), GIDC 2, RAJKOT HIGHWAY, JUNAGARH - 362037 PH 19909022619

MEHASANA

 STAR LINE CARS (D1NA-D1-01), REVENUE SURVEY NO. 342, PLOT NO.1, 4, 5 AND 6 TO 12, VILLAGE NAGALPUR, DISTRICT MEHSANA, GUJARAT - 384002 PH :7211138986, 7211138987.

MORBI

 PERFECT AUTO SERVICES (X5NA-X5-01), RAJKOT MORBI HIGHWAY, VILLAGE SANALA, MORBI - GUJARAT (363641) - 363641 PH: 9909022619.

PATAN

 STARINE CARS (Q9NA-Q9-01), ADJACENT ARENA SET UP, PATAN UNJHA ROAD, PATAN (GUJARAT) - 382465 - 382465 PH :9909043244.

RAJKOT

 PERFECT AUTO SERVICES (55NB-55-01), PLOT NO. 110, 111, 127 & 128, KOTHARIYA, NEAR PERFECT HOUSE, GONDAL ROAD, RAJKOT-360004 PH :9512035501.

SURAT

- KIRAN MOTORS (40NB-40-01), BLOCK NO 443, FP NO 26 MOJE PALGAM, ADAJAN, SURAT, GUJRAT -395009 - 395009 PH : 7020569426.
- AMAR CARS (40ND-40-01), SURVEY NO 139,BLOCK NO-"218"A,OPPOSITE TO AWADH ARENA MALL,VI.P ROAD BHARTHAMA,SURAT,GUJRAT - 395007 PH 9871389795.

SURENDARNAGAR

 DREAM VEHICLES (LCNA-LC-01), PLOT NO. 302, GIDC AREA, WADHWAN CITY, SURENDERNAGAR, GUJARAT. - 363035 PH: 8511104644.

VADODARA

 KATARIA AUTO (22NA-22-01), WARD NO 11 CIRCLE SAINATH ROAD, HARINAGAR-VASNA ROAD VADODARA - 390007 PH :9824701590

VAPI

 KATARIA AUTO (97NA-97-01), NEAR CROMA OUTLET, RATHOD CHAMBERS, DAMAN ROAD, CHALA VAPI - 396191 PH :9714799985.

HARYANA

AMBALA

 EAKANSH WHEELS (18NA-18-01), AMBALA-CHANDIGARH HIGHWAY ADJOINING AAJ SAMAJ VILLAGE-SADDOPUR, AMBALA -134003 PH:8395903111.

BHIWANI

64. PASCO AUTOMOBILES (X3NA-X3-01), NEAR HUNNAMAL PIAYU, ROHTAK ROAD, BHIWANI-HARYANA-127021 - 127021 PH 9289192562.

FARIDABAD

 PASCO AUTOMOBILES (58NB-58-01), 14/4, MATHURA ROAD, FARIDABAD, HARYANA -121003

PH:9999790229.

- BVA AUTO (58NC-58-01), 2J/53-54, NH-2, NIT FARIDABAD, HARYANA - 121001 PH 9911259288
- VIPUL MOTORS (58NA-58-01), SUB DIVISION NO-3, INDUSTRIAL PLOT NO. -34, N.I.T, FARIDABAD HARYANA - 121001 PH:8562019252

GURGAON

- PREM MOTORS (95ND-95-01), PLOT NO. 5, IDC, SECTOR-16, GURGAON, HARYANA - 122001 PH:1292565666.
- TR SAWHNEY (95NB-95-01), CRPF CAMP ROAD, VILLAGE ULLAWAS, NR. PIONEER PARK SECTOR-62, GURGAON, HARYANA - 122001 PH:1274254441.
- PASCO AUTOMOBILES (95NA-95-01), SEC 17-18 DIVIDING ROAD, GURGAON- HARYANA, 122015 - 122015 PH: 0124-4398400, 9999239859

JIND

9873873807

KAITHAL

 EAKANSH MOTORS (U8NA-U8-01), NH-65, OPP RKM FARM, AMBALA ROAD, KAITHAL - 136027 PH:7419900804, 7419900803

 EAKANSH MOTORS (USNA-US-02), KHEWAT NO -458, KHATONI - 563, KITTAS - 20/87K 01M ADJOINING NEXA SHOWROOM, AMBALA HISAR ROAD, KAITHAL - 136027 PH :8813038777.

KARNAL

 KARNAL MOTORS (89NA-89-01), 118-119 KM MILESTONE, G.T. ROAD, KARNAL, HARYANA -132001 PH:8572801011.

PALWAL

 AUTONATION (EENA-EE-01), KILA NO.-15/2 & 16/1, 57 MILESTONE, NEAR ECHS HOSPITAL, MATHURA ROAD, PALWAL - 121102 PH:9811321581.

PANIPAT

 AUTO GALLERY (D3NB-D3-01), NANGAL KHERI, NEAR BBMB POWER HOUSE, OPP. SEC-29, PANIPAT, HARYANA - 132103 PH :9812615000.

REWARI

 DINCO MOTORS (U1NA-U1-01), OPP. TULARAM STADIUM, DELHI ROAD, REWARI - 123401 PH : 0129-4353535, 9953357777 8448787882 8448787883.

ROHTAK

JAGMOHAN MOTORS (A6NA-A6-01), NORTHERN BYEPASS, SUKHPURA CHOWK, JIND ROAD, ROHTAK, HARYANA - 124001 PH:8754045446.

SIRSA

 SHAKTI MOTORS (E4NA-E4-01), OPP. DELHI PUBLIC SCHOOL, NH-09, HISSAR ROAD, SIRSA -125055 PH :88160-72888, 88138-75888.

HIMACHAL PRADESH

NAGROTA

 KANGRA VEHICLEADS (D9NA-D9-01), VILL HATWAS, PATHANKOT - MANDI HIGHWAY, NAGROTA BAGWAN DISTT. KANGRA - 176047 PH. 7087916168.

JAMMU AND KASHMIR

JAMMU

JAMKASH VEHICLES (33NB-33-01), NH-1A BYE PASS OPPOSITE CHANNI HIMMAT, JAMMU (J&K) - 180015 PH:7710400000. JAMMU MOTORS (33ND-33-01), KHASRA NO. 421, TOPE SHERKHANIA, AKHNOOR ROAD, OPPOSITE BEST PRICE, JAMMU, JAMMU & KASHMIR - 180016
 PH. 99419581624.

JHARKHAND

BOKARO

 HINDUSTAN AUTO AGENCY (B5NA-B5-01), KHATA NO. 752, PLOT NO. 7792, NH-32, CHAS, BOKARO. - 827013 PH :9304807318.

DEOGHAR

 PREMSONS (SGWN-SGW-01), PLOT NO 318/319 UNDER THANA NO 583,MAHESHMARA MOUJA ,DEOGHAR - 814112 PH :9835507004.

DHANBAD

 RELIABLE (52NA-52-01), RELIABLE INDUSTRIES NEXA WORKSHOP AMAGHATA BY PASS ROAD SUGIADIH,PIN -828109 - 828109 PH 7992470853.

HAZARIBAGH

 PREMSONS (Y9NA-Y9-01), PREMSON MOTOR UDYOG PVT LTD, NEXA SHOWROOM NEXT TO GST OFFICE, ARYA NAGAR, HURHURU, HAZARIBAGH, JHARKHAND 825301 - 825301
 PH 9435507004

JAMSHEDPUR

- MOTOR WORLD (31NB-31-01), NS-6, 2ND PHASE, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR - 831013 PH: 9431128683.
- PEBCO MOTORS (31NA-31-01), KANDRA ROAD, ADITYAPUR INDUSTRIAL AREA, JAMSHEDPUR -831013 PH:9334183260.

RANCHI

- SUDHA MOTORS (51NB-51-01), KATHALMORE, OPP. MANER DHABA, RANCHI - 834005 PH :7001124836, 8837221096
- PREMSONS (51NC-51-01), PLOT NO 2651/2652, KHATA NO 239, MAUJA, VILLAGE BARAGAI, BARIATU MAIN ROAD, RANCHI, JHARKHAND - 834009 PH -9334811248.

KARNATAKA

BANGALORE

 MANDOVI MOTORS (02NJ-02-01), SURVEY NO.33/2,ALLALASANDRA, YELAHANKA NORTH, BANGALORE, KARNATAKA - 560064 PH :9513729888.

- KALYANI MOTORS (02NI-02-01), SURVEY NO.17/2, KENCHENAHALLI VILLAGE, RAJARAJESHWARI NAGAR, MYSORE ROAD,BANGALORE, KARNATAKA - 560032 PH :9845049626.
- 93. SURAKSHAA CAR CARE (02NF-02-01), 2/6, BERTEN AGRAHARA, OPP TO METRO CASH & CARRY, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE, KARNATAKA - 560100 PH '9845047393
- 94. PRATHAM MOTORS (02NK-02-01), 120,SARJAPUR MAIN ROAD,DODDAKANAHALLI, VARTHUR HOBUI, BANGALORE EAST, KARNATAKA-560035. - 560035 PH:8884000579.
- VARUN MOTORS (02NG-02-01), NO.23/A, INDUSTRIAL SUBURB, 2ND STAGE, TUMKUR ROAD, YESHWANTPUR, BANGALORE, KARNATAKA-560022. - 560022 PH: 3971888885.
- VARUN MOTORS (02NM-02-01), 37/56 NAGAVARA VILLAGE, HEBBAL RING ROAD BANGALORE - 560024 PH :9513394753.
- KALYANI MOTORS (02NN-02-01), 152/7, OUTER RING ROAD, DODDA BANASWADI, HORAMAVU, KR PURAM HOBALI, BANGALORE -560043. -560043 PH :9900020454.
- 98. BIMAL AUTO (02NL-02-01), NO.1, 3RD BLOCK, 2ND STAGE, NAGARABHAVI, OUTER RING ROAD, BANGALORE – 560072 - 560072 PH :9513843355.

BELGAUM

 SHANTESHA MOTORS (E8NA-E8-01), PLOT NO. 6/B, R.S NO. 34, BOUXIDE ROAD, KANGRALI B K, BELGAUM, KARNATAKA-590010. - 590010 PH: 9538195381.

DAVANGREE

100. SHRUTI MOTORS (S1NA-S1-01), AVARAGERE ROAD, OLD, PB RD, DAVANAGERE, KARNATAKA 577003 - 577003

HASSAN

 VENKAT MOTOR (C8NA-C8-01), KHATA NO 200-201, DM HALLY, BANGALORE -MANGALORE ROAD, HASSAN, KARNATAKA - 0

HUBLI

 LEKHYA MOTORS (73NA-73-01), OPP TO APMC 2ND GATE, ESHWAR NAGAR, HUBLI-DHARWAD ROAD, HUBLI-580025. - 580025 PH 9813777268.

MANGLORE

 MANDOVI MOTORS (45NA-45-01), SUMIT APARTMENT BUILDING, AIRPORT ROAD, MARY HILL, MANGLORE - 574142 PH 9845133077.

MYSORE

- 104. FRIENDLY MOTORS (25NB-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016 PH:9845011686
- 105. KALYANI MOTORS (25NC-25-01), PLOT NO.262, HEBBAL INDUSTRIAL AREA, MYSORE, KARNATAKA- 570016. - 570016

SHIMOGA

106. SHRUTI MOTORS (B7NA-B7-01), 217/215/91/79/1, OPP TO FOREST OFFICE, SHANTI NAAGARA, HONNALI ROAD, SHIMOGA,KARNATAKA -577201 PH 1989596666

KERALA

KOTTAYAM

 SAI SERVICE (B8NB-B8-01), SY. NO. 341/11, 341/12, PERUR VILLAGE, MC ROAD, THELLAKOM, KOTTAYAM - 686630 PH :92880 24220.

THRISUUR

 POPULAR VEHICLES (A4NB-A4-01), SURVEY NO 62/P, CHUNGAM, OLLARI, KANJANI ROAD, ARANATTUKARA VILLAGE, THRISSUR - 680618 -680618

KERELA

ALLEPEY

 POPULAR VEHICLES (E5NB-E5-01), 12/287A, PARAVOOR, ALLEPPEY - 0 PH:9846161601.

CALICUT

- 110. AM MOTORS (47NA-47-01), 18/1472, OPP TO COMTRUST EVE HOSPITIAL, SRAMBIKAL PARAMBA, MINI BYPASS JAIL ROAD JUNCTION, PUTHIYARA POST, CALICUT, KERELA-673004 673004 PH : 770833396.
- POPULAR VEHICLES (47NB-47-01), BYPASS SERVICE ROAD, BEHIND JAYA ARCADE, THONDAYADU, CALICUT, KERALA - 673017 PH :9946104660.

COCHIN

- 112. INDUS MOTOR (27NC-27-01), NH 47, THAIKATTUKARA PO, THAIKAVU, ALUVA, COCHIN - 683106 - 683106 PH : 9747508822.
- SAI SERVICE (27NA-27-01), 723/7.6,18,0PP TO HOTEL AARYAS, SEAPORT-AIRPORT, POOJARY VALAVU, KANAYANNOOR TALUK, THIRRAKKARA NORTH, COCHIN-682021. -682021 PH :9645106193.

KASARGOD

114. INDUS MOTOR (3LNA-3L-01), SURVEY NO.384/3C,10, MUTTATHODY VILLAGE, INDIRA NAGAR, CHENGALA POST, KASARGODE, KERALA- 671541 - 671541 PH-9745998341.

KAYAMKULAM

 SAI SERVICE (8LNA-8L-01), S.NO 111/48, KP ROAD, KAYAMKULAM, KERALA - 690502 PH:9288024222.

KOLLAM

116. SARATHY AUTOCARS (C7NA-C7-01), NH-47 BYE PASS ROAD, AYATHIL.P.O KOLLAM DIST, KERALA STATE PIN 691021 - 691021 PH 19848850456

TRIVANDRUM

117. INDUS MOTOR (16NB-16-01), OPPOSITE EVM ASHOK LEYLAND, ALUMOOD JN, NH 47, KANNIYAPURAM, TRIVANDRUM - 695301. -695301 PH :9656685678.

MADHYA PRADESH

BHOPAL

- RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT LTD) (03NC-03-01), 42, 6_BLOCK, BHEL INDUSTRIAL ESTATE, HABIBGANJ, HOSHANGABAD ROAD, BHOPAL (M.P.) - 462016 PH.790903921.
- OCEAN MOTORS (03ND-03ND-01), PLOT NO-54
 55, SECTOR-A, GOVINDPURA INDUSTRIAL
 AREA, JK ROAD, BHOPAL 462023
 PH:7389936400.

INDORE

- PATEL MOTORS (53NA-53-01), 1105/1528/5/2, MIN-1 AND 1105/1528/4/5, GRAM: KHAJRANA, DISTRICT: INDORE, KANADIA ROAD, INDORE (M.P.) - 452016
 PH:7771002581.
- 121. OCEAN MOTORS (53NB-53-01), BICHOLI MARDANA NEAR SAMPATH PALACE OPP HOTEL PRIDE - 452001 PH :0731-4826666.
- 122. RANA MOTORS (53ND-53-01), LASUDIA MORI, DEWAS NAKA, INDORE, PIN CODE 452010 -452010 PH :9933055539.
- RUKMANI (53NC-53-01), RUKMANI MOTORS NEXA SERVICE, FOOTHI OTHI SQUARE, OPP. DASTOOR GARDEN, INDORE -452002 PH: 9755512100.

JABALPUR

 STANDARD MOTORS (54NC-54-01), KHARSA NO-529/1/1, NEAR TRIPURI CHOWK GARHA JABALPUR M. P - 482003 PH: 9773543358.

Nexa Workshop (AS ON 31.05.2023)

- 125. SHUBH MOTORS (54NB-54-01), SHUBH MOTORS, 4 MILE, LAL BUNGALOW, TILHARI, JABALPUR MADHYA PRADESH - 482001 PH :9644454545
- 126. STANDARD MOTORS (54NC-54-01), UKHARI TIRAHA, OPPOSITE TO RAMESHWARAM WATER TANK, MR-4 ROAD, VIJAY NAGAR, JABALPUR (M.P.) - 482001 PH :7800806222.

SAGAR

127. ADINATH CARS (G1NA-G1-01), KHASRA NO 155, P H NO. -77, BAHERIA GADGAD, SAGAR JABALPUR ROAD, SAGAR - 470004, MADHYA PRADESH, INDIA - 470004 PH. 9752447690.

SATNA

 CITY CARS (D7NA-D7-01), BEHIND NEXA SHOWROOM, 666/2, AMOUDHA, PANNA ROAD, SATNA, MADHYA PRADESH - 485001 PH :6262230999.

SHAHDOL

 STANDARD MOTORS (SFAN-SAF-01), KHASRA NO-459, VILLAGE JAMUI NEAR BACHEL DHABA, BUDHAR ROAD, SHAHDOL (M.P.) - 484001 PH :9329927451, 9329927458.

UJJAIN

 RUKMARANI (YUG) (3WNA-3W-01), 59/1, DEWAS ROAD, ADARSH NAGAR, NAGZIRI, UJJAIN -456664
 PH :9755512100.

MAHARASHTRA

AHMEDNAGAR

131. KANKARIYA AUTOMOBILES (A5NA-A5-01), SH-60.NEWASA ROAD ,NAGARDEOLE,AHEMDANAGAR,MAHARASTRA -414601 PH :9403961522.

AKOLA

132. ASPA BANDSONS (F1NA-F1-01), SHIVANI AIRPORT AREA, AKOLA - MAHARASHTRA (444001) - 444001 PH -942312366

AMARAVATI

 ASPA BANDSONS (F2NA-F2-01), F32/1 MIDC, AURANGABAD NAGPUR EXPRESS HIGHWAY, AMRAVATI, MAHARASHTRA - 444607 PH: 9130041513.

AURANGABAD

134. AUTOMOTIVE MANUFACTURER LTD
(21NB-21-01), PLOT NO: -L- 3 / 1, BETWEEN
GARWARE & WOCKHARDT LTD, JALGAON
ROAD, MIDC CHIKALTHANA, AURANGABAD PIN:
-431006, MAHARASHTRA - 431006
PH: 9970499273.

 PAGARIYA AUTO (21NA-21-01), OPP AIRPORT, NEXT TO INDIAN OIL PETROL PUMP, JALNA ROAD, AURANGABAD, MAHARASHTRA - 431006 PH :8888859502.

BARAMATI

 MAHALAXMI AUTO (7RNA-7R-01), BHIGWAN ROAD, SHIV NAGAR, BARAMATI (MAHARASHTRA) - 413102 PH :9850994014.

CHANDRAPUR

137. BARBATE AUTO (H3NA-H3-01), PLOT NO 15-18, OUT OF SURVEY NO 144, 15/5, MAUZA BADOLI, NACPUR CHANDRAPUR HIGHWAY, CHANDRAPUR, MAHARASHTRA - 440025 PH :338087666.

DHULE

 SEVA AUTOMOBILES (P3NA-P3-01), PLOT NO. F-1, ADDITIONAL DHULE INDUSTRIAL AREA, DHULE, MAHARASHTRA - 424006 PH :9960090614.

JALGAON

 MANRAJ AUTO (C4NB-C4-01), P 93, MIDC, R L CHOWK, AJANTA ROAD, JALGAON, MAHARASHTRA – 425003 - 425003
 PH:0253-6686666, 9130033951.

KHARGHAR

 SIMRAN MOTORS (AACN-AAC-01), 60/72, JAWAHAR COOPERATIVE INDUSTRIAL ESTATE, KALAMBOLI, KHARGHAR, MUMBAI, MAHARASHTRA. - 410209 PH: 022-71430900, 95494952448

KOLHAPUR

 SAI SERVICE (38NA-38-01), 1243/66, E WARD, SHIVAJI UDHYAMNAGAR, KOLHAPUR - 416001 PH:9923208401.

MUMBAI

- 142. SAI SERVICE (05NB-'05-01), JOSEPH CARDIJN TECHNICAL SCHOOL, KHASHABA JADHAV MARG, OFF DR. AMBEDKAR ROAD, DADAR (EAST) MUMBAI, MAHARASHTRA. - 400014 PH. '022-48767777.
- SHIVAM MOTORS (05ND-05-01), PLOT NO SILVER HOUSE, 110 MIDC, ROAD NO 13, MAROL, ANDHERI (EAST), MUMBAI, MAHARASHTRA. - 400069 PH: 02352-220084, 968953472.
- KTS AUTOMOTORS (6SNH-05-01), UNIT NO A1, PANNALAL COMPOUND, LBS KANTILAL MAGANLAL ESTATE, LB.S MARG, BHANDUP (W), MUMBAI - 400078 PH - 020-30414000, 916865888.

145. SHIVAM AUTOZONE (05NE-05-01), PLOT NO. 1 & 2, RAMCHANDRA LANE EXTN., KANCHPADA, OFF LINK ROAD, MALAD-WEST. - 400064 PH 987093888

NAGPUR

146. BARBATE AUTO (20NA-20-01), 37/2, MANISH NAGAR, BESA T POINT, BESA ROAD NAGPUR 440025 - 440025 PH:7923600147, 9727726004.

NANDED

147. SEVA AUTOMOBILES (68NA-68-01), AIRPORT ROAD, SANGVI - 431605 PH : 7065026520

NASHIK

 SEVA AUTOMOBILES (37NA-37-01), PLOT B-17, MIDC, AMBAD, NASIK, MAHARASHTRA - 422010 PH:8975762303

NAVI MUMBAI

- 149. AUTOMOTIVE MANUFACTURER LTD (39NB-39-01), NERUL, MUMBAI PUNE HIGHWAY, NAVI MUMBAI - 400706 PH :9769206120.
- MY CAR (05NK-05-01), PLOT NO- GEN-25 & GEN-25 B/1, TTC INDUSTRIAL AREA, PAWANE, NAVI MUMBAI, MAHARASHTRA (400709) -400709

PUNE

- 151. KOTHARI WHEELS (19NB-19-01), GATE NO 1605, OLD 1099, KESNAND ROAD, WAGHOLI, TAL-HAVELI, DISTRICT - PUNE, MAHARASHTRA -412207 PH 7721865000
- 152. EXCEL AUTOVISTA (19NG-19-01), SURVEY NO 98/2A/P, NEW PUNE - MUMBAI HIGHWAY, NEAR BALEWADI STADIUM, BANER TALUKA, PUNE -411045
 - PH:0257-2212145.
- 153. SEHGAL AUTO RIDERS (19NE-19-01), SURVEY NO 63/2, SHEWALEWADI, MANJARI BUDRUK, PUNE SOLAPUR HIGHWAY, PUNE, MAHARASHTRA - 412307 PH :9158000049
- WONDER CARS (19ND-19-01), PLOT NO 52/1 BLOCK F2, MIDC PIMPRI, PUNE - 411019 PH :9850094151.
- MAHALAXMI AUTO (19NI-19-01), NEAR SADGURU PETROL PUMP, PUNE NASHIK HIGHWAY, AT KURALI, KHED TALUKA, CHAKAN - 410501
 - PH:9923589214.
- 156. SAI SERVICE (19NC-19-01), SINHAGAD ROAD, NEAR NANDED CITY, VADGAON KHURD, PUNE. (MAHARASHTRA) - 411041 PH 9923308333.

RATNAGIRI

 JAGRUT MOTORS (G3NA-G3-01), 410/6/1B, SALVI STOP, SHIVAJI NACAR MAIN ROAD RATNAGIRI, MAHARASHTRA - 415612 PH:9820039626.

SHOLAPUR

158. CHAVAN MOTORS (B1NA-B1-01), SURVEY NO. 534/4, BALE PUNE ROAD, SOLAPUR, MAHARASHTRA - 413224 - 413224 PH. 8888881314.

THANE

- 159. EXCEL AUTOVISTA (39NA-39-01), MOHAN MILL COMPOUND, GHODBUNDER ROAD, THANE, MAHARASTHRA - 400607 PH:9967331726.
- 160. EXCEL AUTOVISTA (39NA-39-02), NEAR ARIHANT COMPOUND, KALHER, BHIWANDI, THANE - 400607 PH :9967331726
- MY CAR PUNE- CODO (05NL-05-01), PLOT NO. B-21 & B-24/1, THANE INDUSTRIAL AREA, THANE, MAHARASHTRA - 400604 PH:8104906963

YAVATMAL

162. HIMALAYA CARS (4MNA-4M-01), PLOT NO. 14, MIDC, YAVATMAL INDUSTRIAL AREA, YAVATMAL - 445001 PH :9011014729.

NAGALAND

DIMAPUR

 PROGRESSIVE MOTORS (32NA-32-01), OPPOSITE AIRPORT, N. H. 39, DIMAPUR KOHIMA ROAD, DIMAPUR OPPOSITE AIRPORT, N. H. 39, DIMAPUR KOHIMA ROAD, - 797115 PH :7669223736.

ODISHA

BERHAMPUR

164. SKY AUTOMOBILES (E2NA-E2-01), PLOT NO 373/2229 & 373/1204, AMABAPUA MOUZA, BRAHMAPUR (ODISHA) - 760007 PH :7381266000.

BHUBANESWAR

165. NARAYANI MOTORS (04NC-04-01), PLOT NO 140/2004, KHATA NO -1152/364, UNIT-20, JAGAMARA, KHANDGIRI, CHAWAK, BHUBANESHWAR - 751001 PH :9583001877.

JEYPORE

166. LEGEND CARS (SWNA-SW-01), NH26, OPPOSITE HOTEL HELLO, INDUSTRIAL ESTATE, JEYPORE, ODISHA - 764001 PH :09692883057.

ROURKELA

 ORBIT MOTORS (87NA-87-01), PLOT NO 5G/3, VED VYAS, SUNDARGARH, ROURKELA - 769041 PH:9165071234.

SAMBHALPUR

 ODYSSEY MOTORS (D4NA-D4-01), SAMBALPUR, CHOWK, REMED, ODISHA 768006 - 768006 PH :0832-2408800, +91-9881746562.

PUNJAB

AMRITSAR

169. JAYCEE MOTORS (17NC-17-01), JAYCEE MOTORS, VERKA BYE PASS, OUTSIDE ASHBERRY HOMES, VILLAGE VALLAH, AMRITSAR, PUNJAB - 143501 PH :01815045400, 753696666.

BHATINDA

170. TARA (70NA-70-01), KHASRA NO. 3534, NEAR ITI CHOWK, MANSA ROAD, BHATHINDA, PUNJAB -151001 PH :8437019666.

JALANDHAR

 MARWAHA (35NC-35-01), KHASRA NO - 16450, SITUATED AT RAJA GARDEN, KAPURTHALA ROAD, JALANDHAR CITY. - 144003 PH - 9814738707

JALLANDHAR

 LOVELY AUTO (35NA-35-01), NH 1 GT ROAD, PRAGPUR, JALANDHAR PUNJAB - 144024 PH:7617571039, 7617571040

LUDHIANA

- GULZAR (62NE-62-01), PLOT NO 2662 NEAR SILVER ARC MALL, AARTI CHOWK, LUDHIANA, PUNJAB - 141003
 PH:9814839777.
- HOSHIARPUR AUTO (62NG-62-01), S-46/1616/1, G.T. ROAD, DHOLEWAL CHOWK, LUDHIANA, PUNJAB - 141003
 PH:8872501234.
- 175. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT LTD) (62NH-62-01), OPP. MEDIWAYS HOSPITAL, FEROZPUR ROAD, LUDHIANA - 141015 PH :8872000357.
- LOVELY AUTO (62NF-62-01), 287/1, MOTI NAGAR, SHERPUR BYPASS, GT ROAD, LUDHIANA - 141010 PH :9875999161.

MOHALL

 CM AUTO SALES (L1NA-L1-01), C-155, INDUSTRIAL AREA, PHASE-7, MOHALI - 160055 PH :988034555, 9780011459.

PATHANKOT

 PATHANKOT VEHICLEADS (A7NA-A7-01), PLOT NO.-C-30, INDUSTIAL GROWTH CENTRE, VILL. CHACELI, PATHANKOT - 145023 PH.7527006800.

RAJASTHAN

AJMER

NAVNEET MOTORS (B2NA-B2-01), PLOT NO7

 -8.RIICO INDUTRAIL ESTATE MAKHAPURA
 NASIRBAD ROAD, JMER(RAJASTHAN)-PIN
 CODE-305002 - 305002
 PH :9414149149.

AI WAR

 FORTUNE CAR (F9NA-F9-01), 6TH MILESTONE VILLAGE JATIYANA, OPP. PETROL BEHROR ROAD ALWAR - 301001 PH :9982341741.

BHILWARA

 CHAMPION CARS (E3NA-E3-01), NEXA SUKHADIA CIRCLE, CHAMPION CARS, AJMER ROAD, BHILWARA - 311001 PH :9001027933.

BIKANER

182. AUDI MOTORS (71NA-71-01), PLOT NO. F-189, SRI GANAGANAGAR ROAD, OPPOSITE RAC-3RD, BICHHWAL INDUSTRIAL AREA, BIKANER 334001 - 334001 PH: 9887222786.

CHITTORGARH

183. TECHNOY (K9NA-K9-01), PLOT NO-28, OLD RIICO INDUSTRIAL AREA, CHITTORGARH, RAJASTHAN - 312001 PH :8905992939.

JAIPUR

- 184. K P AUTOMOTIVES (11NB-11-01), PLOT NO.3-4,MANGLAM RIICO INDUSTRIAL AREA,NEAR KANAKPURA RAILWAY STATION, SIRSI ROAD - 302034 PH '7412059823
- SATNAM MOTORS (11ND-11-01), D-27, K/L/M, ROAD NO-3,SIKAR ROAD, VISHWAKARMA INDUSTRIAL AREA, JAIPUR, RAJASTHAN-302023. - 302023 PH :9649373311.
- 186. PREM (11NC-11-01), PLOT NO- 12,13,14, SUDARSHANPURA INDUSTRIAL AREA, NEAR 22 GODAM, JAIPUR - 302016 PH :8058998123.

JHUNJHUNU

 AUDI MOTORS (FNNA-FN-01), NEAR TVS TWO WHEERLER SHOWROOM ROAD NO 3 GUDHA MOD, RAJASTHAN 333001 - 333001 PH:7970006402.

JODHPUR

- AUDI MOTORS (65NA-65-01), 14 A, HEAVY INDUSTRIAL AREA, ITI CIRCLE, SARASH DAIRY ROAD, JODHPUR - 334001 PH 7300077394
- 189. LMJ AUTO (65NB-65-01), B-8, C-9,10, MIA, BASNI, PHASE-1 JODHPUR - 342009
- LMJ SERVICES (65NB-65-02), PLOT NO.-61, GERU MARKET, BHADWASIYA FRUIT MANDI, JODHPUR, RAJASTHAN - 342001 PH:8094011126.

PH:7412087320.

KOTA

 BHATIA & CO. (61NA-61-01), G-11A, AUTOMOBILE ZONE, IPIA, NEAR DAKANIYA RAILWAY STATION, KOTA - 324005 PH: 8094011126.

SIKAR

 JAMU (K7NA-K7-01), THAR PETROL PUMP, JAIPUR ROAD, SIKAR - 332001 PH:9414037515.

UDAIPUR

 TECHNOY (49NB-49-01), OPP. NAND BHAWAN, GOVERDHAN VILLAS, UDAIPUR - 313001 PH:0141 2984568.

TAMIL NADU

CHENGALPET

194. AIE CARS (BBSN-BBS-01), NO. 1/7-A, GST ROAD, CHENGALPET – 603001 - 603001 PH '74012 92949

CHENNAI

- 195. PILLAI & SONS (14NC-14-01), DOOR NO.46, MEDAVAKKAM MAIN ROAD, KEELAKATTALAI, CHENNAI, TAMILNADU - 600117 PH 3994950505.
- POPULAR VEHICLES (14NB-14-01), 69/A & 69/B, SAMAYAPURAM MAIN ROAD, PORUR, CHENNAI, TAMILNADU- 600116. - 600116 PH - 9842389111
- KHIVRAJ MOTORS (14NA-14-01), PLOT NO.21, AMBIT IT PARK ROAD, AMBATTUR INDUSTRIAL ESTATE, CHENNAI-600058. - 600058 PH :9626099999.
- 198. VISHNU CAR (14NG-14-01), SURVEY NO 219, ADJOINING HP PETROL PUMP, POONAMALE HIGH ROAD, KATTUPAKKAM, CHENNAI, TAMIL NDU - 600056 PH -7339350111
- ABT (14NJ-14-01), NO123, KANNIGAPURAM, VELACHERY MAIN ROAD, BEHIND RACE COURSE, GUINDY, CHENNAI, TAMIL NADU -600032 PH :9994444303.

- VISHNU CAR (14NG-14-02), POONAMALLE HIGH ROAD, ARUMBAKKAM, KOYAMBEDU, CHENNAI, TAMIL NADU. - 600056 PH :7550333622
- 201. KHIVRAJ MOTORS (14NA-14-02), OLD S.NO. 11/1 & 2, NEW S.NO.11/2 - B, NO.100, NERKUNDRAM VILLAGE, SAIDAPET TALUK, CHENNAI - 600107 PH -9962195957

COIMBATORE

202. AADHI CARS (41NB-41-01), OLD KALIAPPA KALYANAMANDAM, PREMISES, KAVUNDAMPALAYAM, COIMBATORE, TAMIL NADU - 627007 PH:9003977577.

SREE SARADHAMBAL (41NA-41-01), 18/1472,
 S.N.R COLLEGE ROAD, NAVA INDIA,
 COIMBATORE, AND TAMILNADU-641004. 641004
 PH:9790004271.

204. JAIKRISHNAA AUTOSALES PVT LTD (41ND-41-01), NO. 656, TRICHY ROAD, NEAR ORTHO ONE HOSPITAL, COIMBATORE, TAMIL NADU- 641012 - 641012 PH: 9788850734.

ERODE

 SREE SARADHAMBAL (H7NA-H7-01), NO.75, NEAR SURABI NURSERY, PERUNDURAI ROAD, ERODE, TAMILNADU-638011. - 638011 PH: 9786022272.

HOSUR

206. SRI AMMAN CARS (7QNA-7Q-01), NEAR CATER PILLAR WARE HOUSE, SEETHA RAMNAGAR,NH-44, OPP TO ANAND ELECTRONICS, HOSUR, KRISHNAGIRI DISTRICT, TAMILNADU - 635109 PH :9841033464.

KARAIKUDI

 MEENAKSHI AUTOZONE (HXNA-HX-01), T S NO 624/1, DOOR NO. 5, 1ST STREET, SUBRAMANIAPURAM, KARAIKUDI, TAMIL NADU - 630001 PH :9940094881.

MADURAI

 ASIR (42NA-42-01), 176, MAIN ROAD, KAMARAJAR ROAD, MADURAI, TAMIL NADU – 625001 - 625001 PH 190440 59011

NAGERCOIL

 ATHEN CARS (S5NA-S5-01), NO. G. 3/9, NO. 1197, NELSON COMPOUND, KP ROAD, PARVATHIPURAM, NAGERCOIL, TAMILNADU -629003 PH 9751196436.

PONDICHERRY

Nexa Workshop (AS ON 31.05.2023)

 SHENBAKA CARS (96NA-96-01), RS NO 50/5A, PONDICHERRY CUDDLORE MAIN ROAD ,KIRUMAMBAKKAM, BAHOOR COMMUNE,PONDICHERY - 607402 PH :7338322220.

SALEM

- THRIVENI CARS (A2NA-A2-01), 2/6, KANDHAMPATTY, BYE PASS ROAD, SALEM, TAMILNADU - 636005 PH :9786022272.
- 212. SM CAR (A2NB-A2-01), S NO 131/1A,BYPASS ROAD, NEAR INDIAN OIL ASSOCIATION, PETROL BUNK, KONDALAMPATTY, SALEM -636010 PH 7094440010.

THANJAVUR

 PILLAI & SONS (E7NA-E7-01), SURVEY NO 237/1, NEELAGIRI THAKUR THOTTAM, VALLAM ROAD, THANJAVUR, TAMIL NADU - 613403 PH 9443964165

TIRUNEVELI

214. AADHI CARS, (A3NA-A3-01), PLOT NO.50-55, ASHOK NAGAR, C-COLONY, TAKKALPURAM, TRIVANDRUM ROAD, C1 KOKKARAKULAM -627007 PH :7373091461.

TRICHY

 PLA MOTORS (23NA-23-01), TS NO.29P,31P & 32P,36P, NEW WARD "E", NEW BLOCK NO.27, ANNA NAGAR, TRICHY, TAMILNADU - 620017. -620017 PH:8110099991

TRIPUR

 SHASHTI (Y7NA-Y7-01), 16A-1,SHREE PADMINI GARDENS, KANGAYAM RD, TIRUPPUR, TAMIL NADU - 641604 PH :9942903310.

VELLORE

 SRI GANESH CARS (C6NA-C6-01), 96/6, CHENNAI-BANGALORE HIGHWAY, NH-46, PERUMUGAI, VELLORE, TAMILNADU - 632009 PH:9884722126.

TELANGANA

HYDERABAD

- KALYANI MOTORS (10NE-10-01), SURVEY NO.184, KARMAGHAT VILLAGE, BESIDE KHARMANGHAT HANUMAN TEMPLE, R.R DISTRICT, HYDERABAD, TELANGANA - 500079 PH:9347121212.
- VARUN MOTORS (10NB-10-01), B-54,
 CO.INDUTRIAL ESTATE, BALANAGAR,
 HYDERABD, TELENGANA 500037
 PH :8886631496,
 8886631499.

- 220. GEM MOTORS (10NH-10-01), D.NO.8-96, SURVEY NO.12812 & 129, TYAGARAYANANAGAR COLONY, KOTHAPET, HYDERABAD, TELANGANA. - 500084 PH : 9912345899.
- JAYABHERI AUTO (10ND-10-01), HNO 2-40/64, SURVEY NO 23 TO 28, JUBILEE GARDENS, KOTHAGUDA, HYDERABAD, TELANGANA-500032. - 500032 PH:9849103917, 9437061030.
- 222. VARUN MOTORS (10NB-10-02), H.NO. 8-2-120/117/A2. PLOT NO. 83,83A,83B, ROAD NO. 2, BESIDES SBI BANK, BANJARA HILLS, HYDERABAD - TELANGANA - 500033 PH :9885610555.
- SAI SERVICE (10NC-10-01), SURVEY NO 78, ADJACENT TO HP PETROL PUMP, GOPANAPALLY, GACHIBOWLI, HYDERABAD -500046. - 500046 PH. 9966377888.
- 224. RKS (10NI-10-01), SY NO:42, PET BASHEERABAD, QUTHBULLAPUR, MEDCHAL MANDAL, HYDERABAD - 500014 PH :9542234567.
- 225. ADARSHA AUTOMOTIVE (10NG-10-01), PLOT NO 6/P, 54, SURVEY NO. 204, PRAGATI NAGAR, BALANAGAR, KUKATPALLY, HYDERABAD -500072 PH :9154854949 88979772200
- 226. ADARSHA AUTOMOTIVE, SHAMSHABAD (10NG-'10-02), SHAMSHABAD, NH44, HYDERABAD, TELANGANA – 501218 - 501218 PH 8297116633

KARIMNAGAR

 ADARSHA AUTOMOTIVE (N6NA-N6-01), 8-6-301, BY PASS ROAD, AUTO NAGAR, KARIMNAGAR, TELANGANA - 505001 PH :9847073265.

ΚΗΔΜΜΔΜ

228. PARAMSHIVA MOTORS (1GNA-1G-01), SY NO. 507, VELUGUMATLA, VILLAGE, KHAMMAM, TELANGAN - 507318 PH 9848988312

MAHBUBNAGAR

 JAYARAMMA AUTO (WPNA-WP-01), CHRISTIANPALLY, BHOOTPOOR ROAD, MAHBUBNAGAR, TELANGANA - 509001 PH :8096990074.

MANCHERIAL

 ADARSHA AUTO (CMNA-CM-01), SURVEY NO-417, BELLAMPALLI MANCHERIAL ROAD ,MANCHERIAL, TELANGANA - 504208 PH :9133329709.

NIZAMABAD

 VARUN MOTORS (1HNA-1H-01), 1-51/4/1/D4 MADAHAVA NAGAR, HYDERABAD ROAD, NIZAMABAD, TELANGANA, 503230 - 503230 PH 9542222486

SECUNDERABAD

- 232. MITHRA AGENCIES (10NK-10-01), USHA MAYURI THEATER, OPP TO SPENCERS MARKET, MUSHEERABAD, SECUNDERABAD, ANDRAPRADESH-500020. - 500020 PH -98850 01155
- AUTO FIN (K6NB-K6-01), PLOT NO.6, SURVEY NO.267/1 & 267/2, BOWENPALLY, BALANAGAR MAIN ROAD, SECUNDERABAD, TELANGANA -500011
 PH :8886144551.
- VARUN MOTORS (K6NC-K6-01), VARUN MOTORS, ZND CROSS ROAD, SAINIKPURI, SECUNDERABAD - 500094 PH:779960094.

WARANGAL

 ADARSHA AUTOMOTIVE (D5NA-D5-01), H.NO: 23-6-132, HUNTER ROAD, OPP TO CITIZENS CLUB, WARANGAL, TELANGANA - 506007 PH:8978944414.

UTTAR PRADESH

AGRA

- MADHUSUDAN MOTORS (66NA-66-01),
 ADJOINING HEMA PETROL PUMP, EIT MANDI,
 BODLA, AGRA 282007
 PH: 6386901181,
- PREM MOTORS (66NB-66-01), KHASRA NO.-655, VILL ARTONI, DELHI-AGRA HIGHWAY, AGRA -282007 PH 9690010839.
- KTL PVT LTD (66NC-66-01), KHASRA NO 246/1, 249/1, 251, KUBERPUR, AGRA. - 282006 PH:8449710014.

ALIGARH

- CLML (B6NA-B6-01), PLOT NO. 5/129, GT ROAD, RAM NAGAR COLONY, SARSOL, ALIGARH, UTTAR PRADESH. - 202002 PH:9639775522.
- CLML (B6NA-B6-02), VILL KARSUA, PALWAL-DELHI ROAD, ALIGARH PIN 202140 -202140 PH 9358373099.

BARIELY

241. CORAL (56NA-56-01), DELHI RAMPUR ROAD, IN FRONT OF MINI BYPASS, CB GANJ, BARIELLY, UP - 243001 PH 9359101010

BIJNORE

 SHAKUMBARI (6DNA-6D-01), 4TH KM. MILESTONE, BIJNOR - NAJIBABAD RD, NEAR DPS SCHOOL, BIJNOR, UTTAR PRADESH 246701 - 246701

FIROZABAD

 DEV MOTOR (DFNA-DF-01), DHOLPURA, NEAR ST. JOHNS CHAURAHA, AGRA ROAD, FIROZABAD - 283203 PH :9045031800.

GHAZIABAD

- 244. ROHAN MOTORS (59NA-59-01), KHASRA NO 46, DELHI MEERUT ROAD MEERUT ROAD INDUSTRIAL AREA, MORTA, GHAZIABAD, UTTAR PRADESH 245101 - 245101 PH :8178839830
- MSM (JJ IMPEX) (5982-59-N1), PLOT NO C, J J IMPEX (DELHI) LIMITED, 224, SITE-1, INDUSTRIAL AREA, BULANDSHAHR ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH 201003 - 201003 PH .9990033015.

GORAKHPUR

- 246. SMART WHEELS (72NA-72-01), ARAZI NO. 623, 624 & 625, GULHARIA BAZAR, MEDICAL COLLEGE ROAD, GORAKHPUR, UTTAR PRADESH 273009 PH :8222002147.
- ARBIT AUTO (72NB-72-01), PLOT NO A & B, BUDDH VIHAR YOJNA, PART-B, TARAMANDAL ROAD, GORAKHPUR - 273009 PH:842952625

GREATER NOIDA

248. MSM (J.I IMPEX) (T283-T2-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NO 02, ECOTECH 12, GREATER NOIDA, GAUTAM BUDDHA NAGAR, UTTAR PRADESH - 201009 PH.9711474930.

HARDOI

 CONCEPT (QENA-QE-01), PLOT NO. 1609 & 1605, GUNGABUX PURVA, BILGRAM RD, HARDOI, UTTAR PRADESH - 241001 PH :7607696666.

JHANSI

 SURI (60NA-60-01), SHIVPURI - JHANSI ROAD, OPPOSITE HANSRAJ MODERN SCHOOL, JHANSI, UTTAR PRADESH - 284003 PH - 7705000558

KANPUR

251. KTL PVT LTD (28NB-28-01), ARAZI NO. 352, SINGHPUR KACHHAR, BITHOOR ROAD, NORTHERN RAILYWAY COLONY, KANPUR, UTTAR PRADESH. - 208017 PH.7408409312.

LUCKNOW

- 252. ANAND MOTORS (13NC-13-01), GATA NO. 1062 PARGANA RAJA BILI PASI VILLAGE AURANGABAD, SHAHEED PATH (OPPOSITE TO RAMABAI AMBEDKAR MAIDAN), LUCKNOW. UTTAR PRADESH - 228012 PH :7705807552, 983840480.
- 253. KTL AUTOMOBILE PVT LTD (13ND-13-01), PLOT NO - 513, VILL HARIHARPUR BIJNAUR, OPP ANSAL API, AMAR SHAHEED PATH, LUCKNOW -227105 PH. 7311190503.
- BRIGHT4WHEELS (13NB-13-01), PLOT NO D10, SAROJINI NAGAR INDUSTRIAL AREA, LUCKNOW. PIN - 226008 - 226008 PH :9151004111.

MATHURA

255. UMA MOTORS (H8NA-H8-01), PLOT NO 222, MAHOLI, NEAR KIRAN HOSPITAL, MATHURA -281004 PH :9997385999.

MEERUT

256. TR SAWHNEY (48NB-48-01), 1183/17 RITHANI, ZONE - A, SECTOR 4 NEAR PETROL PUMP, MEERUT, UTTAR PRADESH - 250103 PH :18002704142.

NOIDA

- FAIR DEAL (A1ND-A1-'01), A-107, SECTOR-5.
 NOIDA 201301
 PH :9810542222.
- MOTOR CRAFT (59NB-59-01), C 42 SECTOR 57, NOIDA, UTTAR PRADESH - 201301 PH :7230029429, 7230000000.

RAIBARIELY

259. KTL AUTOMOBILE PVT LTD (HSNA-HS-01), 1481, NEAR KATHWARA BUS STAND, LUCKNOW RAIBARELI HIGHWAY, HARCHANDPUR, RAIBARELI - 229303 PH.7311190503.

SAHIBABAD

260. MSM (J.I IMPEX) (M983-M9-N1), MARUTI SERVICE MASTERS, NEXA SERVICE, PLOT NUMBER 58/4, SITE 4, SAHIBABAD INDUSTRIAL AREA, - 201010 PH :9711474930.

SHAHJHANPUR

 SUMITRA DS (W2NA-W2-01), SH25 , RETI ROAD SHAHJAHANPUR - 242001 PH :9936095228.

VARANASI

 AGR (84NA-84-01), ARAZI NO - 285,286 LUCCHERPUR, PARGANA-ATHGAWA TEHSIL, HARHUA, VARANASI - 221105 PH: 9305646425.

UTTARAKHAND

DEHRADUN

 SHAKUMBARI (57ND-57-01), KHASRA NO. -15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN-248001 - 248001 PH :7895058449

HALDWANI

264. NAINITAL MOTORS (J6NA-J6-01), 5TH KM RAMPUR ROAD, JEETPUR NEGI, NEAR AMAR UJALA PRINTING PRESS, HALDWANI, UTTARAKHAND - 263139 PH:7467800077.

ROORKEE

7467800050.

265. SHAKUMBARI (H2NA-H2-01), 5 KM MILESTONE ,NH-58,ROORKEE-DELHI ROAD ,NEAR HOTEL GODWARI,ROORKEE, UTTARAKHAND - 247667 PH. 9634092690, 750860007.

RUDRAPUR

286. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT. LTD. (UAMB-U4-01), KASHIPUR ROAD, OPPOSITE GREEN PARK COLONY, VILLAGE DIBDIBA, TETBLI BILASPUR, RAMPUR, UTTRAKHAND - 244901 PH: 031912465542, 9397770257.

WEST BENGAL

ASANSOL

 BEEKAY AUTO (F6NA-F6-01), NH-2, CHANDA MORE, POST KALI PAHARDI, JAMMURIA DISTRICT WEST BARDHAMAN - 713339 PH:9932049425.

COCHBEHAR

 SEVOKE MOTORS PVT. LTD. (BWZN-BWZ-01), NEXA COOCH BEHAR CENTRAL VILL & P.O. -MAHISHBATHAN P.S. - KOTWALI, NH - 31 COOCHBEHAR,W.B. -734617 - 734617 PH :8016095268.

HOWRAH

 MACHINOTECHNO (X7NA-X7-01), 109, 1, UPPER FORESHORE RD, CHOURA BUSTEE, SHIBPUR, HOWRAH, WEST BENGAL 711102 - 711102 PH :9830081632.

JALPAIGURI

 PODDAR AUTO (XYNA-XY-01), ASSAM MORE BUS STOP, SH12A, JALPAIGURI, WEST BENGAL 735102 - 735102 PH: 8945533002.

KHARAGPUR

 BHANDARI AUTOMOBILES (G7NA-G7-01), CHOWRANGEE, PLOT NO-138 & 139, O T ROAD, KHARAGPUR - 721301 PH 7603076061

KOLKATA

- JYOTE MOTORS (06ND-06-01), MIRANIA ROAD, ARUPOTA ON BASANTI HIGHWAY, - 700105 PH:9074158220.
- MACHINOTECHNO (06NG-06-01), 98/A/2 BT ROAD,P.S - BARANAGAR, P.O. - ISI BT ROAD, KOLKATA, WEST BENGAL – 700090. - 712250 PH:6292283744.

SREERAMPORE

 STARBURST (BBTN-BBT-01), NEAR ALLAHABAD BANK, MOLLARBER, SERAMPORE. - 700090 PH:9830081672.

ANDAMAN AND NICOBAR ISLANDS ARAKU

DIGLIPUR

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (PU01-PU-01), MADHUPUR VILLAGE, TEHSIL DIGLIPUR, NORTH ANDAMAN - 744202 PH : 271056.

PORTBLAIR

- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-01), GARACHRAMA, PORT BLAIR -744105
 - PH:251980, 253586, 211590.
- AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-E1-02), NAYAGEN, PORTBLAIR - 744101 PH :227104, 211682.

RANGAT

 AGENCY HOUSE (A & N ISLANDS) PVT. LTD. (E102-FJ-03), NIMBUTULLA, PO RANGAT, DIST. MIDDLE ANDMAN, - 744201 PH :211546.

ANDHRA PRADESH

AMALAPURAM

 S.B. MOTOR CORPORATION (BTS1-BTS-01), #241/2B, BESIDE: BAPUJI PRIMARY SCHOOL MAIN ROAD, OPP. RR NAGAR, BANDARULANKA, AMALAPURAM, EAST GODAVARI (DIST) - 533201 PH 8374303303

AMARAVATI

 JAYALAKSHMI AUTOMOTIVES PVT, LTD (CVB1-CVB-01), SURVEY NO. 29, TOWNSHIP-16, SECTOR-137, COLONY-539, BLOCK-2029, PLOT NO. 1, SUB-DIVISION-L40, MALKAPURAM LIMITS, MANDAL - THULLURU, AMARAVATI-CITY, DIST.-GUNTUR, ANDHRA PRADESH - 522237 PH: 8374497777.

ANAKAPALLE

 JAYABHERI AUTOMOTIVES PVT. LTD. (0N01-0N-01), SURVEY NO.822/1 & 2, NH-5 ROAD, ANAKAPALLE, DISTT. VISHAKHAPATNAM. - 531001 PH.:7093575555.

ANANTAPUR

 SRI DURGA AUTOMOBILES PVT. LTD. (1801-18-01), 17/377-A,GOOTY ROAD,,ANANTAPUR - 515001 PH :9100984249

ANNAVARAM

 VARUM MOTORS (SJH1-SJH-01), DO-NO: 5/116, SURVEY NO - 59, CHALAMAYYA NAGAR, RAILWAY STATION ROAD, NEAR SMP BAJAJ SHOWROOM, ANNAVARAM, EAST GODAVARI DISTRICT, ANDHRA PRADESH. - 533406 PH: 988511911. VARUN MOTORS (SJG1-SJG-01), SURVEY NO 33-9/A, RAVULAGADDA VILLAGE, BESIDE GOVT DEGGRE COLLEGE, ARAKU, VISHAKAPATNAM, ANDHRAPR ADESH - 531151

RHIMAVARAM

PH:7799499931.

 NOVELTY REDDY & REDDY MOTORS PVT LTD (7M01-7M-01), NEAR BYEPASS ROAD, UNDI ROAD, BHIMAVARAM - 534202 PH : 7799771177

BOBBILI

 VARUN MOTORS PVT. LTD. (CAM1-CAM-01), D. NO. 4-94, SURVEY NO. 2198, VILLAGE – MALLAMMAPETA, BESIDE GROWTH CENTRE, BOBBILI, DISTRICT – VIZIANAGARAM, ANDHRA PRADESH. - 535558
 PH-9885280772.

CHALLAPALLI

. MITHRA AUTO AGENCIES PVT LTD (CSX1-CSX-01), D.NO.9-30, 9TH BLOCK, LAKSHMIPURAM LIMITS, RAMANAGARAM, CHALLAPALLI MANDALAM, DISTT. KRISHNA -521126 PH: 8886063526.

CHILKALURIPET

 JAYALAKSHI (SFT1-SFT-01), M/S JAYALAKSHMI AUTO, SURVEY NO 457/C3, CHILKALURIPET, NADENLA MANDAL, GUNTUR, ANDHRA PRADESH - 522616
 PH :9989144344

CHINTALAPUDI

 REDDY AND REDDY MOTORS (BYQ1-BYQ-01), RS NO.588/2 MARUTI NAGAR COURT CENTRE, ELURU-CHINTALAPUB HIGHWAY, CHINTALAPUBI MANDAL, ANDHRA PRADESH -534460 PH : 9912341624, 9948827555.

CHIRALA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-NT-04), 9-1-92, CHURCH ROAD, CHIRALA, -523157 PH:7331151661.

CHITTOOR

 BHARGAVI AUTO PVT. LTD. (A801-1C-03), 22-241/A,KATTAMANCHI TIRUPATI ROAD,CHITTOOR, - 517001 PH :8463955558

CHODAVARAM

 VARUN MOTORS (SHT1-SH-01), SURVEY.NO: 108-2-A, 108-3-A & 108-4, GOVCHODAVARAM, DIST. VISAKHAPATNAM, - 531036 PH:#REFI.

CUDDAPAH

 MSA MOTORS (C201-1D-03), K.T. BYE PASS ROAD, CUDDPPAH, ANDHRA PRADESH, - 516001 PH:7396685628.

ELURU

 REDDY & REDDY MOTORS (1E01-1E-01), OLD NH-5 ROAD, BESIDES C R REDDY WOMEN'S COLLEFE OLD NH-5, ELURU, - 534001 PH :9705311566.

GAJAPATINAGARAM

 JAYABHERI AUTOMOTIVES (SNN1-SNN-01), SURVEY NO 50-14, D. NO 3-1/C, BONDAPALLI MANADALAM, GAJAPATHINAGARAM, ANDHRA PRADESH. - 535270 PH. 9100818111.

GAMBHEERAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1-GJF-02), PLOT NO. 40-45 & 48, GREEN INDUSTRIAL PARK, GAMBHERAM, ANANDPURAM, VISHAKAPATNAM. - 530052 PH :9642496789.

GUDIVADA

 VARUN MOTORS PVT. LTD. (2603-CL-02), D NO. 1-621, AUTONAGER 1ST LANE, GUDIVADA -521301
 PH. 9885651383.

GUDUR

 BHARGAVI AUTO PVT. LTD. (IS01-IS-01), SURVEY NO.1619/3A,GUDUR BYPASS, GUDUR RURAL, GUDUR DISTT. NELLORE, A.P. - 524101 PH :9652984999.

GUNTAKAL

SRI DURGA AUTOMOBILES PVT. LTD.
 (BJA1-BJA-01), SURVEY NO. 407, D. NO.
 20/342-19, ELLARY ROAD, GUNTAKAL, DIST.
 -ANANTPUR, ANDHRA PRADESH. - 515801
 PH: 8142847355.

GUNTUR

- JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-G5-01), D-N-8-24-31, MANGALAGIRI ROAD, GUNTUR - 522001 PH:7893117111/10863-2241000.
- JAYALAKSHMI (G502-G5-05), AT 1-14-114, OPP. HINDU COLLEGE, BANDLAMUDI GARDENS, AMARAVATI ROAD, GUNTUR-522003, AP -522203
 PH :9848131133/9625255555.
- JAYALAKSHMI AUTO (G502-G5-06), SURVEY NO 509, D.NO 25-11-50 TOWN, WARD NO 22, OPPOSITE ITC BUILDING, R AGRAHARAM, NAGARAPALAM ROAD, GUNTUR, - 522004 PH:8374847777.

HANUMAN JUNCTION

 SANTOSH MOTORS (SHB1-SHB-1), SY NO. 569/1 BESIDES NH5, VELURU VILLAGE, BAPULAPADU MANDAL, HANUMAN JUNCTION KRISHNA DISTRICT PIN 521105 - 521115 PH-9703633755.

HINDUPUR

 SRI DURGA AUTOMOBILES PVT. LTD. (1801-36-02), PLOT NO.83, NEAR RELIANCE PETROL BUNK, BYE PASS ROAD, HINDUPUR -515201 PH 9849773030

ICHAPURAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (GLL1-GLL-01), SURVEY NO. 105/3 , 105/4 AND 2297. ICHAPURAM, BALAKRISHNAPURAM PANCHAYAT, MUNIBHADRA VILLAGE, ANDHRA PRADESH. - 52/312 PH :394006666, 8142933666.

JAGGAIAHPETA

 VARUN MOTORS PVT. LTD. (2603-PC-05), DOOR NO. 2-20, MUTHYALAMMA GUDI STREET JAGGAIAHPET TOWN, JAGGAIAHPET, KRISHNA DISTT. - 521175 PH :9842437099.

JANGAREDDYGUDEM

 REDDY & REDDY MOTORS (1E01-HQ-02), NEAR R&B GUEST HOUSE, ELURU ROAD, JANGAREDDYGUDEM, - 534447 PH :9912563666

KAIKALURU

 SANTOSH AUTOMOTORS PVT. LTD. (CLW1-CLW-01), SY. NO. 127/7 &9, OPP. NAIDU COMPLEX, AATAPAKA, KAIKALURU MANDAL, DIST. KRISHNA - 521333 PH:7799787969.

KAKINADA

 S B MOTORS (W701-W7-01), D. NO. 52-10-36/3,NEAR AMAR GHATI CENTER,KARAPA ROAD, KAKINADA - 533001 PH :9885119888.

KANCHIKACHERLA

 VARUN MOTORS PVT. LTD. (GJD1-GJD-01). SURVEY NO. 510/5, DOOR NO. 13-144, 146, 13TH WARD, KANCHIKACHERLA VILLAGE AND MANDAL, KRISHNA DIST., ANDHRA PRADESH. -521180 PH. 9703906444.

KANDUKURU

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BEY1-BEY-01), SURVEY NO. 414, MAHADEVAPURAM VILLAGE, O. V. ROAD, KANDUKURU MANDAL, DISTRICT – PRAKASHAM, ANDHRA PRADESH. - 523105 PH 984131133

KANIGIRI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (SCC1-SCC-01), SURVEY NO 793, PLOT NO 11,12, KANIGIRI, PRAKASHAM DISTRICT, ANDHRA PRADESH - 523230 PH 9848131133, 9052457512.

KAVALI

BHARGAVI AUTO PVT. LTD. (A801-PF-05),
 KAVALI NELLORE, ANDHRA PRADESH - 524201
 PH: 9248702567.

KURNOOL

 MSA MOTORS (C201-C2-01), AUTO NAGAR, INDUSTRIAL ESTATE, NH-7, KURNOOL - 518004 PH :9959513945.

MACHERLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CEY1-CEY-01), D.NO. 343/7, 343/5-3, 15-2-3, MACHERLA, MACHERLA MUNICIPALITY. -522426

PH:9848131133, 9705261801.

MACHILIPATNAM

 MITHRA AUTO AGENCIES PVT LTD (2604-0K-04), NARASIMHA NAGAR, MACHLIPATNAM, ANDHRA PRADESH - 521001
 PH :8886063526

MADANAPALLI

 BHARGAVI AUTO PVT. LTD. (AAT1-AAT-01), SURVEY NO.762, BASIKONDA VILLAGE, MADANPALLI, CHITTOOR DISTT. ANDHRA PRADESH - 524101 PH :9959893434.

MADHURAWADA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BQQ1+BQQ-01), PLOT NO. 5, SURVEY NO. 4/P, KOMMADI ROAD, MADHURAWADA, VISHAKAPATNAM, ANDHRA PRADESH - 530048 PH :8886669985.

MALKIPIURAM

 VARUN MOTORS (SEH1-SEH1-01), SURVEY NO 49/6A, MALKIPURAM VILLAGE AND MANDAL, EAST GODAVARI DISTRICT, ANDHRA PRADESH - 533250 PH :9154255226.

MANDAPETA

 S B MOTOR CORPORATION (BJC1-BJC-01), BLOCK NO. 4, D. NO. 4-1-64, MANDAPETA, DISTRICT – EAST GOADAVARI, ANDHRA PRADESH. - 533308 PH :888664090

MARKHAPURAM

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFF1-CFF-01), D. NO. 4-515/12, SURVEY NO. 1167, OPP. INDUSTRIAL ESTATE, ONGOLE ROAD, MARKAPURAM, DISRT.-PRAKASAM, ANDHRA PRADESH. - 523316 PH. 19848131133, 7331151674.

ΜΥΙ ΔΥΔΡΑΜ

 VARUN MOTORS PVT. LTD. (GKL1-GKL-01), D NO. 2-176/2, MAIN ROAD, MYLAVARAM, KRISHNA DISTRICT, PIN-521230, ANDHRA PRADESH - 521230 PH 9551337222.

NAKKAPALLI

 VARUN MOTORS (SFR1-SFR-01), SURVEY NO 2023; 2034 PEDGUMMULURU GRAM PANCHAYAT, RAYAVARAM MANDAL, NAKKAPALLI, VISHAKAPATNAM, ANDHRA PRADESH - 531081 PH -9885317344.

NANDIGAMA

 VARUN MOTORS PVT. LTD. (CUB1-CUB1-01), RE SURVEY NO. 601/1B, NH-9 ROAD, NANDIGAMA, DIST.-KRISHNA, ANDHRA PRADESH. - 521185 PH-9642225287.

NANDYAL

 MSA MOTORS (CKB1-CKB-01), SURVEY NO. 333, VUDUMALPURAM, MANDAL – NANDYAL, OPP. AUTO NAGAR, NANDYAL, DISTRICT – KURNOOL. 518501 PH.73037292822

NARASARAOPET

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (G502-JT-03), NEAR RELIANCE PETROL PUMP BUNK, VINUKONDA ROAD, NARASAROAPET, GUNTUR, - 522603 PH. 7680000502/9100791343.

NARSAPURAM

 NOVELTY REDDY & REDDY (SIU1-SIU-01), SY NO. 987, NARSAPURAM- CHINCHINDA BYPASS ROAD NARSAPURAM, PALAKOLLU MANDAL, WEST GODAVARI DISTRIC T.ANDHRA PRADESH - 534206 PH : 9703900011.

NARSIPATNAM

 JAYABHERI AUTOMOTIVES PVT. LTD. (WT01-WT-01), OPP. RDO BUNGLAW, BANK COLONY, VISAKHAPATNAM ROAD, NARSIPATNAM - 531116 PH: 7702333513.

NELLORE

 BHARGAVI AUTO PVT. LTD. (A801-A8-01), D.NO.25/II/97 INDUSTRIAL ESTATE, A.K. NAGAR, P.B.NO.18, NELLORE(A.P.) - 524004 PH :9248742225. BHARGAVI AUTO PVT. LTD. (A801-A8-04), A2, INDUSTRIAL ESTATE, A.K. NAGAR, NELLORE, -524004

PH:9248727888

 VISHNU CARS PVT. LTD. (A802-A8-01), FIELD NO. 628 /SURVEY NO. 877, 878/A/4 AND 883/A/14, NELLORE BIT-II, BESIDES GSR GARDENS, BALAJI NAGAR, NH-16, NELLORE CITY. - 542002 PH -7337340778.

NUZIVIDU

 VARUN MOTORS PVT. LTD. (2603-CN-03), RS N0:380/2,MUNCIPAL,D NO:25-12,WRD N0:25,BLOCK N0:25 BESIDE S SQUIRE CONVENTION HANUMAN JUNCTION ROAD, NIZVID, ANDHRA PRADESH. - 521201 PH :981337222.

ONGOLE

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (gY01-87-02), THROVAGUNTA COMPANY CENTRE.NI+5, SUNTUR ROAD, ONGOLE, PRAKASAM DISTRICT. - 523003 PH 9371055955

PALAKONDA

 VARUN MOTORS PVT. LTD. (CKO1-CKO-01), SURVEY NO. 8, ANAVARAM GRAMAM, PALAKONDA, SRIKAKULAM DISTRICT, ANDHRA PRADESH. - 532440
 PH. 1966877033. 9885317344.

PALASA

 JAYABHERI AUTOMOTIVES PVT. LTD. (BWH1-BWH-01), SURVEY NO. 63 OF VILLAGE – PURUSHOTTAPURAM, PALASA MANDAL, KASIBUGGA MUNICIPALITY, DISTRICT – SRIKAKULAM, ANDHRA PRADESH. - 532221 PH: 9849054442, 8799046464.

PATHAPATNAM

 VARUN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), DNO 4-245, SURVEY NO 264/1A, PATHAPATNAM, SRIKAKULAM, ANDHRA PRADESH - 532213
 PH-9885317344.

PENDURTHI

 VARUN MOTORS PVT. LTD. (BAP1-BAP-01). SURVEY NO.107/1B, VELAMPETA, ANAKAPALLI TO PENDURTHI HIGHWAY, NEAR BRIDGE, PENDURTHI DISTT: VISAKAPATNAM - 530047 PH: 9160445699.

 VARUN MOTORS PVT LTD (BAP1-BAP-02), SURVEY NO 240/1,2 & 241, PENDURTHI, VIZAG -531173 PH:9642403366.

PIDUGURALLA

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (BFM1-BFN-01), SURVEY NO. 897/16, PIDUGURALLA, DISTRICT – GUNTUR, ANDHRA PRADESH. - 522413 PH:9848131133, 9100787058.

PITHAPURAM

 S B MOTORS (CTS1-CTS-01), NO. 11-2-114, 11TH WARD, KAKINADA-KATHIPUDI ROAD, PITHAPURAM, EAST GODAVRI DIST., ANDHRA PRADESH. 533 450
 PH: 3888677758 8886677754

PONNUR

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (CFC1-CFC-01), PLOT NO. 4, D.NO. 213-1, VAISHNAVI NAGAR, PONNUR, GUNTUR, ANDHRA PRADESH. - 522124 PH: 9849445639, 9121141913.

RAJAHMUNDRY

 S.B. MOTOR CORPORATION (C501-C5-01), OPP.FCI GOWDOWN,JAILROAD,LALACHERUVLI,RAJAMU NDRY - 533101 PH :08885856667.

 S B MOTORS (C501-C5-03), D. NO. 3-243, NH-5, ROAD, HUKUMPETA, RAJAHMUNDRY. - 533 107 PH:08885886262.

 VARUN MOTORS PVT. LTD. (C502-C5-01), SURVEY NO. 660, PALACHERLA VILLAGE OF RANJANAGRAM MANDAL, RAJAHMUNDRY, EAST GODAVARI DSIT. - 533102 PH: 8886616717.

RAJAM

 VARUN MOTORS PVT. LTD. (BLJ1-BLJ-01), PLOT NO. 44, SARATHI NAGAR, RAJAMNAGAR PANCHAYAT, RAJAM, DISTRICT - SRIKAKULAM, ANDHRA PRADESH - 532127 PH.:779966998.

RAMPACHODAVARAM

 VARUN MOTORS (SOK1-SOK-01), SURVEY NO 14/1,IRLAPALLY VILLAGE, RAMPACHODAVARAM,ANDHRA PRADESH -533288 PH :9885511911.

REPALLE

 JAYALAKSHMI (SKA1-SKA-01), D.NO 430, BESIDE ESAR PETROL BUNK, REPALLE, DISTRICT: GUNTUR, ANDHRA PRADESH -522265 PH:83748477777.

S KOTA

Dealer Workshop (AS ON 31.05.2023)

 JAYABHERI (SIV1-SIV-01), SURVEY NO 113/3,MALLIPUDI MADHURA VENKATARAMANAPETA, SRUNGAVARAPUKOTA, VIZIANAGARAM, ANDHRA PRADESH - 535145 PH :9100818111.

SOMPETA

 VARUN MOTORS PVT LTD (GLX1-GLX-01), KHATA NO 406,407,408 DENOTED IN SURVEY NO 241/1,MOGILIKOTURU VILLAGE, SOMPETA, SRIKAKULAM, ANDHRA PRADESH - 532284 PH:8142331166.

SRIKAKULAM

- VARUN MOTORS PVT. LTD. (4603-We-09), NH-16, BESIDE EENADU UNIT OFFICE, PEDDA PADDU-VILL,ARASAVILLI (P.O.),SRIKAKULAM, -532001
 PH 9703119797
- JAYABHERI AUTOMOTIVE (4606-W6-04), SURVEY NO 22/7P, 22/8 AND SURVEY NO 29/12, 16, 17, BALAGA RURAL, SRIKAKULAM CITY, DISTRICT: SRIKAKULAM - 532001 PH-9100818111

SULURUPETA

 BHARGAVI AUTO PVT. LTD. (BZA1-BZA-01), KEERTI ENCLAVE,NEAR RTO OFFICE,NH-5,SULLURPETA - 524121 PH :9848602345, 7997998516.

TADA

 VISHNU CARS PVT.LTD. (SFW1-SFW-01), SURVEY NO 58/3,TADA, NELLORE DISTRICT -524401 PH : 7995088868.

TANUKU

 NOVELTY REDDY & REDDY MOTORS PVT LTD (BAR2-BAR-01), NH-5 ROAD, NEAR WOMEN'S COLLEGE, BESIDE IOC PETROL PUMP, TANUKU, DISTT: WEST GODAVARI(ANDHRA PRADESH) - 534211
 PH :9912341624

TENALI

 JAYALAKSHMI AUTOMOTIVES PVT. LTD (PE01-PE-01), KAVI RAJA NAGAR, GUNTUR ROAD, TENALI, GUNTUR DISTT. - 522002 PH :226100/9866111788.

THAGARAPUVALASA

 VARUM MOTORS PVT. LTD. (CQV1-CQV-01). SURVEY NO.11/2B. 1/33.MAGARAMPALEM VILLAGE, NH-16, NAGARAMPALEM GRAMA PANCHAYAT LIMITS, THAGARAPUVALASA, BHEEMUNIPATNAM MANDAL, VISHAKAPATNAM, -531162 PH :9895317344, 988520772.

TIRUPATI

- BHARGAVI AUTO PVT. LTD. (A801-N9-02), 11/66/1, ITRUPATI RENIGUNTA ROAD, TIRUPATI, - 517507 PH - 7997969946
- BHARGAVI AUTO PVT. LTD. (A801-N9-06), SURVEY NO. 2/B3, ADJACENT TO PARK HOTEL, RENIGUNTA ROAD, TIRUPATI. - 517501 PH :7997969019
- VISHNU CARS (N902-N9-01), SURVEY NO. 192/3A2A, 200' CHENNAI – TIRUPATI HIGHWAY, KOTRAMANGALAM, RENIGUNTA MANDAL, TIRUPATI - 517520 PH - 9154971551.

TIRUVURU

 SANTOSH AUTOMOTORS PVT. LTD. (CIM1-CIM-01), D NO. 23-1/5, OPP. AYYAPA SWAMY TEMPLE, MAIN ROAD, TIRUVURU. -521235 PH. 7799787969.

TUNI

 SATTIBABU MOTORS (PVT) LTD. (KY01-KY-01), D. NO. 65-31-15/1, OPP. FCI GODOWNS, NARAYANAPURAM, TUNI, EAST GODAVARI, ANDHRA PRADESH - 533401 PH. 7661893888.

VENKATAGIRIKOTA

 BHARGAVI AUTO PVT. LTD. (CDI1-CDI-01), M/S BHARGAVI AUTOMOBILES, BESIDE INDIAL OIL BUNK,GMR FUNTION HALL,DARASALLA,PALLIKUPPAM,KUPPAM ROAD,V KOTA - 517242

VENKATAPGIRI

 BHARGAVI AUTOMOBILES (SOL1-SOL-01), SURVEY NO 166, 169/1,169/2,RTC COLONY, VENKATAGIRI, NELLORE, ANDHRA PRADESH - 524132 PH: 9248747777.

PH:9848602345, 7799997720.

VIJAYAWADA

- MITHRA AUTO AGENCIES PVT LTD (2604-26-01), 40-17-3, PICHAIAH STREET, GANDHI COLONY, VIJAYAWADA - 520001 PH :8886063507.
- 91. VARUN MOTORS PVT. LTD. (2603-26-01), 48-17-4/1,RING ROAD,VIJAYAWADA - 520008 PH 9885576602
- VARUN MOTORS PVT. LTD. (2603-26-06), SURVEY NO.561/1, 562/5 & 561/3, 562/6 KESARAPALLY, VIJAYAWADA, KRISHNA DISTRICT, A.P. - 521102 PH 9581480099
- SANTOSH AUTOMOTORS PVT. LTD. (2607-26-01), SURVEY NO. 223/5, D. NO. 11-61/2, KANURU PANCHAYAT, PENAMALURU MANDAL, VJAYAWADA, KRISHNA DISTRICT, ANDHRA PRADESH. - 520010 PH. :7799787459/7799787918.

- VARUN MOTORS PVT. LTD. (2603-26-07), DOOR NO. 1-4-208 AND 1-4-208(1), IN R.S. NO. 33/3A, BHAVANIPURAM, VIJAYAWADA, MUNICIPAL CORPORATION, VIJAYAWADA, ANDHRA PRADESH. - 520012 PH: 9297241177
- SANTOSH AUTOMOTORS PVT. LTD (2607-26-02), D NO. 77-42-16A, OPP, NUNNA FIRE STATION, PRAKASH NAGAR, INNER RING ROAD, VIJAYAWADA - 520 015 PH :7799787932

VISHAKAPATNAM

- VARUN MOTORS PVT. LTD. (4603-46-0E), PLOT NO 88, BESIDES POLICE STATION, SRINAGAR, GAJUWAKA - 530026 PH:9703843737.
- VARUN MOTORS PVT. LTD. (4603-46-08), DOOR NO. 58/2,BLOCK NO. 5,BALAJI NAGAR, OPP. ANDHRA UNIVERSITY, SIRIPURAM - 580003 PH :7799124243
- VARUN MOTORS PVT. LTD. (4603-46-0F), D-25, INDUSTRIAL ESTATE, MARRIPALLEM, BESIDES COLA MANCHU KONDA GARDENS, VISAKHAPATNAM., - 530007 PH :9881444447.
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-01), PLOT NO. A-9, INDUSTRIAL ESTATE, VISHAKAPATANAM, ANDHRA PRADESH - 530018 PH :888633200
- JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-02), D.NO:51-17-2, NH-5, KRANTHINAGAR, VISAKHAPATNAM,(ANDHRA PRADESH). - 530013 PH. 7799772272
- VARUN MOTORS PVT. LTD. (4607-46-01), S. NO. 8, KAPPARADA VILLAGE, BESIDE IOCL PETROL BUNK, MANCHUKONDA GARDENS, MURALI NAGAR, NATIONAL HIGHWAY, VISHAKAPATNAM. - 530007 PH. 77991/24243.
- 02. JAYABHERI AUTOMOTIVES PVT. LTD. (4606-46-03), SURVEY NO. 119/6, KURMANNAPALEM, GAJUWAKA MANDAL, VIZAG, ANDHRA PRADESH. - 530046 PH:8897541234.
- VARUN MOTORS PVT. LTD. (4603-46-0K). SURVEY NO. 394 & 395, PLOT NO. 7 AT VILLAGE - DUPPITURU, MANDAL - ACHUTAPURAM, DISTRICT - VISHAKAPATNAM, ANDHRA PRADESH. - 531011 PH. 9966877133.
- 104. VARUN MOTORS PVT. LTD. (4603-46-0L), SURVEY NO. 408/10 OF MADHURAWADA VILLAGE, RUSHIKONDA ITI SEZ VISHAKAPATNAM RURAL MANDAL, VISHAKAPATNAM DISTRICT, ANDHRA PRADESH. - 530045 PH-9885315344.

 VARUN MOTORS PVT. LTD. (4603-46-1B), SURVEY NO. 2/A, SECTOR XI, MVP COLONY, VISHAKAPATNAM. - 530 017 PH 07901644535

VISSANNAPETA

106. VARUN MOTORS (SNO1-SNO-01), RS NO. 434/10, WARD NO. 10, VISSANNAPETA, KRISHNA DISTRICT, ANDHRA PRADESH-521215 PH-9581337222.

VIZAG

 VARUN MOTORS (4603-46-10), SURVEY NO 228/224, WARD NO 19, AGNAMPUDI, VIZAG -533053
 PH 9885438455

VIZIANAGARAM

 VARUN MOTORS PVT. LTD. (4603-N8-0C), OPPOSITE SUN SCHOOL, 100 FEET RING ROAD, VIZIANAGARAM, VIZIANAGARAM -535001 PH:8886721213.

 JAYABHERI AUTOMOTIVES PVT. LTD. (N801-N8-01), PLOT NO.B-1, DOOR NO.B-32-1, SURVEY NO. 1081/2A & 109/2A, INDUSTRIAL ESTATE, VANTITHADI AGRAHARAM VILLAGE, VIZIANAGARAM, ANDHRA PRADESH - 535001 PH. 7702333514.

YANAM

 SB MOTORS (CTR1-CTR-01), SURVEY NO 82-2,TALLAREVU MANDAL,YANAM, EAST GODAVARI DISTRICT - 533463 PH :8886677759.

YELAMANCHILI

 JAYABHERI AUTOMOTIVES PVT. LTD. (GJR1-GJR-01), SURVEY NO. 19-1, 2, 3, 45/1, 45/283, KOKIRAPALLI, YELAMANCHILI, NARSIPATNAM, VIZAG DIST., ANDHRA PRADESH. - 531055 PH: 9849445639, 9642502345.

YELESWARAM

112. VARUN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-). VARUN MOTORS P.LTD, DO-NO – 2-4-41, BESIDE GOLLAJI GARU BUNK, YERRAVARAM ROAD, YELESWARAM – 533429 - 533429 PH -988511911.

ARUNACHAL PRADESH

BHALUKPONG

 DY MOTORS (YT01-YT-01), NEAR SBI UPPER MARKET, BHALUKPONG, WEST KAMENG, ARUNACHAL PRADESH - 790114 PH:8415075164.

ITANAGAR

- BUISHI YADA MOTORS (7501-75-01), A' SECTOR, NAHARLAGUN, ARUNACHAL PRADESH. - 791110
 PH :9436268870
- 115. BUISHI YADA MOTORS (7501-75-04), MODEL VILLAGE, BEFORE GOVERNMENT HIGHER SECONDARY SCHOOL, NAHARLAGUN, ITANAGAR - 791110 PH :8257075033.
- 116. D Y MOTORS (7502-75-01), LPC NO -DC/ICC/LPC, BORUM VILLAGE, PO/PS-NAHARLAGUN, PAPUM PARE DIST, ARUNACHAL PRADESH - 791100 PH: 8415075164.

PASSIGHAT

 BUISHI YADA MOTORS (7501-8A-03), PASSIGHAT BAZAR, PASSIGHAT, ARUNACHAL PRADESH - 791102 PH :9402878414.

RUKSIN

 DY MOTORS (SHZ1-SHZ-01), RUKSIN IN EAST SIANG DISTRICT, ARUNACHAL PRADESH -787060
 PH: 8415075164

ZIRO

 BUISHI YADA MOTORS (CHM1-CHM-01), HAPOLI, NEAR TELECOMMUNICATION CENTRE, ZIRO, ARUNACHAL PRADESH. - 791120 PH :9732010858.

ASSAM

BAIHATA CHARIALI

 PALLAVI MOTORS PVT LTD (BNL1-BNL-01), DAG NO. 1042, PATTA NO. 17, MOUZA – BORBANKHAR, P.S. – BAIHATA CHARIALI, DISTRICT – KAMRUP, ASSAM - 781381 PH -9864052488.

BARAMA

121. MITTAL AUTOZONE (SOX1-SOX-01), VILLAGE -BARJAR, PO & PS - BARAMA, ASSAM -781346 -781346 PH :8638487401.

BARPETA

 BHARATI MOTORS PVT. LTD. (7N01-7Z-02), SIMULGURI,NH-31,DISTRICT-BARPETA, ASSAM - 781313 PH:7002819523.

BIJOYNAGAR

 PODDAR CAR WORLD (IA01-IA-01), AT/PO-BIJOYNAGAR, INDIAN OIL PETROL PUMP, KAMRUP DIST.,BIJOYNAGAR - 781125 PH :9864209733

BISWANATH CHAIRALI

124. RAMLAL DURGADUTT MOTORS PVT LTD (BX11-BXI-01), DAG NO- 7,8,9 PERIODIC PATTA NO - 24, REVENUE VILLAGE, BRAHMAPUTRA CHAPORI, MOUZA - BAGHMORA - 784176 PH :8724087940.

BONGAIGAON

125. BHARATI MOTORS PVT. LTD. (7N01-7N-01), CHAPAGURI ROAD, BONGAIGAON - 7833830 PH :7002350887/9864427537.

CHAMATA

126. PALLAVI MOTORS PVT LTD (CEI1-CEI-01), DAG NO. 1137, PATTA NO.376, MOUZA – DAHRAMAPUR, CHAMATA DISTT. NALBARI, ASSAM - 781306 PH. 98R40152488

DHEKIAJULI

 RAMLAL DURGADUTT MOTORS PVT LTD (BRX1-BRX-01), DAG NO.242, KP. PATTA NO.88, VILLAGE-BHAKUAMARI, MOUZA-BORGHOLA, BESIDES-NH15, DHEKIAJULI, DISTT. SONITPUR, ASSAM. - 784110 PH :9706586722.

DHEMAJI

 SAIKIA AUTO PVT. LTD. (7P01-UD-02), NALANIPAM KONCH GAON,NH-52,DHEMAJI (ASSAM) - 787057 PH: 8638725209.

DIBRUGARH

- 129. JAYBEE AUTO AGENCIES PVT. LTD. (C101-C1-01), CHIRING CHAPARI, T.R. PHUKAN ROAD, P.O. DIBRUGARH (ASSAM) - 786001 PH '9954799773
- BIMAL AUTO AGENCY (C102-C1-01), DAG NO. 104, GHARBANDICHUK JARUA GAON, MOUZA-MANKHATTA KANIKAR, DIST.-DIBRUGARH, ASSAM. - 788004 PH :9864074525, 7003901301.

DIGBOI

131. VISHAL CAR WORLD PVT LTD (BYD1-BYD-01), BORBIL NO. 1, NEAR LIONS CLUB, NH-38, P.O. – DIGBOI, DISTRICT – TINSUKIA, ASSAM. -786171 PH. 9435860000

DIPHU

 RAMLAL DURGADUTT MOTORS PVT LTD (1P01-1P-01), MANJA ROAD, DILLAJI, DIPHU, KARBI ANGLONG, ASSAM - - 782460 PH : 970755868.

DULIAJAN

 JAYBEE AUTO AGENCIES PVT. LTD. (ADA1-ADA-01), JAYBEE AUTO AGENCIES, TIPLING TINIALI, DULIAJAN DIST. DIBRUGARH -786602 PH : 7002722358.

GOALPARA

 BHARATI MOTORS PVT. LTD. (YN01-YN-01), PO: KALYANPUR, VILLAGE: SOLMARI, P/S: AGIA, NH: 37, DISTRICT: GOALPARA, ASSAM - 781301 PH:9101940372.

GOLAGHAT

135. RAMLAL DURGADUTT MOTORS PVT LTD (J303-J3-01), DAG NO. -718, 684 & 706, PATTA NO 213, 168 & 192, KURUKA GAON, P.O -MORANGI, P.S -GOLAGHAT, DIST: GOLAGHAT, ASSAM PIN-785702 - 785702 PH :7002099847

GORAIMARI

136. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (GMB1-6MB-01), DAG NO. 3, KP PATTA NO - 11, VILLAGE- CHALABASTI, MOUZA- GORAIMARI - 783390 PH :7002279100.

GUWAHATI

- BIMAL AUTO AGENCY (0901-09-01),
 JHALUKBARI, GUWAHATI. 781014
 PH:9864074525.
- PALLAVI MOTORS PVT LTD (0902-09-01), DAG NO. 182,NEXT TO DEPTT. OF FAMILY WELFARE,SIX MILE. KHANAPARA G.S. ROAD, GUWAHATI - 781022 PH -984211037
- PODDAR CAR WORLD PVT LTD (0904-09-01), HENGRABARI , VIP ROAD, GUWAHATI - 781036 PH :9508746340.
- 140. BIMAL AUTO AGENCY (0903-09-01), CHANDMARI, BAMUNI MAIDAN, OPP SBI NEW GUWAHATI BRANCH, GUWAHATI - 781021 PH:9864489722.
- 141. BIMAL AUTO AGENCY (0901-09-02), BEHARBARI,BEHIND DHOOM RESTAURANT, NH-37,GUWAHATI - 781028 PH :9864040406.
- 142. PODDAR CAR WORLD (0905-09-01), NH-37, NEAR, GORCHUK CHAIRALI, GUWAHATI (ASSAM). - 781029 PH:7002929414.
- BIMAL AUTO AGENCY (0903-09-03), BESIDE NRL PETROL PUMP, RGB ROAD, ZOO ROAD, GUWAHATI, ASSAM - 781005 PH :7578005159.
- 144. MITTAL AUTOZONE (0908-09-01), NH-37, BELTOLA, NEAR HANUMAN KANTA, GUWAHATI - 781028 PH 9864296666
- 145. PALLAVI MOTORS PVT LTD (0902-09-02), DAG NO. 2201, PATTA NO. 237, VILLAGE – JYOTIKUCHI, MOUZA – BELTOLA, AK AZAD ROAD, GUWAHATI, DISTRICT – KAMRUP, ASSAM. - 781034 PH. 9864052488.

HOJAI

146. RAMLAL DURGADUTT MOTORS PVT LTD (ARA1-ARA-01), KHATIYAN NO.: 312'3F, HOJAI MAIN ROAD, NEAR UCO BANK, SHANKARDEVNAGAR, HOJAI, DISTRICT – NAGAON, ASSAM - 782435 PH. 700280554.

HOWLY

147. PODDAR CARWORLD (GKW1-GKW-01), PATTA NO. 601, DAG NO. 1567, HOWLI TOWN, MOUZA GHILAJARI, DISTT BARBETA, ASSAM - 781316 PH:8085957586

HOWRAGHAT

148. BAJRANG CARWORLD (SGR1-SGR-01), HOWRAGHAT TOWN, KARBI ANGLONG, ASSAM - 782481 - 782481 PH 9864191169.

JAGI ROAD

149. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-RB-02), JAGIROAD,MORIGAON,NALAOW,ASSAM -782410 PH :9365884355.

JORHAT

150. RAMLAL DURGADUTT MOTORS PVT LTD (G902-G9-01) DAG NO. 7 & 8 OF P.P. NO. 33, DAG O. 9 OF P.P. NO. 61, DAG NO. 382 OF P.P. NO. 206, VILLAGE - PAKIMURI HABIGAON, MOUZA - SARAIBAHAL, JORHAT. - 785006 PH. 7002099547.

KALGACHIA

151. MITTAL AUTO (SLB1-SLB-01), VILL -KALGACHIA, PO - KALGACHIA , DIST BARPETA -781319 PH :8638487401.

KARIMGANJ

 JAIN UDYOG (6901-1S-04), STEAMER GHAT ROAD, KARIMGANJ, ASSAM - 788710 PH:9435179025.

KHATKHATI

 PODDAR CAR WORLD PVT. LTD. (CAZ1-CAZ-01), NEAR TELEPHONE EXCHANGE, NH-39, KHATKHATI, DISTRICT – KARBI ANGLONG. - 782460 PH :6009900381.

LANKA

154. RAMILAL DURGADUTT MOTORS PYT LTD (SDD1-SDD-01), DAG NO 95 OF PP NO 59, DAG NO 96 OF PP NO 26 & DAG NO 418 OF PP NO 73 KISAM LAKHIMPUR , MOUZA - LANKA, DIST -HOJAI , ASSAM - 782442 PH 9707556888

MANGALDOI

Dealer Workshop (AS ON 31.05.2023)

 PODDAR CAR WORLD (YW01-YW-01), PUNIA, NH-52, MANGALDOI, DISTT. DARRANG - 784115
 PH 9706970132

MARGHERITA

 VISHAL CAR WORLD PVT LTD (YR01-YR-01), MARGERITA TOWN, BEHIND IOCL PETROL PUMP, NH-38, MARGHERITA, ASSAM - 786181 PH: 9435860000.

MORIGAON

157. RAMLAL DURGADUTT MOTORS PVT LTD (RB01-RB-01), DAG NO. 423 OF PP NO. 221, KISSAM BACHNAGHAT, MORIGAON, ASSAM. -782105 PH -7002239592

NAGAON

158. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-01), KHUTIKHATIA, HAIBARGON, NAGAON - 782002 PH 9706007918

159. BAJRANG CAR WORLD (A UNIT OF MAA VAISHNAVI AUTOMOTIVE PVT. LTD.) (7J03-73-01), DAG NO. 255, 1508(N)254(O), 1509(N)257(O) AND 291, PATTA NO. 508(N)15(O), 507(N)15(O), 507(N)97(O) AND 98, VILLAGE - DEODHAR, MOUZA - PAKHIMORIA, DIST.-NAGAON. - 782002 PH. 943500047498841911169.

160. RAMLAL DURGADUTT MOTORS PVT LTD (7J01-7J-03), PAKHIMURIA, NEAR BHUGDOI DHABA, NAGAON, ASSAM - 782003 PH :9706007918.

NAHARKATIYA

161. JAYBEE AUTO AGENCIES PVT. LTD. (C101-CJI-33), NAHARKATIYA TOWN PART NO. 4, MOUZA – JAYPORE, NEAR ST. MARY'S SCHOOL, DISTRICT – DIBRUGARH, ASSAM. -786610 PH. 70027722358.

NALBARI

162. BIMAL AUTO AGENCY (9201-92-01), CHOWKBAZAR, NALBARI HAJO ROAD, NALBARI DIST. NALBARI - 781335 PH :7576842484.

NORTH LAKHIMPUR

163. SAIKIA AUTO PVT. LTD. (7P01-7P-01), HATILUNG, NH-52 ROAD, NORTH LAKHIMPUR, ASSAM - 787031 PH:8473946336.

164. SAIKIA AUTO PVT. LTD. (7P01-7P-03), KHELMATI, WARD NO. 14, NH -52, NORTH LAKHIMPUR, ASSAM - 787001 PH :7002571073

PATHSALA

 PODDAR CAR WORLD PVT. LTD (CLD1-CLD-01), DAG NO. 451, PATTA NO. 151 KMP, PATHSALA, DIST.-BARPETA, ASSAM. - 781325 PH: 6000900256.

RAJGARH

166. JAYBEE AUTO AGENCIES PVT. LTD. (CIJ1-CIJ-01), DAG NO.182, PP NO.140 OF 2 NO. BHAGATIA GAON, LAT NO.11, RAJGARH, MOUZA-TINKHONG, DISTT. DIBRUGARH, ASSAM - 786611 PH 1994799973

RANGIA

167. PODDAR CAR WORLD PVT. LTD. (6X01-6X-01), RANGIA TOWN, WARD NO. 5, SHANTIPUR, BHUTAN ROAD, NEAR POLYCLINIC HOSPITAL, RANGIA DISTT. KAMRUP (ASSAM) - 781354 PH :8724877892.

SHIBSAGAR

168. RAMLAL DURGADUTT MOTORS PVT LTD (G902-L9-02), RANGHAR CHARIALI, DHAPROTA, AT ROAD, OPPOSITE RANGHAR, SHIVASAGAR -785640 PH :7002099547.

SILCHAR

 JAIN UDYOG (6901-J2-02), KAUSHAL COMPLEX, SONAI ROAD, SILCHAR, ASSAM - 788006 PH:9706002524.

SORBHOG

 MITTAL AUTOZONE (SGS1-SGS-01), VILLAGE DAHALAPARA, KISMAT DWARIKA, PS SORBHOG, SUB DIVISION- BARPETA- ASSAM. -781317 PH :8011042222.

TANGLA

 BIMAL AUTO AGENCY (CHO1-CHO-01), DAG NO.:121, PATTA NO.101/320, VILLAGE BULLARPARA, MOUZA TANGLA. - 784521 PH: 9954387619.

TEZPUR

172. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-01), NEAR DON BASCO SCHOOL, P.O. NIKAMULSATRA, TEZPUR, ASSAM - 784154 PH :8724087940.

173. RAMLAL DURGADUTT MOTORS PVT LTD (T102-T1-02), GORAIMARI, VILLAGE - SOLGAON, TEZPUR, ASSAM. - 784001 PH :9836036157.

TINSUKIA

174. VISHAL CAR WORLD PVT LTD (J401-J4-01), LAIPULY, A.T. ROAD, TINSUKIA, DIST -TINSUKIA, ASSAM - 786183 PH :9435860000.

BIHAR

ARARIA

175. SEEMANCHAL MOTORS PVT. LTD. (O701-07-01), NEAR BUS STAND, JAGDISH RICE MILL COMPOUND, HOSPITAL ROAD, FORBESGANJ, DISTT. ARRARIA, BIHAR - 854318 PH.8797098013.

ARRAH

176. PEARL CARS (VU01-VU-01), (A UNIT OF VINDHYAVASINI AUTOMOBILES PVT. LTD.), DHANUPRA, NEAR GANPAT CHOUDHARY DWAR, NH-30, ARRAH (BIHAR) - 802301 PH:8294634604.

AURANGABAD

 KARLO AUTOMOBILES (SNG1-SNG-01), KARLO AUTOMOBILES PVT LTD, GT ROAD, NEAR, RAIPURA MORE, BABHANDI, AURANGABAD -824101 PH : 7019085212.

BANKA

 SEEMANCHAL MOTORS PVT. LTD. (CEQ1-CEQ-01), KHATA NO. 134, KHESRA NO. 118, BEHIND MARUTI SHOWROOM, STATION ROAD, BANKA, BIHAR. - 813101 PH : 8720766020

BEGUSARAI

179. GS MOTORS PVT. LTD. (1U01-1U-01), HARHAR MAHADEV CHOWK, NH 31, BEGUSARAI, BIHAR -851101 PH 9204756206

BETTIAH

 SHREE GOPAL AUTO PVT. LTD. (O401-04-01), BEETIAH - MOTIHARI HIGHWAY , NH-28 B, NEAR MACHALI LOK, BEETIAH (BIHAR). - 845438 PH. 9771486183.

BHAGALPUR

181. SEEMANCHAL MOTORS PYT. LTD. (G802-G8-01), BAUSI ROAD, ALIGANJ, NEAR SAINT TRESA SCHOOL, ALIGANJ, BHAGALPUR. - 812005 PH :8797096020.

BIHARSHARIF

182. REESHAV AUTOMOBILES (MG01-TG-03), PATNA RANCHI ROAD, NR GAGAN DIWAN SOGARA SCHOOL, THANA-LAHERI MURARPUR, BIHARSHARIF, DISTRICT-NALANDA, BIHAR -803101 PH :9263632175.

BUXAR

183. PEARL CARS (VV01-VV-01), C/O DEVDHTRHA UPPDHYYA, SYNDICATE, BYE PASS ROAD, BUXAR - 802101 PH :8294634605/8294634602.

CHAKIA

184. RAM KRISHNA MOTORS PVT. LTD. (CWA1-CWA-01), OJHA TOLA, NEW BYPASS, CHAKIA-845412, PURVI CHAMPARAN DISTT., BIHAR - 845412 PH :9801773716.

CHAPRA

185. REESHAV AUTOMOBILES (MG01-TH-02), 146, PLOT NO. 381, VILLAGE RAUJA, CHAPRA PATNA ROAD, NEAR BHIKHARI CHOWK, CHAPRA, BIHAR - 841301 PH -7061295296

DANAPUR

186. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-02), ADJASCENT ARYA SAMAJ MANDIR, NEAR SAGUNA MORE, DANAPUR, -800018 PH :9386898458.

DANAPUR, PATNA

 ALANKAR AUTO SALES & SERVICE PVT LTD (1504-NN-05), TOUZI NO. 5057, THANA NO. 35, MOUZA - BABAKKARPUR, DANAPUR, PATNA. -801503
 PH :9334415434.

DARBHANGA

188. RAJKRISHNA MOTORS LLP (1V02-1V-01), KHATA NO. 61936, RAUSHAN CHOWK, BAJITPUR, B.M.P.-13, ROAD, DARBHANGA, BIHAR - 846009 PH -7004529271

 RAJKRISHNA MOTORS LLP (1V02-1V-02), VIP ROAD, ALLALPATTI, DARBHANGA (BIHAR) -846003
 PH:9693127351.

DEHRI ON SONE

 PEARL CARS (1X01-MK-02), MOUZA - KHASRA, KHATA NO. 141, PLOT NO. 186, SAAT KATDA THANA - DEHRI-ONE-SONE, DIST.-ROHTAS, BIHAR. - 821307 PH :8294634602.

GAYA

 KARLO AUTOMOBILES PVT LTD (Y601-Y6-01), BODH GAYA, GAYA. - 824231 PH:7004574631/8539063615.

 DMC CARS (A UNIT OF DHANRAAJ AGENCIES PVT LTD (Y602-Y6-01), DHANRAAJ AGENCIES PRIVATE LIMITED, MARUTI SUZUKI ARENA SHOWROOM, OPPOSITE AIRPORT RUNWAY, GAYA-DOBHI ROAD, GAYA, PIN 823004 - 823004 PH : 9931011860/9900024001.

GOPALGANJ

 SHREE GOPAL AUTO PVT. LTD. (O301-03-01), NH-28, DANAPUR, TEHSIL-MANJAGARH, GOPALGANJ (BIHAR) -800023
 PH: 9771486170/9771486139.

HAJIPUR

194. REESHAV AUTOMOBILES (MG01-MG-01), KHATA 617 & KHASHRA 354/1605, NEAR RELIANCE PETROL PUMP, M G SETU ROAD, HAJIPUR (VAISHALI). - 844101 PH :9060945038.

KATIHAR

 SEEMANCHAL MOTORS PVT. LTD. (0601-06-01), NEAR SBP VIDIYA VIHAR SCHOOL, SIRSA, KATIHAR PURNEA ROAD, KATIHAR - 854105 PH -7762893700

KISHANGANJ

196. SEEMANCHAL MOTORS PVT. LTD. (PX01-PX-01), PASCHIM PALI ROAD, COLLEGE ROAD, THANA:KNE, WARD NO.1, KISHANGANJ (BIHAR). - 855101 PH :8797096019.

LAKHISARAI

 GS MOTORS PVT. LTD. (CHU1-CHU-01), TAUZI NO. 39, KHATA NO. 3, KHESRA NO. 496, MOUZA - JAINAGAR, ANCHAL - LAKHISARAI, DIST. -LAKHISARAI, BIHAR. - 811311 PH. 9204756206.

MADHUBANI

 RAJKRISHNA MOTORS LLP (CAJ2-CAJ-01), BHOWRA TOLA, BARDIBAN, MADHUBANI, BIHAR - 847211 PH 9304481978

MOHANIA

9693127351

199. PEARL CARS (VW01-VW-01), MOHANIA-BUXAR ROAD ,SH-14,MOHANIA - 821109 PH :8294634632/8294634649.

MOTIHARI

 RAJIV AUTOMOBILES PVT LTD (T401-FH-03), NEAR CHHATAUNI CHOWK, BESIDE NH 28 A, MOTIHARI TOWN, BIHAR - 845401 PH :9234609669.

MUZAFFARPUR

- RAJIV AUTOMOBILES PVT LTD (T401-T4-01), RAMDAYALU NAGAR, PATNA HAZIPUR ROAD, MUZAFFARPUR, BIHAR - 842002 PH :9910347908.
- 202. RAM KRISHNA MOTORS PRIVATE LTD. (T402-T4-01), KRISHNA TALKIES CAMPUS, AKHARAGHAT ROAD, MUZAFFARPUR, BIHAR. -842001 PH 9102173333
- 203. RAJIV AUTOMOBILES PVT LTD (T401-T4-04), KHABRA POKHAR LANE NO -1, PANCHAYAT -KHABRA, CITY- MUZAFFARPUR - 843146 PH -9234609671

NAUGACHIA

204. SEEMANCHAL MOTORS PVT. LTD. (CF51-CF5-01), NEAR GAYATRI PLY ROOM, NH-31, NAUGACHIA MARKET, NAUGACHIA, DISTRICT – BHAGALPUR, BIHAR. - 853204 PH: 8797096014, 8797096020.

NAWADA

 REESHAV AUTOMOBILES (MG01-TJ-04), 191 & 400, KHSARA NO. 3105 & 3102, NEAR DM'S OFFICE, PATNA-RANCHI MAIN ROAD, NAWADA, BIHAR - 805110 PH 6706162228

PATNA

- 06. VAU'S AUTOMOBILE (1503-15-01), BESIDES GODAVARI APPARTMENT, ASHIANA ROAD, PATNA. - 800014 PH:9771446012.
- KARLO AUTOMOBILES PVT LTD (1502-15-04), NEAR BATA GUNJ, DINGA PATNA, BIHAR. -800013
 PH:09304212119/7004573547.
- 208. ALANKAR AUTO SALES & SERVICE PVT LTD (1504-15-03), PLOT NO.1118-119, BEHIND DURGA MARINE DRIVE APARTMENTS, DUJRA DEVI STHAN, ASHOK RAJPATH, PATNA - 800001 PH. 9934020200.
- REESHAV AUTOMOBILES PVT.LTD. (1506-15-01), PLOT NO.25/1581 KHATA NO.494, MOUZA KUMHRAR, PARGANA AZEEMABAD, KANKARBAGH, PATNA. - 800004 PH. 7632995356.
- KARLO AUTOMOBILES PVT LTD (1502-15-05), JAGDEOPATH, NEAR SAI CORPORATE PARK, PATNA - 801506 PH: 9264190675.
- 211. ALANKAR (1504-15-06), ALANKAR COMPOUND, BESIDE ALANKAR SUN CITY, SANDALPUR, KUMHRAR, PATNA – 800006 - 800006 PH: 9304403916.

PURNEA

 SEEMANCHAL MOTORS PVT. LTD. (6V01-6V-01), NH-31, NEAR MARKETING YARD, GULAB BAGH, PURNEA (BIHAR) - 854326 PH:8797096014.

SAHARSA

GS MOTORS PVT. LTD. (AAP1-AAP-02),
 PATUAHA, NH 107 SAHARSA,BIHAR - 852201
 PH:9263638456.

SAMASTIPUR

 RAJKRISHNA MOTORS LLP (1W02-1W-01), KHESRA NO. 3190-95, KHATA NO. 76, HERPUR ALLOTH, SAMASTIPUR, BIHAR. - 848101 PH: 9204552405.

SASARAM

 PEARL CARS (1X01-1X-01), PLOT NO.7, 9 & 11, NH-2 MORE SARAI, SASARAM (BIHAR) - 821115
 PH :8294634602/8294634649.

SITAMARHI

216. RAJIV AUTOMOBILES PVT. LTD. (E001-E0-01), DUMRA ROAD, SHANTI NAGAR, SITAMARHI. -843301 PH:9234609671

SIWAN

7280074124.

 SHREE GOPAL AUTO PVT. LTD. (0501-05-01), CHAPRA ROAD, NEAR CHAPDHALA, NH 85, SIWAN - 841236 PH :9771486132.

CHANDIGARH

CHANDIGARH

- MODERN AUTOMOBILES (0702-07-01), 4 M.W.
 INDL AREA, CHANDIGARH 160002
 PH:9646000190.
- 219. AUTOPACE NETWORK PVT LTD (0705-07-01), PLOT #112-113, INDUSTRIAL AREA, PHASE-1, CHANDIGARH - 160002
- PH:9878422201.
 TRICITY AUTOS (9M01-07-02), PLOT NO 29/6, INDUSTRIAL AREA PHASE-2, CHANDIGARH-160002
 PH:9988882335.
- 221. NAVDESH AUTO LLP (0708-07-01), PLOT NO. 42, INDUSTRIAL AREA PHASE-1, CHANDIGARH. -160002 PH -7087035482

CHHATTIGARH

PENDRA

 M SQAURE (SC21-SC2-01), – M SQUARE MOTORS, NEAR SEMRA CLOCK MAIN ROAD, PENDRA, GOURELA PENDRA MARWAHI-495119 -495119
 PH. 7987590484.

CHHATTISGARH

AMBIKAPUR

 MAHAMAYA AUTOCARS PVT LTD (AE01-AE-01), MANEDRAGARH ROAD, AMBIKAPUR, CHATTISGARH. - 497001 PH: 7987741432.

BAGBAHARA

224. HDN MOTORS (SEB1-SEB-01), M/S HDN MOTORS, BESIDE R.N RICE MILL, NEW MAHAVEER COMPLEX, MAHASAMUND ROAD, BAGBAHARA - 493449 PH: 7909800004.

BAIKUNTHPUR

225. MAHAMAYA AUTOCARS PVT LTD (CQU1-CQU-01), WARD NO.01, KHATA NO.91/6, TEHSIL - BAIKUNTHPUR, DISTT. - KORIYA, CHATTISGARH - 497335 PH:9179350707.

BALOD

226. CHOUHAN (SFE1-SF-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD -491228 - 491228 PH :9837325267.

BALODA BAZAR

227. SKY AUTOMOBILES (5001-GJ-04), AMBEDKAR CHOWK, RAIPUR ROAD, BALODA BAZAAR, CHATTISGARH. - 493332 PH: 9893307429.

BEMETRA

228. CHOUHAN AUTOMOBILES LLP (CBC2-CBC-01), KHASRA NO. 88/2, CHOUHAN AUTOMOBILE LLP, KAWARDHA ROAD, NAYGHAD CHOWK, BEMTARA CHATTISGARH - 491335 PH:6262000222.

BHATAPARA

229. SPARSH AUTOMOBILES (BBJ1-BBJ-01), RAIPUR ROAD, BHATAPARA (CHATTISGARH) - 493118 PH :8921326361/ 9285505780.

BHILAI

- 230. CHOUHAN AUTOMOBILES LLP (8305-83-01), PLOT NO.1 & 34, SHIVNATH COMPLEX, BEHIND CHOUHAN ESTATE, G.E. ROAD, SUPELA, BHILAI. - 490023 PH. 93111100140.
- 231. SPARSH AUTOMOBILES PVT LTD (8304-83-01), R-17, INDUSTRAIL AREA, NANDNI ROAD, CHHAWANI CHOWK, BHILAI, CHHATTISGARH -490026 PH :8779064848.
- 232. CHOUHAN AUTOMOBILES LLP (8305-83-02), NH-6, DURG BYPASS ROAD, KHASRA NO.1/14, 1/23, 1/192, VILLAGE-KATULBOD, BHILAI, TEHSIL & DISTT. DURG, BHILAI, CHHATTISGARH 491001 PH :6262000222.

BHILLAI

SPARSH AUTOMOBILES (8304-83-02), M/S.
 SPARSH AUTO, VEERSAVARKAR MARKET, G.E
 ROAD, SUPELA, BHILLAI-490023 - 490023
 PH:9926626662.

BILASPUR

- SATYA AUTO PVT LTD (C303-C3-01), SECTOR C, PLOT NO. 42, SIRGITTI INDUSTRIAL AREA, BILASPUR, CHATTISGARH - 495001 PH 9109194833.
- SATYA AUTO PVT LTD (C303-C3-02), PLOT NO. 848/20, 848/26, 848/40, MOPKA BYPASS ROAD, BILASPUR, CHHATTISGARH. - 495006 PH:9977879698.

236. M SQUARE MOTORS (A UNIT OF MAHAVIR MOTORCORP PRIVATE LIMITED) (C302-C3-01), KHASRA NO. 420 AND 414/1, NEAR RELIANCE PETROLEUM PUMP, BESIDES TRANSPORT NAGAR GATE, RAIPUR ROAD, PARSADA, BILASPUR. - 495223 PH: 6262622560.

DALLIRAJHARA

237. CHOUHAN (SMZ1-SMZ-01), H.NO 185, WARD NO 25, NAYA MARKET, DALLIRAJHARA, BALOD DISTRICT-491228 + 491228 PH :6262000222.

DEOBHOG

238. SPARSH AUTO (SIQ1-SIQ-01), M/S SPARSH AUTOMOBILES PVT LTD SANTOSHI NAGAR, NEAR BHARAT PETROL PUMP, DHARAMGARH ROAD, DEOBHOG – 493890 -493890 PH :9926626662

DHAMTARI

 SKY AUTOMOBILES (7V01-7V-01), KASRA NO.238/2, SEHARA DABRI, RAIPUR ROAD, DHAMTARI-493773 CHATTISGARH - 492009 PH :8889998612.

DURG

240. SPARSH AUTOMOBILES PVT LTD (7W03-7W-01), OPP. JAINAM PLACE, BEFORE PULGAON CHOWK, PULGAON NAKA, DURG, CHHATTISGARH - 491001 PH :9840437544.

GARIYABANDH

 SPARSH AUTOMOBILES (CCH1-CCH-01), NEAR HP PETROL PUMP, RAIPUR ROAD, GARIYABAND, CHHATTISGARH. - 756032 PH :966963883.

JAGDALPUR

242. SKY AUTOMOBILES (EC01-EC-01), GEEDAM ROAD, JAGDALPUR, CHATTISGARH. - 494001 PH:9109996511.

JANJGIR

 SATYA AUTO PVT LTD (9N02-9N-01), NEAR KHOKSHA RAILWAY CROSSING, CHAMPA ROAD, NH-200, JANJGIR - 495668 PH - 7747000446

KANKER

244. SKY AUTOMOBILES (5001-KG-06), RAZA NAGAR, SINGARBHAT, NH-30, KANKER, DISTRICT – KANKER, CHHATTISGARH - 494334 PH :8889998625.

KAWARDHA

 CHOUHAN AUTOMOBILES LLP (DI02-DI-01), KHASRA NO. 100/6, TALPUR BILASPUR ROAD, KAWARDHA, CHHATTISGARH. - 491 995 PH :6262000222.

KHAIRAGARH

246. SPARSH AUTOMOBILES PVT LTD (GMG1-GMG-01), KHAIRAGARH -JHALBANDHA ROAD AMLIPARA, OPP - BIJALI OFFICE, KHAIRAGARH -491881 - 491881 PH -9926626682

KHARSIA

247. SATYA AUTO (SET1-SET-01), M/S SATYA AUTO , BESIDE GOVT HIGH SCHOOL, RANISAGAR, KHARSIA, DISTRICT: RAIGARH, CHHATTISGARH - 496661 PH: 9993092051.

KONDAGAON

248. SKY AUTO (SDF1-SDF-01), – M/S SKY AUTO, NH-90 RAIPUR ROAD, NEAR INDIAN OIL PETROL PUMP, KONDAGOAN, CHHATTISGARH - 494226 PH :9425204051.

KORBA

249. SATYA AUTO PVT LTD (U702-U7-01), SHED NO. 1, INDUSTRIAL AREA, KORBA - 495681 PH :8462000861.

MAHASAMUND

250. SPARSH AUTOMOBILES (5002-9P-02), BARONDA CHOWNK, BAGBAHRA ROAD, MAHASAMUND. - ?? PH :9926280700.

MANENDRAGARH

MAHAMAYA AUTOCARS PVT LTD
 (AE01-BCE-02), WARD NO.21, NH-43,
 AMBIKAPUR ROAD, NEAR HP PETROL PUMP,
 MANENDRAGARH, DISTT. KORIYA - 497442
 PH 9584136234.

MUNGELI

252. SATYA AUTO PVT LTD (BLE2-BLE-01), KHASRA NO. 270/2, BILASPUR ROAD, MUNGELI, CHHATTISGARH - 861468 PH :8462000844

PATHALGAON

253. MAHAMAYA AUTOCARS PVT LTD (BXO1-BXO-01), KHASRA NO. 567/2, PHATALGAON, DISTRICT – JASPUR, CHHATTISGARH. - 496118 PH :9752195523.

PITHORA

 SPARSH AUTOMOBILES (CCG1-CCG-01), PLOT NO. 284/1, RAMSAGAR PARA, RAIPUR ROAD, PITHORA, CHHATTISGARH. - 761008 PH :9926280700.

RAIGARH

 SATYA AUTO PVT LTD (7Y03-7Y-01), JINDAL ROAD, RAIGARH - 496001 PH:7024398350.

RAIPUR

- SKY AUTOMOBILES (5001-50-01), G.E.ROAD, MOHABA BAZAR, RAIPUR. - 492010 PH:9584433102.
- SKY AUTOMOBILES (5001-50-02), K.K. ROAD, MOUDHAPARA, RAIPUR. - 492001 PH:9584460290.
- 258. SPARSH AUTOMOBILES (5002-50-01), PACHPADI NAKA, OPP. DUTTA DRY CLEANER, DHAMKARI, JAGDALPUR ROAD, RAIPUR. -492001 PH:9669792000.
- 259. SKY AUTOMOBILES (5001-50-05), NEAR R.K. MALL, KOTA ROAD, RAIPUR - 492001 PH :9893000161.
- 260. SKY AUTOMOBILES (5003-50-01), AVANTIVIHAR ROAD, TELEBANDHA, RAIPUR (C.G) - 492006 PH:9522314155.
- 61. SPARSH AUTOMOBILES (5002-50-04), OPP. UNION BANK, MAIN ROAD, PANDRI, RAIPUR 492004
 PH 9009666400
- 262. SPARSH AUTOMOBILES (5002-50-05), PLOT 31, INDUSTRIAL ESTATE, OPP MAHESH COLD STORAGE, BHANPURI, RAIPUR - ?? PH :9977220395
- 263. SKY AUTOMOBILES (5001-50-07), ADJOINING WALLFORT CITY, BHATGAON, RING ROAD NO. 2, RAIPUR, CHHATTISGARH. 492013 PH 9584480789
- 264. HDN MOTORS PVT. LTD. (5005-50-01), BESIDES BHARAT BENZ SHOWROOM, DURG-BHILAI ROAD, TATIBANDH, RAIPUR, CHHATTISGARH. 492001
 PH. 7909800093
- 265. VISHWABHARTI AUTOMOBILES PRIVATE LIMITED (5004-50-01), VIDHAN SABHA ROAD, MOWA, RAIPUR DISTT. CHHATTISGARH -492005 PH :6262620057.

RA.IIM

266. SPARSH AUTOMOBILES (5002-MO-03), RAIPUR ROAD, NEAR AMMANI PETROL PUMP, NAYAPARA, RAJIM. - 493881 PH :966963883.

RAJNANDGAON

 SPARSH AUTOMOBILES PVT LTD (LQ02-LQ-01), NEAR HANUMAN TEMPLE, VILL-MANKI, NH-6, RAJNANDGAON, CHHATTISGARH - 491441 PH.:7887518100.

SARAIPALLI

268. SKY AUTOMOBILES PVT. LTD. (BUF1-BUF-01), KHASRA NO.482/5 AND 482/6, RAIPUR ROAD, SARAIPALI, DIST-MASAMUND, SARAIPALI -493558 PH.7000723259.

SARANGARH

269. SATYA AUTO PVT LTD (BUC2-BUC-01), KASRA NO. 71/4, 73/2, 74/2, 75/1 AND 76/2, SARANGARH BIKAS KHAND, SARANGARH, DISTT. RAIGARH. -733751 PH.8462000841.

TILDA

 SKY AUTOMOBILES (CWR1-CWR-01), KASRA NO. 29/31, TILDA, DIST.-RAIPUR, CHHATTISGARH. - 493 114 PH :9425204051.

TITLAGARH

 ODYSSEY MOTORS (SQE1-SQE-01), M/S PLOT NO 687/1216, MOUZA PIPAL PADAR. TITLAGARH,BALANGIR, ODISHA - 767033 PH: 9439314464.

DADRA AND NAGAR HAVELI SILVASSA

272. KATARIA AUTOMOBILES PVT. LTD. (ED01-ED-01), NEAR ATHAL CHAR RASTA,DADAR & NAGAR HAVELI, SILVASSA -396230

PH:9723816223.

DAMAN AND DIU

DAMAN

273. KATARIA AUTOMOBILES PVT. LTD. (0104-98-08), NEAR AKASWANI CENTER, RINGANWADA, NANI DAMAN, DAMAN UNION TERRITORY -396210 PH :9924130655.

DELHI

DELHI

- SAYA AUTOMOBILES PVT. LTD. (0808-08-03), A
 21-22, G.T.KARNAL ROAD, NEW DELHI 110033
 PH:47088888.
- BAGGA LINK MOTORS PVT LTD. (0811-08-01), 395 PATPAR GANJ INDL. AREA,PATPARGANJ,NEW DELHI - 110092 PH :46488830, 46488831.
- BAGGA LINK MOTORS PVT LTD. (0811-08-02), LINK ROAD. (NEAR BAGGA PETROL PUMP), KAROL BAGH, NEW DELHI - 110005 PH : 23524646, 23522626.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-01), A-100
 MAYAPURI,PHASE-II,NEW DELHI - 110064 PH :41845000, 49305232.
- COMPETENT AUTOMOBILES CO. LTD. (0806-08-03), PLOT NO.3, GAZIPUR, DELHI, -110096 PH:45300000.
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-01),
 33 & 34, HARICHAND MELARAM COMPLEX,
 EAST GOKULPUR, WAZIRABAD ROAD, DELHI-110094
 PH.:71115333.

- 280. RANA MOTORS PVT LTD (08A1-08-02), C-47,OKHLA INDUSTRIAL AREA,PHASE-II,NEW DELHI - 110020 PH :41707777
- T.R. SAWHNEY MOTORS PVT LTD (0819-08-02),
 B-6 INDUSTRIAL AREA, PHASE I, OPP SECTOR
 BADLI, NEW DELHI 110042
 PH : 71118333.
- 282. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F2-08-01), 5, WAZIRPUR, INDUSTRIAL AREA, ADJACENT TO WAZIRPUR DEPOT, RING ROAD, NEW DELHI-110034 PH .27153996-99. 27151466-67.
- ROHAN MOTORS LTD. (0886-08-01), F-9/B-1, MOHAN COOPERATIVE INDUSTRIAL ESTATE, MATHURA ROAD, DELHI - 110044 PH: 40567900. 41679252-259.
- 284. MAGIC AUTO PVT. LTD. (0888-08-01), A-93,PHASE-2,MAYAPURI INDL AREA,DELHI -110064 PH :41847777
- 285. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F3-08-01), A-1 UDYOG VIHAR, NEW ROHTAK ROAD, PEERAGARHI, DELHI - 110041 PH :25963535, 48616500.
- 286. T.R. SAWHNEY MOTORS PVT LTD (0819-08-04), PLOT NO.-508, FUNCTIONAL INDUSTRIAL ESTATE, PATPARGANJ - 110092 PH :9873851333.
- MAGIC AUTO PVT. LTD. (08B7-08-01), PLOT NO. 68/3,MOTINAGAR,NEW DELHI, - 110015
 PH :43777777, 43777721.
- 288. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F8-08-01), PLOT NO.9, SSI INDUSTRIAL ESTATE, GT KARNAL ROAD, NEW DELHI. 110063
 PH 14328888
- 289. SAYA AUTOMOBILES (0808-08-2B), KHASRA NO.2,G.T. KARNAL ROAD,OPP. GURUDUARA HARGOVIND SINGH,SIRAS PUR BADLI,DELHI-110033 PH: 27731325, 27731856.
- COMPETENT AUTOMOBILES CO. LTD. (0806-08-05), B-83 MAYAPURI PHASE I, NEW DELHI - 110015 PH :47268980.
- 291. BAGGA LINK MOTORS PVT LTD. (0811-08-03), PLOT NO.4.6,8,10 NEAR FORTIS HOSPITAL, OPPOSITE NIRULAS, BABA POTERY COMPOUND, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI - 110070 PH :45688888, 45688811.
- RANA MOTORS PVT LTD (08A1-08-04), B-6/6, OKHLA INDUSTRIAL AREA PHASE-II, NEW DELHI - 110020 PH :40877777, 26389930.

- COMPETENT AUTOMOBILES CO. LTD. (0806-08-06), 14, SHIVAJI MARG, NAGAFGARH ROAD, NEW DELHI - 110 015 PH :8377007980/81/02.
- PREM MOTORS PVT. LTD. (08D4-08-01), KH. NO.804/2,MAHIPALPUR MATA CHOWK, DELHI-110037
 PH : 42300000
- AA VEHICLEADES PVT. LTD. (08B9-08-03), VILLAGE GHIEVRA, KHASRA NO.87/3, 87/8 & 87/13/1, DELHI-ROHTAK ROAD, METRO PILLAR NO.616, MUNDKA, NEW DELHI - 110041 PH 966118888
- 296. RANA MOTORS PYT LTD (08A1-08-05), A-8, RAJASTHANI UDYOG NAGAR, NEAR AZADPUR FRUIT MARKET, G.T. KARNAL ROAD, OPP. METRO PILLAR NO.119, DELHI. - 110033 PH :41609999, 42474444.
- 297. SHREYASH AUTOMOTIVES PRIVATE LIMITED (08F9-08-01), A-3, WAZIRPUR INDUSTRIAL AREA, DELHI. 110052 PH :42020000, 9910114255.
- 198. T.R. SAWHNEY MOTORS PVT LTD (08D2-08-01), B-19, MAYAPURI INDUSTRIAL AREA, PHASE-1, NEW DELHI. - 110064 PH:71119333, 9999049337.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-02), 9/55 KIRTI NAGAR, INDUSTRIAL AREA, NEW DELHI - 110015 PH :999903888.
- MAGIC AUTO PVT. LTD. (08D5-08-01), PLOT NO. 449 & 450, PATPARGANJ INDUSTRIAL AREA, NEW DELHI. - 110092 PH 9818741741
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F1-08-03), 85B RANAJI ENCLAVE, NAGLI SAKRAWATI, NAJAFGARH, NEW DELHI. -110043 PH 9999127840/9999127947
- 302. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (08F5-08-01), 36/22/2 AND 36/19, PANA UDHYAN, NARELA, NEW DELHI. 110040 PH :8860637358.
- 303. DD MOTORS (A DIVISION OF D.D. PREM PYT.LTD.) (08F1-08-04), 32/19, MATIALA, BEHIND DELHI PUBLIC SCHOOL, SECTOR-3, DWARKA, NEW DELHI. - 110059 PH -9873173005.
- 304. FAIR DEAL WHEELS PVT. LTD (08E3-08-01), PLOT NO.25, KHATA KHATAUNI NO.97/98, KHASRA NO.48/17, OPP. BRAHMSHAKTI HOSPITAL, BUDH VIHAR, POOTH KALAN, MAIN KANJHAWALA ROAD, DELHI - 110086 PH :9711993801.
- COMPETENT AUTOMOBILES CO. LTD. (0806-08-07), 23/2, MATIALA PHIRNI, POCKET C, SECTOR 3, DWARKA, DELHI. - 110059 PH:9582797774.

- 306. JAGMOHAN AUTOMOTIVES (08F6-08-01), PLOT NO. 69/2, WAZIRPUR INDUSTRIAL AREA, NEW DELHI, PIN-110052 - 110052 PH 9650790351
- RANA MOTORS (08A1-08-08), B-83, GTK ROAD INDUSTRIAL AREA, DELHI. - 110033 PH:9873400386.
- AAA VEHICLEADES (08B9-08-G1), KHASRA NO.
 AMA VEHICLEADES (08B9-08-G1), KHASRA NO.
 AMAIN CHHATARPUR ROAD, CHHATARPUR, NEAR SAI BABA MANDIR, DELHI, PIN-110030 110030
 PH :9829342761.
- VIPUL MOTORS (08F7-08-01), B-26, JHILMIL INDUSTRIAL AREA, DELHI -110095 - 110095 PH:9811233385.

OKHLA. DELHI

 AAA VEHICLEADES PVT LTD (08B4-08-01), B243, OKHLA PHASE-1, OKHLA, DELHI - 110020 PH:8448582912.

WAZIRPUR - DELHI

 DD MOTORS (08F1-08-05), A-90, WAZIRPUR INDUSTRIAL AREA, NEW DELHI-110052 - 110052 PH:9310367233.

GOA

BICHOLIM

312. SAI SERVICE PRIVATE LIMITED (BHN1-BHN-01), CITY SURVEY NO. 46/1, MUSLIM WADDO, BICHOLIM, GOA - 403529 PH :2385500 9881746566

CANACONA

 CHOWGULE INDUSTRIES PVT. LTD. (IT01-IT-01), PLOT NO.40, CANCONA INDUSTRIAL ESTATE, SHREESTAL, CANCONA, SOUTH GOA - 403702 PH :0832-2633010/8805024916.

CUNCOLIM

 SAI SERVICE PRIVATE LIMITED (3402-AAO-06), SURVEY NO 64/7, SHOP NO 3-A-II, CANCNAMODDI, CUNCOLIM, SOUTH GOA -403703 PH :2763062, 2763063, 9850398057.

DHARBANDORA

 CHOWGULE INDUSTRIES PVT. LTD. (3408-GO-07), AT- KHANDEPAR- USGAON, TAL-DHARBANDORA, SOUTH GOA - 403401 PH :0832-6623477/7888004357.

MAPUSA

- SAI SERVICE PRIVATE LIMITED (3402-8Z-05),
 D-2/9,MAPUSA INDUSTRIAL ESTATE,MAPUSA,
 GOA, 403507
- PH :2267000, 8660432266. 117. CHOWGULE INDUSTRIES PVT. LTD.
- (3408-8Z-03), PLOT NO. 19/20,THIVIM INDUSTRIAL ESTATE,KARASWADA, MAPUSA,GOA - 403507 PH:0832-6631666/6631608/8888817955.

MARGAO

- 318. CHOWGULE INDUSTRIES PVT. LTD. (3408-1Y-01), OPP.DAMODAR TEMPLE,FATORDA,MARGOA,GOA - 403602 PH: 0832-6623444/420/7796630235.
- 319. SAI POINT CARS PVT LTD (3409-1Y-01), H.NO.17,WARD NO.5,SURVEY NO.34/3,34/4,MARGAON PONDA HIGHWAY,SONFATOR AMBORA,CAMURLIN,SALCETE,GOA - 403722
- PH:9545454826/8380013499.

 20. SAI SERVICE PRIVATE LIMITED (3402-1Y-02),
 SURVEY NO. 212/4,VILLAGE VERNA,TAL:
 SALCETE ,NEXT TO AGNEL POLYTECHNIC,
 MARGAO 403718
- PH :2883000, 2791195,9834398096.
 321. CHOWGULE INDUSTRIES PVT. LTD.
 (3408-1Y-08), PLOT NO. M-58 AND M-59, PHASE
 3B, VERNA INDUSTRIAL ESTATE, MARGAO,
 VERNA, SALCETE SOUTH GOA, GOA 403722
 PH: 0832-6621800/9922950800.

PANAJI

- 322. CHOWGULE INDUSTRIES PVT. LTD. (3408-P1-02), D.B BANDODKAR MARG,CAMPAL,PANAJI,GOA - 403001 PH :9922950798/9922925701.
- SAI SERVICE PRIVATE LIMITED (3402-P1-07), SHED NO.18/329, PLOT NO.5A, SURVEY NO.117/6, TELEIGAON, ST. INEZ, PANJIM, GOA-403 002. - 403001 PH :22229222/2225222 9923865179.

PERNEM

324. CHOWGULE INDUSTRIES PVT. LTD. (CUA1-CUA-01), SURVEY NO. 258/1-B & 258/1-C, OPPOSITE INDUTRIAL TRAINING INSTITUTE, TALUKA - PERNEM, DIST.-NORTH GOA. - 403512 PH. 38380082893.

POLEM

325. CHOWGULE INDUSTRIES (SHO1-SHO-01), DULGAL-SHELIM, VILLAGE POLEM-LOLIEM .SOUTH GOA.403728 - 403728 PH :#REFI.

PONDA

 SAI SERVICE PRIVATE LIMITED (3402-34-03), OFF PANJIM HIGHWAY,PONDA,GOA, - 403401 PH:2324106, 2311499, 2324120, 9518349559.

PORVORIM

 SAI SERVICE PRIVATE LIMITED (3402-P1-01), SURVEY NO: 36/1,PENHA DE FRANCE,TAL: BARDEZ, ALTO PCRVORIM,GOA - 403501 PH:2419200, 2414324, 9881746567.

SANVORDEM

 CHOWGULE INDUSTRIES PVT. LTD. (BTK1-BTK-01), SURVEY NO. 4, SUBDIVISION-3, VILLAGE – CACORA, TALUKA – CURCHOREM, SANVORDEM, DIST. – SOUTH GOA, GOA. -403706
 PH: 9850477607.

SATTARI

329. CHOWGULE INDUSTRIES PVT. LTD.
(3408-BOP-10), SURVEY NO. 60, SUB DIV NO. 05,
VILLAGE ARVALEM, VILLAGE PANCHAYAT
ARVALEM, TALUKA SATTARI, NORTH GOA,
GOA - 403505
PH : 3923464422.

TALEIGAON

330. CHOWGULE INDUSTRIES PVT. LTD. (3408-NP-06), SURVEY NO. 122, MAHBOS, NEAR SHANKARWADI TEMPLE, SHANKARWADI, TALEIGAON, - 403001 PH :9922950798/9922925701.

VASCO

- SAI SERVICE PRIVATE LIMITED (3402-CP-04), NEXT TO SHIKALIM CHURCH, SHIKALIM, VASCO, GOA - 403802 PH :2542581/2526008/2526000/9850398058.
- CHOWGULE INDUSTRIES PVT. LTD. (3408-CP-09), OPP BHRAMASTAL TEMPLE, PATRONG BAINA, VASCO, GOA - 403802 PH: 0832-2500407/427/9921943608/9850986904.

GUJARAT

AHMEDABAD

- 333. KIRAN MOTORS LTD (0102-01-01), SARKHEJ -GANDHINAGAR HIGHWAY, OPP. RAJPATH CLUB, AHMEDBAD - 380054 PH - 9824155445
- KATARIA AUTOMOBILES PVT. LTD. (0104-01-01), D/8 BEHIND ESI HOSPITAL, OUTSIDE DARIAPUR DARWAJA, AHMEDABAD - 380016 PH :982454350.
- 335. POPULAR WHEELERS (INDIA) PVT. LTD. (0105-01-01), PATEL TRUST BUILDING, AVTAR HALL,NAROL, NARODA HIGHWAY,ISANPURA ROAD,AHMEDABAD - 382443 PH :61903232.
- 336. KIRAN MOTORS LTD (0102-01-02), BEHIND L&T GODOWN, SARKHEJ SANAND HIGHWAY, AHMEDABAD - 382210 PH :26891863, 26891009, 26891294.
- KATARIA AUTOMOBILES PVT. LTD. (0104-01-05), NEAR KOKHRA BRIDGE, MANINAGAR - 380008 PH:7567568182.
- KATARIA AUTOMOBILES PVT. LTD. (0110-01-01), BEHIND ADANAL PUMP, NEAR MAKARBA CROSSING, MAKARBA,SG HIGHWAY - 380051 PH. 7069054900.

- POPULAR WHEELERS (INDIA) PVT. LTD. (0111-01-01), BESIDE SOLA ROAD BRIDGE,S. G. HIGHWAY SOLA,AHMEDABAD - 380054 PH:65058111.
- KIRAN MOTORS LTD (0112-01-01), SURVEY NO. 82/1/1, NEAR H.P. PETROL PUMP, MOTERA ROAD, CHANDKHEDA, AHMEDABAD - 380005 PH:8347491800/9824023122.
- 341. UDAY AUTOLINK PVT. LTD. (0113-01-01), NEAR GALAXY SPACIA, OPP. DASTAN FARM, S. P. RING ROAD, KATHWADA, AHMEDABAD, GUJARAT - 382430 PH. 7567229999.
- 342. NANDA AUTOMOBILES PVT. LTD. (0114-01-01), SURVEY NO. 229/3, OPP. GOKULESH PETROL PUMP, NAROL - ASLALI ROAD, NAROL, AHMEDABAD, GUJARAT. - 382405 PH. 3866558787 / 8460088883.
- 343. STARLINE CARS (AHMEDABAD) PVT LTD (0115-01-01), PLOT NO. 103/2, NANDA CHILODA, NEAR RAILWAY CROSSING, KRISHNANAGAR ROAD, NARODA, AHMEDABAD - 382330 PH :9824601729.
- 44. KIRAN MOTORS LTD (0112-01-02), FINAL PLOT NO.331/11, NEAR SHRUSHTIL AVISH, OPP. SHYAM VILLA-II, NARODA-NIKOL ROAD, NIKOL DISTT. AHMEDABAD - 382330 PH :7069868374/9173840458/7383651643/9173044104
- 345. KIRAN MOTORS LTD (0102-01-04), SURVEY NO. 245/3, TP SCHEME NO. 43, NEAR KARGIL PETROL PUMP, SCIENCE CITY ROAD, AHMEDABAD - 380060 PH :9327617447 - 9327214890.
- 346. POPULAR WHEELERS (INDIA) PVT. LTD. (0109-01-01), BEHIND G. B. SHAH COLLEGE, NEAR SWAMINARAYAN PARK, VAISHALI TOWNSHIP ROAD, VASNA, AHMEDABAD, GUJARAT. - 380007 PH :909993830.
- 347. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0129-01-01), PLOT NO. 116, BOPAL – AMBIL ROAD, BOPAL , AHMEDABAD, DISTRICT – AHMEDABAD, GUJARAT. - 380058 PH. 7211140026, 7211130053
- TANU MOTORS PVT. LTD. (0118-01-01), SURVEY NO. 1155/1-2, 1154 & 1156, PLOT NO. 39, SARKHEJ-SANAND ROAD, SANAND, AHMEDABAD (GUJARAT) - 382110 PH :9512009110.
- 349. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (0117-01-01), PLOT NO.116 & 118/2, SARDAR PATEL RING ROAD, VASTRAL, AHMEDABAD 382418 PH:7623089000.

- 350. STARLINE CARS PVT. LTD. (D101-01-09), SR NO. TP 57, PLOT NO. 67, NEAR GOTA FLYOVER BRIDGE, OPP. SHANKU FARM HOUSE, S. G. HIGHWAY, GOTA, AHMEDABAD. 382481 PH -9824601729
- 351. KATARIA AUTOMOBILES PVT. LTD. (0110-01-02), PLOT NO. 112, 116 & 119, SURVEY NO. 283/3.7.10, B/H SILVER STAR, BESIDE HARI VILLA BUNGLOWS, GOTA ROAD, CHANDLOJDYA, AHMEDABAD. - 382481 PH 9824000378.
- 152. DB MOTORS PRIVATE LIMITED (0119-01-01), SURVEY NO. 131A, NH-8, ASLALI, OPP.-OCTROI NAKA, AHMEDABAD. - 382427
- PH. 9726031111.
 53 POPULAR WHEELS (0111-01-02), SAVAN SQUARE, SHOP NO. 1, 2, 3, 4, 5, SERVE NO. 39/1, F.P. NO. 92, T.P. NO. 66/A, CHENPUR, NEW RANIP, AHMEDABAD. 382 427 PH. 9925203344.
- 354. DB MOTORS PRIVATE LIMITED (0119-01-02), PLOT NO. 718, ASHRAM ROAD, OPPOSITE GANDHI ASHRAM, OLD VADAJ, HRIDAYA KINJ, AHMEDABAD. - 380013 PH :9909048260.

AMBAJI

355. TANU MOTORS (SKQ1-SKQ-01), OPP KUMBHARIYA JAIN DERASAR, GIDC ROAD, AMBAJI, DIST-BANASKANTHA, GUJARAT 385110 - 385110 PH :#REFI.

AMOD

356. RAVIRATNA MOTORS (F801-ZE-03), ROYAL PARK, JAMBUSAR-BHARUCH ROAD, AMOD, DISTRICT: BHARUCH, GUJARAT. - 392110 PH:9687691106/9687699383.

AMREL

 ALPHA AUTOLINK LLP (9E02-9E-01), LATHI BY PASS ROAD, AMRELI, GUJARAT. - 365601 PH:9978938858/9978938833.

ANAND

- AMAR CARS PVT. LTD. (F702-F7-01), JANTHA CROSSING, SOJITRA ROAD, ANAND - 388121 PH:9909960772.
- 359. KATARIA AUTOMOBILES PVT. LTD. (F703-F7-01), SURVEY NO. 1891+2/A-3/A/K 190/P. OPP. OLD JAKAT NAKA, NEAR RAILWAY OVERBRIDGE, ANAND-CHIKHODRA ROAD, ANAND, GUJARAT. - 388 120 PH.7698945466.

ANKLAV

 KATARIA AUTOMOBILES (SEO1-SEO-01), AMBICA COMPLEX, GROUND FLOOR SHOP NO. B, C AND D, ASODAR CHOKDI, TAL. ASODAR, CITY ANKLAV, DIST. ANAND, PIN-388510, GUJARAT - 388510 PH:7227917151.

ANKLESHWAR

 RAVIRATNA MOTORS PVT LTD (P901-P9-01), PLOT NO. 624/2/BA, GIDC, VALIA ROAD, ANKLESHWAR - 393002 PH :9687691063.

BAGODRA

362. NANDA AUTOMOBILES PVT. LTD. (CVQ1-CVQ-01), SHOP NO. 9, 10, 11, 12, KAMDHENU COMPLEX, BAGODRA HIGHWAY, NR. SBI BANK, BAGODRA. - 382240 PH.9727822000. 9726269111.

BALASINOR

363. AMAR CARS PVT. LTD. (CJE1-CJE-01), SR. NO. 1451, OPP. OIP ETROL PUMP, AHMEDABAD HIGHWAY (NH-47), KANTHARJINA MUYADA, VILLAGE – VADALA, TALUKA – BALASINOR, DISTRICT – MAHISAGAR, GUJARAT. - 388255 PH. 7211109990.

BARDOLI

- DHRU MOTORS (4002-Q1-02), G.I.D.C,SURAT BARDOLI ROAD,BARDOLI, - 394601 PH:9825413113/9879104454.
- 365. KATARIA AUTOMOBILES PVT. LTD. (Q108-Q1-02), BLOCK NO.13, NANDIDA CROSS ROAD, BARASADI VILLAGE, SURAT-BARDOLI ROAD, BARDOLI, GUJARAT - 394310 PH.7698022665992413880.

BAREJA

366. KATARIA AUTOMOBILES PVT. LTD.
(BAN1-BAN-01), 5/67, ADITYA COMPLEX
NATIONAL HIGHWAY-8, BAREJA, TALUKA –
DASKROI, DISTRICT – AHMEDABAD, GUJARAT 382425
PH :7046079997.

BARWALA (AHMEDABAD)

 UDAY AUTOLINK PVT. LTD. (I401-I4-01), OPP. HILTON HOTEL, BHAVNAGAR HIGHWAY, TA BARWALA, DIST. AHMEDABAD - 382450 PH:7567449999/9687677611.

BAVLA

668. KATARIA AUTOMOBILES PVT. LTD. (0104-RX-07), NEAR ESSAR PETROL PUMP, BAVLA -AHMEDABAD HIGHWAY, BAVLA -382220 PH: 3824344889.

BECHRAJI

369. STARLINE CARS PVT. LTD. (GJM1-GJM-01), R.S. NO. 336 PAIKI, MOJE-BECHAR (BECHARAJI), TALUKA - BECHARAJI, DIST.-MEHSANA. -384210 PH. 9909043244.

BHABHAR

370. STARLINE CARS (CWD1-CWD-01), SHOP NO. 7, 8, 9, SIDDHI VINAYAK BUSINESS HUB, R.S. NO. 225, PANJRAPOLE ROAD, BHABAR, DIS. -BANASKANTHA, GUJARAT. - 385320 PH. 999043244, 9824601729.

BHACHAU

 K.D. MOTORS (P501-JP-02), SUNRISE MALL,OPP. BUS STAND,BHACHAU BHUJ ROAD, BHACHAU, GUJARAT - 370140 PH :9909953036. 9879390919.

BHANVAD

 ATUL MOTORS JAM LLP (BND2-BND-01), R.S. NO.439, PLOT NO.19, BHANVAD (GUJARAT) -360510

PH:9574005964/9574004714.

BHARUCH

373. RAVIRATNA MOTORS (F801-F8-01), NH 8, OPP YOGI PETROL PUMP, P. O. ZADESHWAR, BHARUCH - 392011 PH :9687691044: 9687632647.

RHAVNAGAR

- 374. KATARIA AUTOMOBILES (C902-C9-01), SURVEY NO 137/2, PLOT NO 301/2&3 AND 301/4&5, VERTEJ GIDC, NARI CHOWKDI, RAJKOT ROAD, BHAVNAGAR. - 364004 PH -9426168286
- 375. KATARIA AUTOMOBILES (C902-C9-02), PLOT NO-29, NR. TALAJA OCTROI CIRCLE, JAKATNAKA, AT-ADHEWADA, DIST-BHAVNAGAR, GUJARAT – 364002. - 364002 PH 9638884422

BHUJ

- K.D. MOTORS (P501-P5-01), PLOT NO. 5/6/14, UMANAGAR, MIRZAPUR HIGHWAY ROAD, BHUJ, GUJARAT - 370001 PH :02832-232534/5, 9879898799, 8780351870.
- K.D. MOTORS (P501-P5-03), R.S. NO. 25/2, 25/3, 26/2, PLOT NO. 57 TO 61, VILLAGE - MIRZAPUR, TALUKA - BHUJ, GUJARAT. - 370001 PH: 3909953124.

BODELI

KIRAN MOTORS LTD (0R01-0R-01),
 OPP.NARMADA GUEST HOUSE, DABHOI ROAD,
 BODELI, TALUKA: SANKHEDA, VADODARA-391135
 PH. 9714592999.

BORSAD

379. AMAR CARS PVT. LTD. (BJM1-BJM-01), BORSAD – TARAPUR HIGHWAY, BORSAD, DISTRICT – ANAND, GUJARAT - 388540 PH :9586477744.

BOTAD

380. KATARIA AUTOMOBILES (APO3-AP-19), PLOT NO.13, SURVEY NO 33,34, AND 35 PAIKKI VILLAGE, HADADAD, OPP. PATEL HYUNDAI SHOWROOM, PALIYAD BOTAD ROAD - 364710 PH 9555060655.

CHANASMA

381. STARLINE CARS (CVF1-CVF-01), 16/17, PASABHI COMPLEX, NEAR ROYAL PALACE HOTEL, MEHSANA HIGHWAY, CHANASMA. - 384220 PH :9909043244, 9824601729.

CHANDKHEDA - AHMEDABAD

382. KATARIA AUTOMOBILES PVT. LTD. (0104-01-10), SURVEY NO. 247, TP NO. 73, OPP. PAVITRA ENCLAVE, MANSAROVER ROAD, NEAR HARI OM FARM, TRAGAD, CHANDKHEDA, AHMEDABAD. - 382470 PH : 972-3302111.

CHANDRAI A

383. NANDA AUTOMOBILES PVT. LTD. (GLT1-GLT-01), HIMMATNAGAR HIGHWAY NO.8, NEAR DEVANSHI PARTY PLOT, CHANDRALA, DIST- GANDHINAGAR, GUJARAT - 382320 PH : 9725062187, 927726003.

CHANGODAR

384. PEGASUS (A UNIT OF VISUAL MOTORS PVT. LTD.) (CTD2-CTD-01), SURVEY NO.393, VILLAGE – MORAIYA, CHANGODAR, TALUKA – SANAND, SUN DISTT. - AHEMADABAD. - 382210 PH. 7211120014

CHIKHLI

 KATARIA AUTOMOBILES PVT. LTD. (BCB1-BCB-01), SURVEY NO.461, VILLAGE-MAJIGAM, TALUKA-CHIKHALI, DISTT-NAVSARI, GUJARAT - 396521 PH '7698953899.

CHILODA

386. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT. LTD.) (GJO1-GJO-01), PLOT NO. 332, BESIDES GALLOPS TATA, NH-8, CHILODA-HIMMATNAGAR HIGHWAY, CHILODA. - 382355 PH :7211168938. 7623039000.

CHOTILA

387. DREAM VEHICLES PVT LTD (CFI1-CFI-01),
SURVEY NO. 31, PLOT NO. 1, NILKANTH
SOCIETY, NH NO. 8A, AHMEDABAD-RAJKOT, AT
& PO – CHOTILA, DISTRICT –
SURENDRANAGAR, GUJARAT. - 363520
PH :9227775709.

CHUDA

388. DREAM AUTOMOBILES (SOC1-SOC-01), NR. GOVT HOSPITAL, CHATARLIYA ROAD, CHUDA, SURENDRANAGAR. - 363410 PH 9313802500

DABHOI

389. KATARIA AUTOMOBILES PVT. LTD. (UU01-UU-01), OPP. VEGA BUS STOP, NEAR VEGA CROSS ROAD, DABHOI-BODELI ROAD, DABHOI, TA:DABHOI, DI:VADODARA - 391110 PH:8156000463.

DAHOD

 R B CARS PVT. LTD. (2C01-PL-02), NEAR SIMANDHAR JAIN TEMPLE, OLD INDORE HIGHWAY, DAHOD - 389151 PH:9099043715. 9727700823.

DEESA

391. TANU MOTORS PVT. LTD. (Q801-UQ-03), NH-14, NR. ESSAR PETROL PUMP, RADHANPUR HIGHWAY, HANUMAN NAGAR, MALGADH, DEESA. 385535 PH.990906099.

DEHGAM

 NANDA AUTOMOBILES PVT. LTD. (2801-NR-03), NEAR UMIYA MATAJI TEMPLE, COLLEGE ROAD, AHMEDABAD ROAD, DEHGAM - 382305 PH :234567.

DETROJ

393. PEGASUS (A UNIT OF VISUAL AUTOLINK PVT LTD) (GLC1-GLC-01), PLOT NO-61,MILKAT NO-2534, AT-DETROJ,TALUKA-DETROJ-RAMPURA-382120 - 382120 PH #RFF!

DEVGADH BARIA

394. R B CARS PVT. LTD. (2C01-AOA-05), BESIDE ARIHANT PETROL PUMP, PIPLOD ROAD, DEVGADH BARIA - 389380 PH:9099049344, 6352384846, 9099043715.

DHANERA

395. TANU MOTORS PVT. LTD. (BZW1-BZW-01), 01 & 02, MARUTI NANDAN COMPLEX, NEAR ESSAR PETROL PUMP, DHANERA-DEESA HIGHWAY, DHANERA. - 385310 PH -9909006099, 8401784018.

DHARAMPUR

396. KATARIA AUTOMOBILES PVT. LTD. (BSK1-BSK-01), SURVEY NO.29/3/P1, VILLAGE ASHURA NR. ASHURA CIRCALE, DHARAMPUR DISTT. VALSHAD, GUJARAT - 396050 PH.9723455291.

DHARI

 ALPHA AUTOLINK LLP (GG02-GG-01), PLOT NO. 9, DHARI - KHAMBHA ROAD, NEAR RAILWAY FATAK DHARI, TALUKA - DHARI, DIST. -AMRELI, GUJARAT - 365640 PH -9904549999/97893868.

DHOLKA

398. TANU MOTORS PVT. LTD. (CQ02-CQ-01), SURVEY NO. 722, OPPOSITE RANI RUDY MATAJI MANDIR, DHOLKA KALIKUND HIGHWAY, DHOLKA, GUJARAT - 382 225 PH-9812000104.

DHORAJI

399. PERFECT AUTO SERVICE (5502-DL-09), JETPUR ROAD, OPP. SHRINATHJI SOCIETY, DHORAJI - -360410 PH:9099027402. 8200969617.

DHRANGADHRA

400. DREAM VEHICLES PVT LTD (IM01-IM-01), PLOT NO. 79, SURENDRANAGAR- DHRANGADHRA ROAD, OPP. ARMY WORKSHOP, DISTRICT-SURENDRANAGAR. - 363310 PH-9227775725.

DIYODAR

401. TANU MOTORS (SFU1-SFU-01), NR.HP PETROL PUMP, BHESANA CROSS ROAD, BHABHAR HIGWAY,DIYODAR-385330 - 385330 PH :#REFI.

DWARKA

402. ATUL MOTORS JAM LLP (CJG2-CJG-01), SURVEY NO. 41, NEAR, SHIR SANTAN SEVA MANDAL, CORNER PLOT OF STATION ROAD AND HIGHWAY ROAD, DWARKA, DISTRICT – DWARKA – . 381335 PH 9712219901 (974,004714

GANDHIDHAM

403. B M AUTOLINK (7702-77-01), EAST OF PLOT NO. 30-35, NATIONAL HIGHWAY, GANDHIDHAM -370201

PH:9727725723.

404. B M AUTOLINK (7702-77-03), SURVEY NO.129/26 P, GALPADAR HIGHWAY, GANDHIDHAM, DISTT.KACHCHH, GUJARAT. - 370110 PH :9727725723, 9727739550.

GANDHINAGAR

- NANDA AUTOMOBILES PVT. LTD. (2B01-2B-01), 1003,SECTOR-28,GANDHI NAGAR - 382028 PH:(079)23212692 / 93 / 94.
- NANDA AUTOMOBILES PVT. LTD. (2801-28-05), PLOT NO. 805, GIDC, SECTOR-28, GANDHINAGAR. - 382028 PH: 079-23212692/93/94 9727726003

GODHRA

- 407. R B CARS PVT. LTD. (2001-2C-01), PLOT NO. 112/11.,12-VAVDI,GODARA - DAHOD HIGHWAY, GODHRA, PANCHMAHAL, GUJARAT - 389001 PH:9099043715, 9727700823.
- R B CARS PVT. LTD. (2C01-2C-04), SURVEY NO.107, LUNAWADA ROAD, GIDC, GODHRA, DISTT. PANCHMAHAL-389001. 389001 PH:9099043715, 9727700823.

GONDAL

409. ATUL MOTORS PVT LTD (5503-AD-05), 8-B NATIONAL HIGHWAY, OPP. DAULAT OIL MILL, NR. NILKANTH VIRUDASHRAM, RAJKOT HIGHWAY, GONDAL - 360311 PH :9904922333

GOZARIA

 VIMCO MOTORS PVT. LTD. (GJN1-GJN-01), 1597/339 P4 VISHNAGAR-GOZARIYA ROAD, GOZARIYA, DIST.-MEHSANA. - 382825 PH :7016623842.

HALOL

411. R B CARS PVT. LTD. (BKC1-BKC-01), PLOT NO. 104/6 & 104/8, VADODARA – GODHRA HIGHWAY, NEAR NAVJIVAN HOTEL, HALOL, DISTRICT – PANCHMAHAL, GUJARAT - 389350 PH :9099043715 - 927770823.

ΗΔΙ VΔΠ

412. DREAM VEHICLES PVT LTD (GX01-GX-01), PLOT NO.5 & 6, NAKLANKDHAM TOWNSHIP, OPP. HONEST RESTAURANT, AHMEDABAD HIGHWAY, HALVAD DISTT. SURENDRANAGAR (GUJARAT) - 363330 PH :8238000965.

HANSOT

113. RAVIRATNA MOTORS (BGQ1-BGQ-01), AT UTRAJ, HANSOT, DISTRICT - BHARUCH. -393030 PH 9687691063.

HIMMATNAGAR

414. KIRAN MOTORS LTD (P601-P6-01), NEAR G.I.D.C,MOTIPURA, HIMMATNAGAR - 383001 PH :9824576711.

IDER

 KIRAN MOTORS LTD (UX01-UX-01), SURVEY NO.69 IDAR-AMBAJI ROAD, IDAR DIST: SABARKANTHA - 383430 PH:8155994111

JAMNAGAR

 ATUL MOTORS JAM LLP (F402-F4-01), SURVEY NO.422, PLOT NO. 16,17 & 19, JAMNAGAR, GUJARAT - 361001

PH:9574004710/9574004716.

 STARLINE CARS PVT. LTD. (D101-Q9-02), CHANASMA HIGHWAY, PATAN - 384265 PH:7046046187.

 ATUL MOTORS JAM LLP (F402-F4-02), C-36, MP SHAH ARUN UDYOG, SARUSECTION ROAD, JAMNAGAR - 361002 PH: 9574004704 / 9574004717.

JASDAN

 ATUL MOTORS PVT LTD (5503-OB-09), SURVEY NO. 1253, PLOT NO. 4, NEAR KALYAN PETROL PUMP, JASDAN-ATKOT HIGHWAY, JASDAN, DIST.-RAJKOT, GUJARAT. - 360050 PH :9265404142.

JHALOD

420. R B CARS PVT. LTD. (CJF1-CJF-01), SURVEY NO. 2550B/10, 11, AT - JHALOD, TALUKA-JHALOD, DISTRICT - DAHOD. - 389170 PH :9099684363. 9099043715.

JUNAGADH

 PERFECT AUTO SERVICES (5502-K8-06), SURVEY NO.45/1, PLOT NO. 214-C/D/E/F, GIDC-I, DOLATPARA, JUNAGADH - 362001
 PH 9879518052 7043999073, 9909022618

JUNAGARH

422. PERFECT AUTO SERVICES (5502-K8-02), PLOT NO. 81-82 G.I.D.C. DOLATPURA,RAJKOT-JUNAGARH HIGHWAY, JUNAGARH - 362001 PH 1990006980. 7043999073. 9909022618.

KADI

 STARLINE CARS PVT. LTD. (D101-UR-07), OPP. COTTON MARKETING YARD, KADI-CHATRAL ROAD, TAL: KADI, DIST: MEHSANA - 382715 PH:8160707156.

KAKANPUR

424. RB CARS (SDN1-SDN-01), SURVEY NO. 618/2, PAIKI PLOT NO. 29,30,31 AT. KAKANPUR, TAL. GODHRA, DISTRICT. PANCHIMAHAL PIN-388713. - 388713 PH :9099049347.

KALOL

425. NANDA AUTOMOBILES PVT. LTD. (2801-FW-02), PLOT NO. - 162-168, GIDC,KALOL MEHSANA HIGHWAY, NEAR CHIRAG CINEMA ROAD, KALOL. - 383028 PH :220781 / 82 / 83.

KAPADVANJ

426. AMAR CARS PVT. LTD. (NC01-NC-01), SAMARTH SQUARE, SHOP NO. 1, MODASA KAPADWANJ ROAD, KAPADVANJ, GUJARAT-387620 - 387620 PH 9909960761.

KARJAN

427. AMAR CARS PVT. LTD. (UZ01-UZ-01), SURVEY NO.851/787 BESIDE PMT TOOLS, KANDARI, N.H. -8, KARJAN, DISTT-VADODRARA (GUJARAT) -391210

PH:7567299666/99252462929

KATHLAL

 AMAR CARS PVT. LTD. (CXA1-CXA-01), MAHAVEER AUTO SHOWROOM, NADIAD ROAD, JB PLAZA, KATHLAL, GUJARAT. - 387 630 PH 9909960761

KESHOD

429. PERFECT AUTO SERVICES (82Y1-82Y-01), R S NO. 125/1, GODOWN NO. 01, SONDARDA, TALUKA – KESHOD, DISTRICT – JUNAGADH, GUJARAT. - 362220 PH. 7043999073.

KHAMBHAT

430. AMAR CARS PVT. LTD. (BNF-18NF-01), PLOT NO. 7/8/9, RAJMAHAL PARK, OPP. SARDAR CHATRALAY, LAL DARWAJA, GAYATRINAGAR ROAD, KHAMBHAT, TALUKA KHAMBHAT, ANAND DISTRICT, GUJARAT - 388620 PH 9909960772.

KHEDA

 AMAR CARS PVT. LTD. (BNA1-BNA-01), S.NO.708, PLOT NO.1, VILLAGE-SOKHDA, TAL: MATER, DISTT. KHEDA, GUJARAT - 387570 PH:9909960761.

KHERALU

432. STARLINE CARS (SN02-SN-01), R S NO. 4962 MAHAVIR COMPLEX, KHERALU, DIST. -MEHSANA. - 384325 PH:9909043244, 9824601729.

KIM

 KATARIA AUTOMOBILES PVT. LTD. (UW01-UW-01), PLOT NO. 116-121, DAL MILL COMPOUND, OPP. SURAT JILLA SANGH, KIM CROSS ROAD, NH-8, KIM - 394110 PH:9723555185.

KODINAR

434. PERFECT AUTO SERVICES (A DIVISION OF PERFECT RETREADS PVT LTD) (CSO1-CSO-01), R.S.NO.222, PLOT NO.2, 3 SHOPS, KODINAR-362720 DISTT. JUNAGADH, GUJARAT - 362720
PH :7043992893. 7043340792.

KUKARWADA

435. STARLINE CARS PVT. LTD (CSC1-CSC-01), SHOP NO.1741, 1742 AND PLOT NO.1752, KUKARWADA TALUKA, VIJAPUR, DISTT MAHESANA (GUJARAT) - 382830 PH:9909043244, 9824601729.

LAVANA

436. RB MOTORS (SLW1-SLW-01), AT PO -LAVANA, NEAR BABILIYA CROSSING, MODASA ROAD, LAVANA-389230 - 389230 PH :9860999470.

LIMBDI

437. DREAM VEHICLES PVT LTD (BSG1-BSG-01), SURVEY NO.276/1, NEAR PANCHVATI HOTEL, LIMDI CROSS ROAD, AHMEDABAD-RAJKOT HIGHWAY, LIMDI, DISTT. SURENDRANAGAR, GUJARAT. - 383421 PH :02753-361620 /9227775728.

LUNAWADA

438. R B CARS PVT. LTD. (BYN1-BYN-01), SURVEY NO.90, AT-BHAYASAR, GODHRA-LUNAWADA HIGHWAY, LUNAWADA, TALUK-LUNAWADA, DISTT-MAHISAGAR, GUJARAT. - 389230 PH 9999043715. 9727700823.

MAHUVA (BHAVNAGAR)

 KATARIA AUTOMOBILES (IV03-IV-01), V.P. COMPLEX, BUNDER RD, NR. GAUSHALA, BARPARA, MAHUVA, GUJARAT 364290. - 364290 PH:6357327534.

MANAVADAR

440. PERFECT AUTO SERVICE (CUI1-CUI-01), RS NO. 13/1, 14, PLOT NO. 48, BHAKTINAGAR, TALUKA -MANAVADAR, DIST.-JUNAGADH. - 362 630 PH:7043999073.

MANDAL

441. KIRAN MOTORS LTD (IW01-IW-01), SURVEY NO. 708, MANDAL - DETROJ HIGHWAY, NR. RELIANCE PETROL PUMP, MANDAL , DI: AHMEDABAD, GUJARAT. - 382130 PH :940803925.

MANDV

442. K.D. MOTORS (UY01-UY-01), PLOT NO.25,26 & 27, RAJ COMMERCIAL, SURVEY NO.246, NEAR THE BEACH RESORT, MANDVI NALIYA ROAD, MANDVI-KUTCH - 370465 PH.990953088. 9825353679.

MANGROL

443. KATARIA AUTOMOBILES PVT. LTD. (CAH1-CAH-01), PLOT NO. 12-28, MOSALI, MANGROL, DISTRICT-SURAT. - 394410 PH: 6357071775.

MANSA

444. NANDA AUTOMOBILES PVT. LTD. (2801-0L-04), OPP. GIDC, VISNAGAR ROAD, MANSA, DISTRICT-GANDHINAGAR, GUJARAT - 382845 PH:9727921000.

MEHMDABAD

445. AMAR CARS PVT. LTD. (BRA1-BRA-01), PATEL FALIYA, KHATRAJ, MEHMEDABAD, DIST. -KHEDA, GUJARAT. - 387130 PH: 9909960761.

MEHSANA

446. STARLINE CARS PVT. LTD. (D101-D1-01), NAGALPUR HIGHWAY,MAHESANA, GUJRAT -384002 PH 9909043635.

 TANU MOTORS PVT. LTD. (Q801-D1-04), SURVEY NO.78, NEAR SUNRISE AUTOMOBILES (AMW DEALER), GUJARAT STATE HIGHWAY NO.41, MEHSANA - 384002 PH: 9909006076. 448. VIMCO MOTORS PVT. LTD. (D103-D1-01), SURVEY NO. 104 & 104 PAIKI 1, AT P.O. -PALAVASANA, MEHSANNA, GUJARAT. - 384 002 PH:890995333.

METODA

449. ATUL MOTORS PVT LTD (5503-BLW-08), PLOT NO. 2328, GATE NO. 2, METODA GIDC, METODA, TALUKA LODHIKA, DISTRICT -RAJKOT, GUJARAT - 360021 PH:8140909995, 9924688774.

MODASA

 KIRAN MOTORS LTD (P601-CR-02), SHAMLAL JI ROAD, SABARKANTHA DIST., MODASA - 383315 PH :8155995111

MORBI

- 451. PERFECT AUTO SERVICES (5502-X5-07). SURVEY NO. 351/2, PLOT NO. 10, DHARTI INDUSTRIAL AREA, RAJPURA ROAD, SANALA, MORBI, TEHSIL-MORBI, DISTT.-MORBI, GUJARAT. 363841 PH 9099058044, 9925199569. 9879499088.
- 452. DREAM VEHICLES (LC01-X5-03), NR. PRIME FILLINGS, PLOT-6, DHARMASIDDHI VILLAGE:MAHENDRANAGAR, TALUKA: MORBI, DIST:MORBI. - 363642 PH:7069089532.

MOTI KHAVADI

453. ATUL MOTORS JAM LLP (AAUZ-AALI-01), PLOT NO.22 & 29, NEAR PADANA POLICE STATION, JAMNAGAR-KHAMBHALIYA HIGHWAY, MOTI KHAVDI, ZANKHAR, TA: LALPUR, DIST -JAMNAGAR, GUJARAT. - 361140 PH :9574004799 / 9574004743.

MUNDRA

454. B M AUTOLINK (7702-AJ-02), PRAGPAR ROAD, MUNDRA, DISTRICT-KUTCH, GUJARAT, -370421

PH:9687632631,9978940978.

NADIAD

455. AMAR CARS PVT. LTD. (F702-P7-02), NEAR RAJHANS MULTIPLEX,NADIAD-UTTARSANDA ROAD - 387370 PH :9909960761

NAKHATARANA

456. KD MOTORS (CMV1-CMV-01), PLOT NO-1, RS NO-19, AT-NANA ANGIYA, TALUKA-NAKHATRANA, KUTCH - 370615 PH:#REFI.

NALIYA

457. KD MOTORS (SLX1-SLX-01), AT PO - SHAKTI SOCIETY, MAHAVIR NAGAR, PLOT(1), OPP. BANK OF BARODA, NALIYA, TAL-ABDASA, KUTCH. - 370655 PH 9909953119.

NANA PONDHA

 AMAR CAR (SEL1-SEL-01), SHOP NO 7-11, JALASHAI SHOPPING CENTER, AT-NANA PONDHA, TALUKA- KAPRADA, DIST-VALSAD -396126
 PH:7227971155.

NASWADI

459. RAVIRATNA MOTORS (SCV1-SCV-01), HOUSE NO-301,302,303, IN VALPURA-RAMLALNAGAR, VILLAGE AT-NASWADI, DIST: CHOTTA UDEPUR -391150

NAVSARI

PH:9687691047.

460. KATARIA AUTOMOBILES PVT. LTD. (Q701-Q7-01), PLOT NO.-891, OPP PAUVA MILL, NH-8, PEAR GANESH SISODRA CHOKDI,GANESH SISODIA NAVSARI, GUJRAT -396463 PH :9723430012.

NETRANG

461. RAVIRATNA MOTORS (CUZ1-CUZ-01), SURVEY NO. 184, PLOT NO. 1 & 2, VILLAGE - NETRANG, TALUKA - VALIA, DIST.-BHARUCH. - 393130 PH :9687691063.

OLPAD

 COMET CAR SALES & SERVICE PVT LTD (4006-ZZ-02), 1906/1907, OPP. KUMBHARVAD, JUNA PURA, OLPAD - 394540 PH -9090916099

PADRA

 AMAR CARS PVT. LTD. (2205-OC-02), NEAR WESTERN BYPASS, AT SAMIYALA, PADRA, DIST. – VADODARA, GUJARAT - 391440 PH:8980036200, 8980006795.

PALANPUR

- 464. TANU MOTORS (Q801-Q8-01), OPP.DHARTI RESORT, ABU- AHMEDABAD HIGHWAY, PALANPUR - 385001 PH :9099017756.
- 465. STARLINE CARS PVT. LTD. (D101-Q8-08), SURVEY NO.4 & 5.2, OPPOSITE L K PETROL PUMP, PALANPUR-DEESA HIGHWAY, PALANPUR-385001, DISTT BANASKANTHA, GUJARAT - 385001 PH :9824001793.

PALEJ

466. RAVIRATNA MOTORS (BGR1-BGR-01), PLOT NO. 626/6, GIDC AREA, PALEJ, DISTRICT -BHARUCH - 392220 PH :9687691044: 9687632647.

PALITANA

467. KATARIA AUTOMOBILES (CSD2-CSD-01), PLOT NO 15, YASOVIJAYNAGAR, NEAR RAILWAY CROSSING, PALITANA HIGHWAY, PALITANA-364270 DIST BHAVNAGAR. - 364270 PH. #REF!.

PALSANA

468. KATARIA AUTOMOBILES PVT. LTD. (4004-ZF-07), BESIDE SAINATH COMPLEX, KADODARA AHMEDABA ROAD, NH-8, UMBHEL GAM,TALUKA: PALSANA KADODARA, SURAT. - 382721 PH 9924446895.

PATDI

69. DREAM VEHICLES PVT LTD (BFS1-BFS-01), R.S. NO.1614/2, PLOT NO.16, PATDI TALUKA DASADA, DISTT. SURENDRANAGAR, GUJARAT -382765 PH 92227775709.

PAVI JETPUR

470. PERFECT AUTO SERVICES (PK01-PK-01), NEAR ANKUR HOTEL, OPP. DHARESHWAR GEB STATION, PITHADIA, RAJKOT HIGHWAY, JETPUR (GUJARAT). - 360370 PH :9099027402, 8200969617.

PETLA

 AMAR CARS PVT. LTD. (CMW1-CMW-01), SURVEY NO. 396/2, RANGAIPUR VILLAGE, PETLAD, DIST.-ANAND. - 388450 PH :9099017068

PORBANDAR

472. ATUL MOTORS JAM LLP (T601-T6-01), PLOT NO. 208, GIDC VANANA, NATIONAL HIGHWAY, PORBANDAR, DIST. PORBANDAR GUJARAT -360577 PH :9574004746 / 7228819123.

PRANTIJ

473. KIRAN MOTORS LTD (AAI1-AAI-01), NO.6/P, OPP. VEGETABLE MARKET, PRANTIJ HIGHWAY, VILLAGE-KHAMALPUR TALUKA-PRANTIJ, DISTT. SABARKANTHA, GUJARAT - 383205 PH :9524401888.

RADHANPUR

 STARLINE CARS PVT. LTD. (BNI1-BNI-01), SURVEY NO. 208/A, MOUJA – RADHANPUR, RADHANPUR MAIN ROAD, DISTRICT – PATAN, GUJARAT. - 385340 PH: 9909043244, 9824601729.

RAJKOT

175. PERFECT AUTO SERVICES (5502-55-01), PERFECT HOUSE,GONDAL ROAD,VANDI,RAJKOT - 360004 PH :9879499077, 9909006982, 9825304940.

- 476. ATUL MOTORS PVT LTD (5503-55-01), PLOT NO.49/1 & 2, GIDC, BHAKTI NAGAR INDUSTRIAL ESTATE, RAJKOT. - 360002 PH: 8140909093
- 477. PERFECT AUTO SERVICES (5502-55-04), 150 RING ROAD, OPP. GANDHIGRAM POLICE CHOWKI, RAJKOT - 360005 PH:9925238691, 9925117104.
- 478. ATUL MOTORS PVT LTD (5503-55-02), BEHIND HP PUMP, UNIVERSITY ROAD, NEAR SNK SCHOOL, RAJKOT 360005 PH :8347005382
- 479. ATUL MOTORS PYT LTD (5503-55-06), RAJKOT AHMEDABAD HIGHWAY, NR. CHANDARANA PETROL PUMP, OPP. GUJARAT SAMACHAR PRESS, AT. NAVAGAM RAJKOT - 360003 PH :9924688774.
- PERFECT AUTO SERVICES (5502-55-08), R.S. NO. 50/1, 150 FEET RING ROAD, RAIL NAGAR, RONKI, RAJKOT, GUJARAT. - 360006 PH :9979861995. 9925117104.
- KATARIA AUTOMOBILES PVT. LTD. (5504-55-01), S. NO. 10/1, TPS NO. – 10, KALAVAD ROAD, MOTAMAVA, RAJKOT, GUJARAT. - 360001 PH:7573870001.

RAJPARDI

482. RAVIRATNA MOTORS PVT. LTD. (CAI1-CAI-01), R.S.NO.973, CTS NO. 1298, SHOPS PLOT NO.29 & 30, MOJE RAJPARDI. TALUKA-JHAGADIA, DISTT. BHARUCH - 393115 PH. 9887691044 - 9887632847.

RAJPIPLA

483. RAVIRATNA MOTORS PVT. LTD. (9X01-9X-01), OPP. JALARAM SAW MILL, NEAR HARSIDDHI MATAJI TEMPLE, RAJPIPLA, DIST: NARMADA, GUJARAT - 393145 PH :9687691062/9687645880.

RAPAR

484. B.M. AUTOLINK (SCO1-SCO-01), PARAGPAR CHAAR RASTA RAPAR GHANDHIDHAM KUTCH -370165 PH :9727725723.

SAMI

 STARLINE CARS (BNH1-BNH-01), SHOP NO. 55-56, AMBESHWAR PLAZA, SAMI-HARIJ ROAD. - 384240
 PH :9909043244, 9824601729.

SANTEJ

 NANDA AUTOMOBILES PVT. LTD. (CXC1-CXC-01), SUB PLOT NO. 05, SHOP NO. 3
 4, BLOCK NO. 1162, SANTEJ, KALOL. - 380060 PH: 9727822000.

SANTRAMPUR

487. R B CARS PVT. LTD. (2C01-RY-03), NEAR PTC COLLEGE, SANT ROAD, SANTRAMPUR, DISTT.-PANCHMAHAL - 389260 PH :8980585851, 9099043715.

SAVLI

488. KIRAN MOTORS LTD (CFD-1-CFD-01), SURVEY NO. 2592/1 PAKKI 2, NEAR RELIANCE PETROL PUMP, BHADRIVA CHOWKDI, SAVLI – TIMBA ROAD, SAVIL, TALUK – SAVLI, DISTRICT – VADODARA, GUJARAT. - 391770 PH. 7984799054.

SAYAN

489. KIRAN MOTORS LTD (O001-00-01), PLOT NO.6 TO 10 OF R BLOCK, SURVEY NO.209, VILLAGE PARIA, TALUKA: OLPAD, SAYAN - 394130 PH :8155888862/9662330480.

SAYLA

 DREAM VEHICLES (SJM1-SJM-01), LALGURU COMPLEX, SUDAMDA ROAD, SAYLA, DISTRICT SURENDRANAGAR, GUJARAT PIN 363430 -363430
 PH :9227775709.

SHANKESHWAR

491. STARLINE CARS (SLY1-SLY-01), MANIBHADRA SHOPPING CENTRE, SHANKHESHWAR HIGHWAY, SHANKHESHWAR (GUJARAT)- DIST: PATAN - 384246 PH -9824601729

SHAPAR

492. ATUL MOTORS PVT LTD (BOZ1-BQZ-01), SHOP NO. 1 TO 4, SURVEY NO. 305/1, PLOT NO. 169, SHAPAR, DISTRICT – RAJKOT, GUJARAT -360024 PH. 9714008492, 9624711397.

SIDDHPUR

493. STARLINE CARS PVT. LTD. (CMY1-CMY-01), PLOT NO. 140-1285/7, SIDHPUR, TALUKA – VADGAM, DISTRICT – PATAN. - 384151 PH :9909043244, 9824601729.

SINOR

494. RAVIRATNA MOTORS PVT LTD (GML1-CML-01), NEAR SEVGA CHOKDI, SEVGA DABHOI ROAD, AT AND POST SEGVA, TALLIKA SINOR, DIST. VADODARA, PIN-391105, GUJARAT - 391105 PH.7227055065.

SITAPUR

495. STARLINE CARS PVT LTD (SFV1-SFV-01), SHOP NO. 2, RUDRA ARCADE, REVENUE SURVEY NO. 129, VITHLAPUR (SITAPUR) BECHARAJI – VIRAMGAM HIGHWAY, DIST. AHMEDABAD, PIN CODE: 382120 - 382120 PH: 9909043244.

SONGADH

496. COMET CAR SALES & SERVICE PVT LTD (CWE1-CWE-01), LAXMI PLAZA, SHOP NO. 21 & 22, SURAT DHULIYA HIGHWAY, TALUKA-SONGADH, DIST.-TAPI. - 384220 PH. 9099916099.

SUPEDI

497. KATARIA AUTOMOBILES (SEM1-SEM-01), SURVEY NO-482/7, PAIKI PLOT NO-18, MATRAVAD ROAD, GRAM-SUPEDI, DIST -RAJKOT - 360440 PH '9409497902'

SURAT

498. KIRAN MOTORS LTD (4001-40-01), SURAT-BARDOLI ROAD, DUMBHAL, NEAR PUNA JAKAT NAKA, SURAT - 395010 PH :9924448715/9924637898.

- 499. DHRU MOTORS (4002-40-01), JEEVAN GANGA NAGAR.NEAR JEEVAN JYOT THEATRE,UDHNA MAIN ROAD,SURAT - 394210 PH :9925155911/9925155907.
- 600. KIRAN MOTORS LTD (4001-40-02), PANDESARA,BAMROLI ROAD,SURAT - 395002 PH :9824603880
- KATARIA AUTOMOBILES PVT. LTD. (4004-40-04), TP NO. 6, SURVEY NO. 317/2, FINAL PLOT NO. 39, OPP SMS GARDEN, NEAR VIP ROAD, VESU, SURAT. 395007 - 395007
 PH. 9714612700. 9924401000.
- DHRU MOTORS (4002-40-1B), 207, NEW INDUSTRIAL ESTATE, ROAD NO.-6, UDHNA UDYOG NAGAR, SURAT - 394210 PH : 0261-2272118/ 9978900862
- 503. KATARIA AUTOMOBILES PVT. LTD. (4004-40-05), KATARIA ARCADE,OPP. RAJHANS CINEMA,DUMAS ROAD, PIPLOD, SURAT -395007 PH. 7698022449/9624477252.
- 504. COMET CAR SALES & SERVICE PVT LTD (4006-40-01), CHIKUWADI COMPLEX, GHB ROAD, PANDESARA, SURAT. - 394221 PH :9099915995.
- 605. KATARIA AUTOMOBILES PVT. LTD. (4004-40-08), BLOCK NO.233, TP NO.8, OPP. SHREE LEKHA RESIDENCY, PALANPORE, ADAJAN, SURAT -394310 PH :9924119020.
- 506. KIRAN MOTORS LTD (4005-40-01), PLOT NO. 443, FP NO. 26 MOJE PALGAM, ADAJAN, SURAT - 395009
- 395009
 PH :9824611153/9824701590.
 507. AMAR CARS PVT. LTD. (4009-40-02), PLOT
 NO.10&11, SURVEY NO.7 & 9, SONARAS
 COMPOUND, NEAR DGVCL OFFICE, KARMNATH
 MAHADEV TEMPLE LANE, KAPODARA,

VARACHHA ROAD, SURAT - 395006

PH:7069026512.

UMERGAON

508. COMET CAR SALES & SERVICE PVT LTD (4006-40-03), R. S. NO. 311, T. P. SCHEME-3, FINAL PLOT NO. 102/A, KATARGAM, SURAT, DISTRICT – SURAT, GUJARAT. - 395004 PH :9099916099.

509. DHRU MOTORS (4002-40-03), PLOT NO.54/A, LAXMINARAYAN LNDUSTRIAL ESTATE, UDHNA, SURAT-394210 - 394210 PH #PRFI

SURENDERNAGAR

DREAM VEHICLES PVT LTD (LC01-LC-01), 261/P,
 OPP MARKETING YARD,GIDC AREA,WADHWAN
 CITY, SURENDERNAGAR - 363030
 PH :02752-241314 / 02752-651516/ 9227775721.

 DREAM VEHICLES (LC01-LC-02), PLOT NO-504/B, GIDC PHASE-3, WADHWAN, SURENDRANAGAR, GUJARAT-363030 - 363030 PH 9227775724.

TALAJA

 KATARIA (BCIZ-BCI-01), SURVEY NO-168, DHANJIBHAI BALADHIYA NI VADI, NEAR MAHUVA PALITANA CROSS ROAD, MAHUVA BHAVNAGAR HIGHWAY, TALAJA-364140. -364140 PH :9316626475.

TANKARA

513. ATUL MOTORS PVT LTD (BQY1-BQY-01), PLOT NO. 8/1, S. NO. 107, VILLAGE – JABALPUR, TALUKA – TANKARA, SUB DISTRICT – MORBI, DISTRICT – RAJKOT. - 363650 PH: 9714008492, 9624711397.

TARAPUR

514. AMAR CARS PVT. LTD. (GH01-GH-01), NEAR N K STEEL, TARAPUR ROAD, TARAPUR, DIST. -ANAND. - 388180 PH:9909960772.

THARA

515. TANU MOTORS PVT. LTD. (0V01-0V-01), SHOP NO.17 & 18, SIHORI HIGHWAY, R.B. THAKKAR COMPLEX, THARA, KAKREJ TALUKA, BANASKANTHA DISTT. - 385555 PH :9909006099, 9913830329.

THARAD

 TANU MOTORS PVT. LTD. (CDM1-CDM-01), PLOT NO. 21 & 22, VAJEGADH, DEESA HIGHWAY, THARAD, DIST.-BANASKANTHA -384220 PH. 9909006099. 9724219565.

THASARA

517. KATARIA AUTOMOBILES (SIM1-SIM-01), PLOT NO 1 & 2, GIDC THASRA, BESIDES NARMADA VASAHAT, DAKORE THASRA ROAD, GUJARAT-388250 - 388250 PH:7984092780. 518. KATARIA AUTOMOBILES PVT. LTD. (BNB1-BNB-01), PLOT NO. 239, LORD COMPLEX, SHOP NO. B-9 AND B-10, UMERGAON, DISTRICT - VALSAD, GUJARAT. - 396170 PH-9624001704

UMRETH

 AMAR CARS PVT. LTD. (CFE1-CFE-01), R. S. NO. 30/2, NADIAD-DAKOR ROAD, UMRETH, DIST.ANAND, GUJARAT. - 388220 PH: 9909960772.

UNA

 PERFECT AUTO SERVICES (BFD1-BFD-01), SURVEY NO. 113, PLOT NO. 6, OPP. SWAMI VIVEKANAND VIDYALAYA, NEAR BANSIDHAR PETROL PUMP, BHAVNAGAR HIGHWAY, VAYAJPUR, UNA, DISTRICT – GIR SOMNATH, GUJARAT. - 362560 PH :704992893, 7043340792.

UNJHA

521. TANU MOTORS (Q801-GR-02), OPP. DHANA DAL FACTORY, MEHSANA PALANPUR HIGHWAY, UNJHA - 384170 PH :9727762079.

UPLETA

 PERFECT AUTO SERVICE (CH01-CH-01), S. NO. 184/1, PLOT NO. 15-16, UPLETA, GUJARAT - 360 490
 PH:9099027402. 8200969617.

VADNAGAR

 VIMCO MOTORS PVT LTD (GKU1-GKU-01), SHILALEKH COMPLEX, BLOCK-D, SURVEY NO-2713, VADNAGAR-VISNAGAR HIGHWAY, NEAR FOOD PARADISE HOTEL, VADNAGAR, GUJARAT - 385355 PH :7016623842.

VADODARA

KIRAN MOTORS LTD (2201-22-01),
 909/4,G.I.D.C.MAKARPURA, VADODARA - 390010
 PH:9624472699.

 KIRAN MOTORS LTD (2201-22-02), PLOT NO.160, SUB-I NUTAN GUJ.INDL.ESTATE, OLD CHHANI ROAD, VADODARA - 390002 PH:9824207889.

 AMAR CARS PVT. LTD. (2203-22-01), GORWA ROAD, VARODARA, GUJARAT, - 390016 PH:9081311990, 9723742425, 8980036184.

 AMAR CARS PVT. LTD. (2203-22-02), KALA GHODA, OPP. KIRTI MANDIR, VADODARA, DIS: VADODARA, GUJARAT - 390001 PH. 7211109952.

 KATARIA AUTOMOBILES PVT. LTD. (2204-22-01), 984/4, GIDC, OLD NH-8, MAKARPURA ROAD, VADODARA, GUJARAT - 390010 PH 9904033422.

- AMAR CARS PVT. LTD. (2205-22-01), VARASIYA AIRPORT ROAD, OPP POONAM CINEMA, KARELIBAUG, VADODARA, GUJARAT - 390016 PH: 8980006756
- 530. KIRAN MOTORS LTD (2201-22-03), C/O ARBUDA COLD STORAGE, 823 POWER CABLE ROAD, DHARMSINH ROAD, OPP. UMA AMAR PARTY PLOT, NEAR CHHANI JAKAT NAKA, VADODARA - 390002 PH : 7771122
- 531. KATARIA AUTOMOBILES PVT. LTD. (2204-22-02), OPPOSITE SHARDA MANDIR HIGH SCHOOL, VINOBA BHAVE ROAD, SALATWADA, VADODARA - 390001 PH: 8156017770
- RAVIRATNA MOTORS PVT LTD (2206-22-01), SURVEY NO. 1581, MILES HOUSE, ATLADARA ROAD, VADODARA. - 390012 PH :7227055065, 7227055064.

VALOD

533. DHRU MOTORS (CSW1-CSW-01), PLOT NO.5 TO 9, TAIYABA PARK SOCIETY, AT & PO - VALOD, TALUKA - VALOD, DISTT. - TAPI, GUJARAT. -394640 PH :9712984522.

VALSAD

 KATARIA AUTOMOBILES PVT. LTD. (0104-2E-06), SURVEY NO. 211,ATUL-ALSAD ROAD,PARNERA,AVALSAD, GUJARAT - 396020 PH :9904133306.

VANSDA

535. KATARIA AUTOMOBILES PVT. LTD. (Q701-SB-02), JAMNABA PARK, VANSDA HANUMAN BARI CHAR RASTA, VANSDA-DHARAMPUR ROAD, RANI FALIYA, VANSDA, DISTRICT – NAVSARI, GUJARAT -396580 PH : 7624088188.

VAPI

- KATARIA AUTOMOBILES PVT. LTD. (0104-97-03), PLOT NO. C-29,NATIONAL HIGHWAY-8,G. I. D. C., VAPI, TAL. PARDI - 396195 PH. 9924204423.
- 537. KATARIA AUTOMOBILES PVT. LTD. (0104-97-09), PLOT NO. 304/2, VILLAGE BALITHA, NH-8, OPP BABA SITARAM TEMPLE, NEAR SWAMINARAYAN SCHOOL, SALAV, VAPI, DISTRICT - VALSAD, GUJARAT - 369191 PH :9723462612.
- AMAR CARS PVT. LTD. (9701-97-01), SURVEY NO. 1034, 1035, NEAR WOODLAND HOTEL, NH-8, VILLAGE - BALITHA, VAPI. - 396145 PH :9327909504.

VERAVAL

 PERFECT AUTO SERVICES (5502-AH-05), NR. BALIYA HANUMAM, VERAVAL - JUNAGADH HIGHWAY, JUNAGADH, GUJARAT - 362265 PH: 9998994550, 9898121122.

VIJAPUR

540. STARLINE CARS PVT. LTD. (D101-V2-04), HIMMATNAGAR HIGHWAY, ANANDPURA CHAR RASTA, VIJAPUR - 382870 PH :9909043635.

VIRAMGAM

 KIRAN MOTORS LTD (AAB1-AAB-01), SURVEY NO.319/P, NILKI CHOKDI, VIRAMGAM, DISTT: AHMEDABAD, GUJARAT. - 382150 PH.8156018222

VISNAGAR

 STARLINE CARS PVT. LTD. (D101-RW-05), VISNAGAR -AMBAJI ROAD, OPP. DHAROI COLONY, VISNAGAR, DISTT.- MEHSANA -384315
 PH. 7046046174.

VYARA

543. COMET CAR SALES & SERVICE PVT LTD (BIY1-BIY-01), SHOP NO. 11 & 12, BLOCK NO. 175/1/A, R. NO. 113, VYARA-SURAT ROAD, VYARA, DISTRICT – TAPI, GUJARAT - 394650 PH: 9099916099.

WAGHODIA

544. KATARIA AUTOMOBILES PVT. LTD. (BZZ1-BZZ-01), OPPOSITE BHARAT PETROLEUM, WAGHODIA, TALUKA – WAGHODIA, DISTRICT – VADODARA, GUJARAT. - 391780 PH :7203013712.

WANKANER

545. ATUL MOTORS PVT LTD (BAL1-BAL-01), RAJKOT-WANKANER HIGHWAY, NEAR JADESHWAR CHAMBERS, NEAR INTERNATIONAL CERAMIC, WANKANER (GUJARAT) - 363621 PH: 9904922333.

HARYANA

ADAMPUR (HARYANA)

546. SARAOGI AUTOMOBILES (P) LTD. (CWW2-CWW-01), KEWAT NO. 663, KHAT NO. 1147, KHESRI NO. 442/11/2(1-0), MANDI ADAMPUR, TEHSIL - ADAMPUR, DIST.-HISSAR, STATE.-HARYANA. - 125052 PH:8607777153.

AMBALA

547. MODERN AUTOMOBILES (1801-18-01), MODEL TOWN CROSSING, G.T.ROAD, AMBALA, HARYANA. - 134003 PH 9215016044.

- 548. MODERN AUTOMOBILES (1801-18-02), NEAR AMAR PALI RESTAURANT, G.T. ROAD, AMBALA - 134003
- EAKANSH WHEELS (1802-18-01), STONE NO. 126, JAGADARI ROAD, VILLAGE TEPLA, AMBALA - 133001

PH:9215016044

- 50. PH:9991703000.
 EAKANSH WHEELS (1802-18-03), PLOT NO. 8, BASANT VIHAR, BEHIND SWASTIK MARBLE, NEAR MOTOR MARKET, AMBALA CITY, HARYANA 133001
 PH:8813674888
- 551. TR SAWHNEY (1803-18-01), JAGGI GARDEN, BALDEV NAGAR, OPPOSITE AMBALA PASSPORT OFFICE, AMBALA - 134003 PH :9990110068.

ASSANDH

552. KARNAL MOTORS PVT. LTD. (8906-CS-04), OPP. NEW GRAIN MARKET, KARNAL ROAD ASSANDH, DISTT. KARNAL - 272032 PH 7082111325

BABARPUR

553. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CKX1-CKX-01), G.T. ROAD, NEAR PARK RESIDENCY, SHIMLA MAULANA, BADOLI, BABARPUR, DISTT. PANIPAT - 132103 PH-7009396727.

BAHADURGARH

 COMPETENT AUTOMOBILES CO. LTD. (2G02-2G-01), PLOT NO. 1202, MIE PART B, BAHADURGARH, HARYANA - 124 507 PH :8929648144.

BAPOLI

555. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (CWI1-CWI-01), KHEWAT NO. 136, VILLAGE – JHAMBA, TEHSIL – BAPOLI, DISTRICT – PANIPAT. - 132103 PH 9053400583.

BARARA

 EAKANSH WHEELS (NX01-NX-01), SH-4, KALA AMB - SHAHBAD - BARARA ROAD, BARARA -133201 PH :9991478100.

BARWALA

 MODERN AUTOMOBILES (BSA2-BSA-01), KHEWATIKHOTONI NO. 388, KHASARA NO. 46/9, 10, OPPOSITE AXIS BANK, VILLAGE BATAPUR, P.O. BARWALA, TEHSIL AND DISTT. PANCHKULA, HARYANA - 134118 PH :9896217059.

BAWAL

558. DINCO 4 WHEELS LLP (AUTO VIBES) (BBD2-BBD-01), KHATA NO. 326 AND KHATAUNI NO. 362, OPPOSITE PRATHAM HOUSING, NH-8, BAWAL, DISTRICT – REWARI, HARYANA. -123501 PH :7082100250.

BHIWANI

 JAGMOHAN MOTORS PVT LTD (X301-X3-01), DELHI ROHTAK ROAD, NEAR RADHA SWAMI SATSANG MANDIR, BHIWANI - 127021 PH :8685005592

BILASPUR

560. PANDIT AUTOMOBILES PVT. LTD. (BGH1-BGH-01), NEAR GRAMIN BANK, JAGADHRI ROAD, BILASPUR, DISTRICT – YAMUNANAGAR, HARYANA. - 135102 PH :9992113854.

BILASPUR (HARYANA)

561. PIATINUM MOTOCORP LLP (2L04-CIA-02), KHASRA NO.54/67, CHOUDHARY NIHAL SINGH MARKET, BILASPUR CHOWK, NH-8, BILASPUR, DISTRICT – GURUGRAM. - 122413 PH.99633452299953345403.

CHARKHI DADRI

562. JAGMOHAN MOTORS PVT LTD (X301-CT-02), BHIWANI LOHARU ROAD, CHARKHI DADRI, BHIWANI - 127306 PH :8059900538

CHEEKA

 EAKANSH MOTORS PVT. LTD. (U802-HU-04), MARBLE MARKET, PATIALA ROAD, CHEEKA, HARYANA, - 136034 PH :8053086000

CHHACHHARAULI

564. PANDIT AUTOMOBILES PVT. LTD. (CQZ1-CQZ-01), HB NO. 311, NEAR MDAV SCHOOL, TEHSIL – CHHACHHRAULI, DISTRICT – YAMUNA NAGAR. - 135103 PH. 9812455895.

DADRI TOE

565. COMPETENT AUTOMOBILES CO. LTD. (BVH2-BVH-01), KHEWAT NO. – 270 MIN, KHATONI NO. – 319, DADRI TOYE, DISTT. JHAJJAR, HARYANA PIN 124103 - 124103 PH :9821308849.

DAHINA

66. DINCO 4 WHEELS LLP (AUTO VIBES) (GLH1-GLH-01), REWARI MAHENDERGARH ROAD, NEAR RAILWAY STATION, DAHINA, REWARI - 123411 PH:7082100201.

DHAND

567. EAKANSH MOTORS (BEU1-BEU-01), PANCHMUKHI CHOWK, KARNAL ROAD, DHAND, DISTT. KAITHAL, HARYANA. - 136020 PH :8395906111

DHARUHERA

568. DINCO 4 WHEELS LLP (AUTO VIBES) (CRP1-CRP-01), KHASRA NO. 57, KILLA NO. 7, SOHNA-DHARUHERA ROAD, OFF SECTOR-4A, DHARUHERA, DIST.-REWARI. PH. 7082100270.

FILENARAD

569. SHAKTI MOTORS PVT.LTD. (E401-IN-03), SURERA CHOWNK, NEAR CHAUDHARI MANI RAM COLLEGE, SIRSA ROAD, ELLENABAD -125055 PH :8222900250.

FARIDABAD

 VIPUL MOTORS PVT. LTD. (5801-58-01), 27/5 KM, MAIN MATHURA ROAD, FARIDABAD - 121002 PH. 2555011 2555013 97114 14556.

571. VIPUL MOTORS PVT. LTD. (5801-58-03), UNIT-II, PLOT NO. 1A 19/6, MATHURA ROAD, FARIDABAD - 121006 PH. 4226000 439674

4286024 4286024 9311321419.

- TCS AUTOMOBILES (5804-58-01), PLOT NO-1A, SECTOR-6, FARIDABAD, - 121001
 PH :4292929: 7503036200.
- FAIR DEAL PREMIUM WHEELS PVT.LTD. (5807-58-01), PLOT NO.-17A, NIT INDUSTRIAL AREA, NIT FARIDABAD - 121003 PH:8448296686.
- 574. TCS AUTOWORLD PVT. LTD. (TCS & ASSOCIATES PVT. LTD.) (5804-58-02), 20.4 KMS MILESTONE, BHASKAR COMPOUND, AMAR NAGAR, MAIN MATHURA ROAD, FARIDABAD, HARYANA. 121003 PH : 2277225 7290082911.
- 575. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-01), 15/3, MATHURA ROAD, NEAR SECTOR-28, METRO STATION, FARIDABAD - 121003 PH :4180500 7290032501.
- 576. AUTO NATION (A UNIT OF TAYAL INDIA MOTORS PVT. LTD) (5806-58-02), BYE PASS ROAD, PLOT NO. 12 SECTOR-9, FARIDABAD. -121006 PH:74287 48467.

FARRUKHNAGAR

577. PLATINUM MOTOCORP LLP (KE01-KE-01), KHEVAT NO. 299, MUSTIL NO.-12, KHASRA NO. -1993 AND 22/2, VILLAGE – SEHADPUR MOHAMADPUR, TEHSIL – FARRUKHNAGAR, DISTRICT – GURGAON. - 122506 PH -9599007357/9953345380.

FATEHABAD

578. SHAKTI MOTORS PVT.LTD. (2H02-2H-01), NH-10, SIRSA ROAD, FATEHABAD - 125050 PH :8222900217.

GANAUR

79. JAGMOHAN AUTOMOTIVES PVT. LTD. (NA04-NA-01), RAILWAY ROAD, GANAUR -131101 PH :8199911106

GHARAUNDA

 KARNAL MOTORS PVT. LTD. (8906-MR-05), WARD NO.-1, BEHIND GOVT. SR. SEC. SCHOOL COLONY, GHARAUNDA, - 132114 PH :8222023231.

GOHANA

581. JAGMOHAN AUTOMOTIVES PVT. LTD. (CU03-CU-01), NEAR KHANPUR CHOWNK, ROHTAK PANIPAT HIGHWAY, GOHANA, DISTT. -SONEPAT - 131301 PH :8685005521.

GURGAON

3.

- 582. PASCO AUTOMOBILES (9506-95-01), PASCO HOUSE, 6 PALAM GURGAON ROAD, INDUSTRIAL ESTATE, GURGAON - 122006 PH
- :09650790323/7290069623/9999239959/4952100. 83. VIPUL MOTORS PVT. LTD. (5801-95-02), 504, UDYOG VIHAR, PHASE-III, GURGAON - 122001 PH :4395701 4395704 8448487791
- COMPETENT AUTOMOBILES CO. LTD. (9505-95-01), A-25, INFOCITY, SECTOR-33, GURGAON - 122004 PH :42500002, 0503707705
- PASCO AUTOMOBILES (9506-95-02), SECTOR 17-18, DIVIDER ROAD, GURGAON, HARYANA, -122015
 PH :07015804442/7982087767/9650701958/.
- ROHAN MOTORS LTD. (9508-95-01), 2482/84, SECTOR-52A, WAZIRABAD VILLAGE, OPP. AARDI CITY MALL, GURGAON - 122001 PH :08860076163/8130593202/8130593201/813059320

587. VIPUL MOTORS PVT. LTD. (5801-95-04), PLOT NO.5/22/1, SARHAUL VILLAGE, SECTOR-18, MAIN ROAD, GURGAON. (HARYANA) - 201102 PH :4395800 4305806

844848936

- 88. PREM MOTORS PVT. LTD. (9511-95-01), PLOT NO.101, SAINI PLAZA MARKET, OPP. H BLOCK, NEAR RAM MANDIR, PALAM VIHAR, GURGAON -122017
- PH:4337900, 7065003445.

 PREM MOTORS PVT. LTD. (9512-95-01), PLOT NO. 3,IDC, OPPOSITE SECTOR-14, GURGAON -
- PH .7065003373, 7065003377, 0124-4319000.

 SANA MOTORS PVT LTD (9509-95-02), PLOT NO.60, IDC, GURGAON 122001 PH .4867777, 9873400882
- 591. PASCO AUTOMOBILES (9510-95-01), PLOT NO. 34/3, DINESH JAIN COMPLEX, DELHI-AJMER EXPRESSWAY (NH-8), RAJIV CHOWK, GURGAON, HARYANA. - 122001 PH:9953669444/9953669222.
- PREM MOTORS PVT. LTD. (9512-95-02), PLOT NO. 122, PALAM VIHAR EXTENSION, NEAR KRISHNA CHOWK, GURUGRAM - 122017 PH :4337933, 7065003442.
- 593. PLATINUM MOTO CORP (2L04-95-03), 5/13 SOHNA ROAD VILL-TIKRI ADJACENT TO POLARIS HOSPITAL GURGAON HARYANA -122018 PH 9953345370/9899118867.
- 594. PREM MOTORS (9512-95-G1), QILA NUMBER 8/2, MUSTAKIL NO - 25, SECTOR 17-18, DIVIDING ROAD, GURGAON, - 122015 PH:8800000817.

HANSI

595. JAGMOHAN MOTORS PVT LTD (GT02-GT-01), G. T. HIGHWAY ROAD, MAIN ROHTAK HANSI ROAD, NEAR HOLLAND TRACTORS AGENCY & HP PETROL, HANSI - 124001 PH :8059900546.

HISAR

- MODERN AUTOMOBILES (7602-76-01), OPP.
 VIDYUT NAGAR, DELHI ROAD, HISAR, 125005
 PH: 9355473000.
- 597. SARAOGI AUTOMOBILES (P) LTD. (7604-76-01), 5TH KM STONE, SIRSA ROAD, HISSAR, HARYANA - 125001 PH :8607777043.
- MODERN AUTOMOBILES (7602-76-02), OPP.
 BBMB, HISSAR DELHI ROAD, HISSAR 125001
 PH :9355473000
- UNIQUE MOTORS PVT. LTD. (7603-76-01), OPP. BHANU INDUSTRIES, DELHI ROAD, VILLAGE: SATROD,HISSAR (HARYANA) - 125006 PH :8818055535.

HODAL

 ROHAN MOTORS (EE01-UE-02), KILA NO. 8/2(7-11), 9(5-06), 12(5-0), 13(8-0), HIGHWAY ROAD, NEAR RAILWAY BYEPASS CHOWK, TEHSIL - HODAL, DIST.-PALWAL. PH.8930202088: 9413080376.

ISMAILABAD

601. KARNAL MOTORS PVT. LTD. (1901-19-01), KHEWAT NO. 928, KHASRA NO. 2760(5-14), 2761(800), VILLAGE : ISMALLABAD, TEHSIL -PEHOW, DIST.-KURUKSHETRA, HARYANA. - 136 129 PH :7082007138.

ISRANA

602. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (1802-18-01), MUSHTIL NO. -119, NEAR MANDI MOD, MAIN GOHANA ROAD, ISRANA - 132107 PH -9053400417.

JHAJJAR

603. COMPETENT (0802-08-01), PLOT NO 5, NEAR GOVT POLYTECHNIC COLLEGE, JHAJJAR-BAHADURGARH ROAD, JHAJJAR, HARYANA - 124101 PH :9999493040.

JIND

 EAKANSH MOTORS PVT. LTD. (2K01-2K-01), ROHTAK ROAD, NATIONAL HIGHWAY-71, OPP. GRAIN MARKET, JIND, HARYANA - 126102 PH :7876008184

JULANA

605. EAKANSH MOTORS PVT. LTD. (MA01-MA-01), JIND ROHTAK MAIN ROAD, OPP. NEW BUS STAND, JULANA, DIST. JIND, HARYANA - 126101 PH :8816802111.

KAITHAL

606. EAKANSH MOTORS PVT. LTD. (U802-U8-01), AMBALA ROAD, NH-65, KAITHAL - 136027 PH:9671788801.

KALANAUR

607. JAGMOHAN MOTORS (SPQ1-SPQ-01), BHIWANI ROAD, KALANAUR, DISTRICT ROHTAK. - 124113 PH:9812000425.

KALAYAT

608. EAKANSH MOTORS PVT. LTD. (BJP1-BJP-01), NEAR BUS STAND, KAITHAL-KALLAYAT ROAD, VILLLAGE-KALAYAT, DISTT. KAITHAL (HARYANA) - 136117 PH -9671788801.

KALKA

609. MODERN AUTOMOBILES (EG02-EG-01), ADJOINING INDIAN OIL PETROL PUMP, RAM NAGAR, NH-22, KALKA, DISTRICT – PANCHKULA, HARYANA - 133302 PH :9896217059.

KARNAL

- KARNAL MOTORS PVT. LTD. (8906-89-01), 71/3
 MILESTONE ,G.T.ROAD, KARNAL 132001
 PH :8222022399.
- KARNAL MOTORS PVT. LTD. (8906-89-02), KHEWAT NO. 59, JHANJHARI GT ROAD, KARNAL - 132001
 PH:8222022430.
- 612. MODERN AUTOMOBILES (8907-89-01), NEAR NAMASTE CHOWK, OLD G.T.ROAD, KARNAL -132001 PH:7419900042.

KATHURA

613. JAGMOHAN AUTOMOTIVES (SFJ1-SFJ-01), GOHANA MAHAM ROAD, KATHURA, GOHANA. -131301 PH : 8885005400

KHARKHODA

614. JAGMOHAN AUTOMOTIVES PVT. LTD. (BU02-BU-01), NEAR KANYA GURUKUL MAHAVIDYALYA, DELHI ROAD, NEAR UNION BANK, KHARKHODA (HARYANA) - 131402 PH :8685005593.

KOSLI

615. DINCO 4 WHEELS LLP (AUTO VIBES)
(CAN1-CAN-01), OPPOSITE RAJIV GANDHI
STADIUM, TEHSIL ROAD KOSLI, DISTRICT –
REWARI, HARYANA . - 123302
PH :7082100202.

KUND

616. DINCO 4 WHEELS LLP (AUTO VIBES) (CJL1-CJL-01), NEAR KUND BARRIER, OPP. SBI BANK, NARNAUL ROAD, VILLAGE - MANETHI, KUND, DISTRICT - REWARI, HARYANA . - 123102 PH :856998928 - 97082100000.

KUNDLI

 JAGMOHAN AUTOMOTIVES PVT. LTD. (GU03-GU-01), 34 E, SECTOR 57, PHASE 4, KUNDLI INDUSTRIAL AREA, KUNDLI - 131001 PH -8059900518

KURUKSHETRA

618. KARNAL MOTORS PVT. LTD. (8906-U6-03), PLOT NO. 156, INDUSTRIAL AREA, SECTOR-2, KURUKSHETRA - 136 118 PH :8222022371.

LADWA

619. KARNAL MOTORS PVT. LTD. (CRA1-CRA-01). KHEWAT NO.197, KHATONI NO.233, KHASRA NO.27117/1.27/14, LADWA-KURUKSHETRA ROAD, VILLAGE - LADWA, TEHSIL THANESAR, DISTT. KURUKSHETRA - 136132 PH. 7082007182

LOHARU

620. JAGMOHAN MOTORS (HB02-HB-01), BHIWANI ROAD, OPP. ITI, CITY: LOHARU - 127201 PH:9812000425.

ΜΑΝΙ ΑΠΝΑ

621. AUTO GALLERY (A UNIT OF RKH AUTOMOBILES PRIVATE LIMITED) (CFK2-CFK-01), VILLAGE-BHALSI, ASSANDH-PANIPAT ROAD, MADLAUDA, PIN-132113, HARYANA - 132113 PH 9053400524.

MAHENDARGARH

622. PLATINUM MOTO CORP (DP01-DP-01), K-HEWAT NO. 187, KILA NO. 51/8, REVENUE ESTATE OF VILLAGE REWASA, DADRI ROAD, TEHSIL & DISTRICT, MAHINDERGARH, PIN-123029, HARYANA - 123029 PH :9566136120, 9053088490.

MANDI DABWALI

 SHAKTI MOTORS PVT.LTD. (E401-KU-02), SANGARIA ROAD, DABWALI, DISTT.-SIRSA -125104
 PH :8222000209

MANESAR

624. PLATINUM MOTOCORP LLP (2L04-2L-01), PLOT NO.282, SEC 6, IMT MANESAR DISTT. GURGAON. - 122052 PH :09953345326/9953345324/9910100341.

MEHAM

625. JAGMOHAN MOTORS PYT LTD (A601-NZ-08), MAIN MARKET, NATIONAL HIGHWAY-10, ROHTAK-HISSAR ROAD, MEHAM, DISTRICT-ROHTAK - 124101 PH :8059900592.

MOHNA

626. TCS & ASSOCIATES PVI LTD (CRT1-CRT-01), YAMUNA PUL ROAD, NEAR GYATRI PETROL PUMP, VPO-MOHANA,TEHSIL BALLABGARH, DISTT FARIDABAD - 121004 PH :9911573130. 8929579400.

MUSTAFABAD

627. PANDIT AUTOMOBILES PVT. L.TD.
(CDX1-CDX-01), KHATUNI NO. 205/287, KHASRA
NO. 39:17/2, VILLAGE - MANSURPUR, THANA CHAPPER, MUSTAFABAD, DIST.-YAMUNA
NAGAR, STATE - HARYANA. - 133 103
PH. 9992113854.

NARAINGARH

628. EAKANSH WHEELS (1802-CV-02), NH-72, AMBALA-KALA AMB ROAD, NEAR ADARSH FILLING STATION, NARAINGARH - 134203 PH:9991143700.

NARNAUL

629. PLATINUM MOTOCORP LLP (9Q02-9Q-01), KAILASH NAGAR, REWARI ROAD, NARNAUL, HARYANA, - 123001 PH

> :09053088460/9582226838/9053088501/905308845 1/9053088500

NARNAUND

630. JAGMOHAN MOTORS (SDK1-SDK-01), KHASRA NO. 234, HANSI ROAD, NARNAUND, DISTT. HISAR, HARYANA. - 125039 PH 9812000471.

NARWANA

 EAKANSH MOTORS PVT. LTD. (U802-CW-03), OPP. HAFED GODOWN-2, NH-65 AKHERAM NAGAR, NARWANA - 126116 PH :9813583100.

NUH

632. PASCO AUTOMOBILES (T.02-TL-01), MAIN DELHI - ALWAR ROAD, NEAR SHAHEED PARK, NH-248A, NUH, DISTRICT - MEWAT, HARYANA. - 122107 PH :9810014947.

PALWAL

 ROHAN MOTORS LTD. (EE01-EE-01), SANWAL COLONY, MAIN MATHURA ROAD, NEAR SDM COURT, PALWAL - 121101 PH :304100 : 304107/8930202060.

PANCHKULA

- MODERN AUTOMOBILES (0702-K3-03), PLOT NO. 318, INDUSTRIAL AREA, PHASE-2, PANCHKULA - 134113 PH :9646000165.
- AUTOPACE NETWORK PVT LTD (0705-K3-03), PLOT NO. 5, INDUSTRIAL AREA, PHASE-1, PANCHKULA, HARYANA. - 134113 PH:7087119847.
- 636. AUTO VOGUE PVT. LTD. (K303-K3-01), PLOT NO- 388, INDUSTRIAL AREA PHASE-1, PANCHKULA, HARYANA. - 134113 PH:8558813181.

PANIPAT

637. AUTO GALLERY(A UNIT OF RKH AUTOMOBILES P LTD) (D302-D3-01), KHASRA NO. 43/6, 44/9 & 10, VILLAGE – JATTIPUR, NEAR HOTEL SWARNA MAHAL, NH-1, PANIPAT, HARYANA. -132103 PH :9053400515.

PATAUDI

 PLATINUM MOTOCORP LLP (BY03-BY-01), HALI MANDI ROAD, OPPOSITE SHIV MURTI, PATAUDI, DIST. - GURGAON - 122503 PH :9953345381/995334548/9953345330.

PEHOWA

639. KARNAL MOTORS PVT. LTD. (2M02-2M-01), NEAR SHARMA SERVICE STATION, KURUKSHETRA ROAD, PEHOWA - 136128 PH :8053906011.

PUNDRI

640. EAKANSH MOTORS PVT. LTD. (BFF1-BFF-01), KILA NO-3/10, KHEWAT 2147 OPP. HARCHARAN FILLING STATION, KAITHAL ROAD, PUNDRI DIST. KAITHAL, HARYANA - 136026 PH-9671788801

PUNHANA

641. PASCO AUTOMOBILES (BIU1-01-BIU-01), KILA NO. 4/2, PUNHANA, DIST.-MEWAT, HARYANA -122508 PH :9991300950, 8059730879.

RADAUR

642. PANDIT AUTOMOBILES PVT. LTD. (D201-EN-02), OPP. JMIT ENGG. COLLEGE, NEAR BUS STAND, RADAUR, DISTRICT-RADAUR, HARYANA -135001 PH 9992113854.

RAJOUND

643. EAKANSH MOTORS (SHV1-SHV-01), MITTAL KHAL BHANDAR, RAJOUND, DISTT KAITHAL -136044 PH:9671788801.

REWARI

644. DINCO 4 WHEELS LLP (AUTO VIBES) (U102-U1-01), BAWAL ROAD, NEAR BYE PASS ROAD, REWARI (HARYANA)) - 123401 PH :7082100200/7082100204/7082100201.

ROHTAK

- 645. JAGMOHAN MOTORS PVT LTD (A601-A6-01), SONEPAT ROAD, ROHTAK - 124001 PH:9467465035.
- 646. JAGMOHAN MOTORS PVT LTD (A601-A6-09), SWAN GARDEN, DELHI ROAD, ROHTAK -124001 PH:9812000357.
- UNIQUE AUTO LEAD LLP (A602-A6-01), KHASRA NO- 3597 JIND ROAD, JIND CHOWK, ROHTAK, HARYANA - 124001 PH:#REFI.

SAFIDON

648. EAKANSH MOTORS PVT. LTD. (U802-JU-05), NEAR BRSK SCHOOL., OPPOSITE RELIANCE PETROL PUMP, PANIPAT ROAD, SAFFIDON, DISTRICT- JIND - 126112 PH :9416616603.

SAMPLA

649. JAGMOHAN MOTORS PYT LTD (NY01-NY-01), NEAR VASUNDRA CAFÉ, DELHI ROHTAK ROAD, SAMPLA, DISTT. ROHTAK - 124501 PH :9812000351.

SATNALI

650. PLATINUM (SLH1-SLH-01), KHEVAT NO 605, KHATONI NO-1134 KILLA NO.167, VILL: SATNALI, NEAR BHARAT PETROL PUMP MAHENDRAGARH ROAD, HARYANA -123024 (LOCATION: MAHENDRAGARH) - 123024 PH :9910100341.

SHAHABAD

651. KARNAL MOTORS PVT. LTD. (CCR2-CCR-01), KHEWAT NO. 460, KATONI NO. 486, KHASRA NO. 170, TEHSIL - SHAHABAD, DIST.-KURUKSHETRA. - 136135 PH: 8222022338.

SIRSA

652. SHAKTI MOTORS PVT.LTD. (E401-E4-01), DABBALI RD., SIRSA, HARYANA - 125055 PH :8222900201.

SIWANI

653. SARAOGI AUTOMOBILES (P) LTD. (HA03-HA-01), OPP.GOVT HOSPITAL, SIWANI BYPASS CHOWK, HISSAR ROAD, SIWANI, DIST. BHIWANI -127046 HARYANA - 127046 PH :867777149

SOHNA

654. PASCO AUTOMOBILES (9506-KZ-03), 56, KILLA NO. 13 (4-10), 18(4-6), 19 (8-0), 22 (8-0), 23 (4-2), VILLAGE - ALIPUR, SOHNA GURUGRAM ROAD, TEHSIL - SOHNA , DISTRICT -GURUGRAM. -122103

PH:08683000902/9873711127/8683000919.

SONIPAT

- 655. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-01), BAHALGARH-DELHI ROAD, OPP. POWER HOUSE, SONIPAT - 131001 PH:9992200372.
- 656. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-02), GAYATRI GARDEN, MURTHAL ROAD, SONEPAT (HARYANA) - 131001 PH :8685005686.
- 657. JAGMOHAN AUTOMOTIVES PVT. LTD. (J502-J5-03), O-11 INDUSTRIAL AREA, SONIPAT, HARYANA. - 131001 PH :9812615000.

TAURU

658. PASCO AUTOMOBILES (BIV1-BIV-01), KILA NO. 34/1/2, REWARI ROAD, TAURU, DIST.-MEWAT, HARYANA - 122015 PH :8683000902, 9873001497, 8683000954, 9671150250,9034926253.

TIGAON

659. TCS (5804-S.IY-01), TCS AUTOWORLD, ARYAN PLAZA, NEEMKA BHUPGARH, TIGAON-BALLABGARH ROAD, FARIDABAD, PIN-121004, HARYANA - 121004 PH :9971422444.

TOHANA

660. SHAKTI MOTORS PVT.LTD. (XP01-XP-01), NEAR GREEN VALLEY PUBLIC SCHOOL, RATIA ROAD, TOHANA - 125120 PH:8572800991.

TOSHAM

661. JAGMOHAN MOTORS PVT LTD (0Y01-0Y-01), BHIWANI ROAD, TEH. TOSHAM, DIST. BHIWANI. - 127040 PH: 8059900566.

YAMUNANAGAR

662. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-01), GOVINDPURI ROAD, JAGADRI, YAMUNANAGAR - 135001

PH:9812455896.

663. PANDIT AUTOMOBILES PVT. LTD. (D201-D2-03), PLOT NO.E-8, INDUSTRIAL AREA, ITI ROAD, YAMUNA NAGAR (HARYANA) - 135001 PH :9812455896.

HIMACHAL PRADESH

ALAMPUR

664. KANGRA VEHICLEADES (RL01-RL-01), KHASRA NO. 1606/1582, STATE HIGHWAY PALAMPUR-SUJANPUR AT JANGAL, VILLAGE -ALAMPUR, DIST.-KANGRA. - 176082 PH. 3898002289.

BADDI

665. GOYAL MOTORS PVT LTD (7D01-CIF-04), KHATAKHATAUNI NO, 28/26, KHASRA NO. 93/56/32 AND 94/56/32, KITAS 2, REVENUE MAUZA – CHAK JANGI, HADBAST NO. 203, TEHSIL – BADDI, DISTRICT – SOLAN, HIMACHAL PRADESH. - 173205 PH : 94/18076972.

BAIJNATH

666. KANGRA VEHICLEADES (BBC1-BBC-01), TASHI JONG, PAPROLA-BAIJNATH, NH-20, KANGRA -MANDI ROAD, TEHSIL BAIJNATH, DISTT. KANGRA - 176115 PH: 3628820603.

BANIKHET

667. PATHANKOT VEHICLEADES PVT. LTD. (BWN1-BWN-01), KHASRA NO.709, KHATA KHATOONI NO.23, BANIKHET, THE-DALHOUSIE, DISTT. CHAMBA - 176303 PH.254186, 23206, 9418048803.

BILASPUR

 COMPETENT AUTOMOBILES CO. LTD. (GY01-6Y-01), KHEWAT NO. 8R KHATAUNI, KHASRA NO. 137/30, 31, MAUZA KOTHI, PARGANA 9, P. O. – CHANDPUR, TEHSIL – SADAR, DIST. BILASPUR, HIMACHAL PRADESH. - 174001
 PH. 7807 168832, 7807800330 / 7807800440.

CHAMBA

- 669. KANGRA VEHICLEADES (D902-JF-03), MOHALLA SULTANPUR, BALU BRIDGE, CHAMBA - 176310 PH:9418059252, 9418045778.
- KANGRA VEHICLEADES (D902-JF-05), KHASRA NO. 88/96,1 & KHASRA NO. 628/276, VILLAGE & PO SAROO, THE. & DISTT. CHAMBA, HIMACHAL PRADESH. - 176310 PH : 9418059252 . 9418013810.

CHOWARI

671. PATHANKOT VEHICLEADES PVT. LTD. (CWV1-CWV-01), KHATA KHATNI NO. 24/32 MIN, KHASRA NO. 90, VILLAGE - LAHRU, P.O. -PARCHHORE, TEHSIL - BHATTIYAT, DIST. -CHAMBA, HAMACHAL PRADESH. - 144416 PH :8824569432

DEHRA

 KANGRA VEHICLEADES (D902-HT-02), VILLAGE & P.O. SUNHET, TEHSIL DEHRA, DIST. KANGRA - 177101 PH:9917013058.

GAGGAL

673. KANGRA VEHICLEADES (BBV1-BBV-01), NATIONAL HIGHWAY-20, ZAMANABAD ROAD, ICHHI, GAGGAL, DISTT. KANGRA, HIMACHAL PRADESH - 176209 PH :9418988832.

HAMIRPUR

674. COMPETENT AUTOMOBILES CO. LTD. (W901-W9-01), VILLAGE TIKKAR, P.O DIDWIN TEHSIL & DISTT, HAMIRPUR - 177401 PH: 9805510276

INDORA

675. PATHANKOT VEHICLEADES PVT. LTD. (BHE1-BHE-01), VILLAGE CHANDOR, PO & TEHSIL INDORA, DISTT. KANGRA, PIN-176401, HIMACHAL PRADESH - 176401 PH :9418008627.

JAISINGHPUR

 KANGRA VEHICLEADES (BVA1-BVA-01), HARSI PATTAN ROAD, OPP. SABJI MANDI, TEHSIL – JAISINGHPUR, DIST. – KANGRA, HIMACHAL PRADESH. - 176095 PH. 9418477756.

JAWALI

677. PATHANKOT VEHICLEADES PVT. LTD. (BXE1-BXE-01), VILLAGE - TIUKARI, NEAR MAHAVIR HOSPITAL LUBH ROAD, TEHSIL -JAWALI, DIST.-KANGRA, HAMACHAL PRADESH. - 176023 PH :9418195333.

JOGINDER NAGAR

678. COMPETENT AUTOMOBILES CO. LTD. (BB01-BB0-01), VILL. DHELU PO DOHAG, JOGINDER NAGAR (H.P.) - 175015 PH:9805005754.

JWALAMUKHI

679. KANGRA VEHICLEADES (CND1-CND-01), KHASRA 880/613, MAUJA BOHAN, TEHSIL JWALAMUKHI, DISTRICT KANGRA - 176031 PH :9418488999.

KULLU

680. COMPETENT AUTOMOBILES CO. LTD. (2Q01-2Q-01), PLOT 384, INDUSTRIAL AREA, SHAMSHI, KULLU (HP) - 175126 PH:7018035136.

KUNIHAR

681. GOYAL MOTORS PVT LTD (BBX1-BBX-01), KHATA NO. – 77, VILLAGE KOTHI, P.O. KUNNIHAR, TEHSHIL – ARKI, DISTRICT – SOLAN, HIMACHAL PRADESH - 173207 PH :9418312472.

MANALI

682. COMPETENT AUTOMOBILES CO. LTD. (BKU1-BKU-01), VILL. CHOURI VIHAR (AALU GROUND), P.O. & THESIL- MANALI, DIST. KULLU, (H.P.) - 175131 PH :9418387465.

MANDI

683. COMPETENT AUTOMOBILES CO. LTD. (B301-B3-01), GUTKAR INDUSTRIAL AREA, DELHI MANDI ROAD, N.H.21 GUTKAR, MANDI-124501 PH.9805513208/9816664891.

NADAUN

684. COMPETENT AUTOMOBILES CO. LTD. (BXA1-BXA-01), VILLAGE JALAN, KHASRA NO.183, PO& TEHSIL NADAUN, DISTT. HAMIRPUR, HIMACHAL PRADESH - 177041 PH.9805737436.

NAGROTA

 KANGRA VEHICLEADES (D902-D9-01), MALAN, NAGROTA - BAGWAN, KANGRA, H.P. - 176047 PH -7018268819

NAGROTA BAGWAN

686. KANGRA VEHICLEADES (D902-D9-06), JHIKLI AMBARI, MOUZA AMBARI, MALAN, NAGROTA BAGWAN, TEHSIL & DISTT. KANGRA, HIMACHAL PRADESH - 176047 PH : 7018268819

NAGROTA SURIAN

687. KANGRA VEHICLEADES (BGI1-BGI-01), KHEWAT NO. 115, KHATAUNI NO. 127, KHASRA NO. 2037, MAHAL BASSA, SUB TEHSIL - NAGROTA SURIAN, DISTRICT - KANGRA. - 176027 PH '9414848999

NALAGARH

688. GOYAL MOTORS PVT LTD (IB02-IB-01), NEAR HP PETROL PUMP, VILLAGE PEERSTHAN, P.O & TEHSIL NALAGARH, DISTT. SOLAN (H.P.) -174101

PH:9418704572.

NFRWA

 GOYAL MOTORS PVT LTD (CRS1-CRS-01), KHASRA NO. 482, VILLAGE – KEDI, TEHSIL – NERWA, DISTRICT – SHIMLA, HIMACHAL PRADESH. - 171210 PH -0418663572

NURPUR

690. KANGRA VEHICLEADES (D902-JG-04), VILLAGE JACHH, PO JASSUR, TEHSIL NURPUR, DISTT. KANGRA - 176201

PH:9418195333.9418041778.

PALAMPUR

691. KANGRA VEHICLEADES (2T01-2T-01), NEAR IOCL PUMP, KANGRA MANDI ROAD, PALAMPUR, DISTT. KANGRA, HIMACHAL PRADESH. - 176061 PH :9418222622/ 9463265072.

PAONTA SAHIB

692. GOYAL MOTORS PVT LTD (A901-8G-02), OPP BIBLIJEET KAUR SENIOR SECONDARY SCHOOL, SHAMSHERPUR, NH-72, PAONTA SAHIB -173025

PH:9459210872.

RAJGARH

693. GOYAL MOTORS PVT LTD (BJX1-BJX-01), KHATA NO. 517/505, 478/8, KHASRA NO. - 38/98 VILLAGE NERI RATAULI, P.O. RAJGARH TEHSIL - RAJGARH, DISTRICT - SIRMAUR, HIMACHAL PRADESH - 173101 PH : 9418312472.

RAMPUR

694. MOTORS PYT LTD (CE21-CE2-01). KHASRA NO. 824/825, MINN NO. 155/396, 163/411, NAGLI, ROHRU ROAD, RAMPUR, TEHSIL – RAMPUR, DISTRICT – SHIMLA. -172001 PH: 9459296572.

ROHRU

695. GOYAL MOTORS PVT LTD (JZ01-JZ-01), CHARGAON SHIMLA ROAD, ROHRU, DISTRICT -SHIMLA - 171207 PH 99418016072.

SALOONI

696. PATHANKOT VEHICLEADES (SES1-SES-01), KHASRA NO. 299/174, VILLAGE. MANJEER, TEHSIL-SALOONI, DISTT. CHAMBA, PIN-176320, HIMACHAL PRADESH - 176320 PH: 9418059252.

SHAHPUR

697. KANGRA VEHICLEADES (SCR1-SCR-01), VILLAGE MANJHGRAN, P.O. DRAMMAN, TEHSIL SHAHPUR, DISTT. KANGRA, HIMACHAL PRADESH - 176206 PH :9459900241.

SHIMLA

 GOYAL MOTORS PVT LTD (A901-A9-01), TARADEVI, SHIMLA,(H.P.) - 171010 PH:9418663572.

SOLAN

 GOYAL MOTORS PVT LTD (7D01-7D-01), DEON GHAT, SOLAN - 173211
 PH 9418138772

UNA

MARH

 COMPETENT AUTOMOBILES CO. LTD. (QD01-QD-01), VILLAGE RAINSARY, P.O. JHALERA, TEHSIL & DISTRICT: UNA - 174303 PH:9805737436.

JAMMU

701. JAMKASH VEHICLEADES PVT. LTD (BPM-1-BPM-01), KHASRA NO. 269, LOWER MUTHI DHARMAL, DIST.-JAMMU, STATE -JAMMU & KASHMIR. - 181205 PH 7006898474.

JAMMU & KASHMIR

CHOWKI CHOURA

 JAMU MOTORS (SDY1-SDY-01), KHASRA NO. 37 MIN, ADJACENT TO J&K BANK, JAMMU POONCH HIGHWAY, CHOWKI CHOURA, JAMMU & KASHMIR. 185154 PH 9589375080

MAHANPUR

 JAMMU MOTORS (SPK1-SPK-01), MAHANPUR, DISTRICT KATHUA, TEHSIL MAHANPUR -JAMMU & KASHMIR. - 184202 PH :9596975060.

MANJAKOTE

 JAMKASH VEHICLEADES (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR PHC ROAD MANJAKOTE, TEHSIL MANJAKOTE, DISTRICT RAJOURI, J&K - 185131 PH 7006014395.

VLIAYPUR

 JAMMU MOTORS (OZ02-01-OZ-01), JAMMU PATHANKOT HIGHWAY, VIJAYPUR (SAMBA), J&K - 184120 PH -9596975060

JAMMU AND KASHMIR

AKHNOOR

 JAMMU MOTORS PVT. LTD. (2X02-2X-01), MAIN ROAD DASKAL, TEHSIL – AKHNOOR, DISTRICT -JAMMU - 181201 PH :9419118393.

ANANTNAG

 PEAKS AUTO PVT. LTD. (2Y01-2Y-01), NH-1A, MOUZA UROONHALL, THE & DISTT. ANANTNAG - 228165 PH:9519275151.

BANDIPORA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-OA-04), AJAR BANDIPORA, J&K - 193502 PH -9149726427

BARAMULLA

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (8C01-8C-01), VILLAGE SANGRAMA, WAGAROO, BARAMULA - 193101 PH : 7889612218

BHADRAWAH

710. J& K VEHICLEADES PVT. LTD (AKA1-AKA-01), KHASRA NO.2863, LOWER SUNGLI UNIVERSITY ROAD, BHADERWAH, DISTT. DODA, J&K -182222 PH :9419796821.

BHASOLI

711. JAMKASH VEHICLEADES PVT. LTD. (GLK1-GLK-01), ZERO MORTH, BASHOLI, DISTT. KATHUA, BASHOLI, PIN-184201, JAMMU & KASHMIR - 184201 PH :9018847230.

BUDGAM

 HIGHLAND AUTOMOBILES PVT.LTD (1202-CUG-04), KHASRA NO. 208 MIN, KHEWAT NO. 9 AND KHATTA NO. 55, MOUZA - PALLAR, TEHSIL AND DIST.-BUDGAM. - 191111 PH :9419019898

DAYALACHAK

713. JAMKASH VEHICLEADES PVT. LTD (BFH1-BFH-01), KHASRA NO. 183, KHEWAT NO.14, KHATANO-74, VILLAGE CHAK SAKTA, DAYALACHAK,TEHSIL & DISTT. KATHUA, JAMMU & KASHMIR - 184121 PH: 38892849170.

DODA

 J& K VEHICLEADES PVT. LTD (2Z02-2Z-01), MINTO CAR CARE, AKHYARABAD, MAIN ROAD, DODA CITY, DODA (J&K) - 182202 PH: 9419796821

GANDERBAL

 JAMKASH VEHICLEADES (KASHMIR) PVT LTD (ZA01-ZA-01), MALSHAIE BAGH, GANDERBAL (J&K) - 191201 PH: 9419000828.

HANDWARA

716. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (BYA1-BYA-J), KHEWAT NO-31, KHATTA NO-298, SURVEY NO-3764/1916, MOZA BRARIPORA, TEH- HANDWARA, DIST-KUPWARA, J&K-193221 PH :262322, 9419074012.

JAMMU

717. JAMKASH VEHICLEADES PVT. LTD (3306-33-01), NH-1A, BVE PASS, OPP CHANNI HIMMAT, JAMMU - 180015 PH -6006801639

718. JAMKASH VEHICLEADES PVT. LTD (3306-33-02), NEAR GENERAL BUS STAND, OPP. PHE OFFICE, B.C. ROAD, JAMMU - 180001 PH:9419224014.

 JAMKASH VEHICLEADES PVT. LTD (3306-33-04), SUNJWAN, DISTT. JAMMU - 180011 PH:7006018600.

 PEAKS AUTO JAMMU PVT. LTD. (3312-33-01), GANGYAL INDUSTRIAL AREA, BEHIND COCA COLA FACTORY, JAMMU - 180010 PH :9697001125.

 JAMMU MOTORS PVT. LTD. (3308-33-01), 6, AKHNOOR ROAD, JAMMU. - 180001 PH:9419118393.

722. JAMMU MOTORS PVT. LTD. (3308-33-02), PLOT NO.2, RAJPURA CHUNGI OPP AG OFFICE, AKHNOOR ROAD, JAMMU - 180002 PH :9419118393.

723. PEAKS AUTO JAMMU PVT. LTD. (3312-33-02), KHASRA NO. 425 & 426, KHATA NO. 425 & 426, TOPE SHRKHANIAN (BACKSIDE OF BEST PRICE), AKNOOR ROAD, JAMMU. - 180001 PH:9697001125.

724. JAMKASH VEHICLEADES PVT. LTD (3306-33-07), KHEWAT NO. 25, KHATA NO. 355, KHASRA NO. 544 MIN PALOURA ROAD, JANIPUR, JAMMU. -180007 PH :9419191502.

KATHUA

 JAMMU MOTORS PVT. LTD. (3802-38-01), WARD NO.13, CHAK PARTAP SINGH HATLI MORH, NH1-A, KATHUA TEHSIL KATHUA - 184101 PH :9419118393

KULGAM

 PEAKS AUTO PVT. LTD. (OY01-OY-01), NEAR GRID STATION, MAIN ROAD, KULGAM - 191202 PH:9519275151.

KUPWARA

727. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-AX-03), JAMKASH VEHICLEADES, NEAR GM FILLING STATION, DC OFFICE ROAD KUPWARA - 193223 PH '9672499012

MAGAM

728. JAMKASH VEHICLEADES PVT. LTD (GLS1-GLS-01), KHASRA NO. 34, MOUZA -CHICHILORA, MAGAM, GULMARG ROAD, TEHSIL - KWARHAMA, DIST.-BARAMULLA, JAMMU & KASHMIR. - 193 401 PH :8825016046.

PHINTER

729. JAMKASH VEHICLEADES PVT. LTD (BHV1-BHV-01), KHASRA NO.2293/405 AND KHEWAT NO.81/98, GURHA KALYAL, PHINTER, TEHSIL RAMKOT, DISTT. KATHUA, J&K. - 184203 PH.9419187583.

POONCH

 JAMKASH VEHICLEADES PVT. LTD (AAW1-AAW-01), VILLAGE KUNUYIAN, TEHSIL HAVELI POONCH, JAMMU & KASHMIR. - 185121 PH : 7006014395.

PULWAMA

 PEAKS AUTO PVT. LTD. (1204-MU-03), MUGHAL ROAD, GUNGOO, PULWAMA - 192301 PH:9519275151.

RAJOURI

 JAMKASH VEHICLEADES PVT. LTD (3306-KS-06), KALAKOTE ROAD, VILLAGE BADOL, RAJOURI - 185131 PH:7006014395.

RS PURA

 JAMKASH VEHICLEADES PVT. LTD (3306-JN-03), GAGAIN MORTH, R S PURA, JAMMU, - 181102 PH :9419190370.

SHOPIAN

 PEAKS AUTO PVT. LTD. (AAA1-AAA-01), AGLAR SOFANAMAN, SHOPIAN - 192303
 PH:9519275151

SIDHRA

735. JAMKASH VEHICLEADES PYT, LTD (CDL1-CDL-01), KHASRA NO.80 & KHATA NO.100, VILLAGE SIDHRA, NH1A, NEAR BHARAT PETROLEUM PETROL PUMP, TEH. & DISTT. JAMMU - 180019 PH :9419134144.

SRINAGAR

- 736. HIGHLAND AUTOMOBILES PVT.LTD (1202-12-01), SONWAR, SRINAGAR - 190001 PH :9419057564.
- JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-01), HYDERPURA BY PASS CROSSING, SRINAGAR - 190015 PH:7006037255.
- 738. PEAKS AUTO PVT. LTD. (1204-12-01), BYE PASS ROAD, NH - 1A, NEAR HOTAL SILVER STAR, SRINAGAR - 191101 PH :9519275151.
- JAMKASH VEHICLEADES (KASHMIR) PVT LTD (1205-12-05), NARBAL CROSSING, NH-1A, SRINAGAR, JAMMU & KASHMIR - 190017 PH -0796700750

SUNDERBANI

 PEAKS AUTO JAMMU PVT. LTD. (AAM3-AAM-01), MOUZA THANDA PANI, TEH. SUNDERBANI -185153 PH:9697001125.

SURANKOTE

741. PEAKS AUTO JAMMU PVT. LTD. (TYO3-TY-01), NEAR KNIET KING FILLING STATION, BHARAT PETROLEUM, POONCH MUGHAL ROAD, SURANKOTE, DISTT: POONCH - 185101 PH :9697001125.

THANA MANDI

742. JAMKASH VEHICLEADES PVT. LTD. (SO01-SO-01), HASPLOTE(CHRUNG), TEHSIL THANAMANDI, DISTRICT RAJOURI -185212 -185212 PH :9419267607.

UDHAMPUR

 J& K VEHICLEADES PVT. LTD (D801-D8-01), NATIONAL HIGHWAY 1A, NEAR DAK BANGLOW, UDHAMPUR - 182101 PH :7006881028.

URI (CHAAL BONIYAAR)

744. JAMKASH VEHICLEADES (KASHMIR) PVT LTD (CCK1-CCK-01), KHASRA NO.346/118, KEWAT NO.15, KHATA NO.30, MOUZ-CHALAL (URI), TEHSIL-BONIYAR, DISTT. BARAMULLA - 193123 PH 9419074012

JHARKHAND

BAGODAR

745. RELIABLE INDUSTRIES PVT. LTD. (BHA1-BHA-01), SONTURPI, GT ROAD, GAIDA, BAGODAR, GIRIDIH, JHARKHAND. - 825322 PH:9507102036 9835814404.

BALIAPUR

 CARONE (SNI1-SNI-01), WARD NO 53, HOLDING NO - SAF3797, KANDRA SINDRI, BALIAPUR. -828123
 PH :7980074787.

BOKARO

- 747. HINDUSTAN AUTO AGENCY (B501-B5-02), R1, CITY CENTRE, SECTOR-4, BOKARO STEEL CITY, BOKARO - 827004
- PH :9831550033/707403002/9431128883.
 748. HINDUSTAN AUTO AGENCY (B501-B5-03), M2, SECTOR-4, CITRY CENTRE, BOKARO STEEL CITY (JHARKHAND) 827004
 PH :9431127983/9431128683.

CHAIBASA

749. PEBCO MOTORS (BOY1-BOY-01), KOLHAN TIMBER MERCHANT, NEAR RAILWAY CROSSING, TATA ROAD, CHAIBASA, DISTRICT – WEST SINGHDHUM, JHARKHAND. - 833201 PH -7070449718

CHANDWA

750. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PUT LTD) (SCS1-SCS-01), HILLTOP MOTORS, MAIN ROAD, CHANDWA, PO AND PS, CHANDWA – 829203, DIST – LATEHAR, JHARKHAND - 829203
PH - 7061157502

CHIRKUNDA

751. RELIABLE INDUSTRIES (CQT1-CQT-01), PLOT NO. 109-110, KHAITAN NO. 12, MOUZA NO. 251, P.S. – CHIRKUNDA, DISTRICT – DHANBAD, JHARKHAND. - 828202 PH. 9906937751 9835814404

DALTONGANJ

752. PREMSONS MOTORS UDYOG PVT LTD (5103-MP-02), KACEHRI ROAD, DALTONGANJ, PALAMU - 822101 PH :9835507004.

DEOGHAR

- 753. RELIABLE INDUSTRIES (5202-KR-03), SHAHEED ASHRAM ROAD, JHAUNSAGARHI, DEOGHAR, -814112 PH : 6207129088 7001553251.
- 754. RELIABLE INDUSTRIES (KR02-KR-01), MOUZA -CHAKRIPAHARI, NO. 587, WARD NO. 36, DEOGHAR, JHARKHAND. - 814114 PH. 9835811220, 9835814404.

DHANBAD

 RELIABLE INDUSTRIES (5202-52-01), KATRAS ROAD, DHANBAD, JHARKHAND. - 826001 PH :9835830202 7369945040

- RELIABLE INDUSTRIES (5202-52-02), BEHIND PRABHAT KHABAR, AT: KOLAKUSMA, P.O K.G. ASHRAM, SARAIDHELA, DHANBAD - 828127 PH:8102333474 7369945043.
- RELIABLE INDUSTRIES (5202-52-06), SUGIADIH, HIRAK ROAD, SARAIDHELA, DHANBAD, JHARKHAND. - 828127 PH :9334094940
- 758. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (5205-52-01), NH-2, GT ROAD, SAHARJORI, BARWADA, DHANBAD. - 828 109 PH 9006828000. 9835740433.
- RELIABLE INDUSTRIES (5202-52-09), TILAKRAIDIH, K G ASHRAM, NH-32, GOVINDPUR, DHANBAD, JHARKHAND - 828109 PH :9031096662.

DUMKA

 RELIABLE INDUSTRIES (L701-L7-01), OPP DUDHANI PETROL PUMP, DEOGHAR-PAKUR ROAD,DUMKA (JHARKHAND) - 814101 PH 6205161170

GARHWA

 PREMSONS MOTOR UDYOG PVT. LTD. (VX01-VX-01), KHATA NO. 4, KHESRA NO. 108, 109, THANA NO. 342, PIPRAKALA, GARHWA, JHARKHAND. - 822114 PH : 8862828802 9835507004

GHATSHILA

762. PEBCO MOTORS LTD. (AIA1-AIA-01), PLOT NO. 68, KHASRA NO. 128, MAUZA PAORA, NH-33, NEAR FULL-DUNGRI CHOWK, GHATSHILA, EAST SINGHBHUM (JHARKHAND) - 832303 PH. 9308433388.

GIRIDIH

 RELIABLE INDUSTRIES (5202-3D-04), MOHANPUR, PACHAMBA ROAD, GIRIDIH. -815301 PH :8102924860 8102924858

 RELIABLE INDUSTRIES PVT. LTD (5202-3D-08), PLOT NO. 7, HALKA NO. 12, KHATA NO. 2, THANA NO. 266, MOUZA - CHATRO, GIRIDIH, JHARKHAND. - 815301 PH: 9835835101.

GODDA

765. RELIABLE INDUSTRIES (5202-EJ-05), ASANBANI CHOWK, MAIN ROAD, GODDA. - 814133 PH :6207129088.

GUMLA

766. PREMSONS MOTOR UDYOG PVT. LTD. (5103-20-04), VANASTHALI COMPLEX PUGUCHAMPA NAGAR,NH-23,SISAI ROAD,GUMLA - 835207 PH :9835507004.

HAZARIBAGH

- 767. HINDUSTAN AUTO AGENCY (Y901-Y9-01), NEAR SBI MAIN BRANCH, MAIN ROAD, HAZARIBAGH. -825301 PH. 9304051949, 9263631327.
- 768. HINDUSTAN AUTO AGENCY (Y901-Y9-02), MASIPIRHI, BABHANBAY, HAZARIBAGH, JHARKHAND. - 825301 PH :9216888118 9263631327.

JAMSHEDPUR

- PEBCO MOTORS LTD. (3101-31-01), MEDIUM SECTOR, INDUSTRIAL AREA, ADITYAPUR, JAMSHEDPUR - 831001 PH:9308433388.
- 770. PEBCO MOTORS LTD. (3101-31-02), 16
 BALICHALA, CONTRACTORS & GODOWN AREA,
 SONARI, JAMSHEDPUR 831011
 PH 9308433388
- MOTOR WORLD (3102-31-01), N.H-33, NEAR PARDIH CHOWK, MANGO, JAMSHEDPUR -831012

PH:9431347164, 9570168342.

JAMTARA

772. RELIABLE INDUSTRIES (BOX1-BOX-01), PLOT NO. 483, PARWAT BIHAR, DUMKA ROAD, JAMTARA, JHARKHAND. - 815351 PH: 9835814404.

KATRAS

773. CAR ONE (A UNIT OF RAJHANS AUTOMOBILES PRIVATE LIMITED) (GLP1-GLP-01), RAJHANS REFRACTORIES, OPP. LIC OFFICE, RAJGANJ ROAD, KATRAS, DISTT. DHANBAD, JHARKHAND-828114 - 828114 PH :8910900556.

KHELARI

774. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVI LTD) (CFO-1CFO-01), PLOT 113, MOUZA- BUKBUKA, BESIDE PAHADI MANDIR, KHELARI, RANCHI - 829205 PH :6458222, 9534199997.

KHUNT

775. PREMSONS MOTOR UDYOG PVT. LTD (BOL1-BOL-01), PLOT NO. 747, KHATA NO. 2, DAHUGUTU, CHAIBASA ROAD, KHUNTI, JHARKHAND. - 835 210 PH :9835507004.

KODARMA

776. HINDUSTAN AUTO AGENCY (VR61-VR-01), AT LALMAN DIGTHU, BESIDE KRISHNA SURYA COLD STORAGE, JHUMRI TILAIYA, P.S. – TILAIYA, DISTRICT – KODERMA, JHARKHAND. - 825409 PH :620198836.

LOHARDAGA

777. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (CX01-CX-01), PLOT NO. 14P, 15, 23, RIADA, LOHARDAGA, JHARKHAND. - 835302 PH :9534199997.

MURI

778. HILLTOP MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR BANK OF INDIA, SILLI MAIN ROAD, MURI, PIN - 835102 - 835102 PH :7061157502

RAMGARH

 HINDUSTAN AUTO AGENCY (AV01-AV-01), MARAR, RANCHI ROAD (NH-33), RAMGARH -829122 PH :9263631345.

RANCHI

- 780. PREMSONS MOTORS UDYOG PVT LTD (5103-51-01), 502, KANKE ROAD, RANCHI. -834008 PH -9304807355
- 781. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-03), 10/P, NAMKUM INDUSTRIAL ESTATE BEHIND HIGH TENSION INSULATOR FACTORY, LOWER CHUTIA, RANCHI - 834010 PH :9262899003.
- 782. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-05), PLOT NO.31 & 134, JOHNSON MORH, TUPUDANA INDUSTRIAL AREA, TUPUDANA, RANCHI - 834003 PH -9835507004
- 783. SUDHA MOTORS/A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-02), PLOT NO. 74, OPPOSITE OTG GROUND, HEHAL, RATU ROAD, RANCHI, JHARKHAND - 834005 PH :9534199997. 822799660.
- 784. SUDHA MOTORS(A UNIT OF SUDHA BUSINESS ENTERPRISES PVT LTD) (5107-51-03), PLOT NO. 39, NEAR BOOTY MORE, RANCHI-RAMGARH ROAD, RANCHI. - 835217 PH :9534199997.
- 785. PREMSONS MOTOR UDYOG PVT. LTD. (5103-51-06), PLOT NO.14 (P) KOKAR INDUSTRIAL AREA KOKAR, RANCHI. - 834001 PH: 9835507004.
- 786. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (5109-51-01), KHATA NO. 247, MOUZA - PUNDAG,P.S. - PUNDAG, RANCHI, JHARKHAND. - 834004 PH :7061157502.

787. HILLTOP MOTORS (A UNIT OF HIRALAL MOTORS PVT LTD) (5109-51-02), NEAR KATHAL MORE, ARGORA RANCHI RD, NEAR EKLABBA TOWER, DHIPATOLI, ARGORA, RANCHI - 834004 PH :7061157502.

KARNATAKA

ANEKAL

 PRATHAM MOTORS PVT. LTD (0205-FA-04), SY#45/3, KAVAL HOSAHALLI, KASABA HOBLI, ANEKAL TALUK - 562106 PH :9945540131.

ANKOLA

789. BHARATH AUTO CARS PVT. LTD. (FC02-FC-01), NEAR NARAYANA TEMPLE KAKKAR MUTTA, BELEGULI CROSS, ANKOLA, UK DISTRICT-581314 PH. 7829567400.

ATHANI

 SHANTESHA MOTORS (BWA1-BWA-01), RS NO. 605, SHIVAYOGI NAGAR, BIJAPUR ROAD, ATHANI, DIST. - BELGAUM. - 591304 PH:8884472587.

ATHRADI

791. ABHARAN MOTORS PVT LTD (G601-UK-04), HERABETTU ROAD ATHARDI UDUPI - 576107 PH:9845472500.

ATTIBELI

792. SURAKSHAA CAR CARE PYT. LTD. (BMM1-BMM-01), SURVEY NO.2217/8, SARJAPUR MAIN ROAD, INDIABELE VILLAGE, OPP. TO GOLDEN LIBERTY, ATTIBELE P.O., BANGALORE. - 562107 PH : 3449865665.

BAGALKOT

793. VIJAY MOTOWINGS (ZL01-ZL-01), 180/4-2,BELGUM RAICHUR ROAD,NEAR APMC MARKET YARD, BAGALKOT - 587103 PH 9481289167

BAGEPALLI

794. BIIMAL AUTO AGENCY INDIA PVT. LTD.
(BTV1-BTV-01), HL. NO. 423 AND 436 SRI
SATHYA SAI NAGAR, ON NH-7,
THIMAKALAPALLI BLOCKLII, PARAGODU GRAM
PANCHAYATH, KASABA HOBLI, BAGEPALLI
TALUK, CHIKKABALLAPUR DIST. - 561 207
PH. 3742458888.

BANGALORE

795. MANDOVI MOTORS PVT LTD. (0201-02-01), 24/4,7TH MAIN,WILSON GARDENS,BANGALORE - 560027 PH :9945235511.

- 796. MANDOVI MOTORS PVT LTD. (0201-02-07), 17/A-2&3 IND.SUBURB.IIND STAGE, GORAGUNTEPALAYA, TUMKUR ROAD. YESWANTHPUR, BANGALORE - 560022 PH.9945235537.
- MANDOVI MOTORS PVT LTD. (0201-02-05), NO.2/106 (NEXT TO KASSIA BLDG.),17TH CROSS,MAGADI CHORD ROAD EXTN. VIJAYANAGAR,BANGALORE - 560079 PH 9945235529
- 98. RNS MOTORS (7301-02-03), 2275 TUMKUR ROAD, GURGUNTEPALYA, YESHWANTPUR, BANGALORE - 560022 PH 9606933236
- 799. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-01), NO.- 60/3, VENKATALA VILLAGE, YELAHANKA HOBLI, BANGALORE NORTH TALUK - 560064 PH :9945541034
- 800. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-01), 60/2, MAHADEVPURA, WHITE FIELD ROAD, BANGALORE - 560048 PH :99723 98105.
- 801. RNS MOTORS (7301-02-04), HOSUR ROAD,BOMMANAHALLI,MADIVALA POST,BANGALORE - 560068 PH -9148001412
- 802. MANDOVI MOTORS PVT LTD. (0201-02-08), NO. 70 SARAKKI INDUSTRIAL LAYOUT, J.P. NAGAR, 3RD PHASE, BANGALORE - 560078 PH: 9954235522.
- PRATHAM MOTORS PVT. LTD (0205-02-01), 16, BALLANDUR, SARJAPUR RING ROAD, BANGALORE - 560037 PH 9945540126
- 804. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-02), NO. 69/2, SARAKKI, KANAKAPURA ROAD, BANGALORE - 560078 PH 9077308139
- PRATHAM MOTORS PVT. LTD (0205-02-02).
 STHANIKAM'S ARCADE, OPP. ST THERESA HOSPITAL, DR. RAJ KUMAR ROAD, A BLOCK,RAJAJINAGAR 2 STAGE, BANGALORE -560010
 PH.9900061378.
- KALYANI MOTORS PVT. LTD. (0211-02-01), MYSORE ROAD, PANTHARAPALYA, KENGRI HOBLI, BANGALORE - 583201 PH: 9538887078.
- 807. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-03), NO.71, KALANAAGRAHARA VILLAGE, MOUNT ST. JOSEPH TRAINING COLLEGE FOR JESUITS COMPOUND, IIMB POST, BANNERCHATTA RD., BANGALORE 560076 PH. 9845166612.

- 808. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-04), 6TH CROSS, OFF OLD AIRPORT ROAD, HAL 2ND STAGE POST, BANGALORE-560038 PH 9972398106.
- 809. MANDOVI MOTORS PVT LTD. (0201-02-0C), NO 1 TO 5, NAVODAYA HBSC, 4TH STAGE, 4TH MAIN, RAJAJINAGAR INDUSTRIAL TOWN, BASAWESHWAR NAGAR - 560044 PH :9945/235537
- KALYANI MOTORS PVT. LTD. (0211-02-04), 119/1, 11TH CROSS,MALLESHWARAM,BANGALORE, -560003 PH 9886026519.
- 811. MANDOVI MOTORS PVT LTD. (0201-02-0D), 6/8, SHREE GANGA GARDEN, GANGA NILAYA, HENNUR CROSS, KALYANAGAR POST - 560043 PH - 08/45/12/04/8
- 812. MANDOVI MOTORS PVT LTD. (0201-02-0E), SY NO:26,AMBLIPURA VILLAGE,VATHUR HOBLI,BANGALORE,EAST TALUKA. - 560102 PH:9945235518.
- MANDOVI MOTORS PVT LTD. (0201-02-9B), PLOT NO.-257/1-13, BANNERGHATTA ROAD, N.S. PALYA, BANGALORE - 560076 PH :9945238559.
- 814. KALYANI MOTORS PVT. LTD. (0213-02-02), SY. NO.:58/1A & 61/22, AVALAHALLI, NH-4, K.R. PURAM, BANGALORE. - 560049 PH :9900037122
- 815. SURAKSHAA CAR CARE PVT LTD (0280-02-01), 30/3 K AGRAHARA, HOSUR MAIN ROAD, ELECTRONIC CITY, BANGALORE - 580100 PH 19449868615
- 816. KALYANI MOTORS PVT. LTD. (0213-02-03), NO.129/4, KUNDALAHALLI VILLAGE, OPP. TO BROOKE FIELD HOSPITAL, BROOKFIELD, BENGALURU. - 574239 PH 9900038119
- SURAKSHAA CAR CARE PVT. LTD. (0280-02-02), #54/1, BOMMANAHALLI, HOSUR MAIN ROAD, BANGALORE - 560068 PH :9449865655.
- 818. KALYANI MOTORS PVT. LTD. (0213-02-04), 250/1,BILEKAHALLI, BANNERGHATTA ROAD, BENGALURUE - 560076 PH :9686445406.
- 819. BIMAL AUTO AGENCY INDIA PVT. LTD. (0218-02-04), PLOT NO.37/38, 2ND STAGE, PEENYA INDUSTRIAL AREA, BANGALORE -560058
- PH: 3945237213.

 820. RNS MOTORS (7301-02-0G), 106/7, BELLARY ROAD, NEAR IOC PETROL BUNK, AMRUTHAALLI, NEAR HEBBAL FLYOVER, BENGALURU (KARNATAKA) 560092 PH: 5364848767.

- 821. PRATHAM MOTORS PVT. LTD (0205-02-05), #58/5 KUDLU VILLAGE, NEXT TO ZEE SCHOOL, SARJAPUR HOBLI, ANEKAL TALUK, BANGALORE - 560034 PH :990058466
- 822. RNS MOTORS LIMITED (7301-02-0H), PLOT NO.129, KIADB INDUSTRIAL AREA, HEBBAGODI VILLAGE, BOMMASANDRA, JIGINI LINK ROAD, BANGALORE - 562158 PH 9638965771
- 823. KALYANI MOTORS PVT. LTD. (0291-02-02), 10/1, HEBBAL, AMANIKERE KASABA HOBLI, YOGESH NAGAR, BANGALORE - 560024 PH :9740985324 . 7760983887.
- 824. BIMAL AUTO AGENCY INDIA PVT. LTD. (0286-02-01), #184/185, OPP. FORUM VALUE MALL, WHITE FIELD MAIN ROAD, BANGALORE -560066 PH. 9900245979
- 825. SURAKSHAA CAR CARE PVT. LTD. (0280-02-04), PLOT NO. 8 & 9, NEXT TO BDA COMPLEX, 4TH BLOCK, 100 FT ROAD, KORAMANGALA, BANGALORE, KARNATAKA - 560034 PH :8884419010.
- KALYANI MOTORS PVT. LTD. (0287-02-01), # 10/5, NAGADEVANHALLI, KENGERI, MYSORE ROAD, BANGALORE, KARNATAKA - 560056 PH 9900019961
- 827. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-02-06), PLOT NO. 82, DODDA BANASWADI MAIN ROAD, BEHIND IOC PETROL PUMP, NEXT TO AIYAPPA TEMPLE, BANASWADI, BANGALORE, KARNATAKA - 560033 PH 9738501998
- 828. MANDOVI MOTORS PVT LTD. (0201-02-0H), BBMP NO.4C, WARD NO.83, JOLLY ESTATE, OLD MADRAS ROAD, NAGAWARAPALYA, BANGALORE - 560093 PH: 9945235533.
- VARUN MOTORS PVT. LTD. (0292-02-01), INDO. 72/19-6 & HNO. 67/2, YESHWANTPUR INDUSTRIAL SUBURB, WARD NO. 10, RAJAJI NAGAR, BANGALORE. - 560022 PH :7337834582.
- 830. KALYANI MOTORS PVT. LTD. (0213-02-05), PLOT NO. 74/5, HORMAVU MAIN ROAD, NEAR BBMP OFFICE, KR PURAM HOBLI, BANGALORE. -560043 PH: 9900037114.
- 831. KATARIA AUTOMOBILES PVT. LTD. (0294-02-01), NO. 5, 15TH CROSS, KOLANDAPPA GARDEN, ANEPALYA, POST – AADUGODI, BANGALORE. -560030 PH :7349291802.
- 832. MANDOVI MOTORS PVT LTD. (0201-02-01), KATHA NO.4, SITUATED AT GANAKAL DHAKALE, SRINIVASPURA, KENGERI HOBLLI, UTTARAHALLI, BANGALORE - 560060 PH: 9945235516.

- 833. VARUM MOTORS PVT. LTD. (0292-02-02), BEARING NO. 27/1 & 27/2, SURVEY NO. 41/3 & 42/7 BAGALAGUNTA, HESSARGHATTA MAIN ROAD, NEAR WIDIA SCHOOL BUS STOP, NAGASANDRA POST, BANGALORE. - 560073 PH. 1738286729.
- 834. MANDOVI MOTORS PVT LTD. (0201-02-0.1), SITE NO. 58/1, J.B. KAVAL, MAJOR SANDEEP UNNIKRISHINAN ROAD, VIDYARANYAPURA, BANGALORE. - 560097 PH :9945235514.
- 835. KATARIA AUTOMOBILES PVT. LTD. (0293-02-01), SURVEY NO. 83: 304. 102, VILLAGE – THALAGHATTAPURA, KANAKAPURA MAIN ROAD, NEAR NANDI TOYOTA, UTTARAHALLI HOBLI, TALUK - BENGALURU SOUTH, BANGALORE, KARNATAKA. - 560109 PH :8884434340.
- 836. RNS MOTORS LIMITED (7301-02-0J), SY. NO. 11/2 & 12/1, VILLAGE – ARAKERE, BEGUR HOBLI, BANNERGHATTA ROAD, BANGALORE – 560 076. - 560076 PH. 7760982836.
- 837. SURAKSHAA CAR CARE PYT. LTD. (0280-02-05), SURVEY NO.2/6, BERTENA AGRAHARA, OPP. METRO CASH & CARRY, HOSUR MAIN ROAD, BANGALORE. - 560100 PH 8884471200
- 838. KALYANI MOTORS PVT. LTD. (0211-02-05), SY.NO. 8/4., G. HOSAHALLI MAIN ROAD, GOLLARAHATTI, V. POST, YESHWANTPURA HOBLI, MAGADI MAIN ROAD, BANGALORE -560091 PH 9900080229
- 339. SURAKSHA CAR CARE (0280-02-06), BEARING NO. 54/4-320/2, BEGUR HOBLI, BOMMANAHALLI VILLAGE, BEGUR HOBLI, BANGALORE, KARNATAKA. 560 068 PH 94-09856656
- 840. PRATHAM MOTORS PVT. LTD (0205-02-07), SUVEY NO. 43/1, ON SH-35, VILLAGE - YAMARE, SARJAPUR MAIN ROAD, POST -DOMMASANDRA, TALUKA - ANEKAL, BENGALURU RURAL, KARNATAKA - 562125 PH :9611834659.
- 841. SURAKSHAA CAR CARE PVT. LTD. (0280-02-07), SURVEY NO 106/2A, CHANDAPURA MUNICIPAL TOWN, MUTHASANDRA HOSUR MAIN ROAD, ANEKAL TQ, BANGALORE, KARNATAKA -560099
 - PH:94498 65666.
- 842. KALYANI MOTORS (0291-02-03), SURVEY NO. 194/5, HUNSEMARANAHALLI, JALA HOBLI, DEVANAHALLI TALUK, (YELAHANKA NEW TALUK), NEW KEMPEGOWDA INTERNATIONAL AIRPORT ROAD, NORTH PH :9740985324.

843. MANDOVI MOTORS (0201-02-09), MUNICIPAL NO. 133 (OLD NO.S 133 & 133/1), BULL TEMPLE ROAD, BBMP WARD NO. 49, K G NAGAR, BANGALORE, KARNATAKA-560018. - 560018 PH :9945235516.

BANGALORE (HEBBAGODI)

844. RNS MOTORS (0210-02-01), SURVEY NO. 48, HEBBAGODI, HOSUR MAIN ROAD,ANEKAL TALUK, BANGALORE URBAN DIST, KARNATAKA - 560 099 PH 6366938829

BANGALORE- KP ROAD

845. KALYANI MOTORS (0213-02-06), SURVEY NO. 67, NH-209, NAVARATAN GARDENS, (NEAR IOCL PETROL BUNK) DODDAKALASANDRA VILL., UTITARHALLI HOBLI, KONANAKUNTE, KANAKAPURA-KENGERI ROAD, BANGALORE, KARNATAKA - 560062 PH 3900039844/9900073254.

BANGARPET

146. SURAKSHA CAR CARE PVT. LTD. (OR04-OR-01), 180/4 OPP. APMC YARD, KOLAR-BANGARPET ROAD, BANGARPET (KARNATAKA) - 563114 PH: 9449865601.

BANGLORE - BOMMANAHALLI

847. VARUM MOTORS PVT LTD (0292-02-03), SV NO: 136 (OLD NO 54/8) SANGEGURUVANAHALLI(VP) KAMAKSHIPALAYA, WARD NO: 17, VRISHABHAVATHI NAGAR, MAGADI ROAD, BANGALORE NORTH THALUK, BANGALORE KARNATAKA - 560079 PH 9313883062

BANTWAL

848. MANDOVI MOTORS PVT LTD. (TR01-TR-01), NH-75, PANEMANGALORE, B.C. ROAD, BANTWAL, KARANATAKA - 574231 PH:9008810123.

BELGAUM

- 849. SHANTESHA MOTOR (P) LTD (E801-E8-01), MUJAWAR COMPOUND,NEHRU NAGAR,BELGAUM, - 590010 PH:9902043711.
- 850. SHANTESHA MOTOR (P) LTD (E801-E8-04), PLOT NO. 8, SURVEY NO. 251/51, HAVLOCK ROAD CAMP, BELGAUM - 290010 PH 9588645387.
- 851. SHANTESHA MOTOR (P) LTD (E801-E8-03), CTS NO. 519, 520, BESIDE PARATA CORNER, CONGRESS ROAD, TILAKWADI, BELGAUM - 590006 PH :8884433911.
- 852. SHANTESHA MOTORS (P) LTD (E801-E8-06), PLOT NO. 21, RS NO. 29, KIADB INDUSTRIAL AREA, KIADB BAUXITE ROAD, KANGRALI BK, BELGAUM. - 590010 PH :9731396805.

BELLARY

853. K.P.F. PVT. LTD. (G201-G2-01), P.B. NO. 58,BELLARY HOSPET ROAD,ALLIPURA,BELLARY - 583101 PH :9449876025

BELTHANGADY

854. BHARATH AUTO CARS PVT. LTD. (4503-HM-04), MAIN ROAD, BELTHANGADY, BELTHANGADY TALUK DK DISTRICT - 574214 PH :9886543230.

BHADRAWATI

855. SHRUTI MOTORS (FB01-FB-01), SURVEY NO. 18/4, BH ROAD, KADADAKATTE HOBLI, KADADAKATTE, BHADRAVATI, SHIMOGA DIST., KARNATAKA - 577229 PH -7898885404

BHATKAL

856. BHARATH AUTO CARS PVT. LTD. (CEF1-CEF-01), SURVEY NO. 157/2A, SUSGADI VILLAGE, NH66, BHATKAL, UTTARKANNADA DISTRICT, KARNATAKA. - 581320 PH :9008693940.

BIDAR

- 857. LAHOTI MOTORS PVT. LTD (EX01-EX-01), SI 50/51,PRATAP NAGAR, UDGIR ROAD, KIADB INDUSTRIAL AREA, NAUBAD, BIDAR - 585402 PH :8884412049.
- 858. LAHOTI MOTORS PVT. LTD (EX01-EX-02), PLOT NO. 58, NAUBAD INDUSTRIAL AREA, PRATAP NAGAR, BIDAR. - 585 401 PH :9108707709.

BIJAPUR

859. RNS MOTORS (7301-T7-01), SURVEY NO.25K/1, CHITRADURGA SHOLAPUR ROAD, VIJAYPURA, BIJAPUR DISTT. KARNATAKA - 586109 PH :8861208998.

BUDHIGERE

860. BIMAL (SGM1-SGM-SGM1-01), KHATTA NO:115,SY, NO. 128/33, MANDUR MAIN ROAD, BUDIGERE CROSS, MANDUR VILLAGE, NEXT TO IOCL PETROL BUNK, BANGALORE EAST TALUK, BANGALORE, - 560049 PH :9742259528.

BYNDOOR

881. ABHARAN MOTORS PVT LTD (BUH1-BUH-01), 3-256 & 3-257, SOUPARNIKA COMPLEX, NH 66, VILLAGE - YEDATHRE, BYNDOOR, KUNDAPUR TALUK, UDUPI DISTT. - 576214 PH :7889751777

CHALLAKERE

862. SAKETH AUTOMOBILES (CKN1-CKN-01), SITE NO. 9 & 10, SY. NO. 96/1, OPP. SUJIMALLESHWARA NAGAR, BELLARY ROAD, CHALLAKERE. - 577522 PH :988550126

CHAMARAJANAGAR

863. MANDOVI MOTORS PVT LTD. (DE01-0E-01), RAJ KAMAL BUILDING, SATHYAMANGALA ROAD, KUVEMPU EXTENSION, CHAMRAJNAGAR (KARNATAKA) - 571313 PH -9845445586

CHANNAGIRI

864. SHRUTI MOTORS (BUQ1-BUQ-01), SURVEY NO.5, MACHANAYAKANAHALLI, OPP. FIRE STATION, CHITRADURGA ROAD, N.H.13, CHANNAGIRI DISTT. DAVANGERE - 577213 PH 7899934143

CHANNAPATNA

865. KALYANI MOTORS PVT. LTD. (BSX1-BSX-01), PROPERTY NO.58, MALUR GRAMA, MALLUR HOBLI, CHANNAPATNA TALUKA RAMANAGARA DISTRICT - 562160 PH :9845066682.

CHANNARAYAPATNA

866. VENKAT MOTORS (HC01-HC-01), PLOT NO. 389, 36/3, 132/1, BESIDES THIRUMALA RICE MILL, MYSORE ROAD, CHANNARAYAPATNA, DISTRICT: HASSAN, KARNATAKA. - 573116 PH:8147077144

CHICKBALLAPUR

867. BIMAL AUTO AGENCY INDIA PVT. LTD. (KJ02-KJ-01), NO. 169/1, AMMANI KANDAVARAKERE VILLAGE, KASABA HOBLI, CHIKBALLAPURA DISTRICT - 562101 PH: 9742262499.

CHICKMAGALUR

868. SHRUTI MOTORS (B701-3F-02), AIT CIRCLE, KM ROAD, CHIKMANGALUR - 577102 PH :9980157446.

CHIKODI

869. SHANTESHA MOTORS (E801-ZB-05), OPP. IOC PUMP, NEAR B.K.COLLEGE, MIRAJ ROAD, CHIKKODI, KARNATAKA - 591201 PH :7829925790

CHINTAMANI

870. PRATHAM MOTORS PVT. LTD (0205-BQ-06), SURVEY NO. 33, NEXT TO VUIAYA P U COLLEGE, OPP. GOPASANDRA LAKE, SREENIVASPURA MAIN ROAD, CHINTAMANI, KARNATAKA - 563125 PH. 7899761301.

CHITRADURGA

871. SAKETH AUTOMOBILES (AL01-AL-01), NEAR VEDA COMPLEX, NH-4, M H ROAD, CHITRADURGA - 572130 PH :9686550313

DAVANGERE

872. SHRUTI MOTORS (S101-S1-01), NEAR PANCHDEVASTHANA, P. B. ROAD, DAVANGERE, KARNATAKA - 577004 PH :9880401284.

DAVENGERE

873. SHRUTI MOTORS (S101-S1-02), DOOR NO. 473/1, SURVEY NO. 18/1, BESIDE GMIT COLLEGE, OPP. M&M SHOWROOM, OLD P. B. ROAD, DAVANGERE, KARNATAKA - 577001 PH 9880401284

DEVANAHALLI

874. BIMAL AUTO AGENCY INDIA PVT. LTD. (WH01-WH-01), SURVEY NO.241/114/6, 11TH WARD, BB ROAD, DEVANAHALLI, BANGALORE DISTT: - 562110 PH. 9742262514.

DHARWAD

875. REVANKAR MOTORS PVT. LTD. (BIXT-BIX-01), SURVEY NO.1, PLOT NO. 10, OLD PB ROAD, OPP. KVG BANK, SAYDAPUR VILLAGE, DHARWAD, KARNATAKA - 580001 PH :8861006707.

DODDABALLAPUR

876. PRATHAM MOTORS PVT. LTD. (BUA1-BUA-01),
PLOT NO. 50, OBADENAHALLI INDUSTRIAL
AREA, DODDABALLAPUR 3RD PHASE, SY. NO.
107, AREHALLI GUDDADAHALLI, KASABA HOBLI
TALUK - DODDABALLAPUR, DISTRICT BENGALURU RURAL. - 561203
PH - 9886871887

GADAG

877. RNS MOTORS (7301-RK-0E), PLOT NO. 64, DIAGONALLY OPP. REGIONAL TRANSPORT OFFICE, HUBLI GADAG MAIN ROAD, GADAG -582103 PH :9538925602.

GANGAVATI

878. MUNEER ENTERPRISES PVT. LTD. (N701-KA-03), JAGANMATHA COMPLEX,RAICHUR ROAD,GANGAVATI, -583227 PH :9449870754.

GAURIBIDANUR

879. MANDOVI MOTORS PVT LTD. (BUY1-BUY-01), NO.592/522, E DIVISION, OPP. PUSHPANJALI TALKIES, B.H. ROAD, GAURIBIDANUR TOWN, DISTT. CHIKBALLAPUR - 561210 PH :8217453513.

GOKAK

880. SHANTESHA MOTORS PVT. LTD. (IR01-IR-01), RS NO.106/3D/2A, APMC ROAD, GOKAK, BELGAUM DISTT. - 591307 PH:7829925760.

GONIKOPPAL

881. MANDOVI MOTORS PVT LTD. (2501-U3-07), KAIKERY VILLAGE,GONIKOPPAL,, - 571213 PH :9900064873.

GUDIBANDHA

882. BIMAL AUTO AGENCY INDIA PVT. LTD.
(SGT1-SGT-1), DOOR NO:160, 1ST WARD, OPP
TO GOVERNMENT BUS STAND, BAGEPALLI
ROAD, GUDIBANDA, CHICKABALLAPURA
DISTRICT KARNATAKA - 561209
PH:9742261903.

GULBARGA

- 883. LAHOTI MOTORS PVT. LTD (E902-E9-01), LAHOTI GARDENS,NEAR KMF, HUMNABAD ROAD,GULBARGA - 585104 PH:9480825014.
- 884. LAHOTI MOTORS PVT. LTD (E902-E9-02), DOOR NO. 7-12-11, 2ND BLOCK, OPP. GUNJ BUS STAND, HUMNABAD ROAD, GULBARGA, KARNATAKA. 585104 PH. 7619342035

GUNDLUPET

885. FRIENDLY MOTORS (INDIA) PVT. LTD. (BPU1-BPU-01), ASSESSMENT NO. 2491/S. NO. 51/1, 2, 3, N.S. 11 AND ASSESSMENT NO. 2494/S. NO. 51/ N.S. 11, MYSORE-OOTY ROAD, GUNDLUPET. - 571111 PH -9688655799

HAGARIBOMMANAHALLI

886. MUNEER ENTERPRISES PVT. LTD. (BUX1-BUX-0), SITE NO.112AU2 & 112A/3, BLOCK NO.2, WARD NO.3, HAGARIBOMANAHALLI PANCHAYAT, BELLARY DISTRICT. - 583212 PH :9481343007.

HALIYAL

887. RNS MOTORS (SFM1-SFM-01), SURVEY NO: 347P/27, DOOR NO:B1180/15 & B1180/16, HANUMAN COMPLEX, HALIYAL CIRCLE, MAIN ROAD, HALIYAL TOWN & TALUK, UTTARA KANNADA DISTRICT, KARNATAKA - 581329 PH: 8284200200.

HARAHOLLI

888. SURAKSHA (SIH1-SIH-SIH1-01), SURVEY NO. 40/4, HOSAKOTE VILLAGE, HAROHALLI HOBLI, KANAKAPURA TALUK, RAMANAGARA, - 562112 PH:9449865608.

HASSAN

889. VENKAT MOTORS (C802-C8-01), NO. 326, HASSAN GROWTH CENTRE, H.N. PURA ROAD, HASSAN - 573201 PH 9844044038

HAVERI

890. REVANKAR MOTORS PVT LTD (BBM1-BBM-01), NEAR TIMAE SOCIETY CAMPUS, IJARILAKAMAPUR, PB ROAD, HAVERI - 581110 PH : 7022016903.

H-CROSS

891. BIMAL AUTO AGENCY INDIA PVT. LTD. (CRO1-CRO-41), PART NO 1, SITE NO 36, SBT COMPLEX, HOSKOTE-BANGALORE ROAD, KARIYANAPURA, H CROSS, SHIDLAGHATTA TALUK, BANGALORE RURAL DISTT. CHIKKABALLAPURA - 562122 PH. 9739494126.

HEBRI

392. ABHARAN MOTORS PVT LTD (BGD1-BGD-01), SURVEY NO. 61-7C1P1 & 61-2P1, VILLAGE & TALUK - HEBRI, KARKALA, DIST.-UDUPI, KARNATAKA. - 576112 PH 9900077605

HEGGADADEVANA KOTE (H D KOTE)

893. FRIENDLY MOTORS (INDIA) PVT. LTD. (CJC1-CJC-01), SURVEY NO. 5/4, VILLAGE – YARAHALLI, KASABA HOBLI, TALUK – H.D.KOTE, DISTRICT – MYSORE. - 571125 PH -9886855799

HESSARGHATA

894. BIMAL (SGN1-SGN-01), SY NO 294/3, HESARAGHATTA VILLAGE YELAHANKA TALUK, BENGALURU,KARNATAKA - 560088 PH :9743658662.

HOSDURGA

895. SAKETH AUTOMOBILES (BW01-BW0-01), ASSESSMENT NO. 9310/6, PLOT NO. 6, HOSADURGA TOWN, SARASWATI BADAVANE, HOSADURGA, DIST.-CHITRADURGA, KARNATAKA. - 577 527 PH. 7625088946.

HOSKOTE

896. BIMAL AUTO AGENCY INDIA PVT. LTD. (0216-SM-05), NO. 205/108, SITUATED AT HOSKOTE TALUK, KASABA HOSKOTE TOWN, DISTT.- BANGALORE - 562114 PH: 9742281726.

HOSPET

897. MUNEER ENTERPRISES PVT. LTD. (N701-N7-01), BELLARY ROAD,SANKLAPUR,HOSPET, - 583203 PH :7619505001.

HUBLI

898. RNS MOTORS (7301-73-01), PUNE - BANGALOR ROAD, UNKAL, HUBLI - 580025 PH :9538965902.

899. RNS MOTORS (7301-73-0F), GOKUL ROAD MUREDESHWAR BHAVAN, HUBLI - 580030 PH:8861208532.

 REVANKAR MOTORS PVT. LTD. (7303-73-01), CTS NO.165/A, WARD NO.III, DESHPANDE NAGAR, HUBLI (KARNATAKA) - 580029 PH :8792008301

HUNSUR

901. FRIENDLY MOTORS(INDIA) PVT. LTD. (GLI1-GLI-01), M-18 & M-19, KSSIDC INDUSTRIAL ESTATE, BM BYPASS ROAD, HUNSUR, MYSORE DISTRICT, KARNATAKA - 571105 PH :7022696999

JEWARGI

 LAHOTI (SLI1-SLI-01), S NO: 125, PLOT NO: 7, FILTER BED ROAD, OPP. BUS DEPOT, JEWARGI, KALABURGI DISTRICT (FORMERLY GULABARGA), KARNATAK-585310. - 585310 PH :9480825004

KADARA

 MANDOVI MOTORS PVT LTD. (BYE1-BYE-01), SURVEY NO.-11/20, KALARA, KADABA POST, DAKSHIN KANNADA DISTT., KARNATAKA -574221 PH: 9740912365.

KADUR

904. SHRUTI MOTORS (BOS1-BOS-01), SHOP NO. 1 & 2, DAGA COMPLEX, ULUKINAKALLU, NEAR PEARLS CLUB. B.H. ROAD, KADUR, DISTRICT – CHIKMAGALUR. - 577548 PH. 8904823736.

KANAKAPURA

905. KALYANI MOTORS PVT. LTD. (BXY1-BXY-01), SURVEY NO. 447/1B, KASABA HOBIL, BUDIGUPPE GRAMA, TALUKA- KANAKAPURA, DISTRICT- RAMANAGARA. KARNATAKA. -562117 PH. 9900599933.

KARKALA

906. ABHARAN MOTORS PVT LTD (G601-HY-03), NH-13, MANGALORE KUDREMUKH ROAD, PULKERI, KARKALA - 574104 PH :9880232666

KARWAR

907. BHARATH AUTO CARS PYT. LTD. (8J01-8J-01), SURVEY NO. 459/2B, 456/2B AND 456/3, CHITTAKULA VILLAGE, KARWAR TALUKA, UTTARKANNADA DISTRICT, KARNATAKA. -581301 PH :7829567400.

KITTUR, BELGAUM

908. SHANTESHA (SF01-SF0-01), PLOT NO. 219, KITTUR INDUSTRIAL AREA (KIADB), POONA BANGALORE HIGHWAY (NH-4), KITTUR TOWN AND TALUK, BELGAUM DISTRICT, - 591115 PH 9731396808.

KOLAR

909. MANDOVI MOTORS PVT LTD. (0201-QU-0F), 67/3 BANGALORE-CHENNAI HIGHWAY, KONDARAJANA HALLI, OPP HOTEL SHANTHI SAGAR, KOLAR. - 563101 PH-9740020734

KOPPAL

 K.P.F. PVT. LTD. (ER01-ER-01), SL. 283/10, NEAR MINI VIDHAN SOUDHA, KOPPAL HOSPET ROAD NH63, KOPPAL - 583238 PH :9449876027.

KRISHNARAJANAGARA (KRNAGARA)

911. FRIENDLY MOTORS(INDIA) PVT. LTD. (SCQ1-SCQ-01), NO:D, DORNAHALLI,DODDEKOPPALU GRAMA PANCHAYAT,KASABA HOBLI, KRISHNARA,JANAGARA, MYSORE DISTRICT,KARNATAKA - 571602 PH : 3971159430.

KRISHNARAJAPET

912. MANDOVI MOTORS PYT LTD, (BMP1-BMP-01), KHATA NO.3094, SY. NO.278, MYSORE CHENNERAYAPATHA ROAD (0PP, TO K.B.C. FUEL STATION), KRISHARAJAPET TOWN, TALUK MANDYA DISTT. KARNATAKA - 571423 PH.9845132038.

KUMTA

913. BHARATH AUTO CARS PVT. LTD.
(AFA2-AFA-01), MALLYA'S COMPOUND, NH-66,
ALVEKODI KALBAGH VILLAGE, KUMTA
(KARNATAKA) - 581334
PH :9448979530.

KUNDAPUR

914. ABHARAN MOTORS PVT LTD (G601-CY-02), NH-17, THAKKATTE, KUNDAPURA - 272877 PH:9880197524.

KUNIGAL

915. SAKETH AUTOMOBILES (VQ01-VQ-01), NEAR KRS AGRAHARA,BM ROAD, KUNIGAL, TUMKUR DISTRICT, KARNATAKA - 572130 PH 9686550127.

KUSHAL NAGAR

916. MANDOVI MOTORS PVT LTD. (VN01-VN-01), SY NO:88,MADAPATANA,KUSHAL NAGAR,SOMVARPUR,NORTH KODAGU, KARNATAKA - 571234 PH :9900080893.

LINGASUGUR

917. MUNEER ENTERPRISES PVT. LTD. (BOQ1-BOQ-01), PLOT NO. 11, BASAMMA COMPLEX, RAICHUR ROAD, LINGSUGUR, RAICHUR, KARNATAKA - 584122 PH :9480830255.

MADDUR

918. MANDOVI MOTORS PVT LTD. (BMK1-BMK-01), SURVEY NO 802/2A4B, NEAR SANJAY THEATRE, BM ROAD, MADDUR TOWN,MANDYA DISTRICT, KARNATAKA - 571428 PH :90080 31608

MADIKERI

 FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-QX-02), BASAPPA THEATURE BUILDING, DASAWAL ROAD, MADIKERI KODAGU DISTRICT. - 571201

PH:9606073867.

MAGADI

220. PRATHAM MOTORS PVT. LTD. (BHX1-BHX-01). SY NO:92/2, THIRUMALAI VILLAGE, KASABA HOBLI, MAGADI TOWN & TALUK, RAMANAGARA DISTRICT, KARANATAKA - 562120 PH:9900058483.

MANDYA

921. MANDOVI MOTORS PVT LTD. (2501-BD-06), 1660/A, KALLAHALLI EXTENSION, M.C. ROAD, -571401 PH -9611165873

MANGALORE

922. MANDOVI MOTORS PVT LTD. (4502-45-01), ARVIND BUILDING, BALMATTA ROAD, HAMPANKATTA, MANGALORE - 575001 PH :9845107701.

 BHARATH AUTO CARS PVT. LTD. (4503-45-01), NH-17, KUNTIKAN JUNCTION, DEREBAIL, NEAR A.J. HOSPITAL, MANGALORE - 575004 PH:9886785730.

924. MANDOVI MOTORS PVT LTD. (4502-45-03), NO., HASSAN GROWTH CENTRE,ADYAR,N.H. -48,MANGALORE - 575007 PH:9845514146.

925. MANDOVI MOTORS PVT LTD. (4502-45-07), BALLAL INDUSTRIAL ESTATE, YAYYADI, MANGALORE,KARNATAKA - 575008 PH :9880079235.

BHARATH AUTO CARS PVT. LTD. (4503-45-06), PLOT NO. 290/1, 291/1, KODIALBAIL VILLAGE, NEXT TO BHARATH BEEDI WORKS PVT. LTD., BUNTS HOSTEL, KADRI ROAD, MANGALORE, KARNATAKA - 575002 PH 9886333030

927. MANDOVI MOTORS PVT LTD. (4502-45-08), DOOR NO. 2-63/4, SUJITH BAGH LANE, YEYYADE, MANGALORE, DISTRICT – DAKSHINA KANNADA, KARNATAKA - 575008 PH-9880278077. BHARATH AUTO CARS PVT. LTD. (4503-45-08).
 S. N. 0. 1376/1-4. 1376/1-2-A1P1, 241P3.
 1373/1-40, 1369/1-40-A2, KASABA BAZAR, KANDADAPALLI, KUDROLI, TALLIK - MANGALORE, MANGALORE, KARNATAKA. - 575003
 PH :9886785730.

MUDBIDRI

929. BHARATH AUTO CARS PVT. LTD. (4503-HN-03), BHARATH BEEDI COMPOUND, NEAR ALVAR'S HOSPITAL, MOODBIDRI - 574227 PH :9886785430.

MUDHOL

930. VIJAY MOTOWINGS (ET01-ET-01), PLOT NO. 3B, IN NARS NO. 15-2, WARD NO. 5, VISHWESHWAR COLONY, LOKAPUR ROAD, MUDHOL TOWN, BAGALKOT DIST. - 587 313 PH -9606046173

MULK

 BHARATH AUTO CARS PVT. LTD. (4503-QV-05), BHARATH BEEDI COMPOUND, NH-17 MULKI -574154 PH :9986020730.

MURUDESHWAR

932. RNS MOTORS (7301-T8-02), NH-17, MANGAL ORE-BOMBAY ROAD, MURUDESHWAR, KARNATAKA - 581350 PH -953895999

MYSORE

- MANDOVI MOTORS PVT LTD. (2501-25-01), NO: 5 K.R.S.ROAD, MYSORE - 570005 PH:9945248860.
- MANDOVI MOTORS PVT LTD. (2501-25-05), NO. 182/145/C, BANNUR ROAD, SIDHARTHA NAGAR, MYSORE, KARNATAKA - 570011 PH :9845939936.
- FRIENDLY MOTORS (INDIA) PVT. LTD. (2502-25-01), MANATHAVADI ROAD, VIDYARANYA PURAM, MYSORE - 570008 PH : 7259255558.
- MANDOVI MOTORS PVT LTD. (2501-25-08), 217/2., HUNSUR ROAD, HINKAL POST, MYSORE, KARNATAKA - 570017 PH :9845939937.

NAGAMANGALA

397. MANDOVI MOTORS PYT LTD (SFK1-SFK-01). SURVEY NO:3316/2327, VISHALAXAMMA COMPLEX, T B BADAVANE B M ROAD, NAGAMANGALA TOWN, MANDYA DISTRICT, KARNATAKA - 571432 PH :9845132038.

NANJANGUD

938. FRIENDLY MOTORS (INDIA) PVT. LTD. (BYK1-BYK-01), 4340/4159/4, HULLAHALLI ROAD, NANJANGUD, DISTRICT – MYSORE, KARNATAKA. - 571301 PH -0888587570

NARASIMHARAJAPURA

939. SHRUTI MOTORS (SPP1-SPP-01), SURVEY NO # SURVEY NO.173, P KOPPA ROAD, NAGALAPURA VILLAGE,NARASIMHARAJAPURA, CHIKMAGALU R DIST.,KARNATAKA - 577134 PH :8310187660.

NELAMANGALA

940. RNS MOTORS LIMITED (BBH1-BBH-01), NO.167/2, TUMKUR ROAD, KASABA HOBLI, NH4, NELAMANGALA, BANGALORE RURAL DT., BENGALURU, KARNATAKA - 562123 PH. 7258975385

NELYADI

941. BHARATH AUTO CARS PVT. LTD.
(BPF1-BP-01), SURVEY NO. 97/11P AND
SURVEY NO. 97/9, UILAGE - HOSAMAJALU
KAUKRADY, POST - NELYADI, TALUK - PUTTUR,
DIST.-DAKSHIN KANNADA . - 574229
PH -986072730

OORGAUMPET

942. BIMAL AUTO AGENCY (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS, SITE NO:10, NEW KATHA NO: 251, ROBERTSONPET, KGF, OORGAUMPET, KOLAR DIST, KARNATAKA-563122 - 563122 PH :9513748707.

PADUBIDRI

943. ABHARAN MOTORS PVT LTD (CSI1-CSI-01), PLOT NO. 51/20, VILLAGE – PADUBETTU, PADUBIDT TOWN, TAILAGE – DISTRICT – UDUPI, KARNATAKA. - 574111 PH :9880232999.

PUTTUR

M44. BHARATH AUTO CARS PVT. LTD. (4503-CZ-02), NEAR RAIWAY STATION, HARADY, PUTTUR -517583 PH :9886072730.

RAICHUR

 MUNEER ENTERPRISES PVT. LTD. (N701-3K-02), #12-10-64, GOUSHAL ROAD, SIYA TALAB AREA, RAICHUR - 584101 PH :9480830264.

RAMANAGARAM

246. KALYANI MOTORS PVT. LTD. (0211-JB-02), #K1318/2034C, OPP TO ROTARY HOSPITAL, BM ROAD, RAMNAGARAM - 571511 PH :9686689007.

RANEBENNUR

947. REVANKAR MOTORS (BXV1-BXV-01), SCHEDULE A-2, OPP. STJIT ENGINEERING COLLEGE, PB ROAD, RANEBENUR, KARNATAKA. - 581115 PH:8830947883.

SAGAR

948. SHRUTI MOTORS (WF01-WF-01), BESIDE H GANAPATHIYAPPA PETROL BUNK (BP), B H ROAD, NH-206, SAGAR, SHIMOGA DISTT. -577401 PH-9740014703.

SAKLESHPUR

949. VENKAT MOTORS (BPW1-BPW-01), SITE NO. 19, 3RD WARD, SARASWATHIPURAM, SAKLESHPUR TOWN, DISTRICT – HASSAN. -573134 PH.7892809634.

SARJAPURA

 PRATHAM MOTORS PVT. LTD. (BSY1-BSY-01), SURVEY NO. 476/3, SARJAPUR TOWN, TALUKA – ANEKAL, SARJAPUR HOBLI, DISTRICT – BANGALORE URBAN, KARNATAKA. - 562125 PH. 7760962890.

SHIMOGA

- 951. SHRUTI MOTORS (B701-B7-01), K.NO 599, SHANKARMUTT ROAD, SHIMOGA - 577201 PH '9880401283
- 952. SHRUTI MOTORS (B701-B7-03), BLOCK L-1, INDUSTRIAL ESTATE, BEHIND HP PETROL BUNK, SAGAR ROAD, SHIMOGA. - 577204 PH:9886829239.
- SHRUTI MOTORS (B701-B7-05), SURVEY NO. 41/3 & 41/4, HONNALI ROAD, SHANTHI NAGAR, SHIMOGA. - 577201 PH :9986825115.

SIDDAPUR

954. BHARATH AUTO CARS PVT. LTD.
(BPY1-BPY-01), SURVEY NO. 211, NEAR IOCL
PETROL BUNK, JOB GRAD, VILLAGE – HOSUR,
TALUK – SIDDAPUR, DISTRICT – UTTARA
KANNADA. - 581355
PH 94484072730

SIRISI

955. RNS MOTORS LTD (MQ01-MQ-01), SURVEY NO 43/B, LANDAKANALLI VILLAGE, DODNALLI GRAMA,SIRSI TALUK AND HOBALI, UTTAR KANNADA, KARNATAKA - 581402 PH :9895979023.

SIRSI

956. RNS MOTORS (7301-MQ-0D), K H B COLONY, SIRSI - 581402 PH 9538925606

SIRUGUPPA

957. MUNEER ENTERPRISES PVT. LTD. (CTN1-CTN-1), SITE NO.31C/16 & PLOT NO.1, BELLARY - SIRUGUPPA MAIN ROAD, SIRUGUPPA TALUK, BELLARY DISTRICT. -583121 PH :7619505001.

SOMWARPET

958. MANDOVI MOTORS PVT LTD. (CSG1-CSG-01), SURVEY NO.130 SITUATED AT MADIKERI ROAD, NAGROOR VILLAGE, BALAGUNDA POST, SOWMARPET TALUK, NORTH KODAGU DISTT. -571236 PH :9845115665.

SRINIVASAPURA

959. SURAKSHAA CAR CARE PVT, LTD.
(BUR1-BUR-01), SY NO. 40, VPRD NO. 86,
PROPERTY NO. 84 & 87, CHALDIGANA HALLI
GRAMA PANCHAYATH, PANNASAMAKANA
HALLI VILLAGE, SRINIVASAPURA POST &
TALUK, DIST-KOLAR, KARNATAKA - 563 135
PH 3449865601.

SULLIYA

 MANDOVI MOTORS PVT LTD. (4502-EW-04), ODABAI SULLIA, MANGALORE MYSORE ROAD, KARNATAKA - 574239 PH :990002325.

SURATHKAL

961. MANDOVI MOTORS PVT LTD. (4502-7G-02), KANA ROAD, SURATHKAL - 574158 PH:9845514143.

T. NARASIPURA

962. MANDOVI MOTORS (SFL1-SFL-01), KHATA
NO-472/473/474, OPP TO SRI RAGHAVENDRA
SWAMY MUTT. CHAMARAJANAGAR ROAD, T.
NARASIPURA TOWN, MYSORE DISTRICT,
KARNATAKA - 571124
PH :9845132038.

THIRTHAHALLI

 SHRUTI MOTORS (BQR1-BQR-01), PLOT NO. 1507/2187, OPP. TO HEGDE PETROL PUMP, AGUMBE ROAD, THIRTHAHALLI. - 577432 PH:7795851011.

THOKOTU

964. BHARATH AUTO CARS PVT. LTD. (QW01-QW-01), NH-66, KAPIKAD, ULLAL,THOKOTTU, DAKSHINA KANNADA DISTT. - 575017 PH :9538796330.

TIPTUR

965. SAKETH AUTOMOBILES (H101-HV-03), BANDIHALLI INDUSTRIAL ESTATE, N.H.:206, TIPTUR, KARNATAKA - 572201 PH :9945301023.

TUMKUR

966. SAKETH AUTOMOBILES (H101-H1-01), SIRA ROAD, TUMKUR - 572106 PH :9686550323.

UDUPI

- ABHARAN MOTORS PVT LTD (G601-G6-01), N.H.
 NITTUR, UDUPI 576103
 PH:9880232999.
- 968. ABHARAN MOTORS PVT LTD (G601-G6-05), NO. 305/1C, DOOR NO. 5-51A, RAILWAY STATION ROAD, INDRALI, UDUPI, DISTT. - UDUPI. -576101 PH 9686694341.

UJIRE

969. BHARATH AUTO CARS PVT. LTD.
(BWT1-BWT-01), SURVEY NO. 237-2B1,
MANGALORE-CHARMADY ROAD, NEAR INDIAN
OIL PETROL PUMP, SAMPIGE NAGAR, UJIRE,
BELTHANGADY TALUKA, DISTT. DAKISHINA
KANNADA, KARNATAKA. - 574240
PH. 3986176130.

UPPINANGADI

 MANDOVI MOTORS PVT LTD. (4502-NL-05), NR.PADMA VIDYA IOC PETROL STATION-34, NEKKILADY, UPPINANGADY - 574241 PH : 9740912365

VIJAYPURA

971. BIMAL AUTO AGENCY (BTZ1-BTZ-01), DOOR NO 563, MARUTHI NACAR, CHIKKABALLAPUR ROAD, VJUAYAPURA TOWN, DEVANAHALLI TALUK, BANGALORE RURAL DISTRICT KARNATAKA. - 562135 PH :8884433908

VITTAL

972. MANDOVI MOTORS PVT LTD. (CCE1-CCE-01), DOOR NO. 1-287 (9), JISHAN COMPLEX, VITTAL TOWN, TALUKA – BANTWAL, DISTRICT – DAKSHIN KANNADA - 574243 PH :9008810123.

YADGIR

 LAHOTI MOTORS (SFP1-SFP-01), SURVEY NO. 1011/1, GULSARAM VILLAGE, YADGIR TOWN & DISTT, SHAHPUR TALUKA, KARNATAKA PH:9480825031.

YELLAPUR

974. REVANKAR MOTORS PVT. LTD (CUR1-CUR-01), PLOT NO. 4 A1A1A1 GR 5, UDYAM NAGAR, YELLAPUR POST, BALGIMANI, HUBLI-ANKOLA, YELLAPUR TOWN, UTTARA KANNADA DIST., KARNATAKA. - 581359 PH :7090772121.

KERALA

ADOOR

 INDUS MOTOR COMPANY PRIVATE LIMITED (2702-GJ-0A), M. C. ROAD, MITHRAPURAM, ADOOR, PATHANMTHITTA - 689518 PH :9745998303.

976. AVG MOTORS LTD. (Y501-CJ-02), KOTTAMUKAL, K.P. ROAD, ADOOR PO, PATHANAMTHITTA, KERALA - 691523 PH -9446755900

ALANALLUR

977. KVR AUTOCARS PVT LTD (CIW1-CIW-01), BUILDING NO. 10/1050, CHANDAPPADI, MANNARKAD ROAD, POST – ALANDALUR, TALUKA – MANNARKAD, DISTRICT - PALAKKAD, KERALA. - 678601 PH : 974020582.

AL ATHIYOOR

 A M MOTORS (E601-CVJ-11), RE SURVEY NO. 160/3, 161/7 (OLD SURVEY NO. 359/1), VILLAGE -ALATHIYOOR, TIRUR PONNAI ROAD, TALUKA -TIRUR, DIST.-MALAPPURAM, KERALA. - 676102 PH: 3895940000. 9072998833.

ALATHUR

979. BRD CAR WORLD LIMITED (BRW1-BRW-01), SURVEY NO. 456/8, 455/8, 455/8, 456/9, ERATTUKKULAM, KATTUSSERY VILLAGE, ALATHUR TALUKA, PALAKKAD DISTRICT, KERALA - 678682 PH: 97465434999.

ALLEPPY

 INDUS MOTOR COMPANY PRIVATE LIMITED (2702-E5-12), BLOCK NO. 145, RE-SURVEY NO. 79. ALAPPUZHA WEST VILLAGE, AMBALAPPUZHA TALUK, ALAPPUZHA DIST. KERALA-699002. - 699002 PH: 974977744.

ALLEPY

981. POPULAR VEHCILES (E502-E5-01), BUILDING NO. XVIII/135, DOOR NO. 13/449, CCSB ROAD, PALACE WARD, CHUNGAM, ALAPPUZHA, KERALA-688011. - 688011 PH:9778698161.

ALUVA

982. BRD CAR WORLD LIMITED (A404-CBQ-09), RE SURVEY NO.330/7, NH-47, KUNNUMPURAM, PO-DESHAM PANCHAYATH, CHENGAMANAD, ALUVA. - 683102 PH :9745907100.

ANCHAL

983. SARATHY AUTO CARS (BQT1-BQT-01), SURVEY NO. 371/9, VILLAGE – IDAMULAKKAL P.O. – ANCHAL, TALUK – PUNALUR, DISTRICT – KOLLAM. - 691306 PH :9529906665. 884. POPULAR VEHICLE (1601-BQT-14), RE SURVEY NO 581/5, BLOCK NO 33, ANCHAL VILLAGE, NEAR ALBILAL DRIVING SCHOOL, KAITHADY JUNCTION, ANCHAL, KERALA - 691306 PH : 9776989200.

ANGAMALY

- 985. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-JW-0F), ANGAMAALY KALADY ROAD, MC ROAD, ANGAMALY - 683572 PH :9745998434.
- 986. POPULAR VEHICLES & SERVICES LTD. (2701-JW-0D), 182-AIRPORT JUNCTION NAGAR,M. C. ROAD,ANGAMALY - 683572 PH :8086078886.

ATTINGAL

987. POPULAR VEHICLES & SERVICES LTD. (1601-SX-07), PALAMKONAM, PERUNKULAM, VIA-.ALAMCODE, ATTINGAL -695102

PH :8086078788

- 88. SARATHY AUTODRIVES PVT LTD (SX05-SX-01), SURVEY NO. 2952/17 & 2952/4, KIZHUVILLAM VILLAGE, ATTINGAL, CHARAYINKEEZHU TALUK, TRIVANDRUM DIST., KERALA. - 695 104 PH 952062785
- 989. INDUS MOTOR COMPANY PRIVATE LIMITED (SX01-SX-01), SV. NO. 54/13, 14, 15, 16, (CLD SY, NO. 22, 22/13, 16), IN BLOCK NO. 3 OF VELLOOR VILLAGE, EASTERN SIDE OF NATIONAL HIGHWAY 47, NEAR INTERNATIONAL SCHOOL, CHEMBAKAMANGALAM, KORANI PO, ATTINGAL, TRIVANDRUM DIST., KERALA. 695104
 PH :9747550888.

BALARAMAPURAM

990. POPULAR VEHICLES & SERVICES LTD. (1601-AQA-11), POOVAR ROAD, VAZHIMUKKU, BALARAMAPURAM P.O., TRIVANDRUM DISTRICT - 695501 PH :8943345922

CALICUT

- 991. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-01), MARUTI WORKSHOP, PANIKKER ROAD, CALICUT, NADAKKAVE - 673011 PH: 9745998019
- 992. POPULAR VEHICLES & SERVICES LTD. (4702-47-02), BEHIND MIMS, EASWARAMANGALAM ROAD, GOVINDAPURAM P.O., CALICUT - 673016 PH: 9846298613.
- INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-06), KOYA ROAD JUNCTION, PUTHIYANCADI, POST WEST HILL, CALICUT-673005

673005 PH:9745998020.

- 994. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-47-08), NEAR STEEL COMPLEX, NALLALAM, CALICUT - 673655 PH : 9745998018
- 995. POPULAR VEHICLES & SERVICES LTD. (4702-47-07), NH-17 BYE PASS,PACHAKKIL, MALAPARAMBU P.O., KOZHIKODE, CALICUT -673009 PH 9288012082
 - CARINO MOTORS (CARINO AUTO INFRA PVT. LTD.) (4704-47-01), RE SURVEY NO. 13, BUILDING NO. 5648, KRISHNARJUNA BUILDING, AREEKAD, VILLAGE AND PANCHAYATH – CHERUVANNUR, P.O. – NALLALAM, CALICUT (KOZHIKODE), KERALA. - 673027 PH. 759239888, 754997888.

CHALAKUDY

97. BRD CAR WORLD LIMITED (ZJ02-ZJ-01), MURINGOOR P.O., CHALAKUDY - 680316 PH :9645176999.

 INDUS MOTOR COMPANY PRIVATE LIMITED (ZJ03-ZJ-01), SURVEY NO. 53/1, 53/2 & 55/1, PANAMBILLY COLLEGE JUNCTION, VILLAGE-PERAMBRA, POTTA, TALUKA CHALAKKUDY, DISTT. THRISSUR, PIN-680307, KERALA - 680307
 PH : 947-557355.

CHALAKUDY/ CHILLAKUDDY/ THRISSUR

999. POPULAR VEHICLES & SERVICES LTD. (2701-8U-0C), OPPSITE CCMK HOSPITAL, VELLIKULAM ROAD, CHALAKUDY, KERALA - 680307 PH :9072609600.

CHANGARAMKULAM

1000. A M MOTORS (VH01-VH-01), MELE MANTHADAM, ALANKODE, P.O., CHANGARAMKULAM, MALAPPURAM DISTT, KERALA - 679585 PH :9895756008.

CHAVAKKAD

- 1001. BRD CAR WORLD LIMITED (A404-0J-06), ORUMANAYOOR P.O.CHAVAKKAD, DISTRICT-THRISSUR - 680512 PH:9645963999.
- 1002. SAI SERVICE PRIVATE LIMITED (0J02-0J-01), SURVEY NO. 26/5, MULLANTHARA PARAMBU, OVUNGAL, KUNNAMKULAM ROAD, TALUK – GURUVAYUR, CHAVAKKAD.) - 680506 PH: 9495883852.

CHENGANNUR

1003. SARATHY AUTO CARS (C701-UL-06), PRAVUMKOOD, THIRUVANVANDOOR P.O. CHENGANNUR TALUK, ALAPPUZHA (DIST) -689124 PH: 9447002647. 1004. SAI SERVICE (UL03-UL-01), SURVEY NO.
226(2,11,13,13-2-2, DEAR BPC). PUMP AND
SURVEY NO. 276/12, M C ROAD, NEAR LABHAM
MAVELI STORE, CHENGANUR PO &
MUNICIPAL, CHENGANUUR VILL & TALUK,
ALAPUZHA DIST., KERALA-689121 - 689121
PH: 9288024220.

CHERPULASSERY

1005. KVR AUTOCARS PVT LTD (NB01-NB-01), SURVEY NO. 154/4, RS NO. 154/4, VILLAGE – CHERUPPALASSERY, TALUK – OTTAPPALAM, DISTRICT – PALAKKAD - 679503 PH: 9747020582, 280100.

CHERTHALA

- 1006. INDUS MOTOR COMPANY PRIVATE LIMITED (VL03-VL-01), OPPOSITE TO S.N. COLLEGE, S.N. PURAM P.O., KANJIKKUZHI,CHERTHALA, ALAPPUZHA-DIST. - 688552 PH-9745907873
- 1007. POPULAR VEHICLES & SERVICES PVT. LTD. (VL02-VL-01), RE-SURVEY NO.150/2-1,147/3, BUILDING NO. KP-18/00, N. H. KANJIKUZHI VILLAGE, CHERTHALA, ALAPPUZHA DISTT., -688582 PH :9072530127.

CHINGAVANAM

1008. POPULAR (I602-I6-I602-01), BUILDING NO. VI 461, RE SURVEY NO. 290/9, GOMATHI JUNCTION, MAVILANGU KARA, CHINGAVANAM P.O., DISTT. KOTTAYAM, KERALA - 686531 PH. 99778690817.

CHITTUR

1009. INDUS MOTOR COMPANY PRIVATE LIMITED (BOX1-BOX-01), S.NO.719/3 AND 721/1, RE SURVEY NO.671/10, VELLYAVALLAMPPATHY VILLAGE, KOZHINJAMPARA, CHITTUR, PALAKKAD DISTT. - 678555 PH :9745991560.

CHULLIMANOOR

1010. POPULAR VEHICLES (1601-BAI-16), RE-SURVEY NO. 43/7, VILLAGE-ANAND, CHULLIMANOOR TOWN, TALUKA-NEDUMANGAD, DIST. TRIVANDRUM, PIN-695541, KERALA - 695541 PH-9778690745.

COCHIN

- 1011. POPULAR VEHICLES & SERVICES LTD. (2701-27-01), PERANDOOR ROAD, PUNNAKAL, ELAMAKKARA, COCHIN - 682025 PH: 9846017725.
- 1012. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-02), BEHIND COMMERCIAL SALES TAX, M.G. ROAD, COCHIN, - 682015 PH :9745998040.

- 1013. SAI SERVICE PRIVATE LIMITED (2705-27-01), 50/1 15L., CHERANALLOOR ROAD, EDAPPALLY, COCHIN - 682024 PH 9645106339
- 1014. SAI SERVICE PRIVATE LIMITED (2705-27-02), NH-47,,PATHADIPALAM,EDAPPALLY,COCHIN -682024 PH-9645105057
- 1015. POPULAR VEHICLES & SERVICES LTD. (2701-27-04), NEAR LISI HOSPITAL, OPP. IMA BLOOD BANK, COCHIN, - 682018
- 1016. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-09), PALARIVATTOM KAKANAD ROAD, KAKANAD, COCHIN, - 682030 PH 9745998013
- 1017. SAI SERVICE PRIVATE LIMITED (2705-27-08), KETTEZHUTHUM KADAVU, INTUC JUNCTION, NETTOOR, ERNAKULAM, COCHIN (KERALA) -682040 PH: 8129496818.
- 1018. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-01), DOOR NO.5/452, 5/452A, 5/453, OLD ELOOR ROAD, ELOOR JUNCTION, NORTH KALAMASSERY, DISTRICT - ERNAKULAM, COCHIN. - 683104 PH :7559997864, 4237700.
- 1019. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-27-0L), SURVEY NO. 30-A/32, KARIKKAD ROAD, THEKKUMBHAGAM, PUTHIYAKAVU, TRIPUNITHURA, ERNAKULAM, KERALA - 682301 PH. 9745992070.
- 1020. GEORGE MAIJO AUTOMOBILES PVT. LTD. (2709-27-02), PLOT NO 2/316, NH-47, MARADU VILLAGE, KANNDIKAD, NEAR SAROVARAM, KUNDANOOR, COCHIN (KERALA) - 607001 PH: 7994763336.

EDAPPAL

 POPULAR VEHICLES & SERVICES LTD. (4702-AM-05), KOZHIKODA ROAD, KAVILPADY, EDAPPAL, MALAPPURAM - 679582 PH :9946104680.

EDAVANNAPPARA

1022. POPULAR VEHICLES (GKPI-GKP-01), SURVEY NO. 77:16-18 77:72-4 BUILDING NO. 164152-B, CHEKODE VILLAGE, EDAVANNAPARA KONDOTTY ROAD, CHERUVAYOOR PO, MALLAPPURAM DISTRICT, KERALA-673645-673645 PH. #REFI.

FORT KOCHI

1023. SAI SERVICE PRIVATE LIMITED (BRS1-BRS-01), PLOT NO.83/1,2 OPPOSITE TO KUMAR PETROL PUMP, STATUE ROAD, CHULLIKKAL POST, FORT KOCHI - 682005 PH :9645106330.

GURUVAYUR

1024. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-08), KUNAMKULLAM CHAVAKKAD ROAD, OPPOSITE CHOOLPURAM MOSQUE, GURUYOOR, THRISSUR - 680505 PH :9745998015

IRINJALAKUDA

1025. BRD CAR WORLD LIMITED (A404-KQ-05), KARUPADANNA P.O., IRINJALAKUDA, THRISSUR - 680670 PH :9539006999.

IRITTY

1026. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-VJ-02), SURVEY NO. 48, BUILDING NO. 214, PERUPARAMBA, IRITTY, KANNUR, KERALA - 670703 PH :9747554929.

IRITY

1027. POPULAR VEHICLE (VJ02-VJ-01), RE-SURVEY NO: 14/4, 11/2, NEAR JABBAR KADAVU BRIDGE, KEEZHUR VILL., PERAVOOR ROAD, IRITTY MUNICIPAL, KANNUR DIST. KERALA. - 670703 PH. 790/2473741

KAIPAMANGALAM

1028. SAI SERVICE PRIVATE LIMITED (2705-RP-07), VAZHIYAMBALAM PO, KAIPAMANGALAM,THRISSURE - 680681

PH:8129496846. KALAMASSERY/ ERNAKULAM

1029. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Q3-07), KALAMASSERY, ALUVA WEST, ERNAKULAM DIST, KERALA - 683106 PH :9745998012.

KALLAMBALAM

1030. POPULAR (OZ02-QZ-01), BUILDING NO. 5/472, NH-47, KADUVAPALLY, THOTTAKAD P.O, KALLAMBALAM, TRIVANDRUM DIST., KERALA-695605 PH :8086078788.

KALPETA

- 1031. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-JE-0C), MEENANGADI, KAKKAVAYAL P.O., NORTH KALPETTA, WAYAND - 673591 PH :9745998592.
- 1032. KVR (JE02-JE-C1), BUILDING NOS. 363, 364, 365, 366, 367, 368 AND 369 CONSTRUCTED ON THE PLOT COMPRISED IN RESURVEY NOS. 7196, 722/3, 722/2, 722/6, 722/8, 722/10, 722/10, 722/21, STIUATED AT MUTTIL NORTH YILLAGE. VYTHIRI TALUK, KALPETTA SUB-DISTRICT, WAYANAD DISTRICT, KERALA. 673 122 PH. 9747021902.

KANHAGAD

1033. KVR CARS (3L01-K2-02), ARANGADI, P.O. KANHANGAD, DIST. KASARGOD, - 671315 PH:9605040999. 1034. POPULAR VEHICLES & SERVICES LTD. (4702-K2-06), HIGHWAY JUNCTION,KANHANGAD SOUTH P.O.,KANHANGAD - 689641 PH 9946104685

KANHANGAD

1035. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K2-0F), SURVEY NO. 491/3A1 AND 491/3A2, AJANUR VILLAGE, KANHANGAD, HOSADURGA TALUK, KASARAGOD DISTT, KERALA. - 671541 PH. 19745998024.

KANJIRAPALLY

1036. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9Y-02), VADAKUMBHAGAM KARAYIL, KUNNAMBHAGAM P.O. , KANJIRAPALLY -686506

PH:9745998009

1037. AVG MOTORS LTD. (9Y03-9Y-01), NEW SURVEY NO. 187/2 (OLD SURVEY NO. 299/1, 299/11), KANJIRAPALLY VILLAGE & TALUKA, KOTTAYAM DISTRICT., KERALA - 686512 PH :8606071155.

KANNUR

1038. HAR CARS (K101-K1-01), HAR AVENUE, KANNOTHUMCHAL, CHOVVA POST, KANNUR -670006 PH 9539009480.

1039. HAR CARS (K101-K1-03), POTTIAN SHEKHARAN ROAD, MAKKANY , SOUTH BAZAR, KANNUR -670002

PH:9539009443.

1040. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-K1-0E), BALANKINAR JN., KATTAMPALLY.P.O, KANNUR - 690011 PH: 9745998023.

- 1041. KVR CARS (3L01-K1-04), CP-3-651-B, OPP. DHANRAJ TALKIES, PUTHIYATHERU, CHIRAKKAL POST, KANNUR, KERALA - 670011 PH :9656034333.
- 1042. POPULAR VEHICLES & SERVICES LTD. (4702-K1-0F), PLOT NO.82/6A, NEAR CHARAPPURAM SREEMUTHAPPAN KAVU, KAPPAD ROAD, THAZHE CHOVVA (PO), KANNUR 670018 PH 19846062796

KARIKKAD

1043. BRD CAR WORLD LIMITED (A404-GE-02), BRD INDUSTRIAL ESTATE, KARIKKAD, KUNNAMKULAM - 680519 PH :9995804599.

KARUNAGAPALLY

1044. SARATHY AUTO CARS (C701-AQ-05), K.S. PURAM, NEELIKULAM, KARUNAGAPPALLY, KOLLAM, - 690544 PH: 9526691565.

- 1045. INDUS MOTOR COMPANY PRIVATE LIMITED (AQ03-AQ-01), SY.NO.243/1, 243/10, 243/16, 243/14, 243/15, 243/16, EDAPPALLY KOTTA JUNCTION, NEAR TITANIUM, CHAVARA POST, KARUNAGAPALLY, DISTT. KOLLAM. - 691583 PH :9745998006.
- 1046. SARATHY (C701-AC-11), SURVEY NO. 15/3, SIDCO INDUSTRIAL AREA, EDAKULANGARA PO, NEAR KARUNAGAPALLY RAILWAY STATION, KARUNAGAPALLY, KERALA. - 690 562 PH :9526691665.

KASARGOD

- 1047. KVR CARS (3L01-3L-01), ANANGUR, VIDYANAGAR (PO), NH17, KASARGOD - 671123 PH :9747021206.
- 1048. POPULAR VEHICLES & SERVICES LTD. (4702-31-00), MUNDAKULAM, CHEMMANAD (PO), KASARGOD - 671371 PH :9946104621.
- 1049. INDUS MOTOR COMPANY PRIVATE LIMITED (RO02-3L-03), 18/304A & 18/304B, SY. NO. 39/3B, RE SY. NO. 57/6,MOGRAL, MANJESHWAR TALUK, KASARAGOD, KERALA - 671541 PH.9747550747.

ΚΔΤΤΔΡΔΝΔ

- 1050. INDUS MOTOR COMPANY PRIVATE LIMITED (2N01-ZN-01), KATTAPPANA-IDUKKI KAVALA, BYE PASS ROAD, KATTAPPANA, IDUKKI (DIST.). - 685508 PH -9746743480
- 1051. POPULAR VEHICLES (ZN02-ZN-01), RE-SURVEY NO. 81/3, VILLAGE & TOWN - KATTAPPANA, TALUK & DIST.-IDUKKI, KERALA. - 685 515 PH :9746818407.

KAYAMKULAM

- 1052. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8L-05), KARIYILAKULANGARA, KAYANKULAM P.O., ALAPPUZHA DISTT. -690572 PH 9745989005
- 1053. POPULAR VEHICLES & SERVICES LTD. (B802-8L-03), NH 47, KOTTUKULANGARA, KAYAMKULAM P.O., ALAPPUZHA DISTT. -690502 PH 9946105601.

KODUNGALLUR

1054. SAI SERVICE PRIVATE LIMITED (2705-8K-03), NH-17,T.K.S.PURAM,,KODUNGALLOOR - 680667 PH :9645106571. 1055. INDUS MOTOR COMPANY PRIVATE LIMITED (8K02-8K-01), RE-SURVEY NO. 118'-6, 116'2-5, BUILDING NO. 560'/A, WARD NO. VII, AALA VILLAGE. (OLD VILLAGE: SREENARAYANAPURAM), KODUNGALLUR TALUK, MADHILAKOM SRO, SANTHIPURAM PO, THRISSUR DIST., KERALA-680 008
PH :9747513444.

KODUVALLY

1056. A M MOTORS (BGX1-BGX-01), SURVEY NO:91/9, 91/10, NALLANKADY, VAVAD POST, KODUVALLY, KOZHIKODE DISTRICT, KERALA - 673572 PH :9895979023.

KOLANCHERRY

1057. SAI SERVICE (SJO1-SJO-01), SURVEY NO.138/7, BLOCK NO. 47, WARD-8, KOLENCHERY TOWN, NH-85, AIKARANADU NORTH VILL, KUNNATHUNADU TALUK, ERNAKULAM DIST., KERALA-682311 - 682311 PH: 73660605955.

KOLLAM

- 1058. SARATHY AUTO CARS (C701-C7-01), NH-47 BYE PASS,AYATHIL(P.O.),QUILON - 691017 PH - 0744552365
- 1059. POPULAR VEHICLES & SERVICES LTD. (1601-Q4-04), H & C COMPOUND, MUNDDACKAL, KOLLAM - 680006 PH : 7594977550.
- 1060. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-Q4-03), OLD SARATHY THEATRE, PUNALOOR ROAD, KOLLAM - 691005 PH :9745998004.
- 1061. SARATHY AUTO CARS (C701-C7-13), SURVEY NO. 431/13-42, NEAR SN PUBLIC SCHOOL, VADAKKEVILA, AVATHIL, KILLIKLLOOR PO, PUNTHALATHAZHAM-PALATHARA ROAD, KOLLAM, KERALA 691004 PH :8606430765.

KOLLAM/ QUILON

- 1062. SARATHY AUTO CARS (C701-C7-08), SURVEY NO. (SIDCO) 318/1, SHED NO. B12, UMAYANALLUR SIDCO INDUSTRIAL ESTATE, KOLLAM. 691589 PH 19421712786
- 1063. SARATHY AUTO CARS (C701-C7-12), BUILDING NO. 15620, SURVEY NO. 234/1, 235/2, SITHARA JUNCTION, ADICHANALLOOR VILLAGE, KOTTIYAM PO, KOLLAM DIST., KERALA. -691571 PH :9847936165

KONDOTTY

1064. INDUS MOTOR COMPANY PRIVATE LIMITED (D02-ID-01), SURVEY NO. 16/1, BLOCK NO. 36 (OLD SURVEY NO. 100/1), NEDIVIRUPPU VILLAGE, KONDOTTY PO, ERNAD TALUKA, MALAPURAM DISTRICT, KERALA - 683573 PH :9746743178.

KOOTHATTUKUI AM

1065. SAI SERVICE PRIVATE LIMITED (VM01-VM-01), EDAPUTHUSSERY BUILDING, M.C. ROAD, OPP. MARYGIRI PUBLIC SCHOOL, KOOTHATHUKULAM P.O., ERNAKULAM DT. -686662 PH :9845106258.

KOPPAM

1066. AM MOTORS (CUU1-CUU-01), SURVEY NOS: 331/3-6, 331/3-10, NEAR SALAFIYYA TRAINING COLLEGE, PERINTHALMANNA-PATTAMBI ROAD, KARINGANDU, VILAYUR POST, KOPPAM, PALLAKKAD DIST., KERALA-679309 - 679309 PH: 90486666735

KOTHAMANGALAM

- 1067. POPULAR VEHICLES & SERVICES LTD. (2701-9V-0B), NEAR BSNL OFFICE, THANGALAM, KOTOHAMANGALAM, KERALA-686691 PH :9846027990.
- 1068. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-9V-03), PALAKKADAN BUILDING,CHANKLAM,KOTHAMANGALAM -686691

PH:9745998479.

1069. INDUS MOTOR COMPANY PRIVATE LIMITED (\$804-58-02), RE-SURVEY NO.141/3-4, 142/1-2, 1-16, 1-43/1-2, 1-43/2, 1-43/1-5-2, 1-4

KOTTAKKAL

- 1070. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-8M-09), NEAR MATHRUBHUMI PRESS, P.O. KOTTAKKAL, MALAPPURAM DIST, - 676503 PH :9745998017.
- 1071. POPULAR VEHICLES & SERVICES LTD. (4702-8M-03), NH-17, CHANDAPARAMBU, RANBATHANI P.O, MALAPPURAM, KOTTAKAL-676510 PH. 9946104631.

KOTTARAKARA

1072. POPULAR (5801-S8-S801-02), BUILDING NO. MPI207749,20426, 207748, INCHAKADU, KALAYAPURAM VILLAGE, MYLOM PANCHAYATH, KOTTARAKKARA TALUKA, KOLLAM DISTRICT, KERALA- 691560 - 691560 PH :8086073466.

KOTTARKKARA

- 1073. POPULAR VEHICLES & SERVICES LTD. (S801-S8-01), MYLOM, MC ROAD, KOTTARAKKARA, DISTT-KOLLAM, KERELA -691531 PH :8086073466.
- 1074. SARATHY AUTO CARS (S802-S8-01), WARD NO.40, MELILLIA PANCHAYATH, IPPALLOOR LOWER KARIKAM, KOTTARKARA DISTT. KOLLAM (KERALA) 691531 PH:9847423365.
- 1075. INDUS MOTOR COMPANY PRIVATE LIMITED (\$804-\$8-01), RE SURVEY NO.207/3-2, KIZHAKKKARA MURYIL, KNS HOSPITAL JUNCTION, KOTTARAKKARA VILLAGE AND TALUKA, KOLLAM DISTT., -691531 PH :9747562299.

KOTTAYAM

- 1076. AVG MOTORS LTD. (B801-B8-01), ERAYILKADAVU, KOTTAYAM - 686001 PH :7510982222
- 1077. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-04), MULANKUZHA JN., NATTAKOM P.O., KOTTAYAM, KERALA - 686013 PH: 9745998148.
- 1078. POPULAR VEHICLES & SERVICES LTD. (B802-88-01), NEAR ST. THOMAS CHURCH, S.H. MOUNT, P.O, KOTTAYAM - 686006 PH :8086073454.
- 1079. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-88-0C), MANIPPUZHA, NATTAKOM P.O.,KOTTAYAM - 686013 PH:9745998007.

KOZHENCHERRY

1080. AVG MOTORS LTD. (W801-AS-03), KOZHENCHERRY, COLLEGE JUNCTION, DISTRICT- PATHANAMTHITTA, - 689641 PH:9446092995.

KUNNAMKULAM

1081. POPULAR VEHICLES & SERVICES LTD. (2701-8N-07), CHOONDAL, TRISSUR ROAD, KUNNAMKULAM, TRISSUR DIST - 680502 PH:9946105695.

LAKKIDI PERUR

1082. A M MOTORS (CER1-CER-01), 217/7, 217/2, 278/2, 278/1, PALAPPURAM, P.O. OTTAPPALAM, LEKKIDI PERUR DISTT. PALAKKAD, - 679302 PH:8086305555.

MALAPURAM

1083. A M MOTORS (E601-E6-01), VARANGODE, DOWNHILL, MALAPURAM, - 676519 PH: 9895705325.

MALLAPALLY

1084. INDUS MOTOR COMPANY PRIVATE LIMITED (1201-12-01), THOPPIL COMPLEX, MALLAPPALLY KOTTAYAM RD, MALLAPPALLY WEST, MALLAPPALLY (KERALA) - 689585 PH: 9747541400.

MANATHAVADY

1085. INDUS MOTOR COMPANY PRIVATE LIMITED (E02-IE-01), SURVEY NO. 1/2A1, A1, B1, RY 1/210, 1/99, MYSORE ROAD, CHETTAPALAM, MANATHAVADY CITY & TALUK, WYANAD DIST., KERALA. - 670645 PH: 9745997002.

MANJERI

- 1086. A M MOTORS (E601-8V-05), THURAKKAL BYEPASS, MANJERI, MALAPURAM, KERALA-676121 PH :9895756035.
- 1087. KVR AUTOCARS PVT LTD (8V02-8V-01), CH BYE PASS ROAD, MANJERI, MALAPPURAM, KERALA - 676123
- PH:9747020801.

1088. POPULAR VEHICLES & SERVICES LTD. (4702-8V-0E), NARUKARA VILLAGE, RAJIV GANDHI BYEPASS JN., THRUKKAL, MANJERI (KERALA) - 676121 PH :8589992406.

MANNARKAD

- 1089. A M MOTORS (E601-RA-07), NH-213, MANNARKAD, DIST.-PALAKKAD - 678582 PH :9895979048.
- 1090. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-RA-0K), ANAKATTY ROAD, AANDIPPADAM, NELLIPPUZHA-PO. MANNARKAD, KERALA - 678583 PH :9745995946

MAVELIKARA

- 1091. POPULAR VEHICLES & SERVICES LTD.
 (B802-S9-02), KONNAVIL SUVAKO INDUSTRIAL
 COMPLEX,,SHED A-1., KOLLAKADAVU
 INDUSTRIAL ESTATE, KOCHAL MOODU,
 KALLIMEL P.O., MAVELIKKARA, KERALA690570
 PH :9400062338.
- 1092. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-S9-07), NEAR PRATHIBA THEATRE, PUTTHIYAKAVU, MAVELIKKARA - 690101 PH : 9745998137

MAVELIKARRA

1093. POPULAR VEHICLES (8802-88-10), BUILDING NO. 10/115-A, WARD NO. 10, CHENNITHALA VILL. AND TOWN, SHANTHIVANAM JUNCTION, CHERUKOLE P.O., MAVELIKKARA TALUK, ALAPPUZHA DIST., KERALA-690104. - 690104 PH: 9778690833.

MORAYUR

1094. A M MOTORS (CUJ1-CUJ-01), SURVEY NO. 328/1, VILLAGE – MORAYUR, VALENCHERY, DISTRICT – MALAPPURAM, KERALA. - 673642 PH : 8086526666.

MUVATTUPUZHA

- 1095. INDUS MOTOR COMPANY PRIVATE LIMITED (7601-7E-01), NH-49, MUVATUPUZHA KODAMANGALAM ROAD, NEAR R.K. HOSPITAL, MUVATUPUZHA, ERNAKULAM DIST - 686661 PH -97459098011
- 1096. POPULAR VEHICLES & SERVICES LTD. (2708-7E-02), MUTHUKALLU JUNCTION, PERUMPALLUR P.O., MUVATTUPUZHA, KERALA - 686673 PH : 7356988840

NEDUMANGAD

1097. POPULAR VEHICLES & SERVICES LTD. (2001-20-01), RE-SURVEY NO.-855/29, 855/14/1 (OLD SURVEY NO. 1583/1), KARIPPUR VILLAGE, NEDUMANGAD TALUK, TRIVANDRUM DIST., KERALA-695541. - 695541 PH: 9846/036966.

NEYYANTTINKARA

1098. INDUS MOTOR COMPANY PRIVATE LIMITED (AT01-AT-01), INDUS MOTOR CO. PVT. LTD., OLD M.V THEATRE, NEAR KSRTC BUS STATION, NEYYATINKARA, DIST. TRIVANDRUM - 695121 PH: 9747544500.

NEYYATTINKARA

1099. POPULAR VEHICLES (1601-16-1601-15), BUILDING NO. 11/562, KP-IX-843, NH 47, KOTTAMOM, KOLLAYIL PANCHAYAT, PANVEL -KOCHI - KANYAKUMARI HIGHWAY, KOTTAMOM, NEYYATTINKARA, TRIVANDRUM, KERALA-695122 - 695122 PH : 9946104602.

NILAMBUR

- 1100. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0A), MINERVA JUNCTION, NILAMBUR, KERALA - 679329 PH:9745998396.
- 1101. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-AF-0D), MANAVEDHAM HIGH SCHOOL ROAD, CHANDAKUNNU - NILAMBUR PO, NILAMBUR, MALAPURAM DIST. - 679329 PH : 9745998396.

1102. POPULAR VEHICLES & SERVICES (AF02-AF-01), RE-SURVEY NO: 6/1 BLOCK NO: 76, CHEMMARAN, NADUVATH PO, WANDOOR ROAD, NILAMBUR, MALAPPURAM DIST., KERALA - 679328 PH: 7736094999.

NII AMFI

- 1103. INDUS MOTOR COMPANY PRIVATE LIMITED (DA02-DA-01), SURVEY. NO. 195/10, 195/3-1-2, 195/3-2-1, 195/4, 195/9-1, 195/11, 195/
- 1104. POPULAR (DA03-DA-01), BUILDING NO. 10/279 TO 288, M. C. ROAD, KANNANCODU, NILAMEL PO, KOLLAM (DIST.), KERALA- 691535 - 691535 PH :8714606483.

OTTAPALAM

1105. INDUS MOTOR COMPANY PRIVATE LIMITED (PA01-PA-01), BUILDING NO.23/667, 23/669, PALAKKAD-OTTAPPALM ROAD, OTTAPPALAM VILLAGE, OTTAPPALAM TALUKA, PALAKKAD DISTT., KERALA - 679101 PH:9747544454.

PALA

- 1106. POPULAR VEHICLES & SERVICES LTD. (B802-GN-04), 12TH MILE,PALA-PONKUNNAM ROAD,PALA - 686575 PH:9072609475.
- 1107. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-05), OPP. ALPHONSA COLLAGE ARUNAPURAM(PO), PALA, KOTTAYAM - 686574 PH :9745998878.
- 1108. AVG MOTORS LTD. (GN03-GN-01), SURVEY NO.670/1, BLOCK-21, LALAM VILLAGE, ANTHINADU MEENANCHIL, PALA, KOTTAYAM DIST. - 686651 PH '9447137246
- 1109. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-GN-07), SURVEY NO. 176, BLOCK NO. 16, HIGHWAY JUNCTION, ETTUMANOOR-POOJAR HIGHWAY, CHERPUNKAL, PALA, KOTTAYAM DISTRICT 686584
 PH 9747516934

PALAKKAD

- 1110. POPULAR VEHICLES & SERVICES LTD. (2701-Y2-09), OPP. PALANA HOSPITAL, KODUVAYOOR ROAD, KINASSERY P.O., PALAKKAD - 678707 PH :9946105613.
- 1111. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-Y2-0G), VADAKKUMURI-NH-47, KANNADI, KUZHALMAMMAM (P.O.), PALAKKAD. - 678701 PH :9745998590

1112. INDUS MOTOR COMPANY PRIVATE LIMITED (Y202-Y2-01), DOOR NO: 5/366 & 367, NH 47, KOOTUPATHA, CHANDRANAGAR POST, PALAKKAD - 678007 PH :9747519500.

PANDIKKAD

1113. AM MOTORS (CUV1-CUV-01), SURVEY NOS: 33/2-2, 333/3-2, CHOORAKAVU, PERINTHALMANNA ROAD, NEAR INDIAN OIL PETROL PUMP, PANDIKKAD TOWN & POST, MALAPPURAM DISTRICT, KERALA - 676 521 PH 9:53999570.

PARAPPANANGADI

1114. A M MOTORS (CTK1-CTK-01), SURVEY NO.66/6, 66/7, KODAPPADI, POST-CHETTIPPADY, PARPANGADI, MALAPPURAM. - 676319 PH :9895900466.

PARAVUR

1115. POPULAR VEHICLES & SERVICES LTD.
(ZS01-2S-01), SURVEY NO. 3401-76,77.8, NEAR
HP PETROL PUMP, PARAVUR-MANJALI MAIN
ROAD, MANINAM PO, NORTH PARAVUR
MUNICIPAL, ERNAKULAM DIST. 683520,
KERALA - 683520
PH 9072609638.

PATHANAMTHITTA

- 1116. AVG MOTORS LTD. (W801-W8-02), JUNNUGAPADY, MYLAPRA ROAD, PATHANAMTHITTA, - 689671 PH:9446002987.
- 1117. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-W8-13), KUMBAZHA, PATHANAMTHITTA 689653 PH :9745998008.
- 1118. POPULAR VEHICLES & SERVICES LTD. (B802-W8-05), T.K. ROAD, NEAR COLLECTORATE,PATHANAMTHITTA - 689645 PH:9539009734.
- 1119. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-WB-12), SURVEY NO. 11-13/12(1), KARIMPANKUZHY ROAD, NEAR SAROJ GAS AGENCY, MAKKANKUNNU, PATHANAMTHITTA, KERALA. - 689645 PH 9745999858

PATHIRAPALLY

1120. POPULAR VEHICLES & SERVICES LTD (E502-E5-02), BUILDING NO. X832 TO 834, X/837 TO 838, OPP. UDAYA STUDIO, PATHIRAPALLY TOWN, AMBALAPUZHA TALUK, NH-47, ALAPPUZHA DIST., KERALA-688521. - 688521 PH:9778698169.

PATTAMBI

1121. A M MOTORS (E601-8P-04), SHORANUR ROAD, PATTAMBI, DISTRICT-PALAKKAD, - 679306 PH:9567866059.

- 1122. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-8P-0B), PERINTHALMANNA ROAD, THEKKUMURI, PATTAMBI - 679303 PH : 9745998295
- 1123. A M MOTORS (E601-8P-09), CHERPULASSERY ROAD, KOOMBAN KALLU, KARIMPULLI, MELE PATTAMBI POST, PALAKKAD DISTT., KERALA. -679306 PH -9667866059.

PAYANNUR

- 1124. POPULAR VEHICLES & SERVICES LTD. (4702-92-04), N H 17,,EZHILODE P O, "PAYYANUR - 670309 PH :9946104701.
- 1125. POPULAR VEHICLES & SERVICES LTD. (9201-92-01), SY. NO. 2131, CHERUTHAZHAM VILLAGE, EZHILODE (NEAR COLONY BUS STOP), PAYANNUR-KANNUR NH, PAYANNUR TALUK, KANNUR DISTRICT, KERALA – 670 309. PH 19481104701

PAYYANUR

1126. INDUS MOTOR COMPANY PVT. LTD.
(9202-92-01), SURVEY NO.-289/117, 290/105,
KARIVELLUR PERALAM GRAM PANCHAYAT
(NEAR PALATHARA BRIDGE), PAYYANUR
TALUK, KANNUR DISTRICT, KERALAPIN-670521. - 670521
PH. 9745998204

PERINTHALMANNA

- 1127. A M MOTORS (E601-7H-03), NEAR FIRE STATION, HOSPITAL ROAD, PERINTHALMANNA - 679322 PH :8129818235.
- 1128. KVR AUTOCARS PVT LTD (7H01-7H-01), SURVEY NO. 87/8-15, CALICUT ROAD, NEAR ITC, THIRURKAD, PERINTHALMANNA - 679351 PH 9747020573
- 1129. KVR AUTOCARS PVT LTD (7H01-7H-06), OOTY ROAD, PERINTHALMANNA, MALAPPURAM(DT.), KERALA - 679322 PH:9747020837.

PERUMBAYOOR

- 1130. SAI SERVICE PRIVATE LIMITED (2705-8W-04), M.C. ROAD, PERUMBAVOOR, ERNAKULAM DIST, KERALA - 683542 PH : 7034258335.
- 1131. INDUS MOTOR COMPANY PRIVATE LIMITED (8W03-8W-01), SURVEY NO. 72/2-3, 72/3-3, TALUK - KUNNATHUNADU, VILLAGE -RAYAMANGALAM, SUB DIST.-PERUMBAVOOR, DIST.ERNAKULAM. - 683 541 PH :9747591803.

PIROVAM

1132. SAI SERVICE (BOW1-BOW-01), SUVEY NO.
88/12-2-5, NEAR PIRAVOM GOVT. HOSPITAL,
PIRAVOM TOWN & MUNICIPALITY,
MUVATTUPUZHA TALUK, ERNAKULAM DIST.,
KERALA. - 686 664
PH : 964-5106198.

POINACHI

1133. KVR CARS (3L01-GF-03), CHOWKI, MAILLATTY(P.O.), (VIA) UDUMA, POINACHI, KERALA - 671319 PH :9747021026.

PUNALUR

- 1134. SARATHY AUTO CARS (C701-8Q-03), NH-208, Q.S. ROAD, ELAMPAL POST, PUNALUR, KOLLAM DIST - 691322 PH :9744400265.
- 1135. INDUS MOTOR COMPANY PRIVATE LIMITED (8002-80-01), SY. NO. 48/1/42, OLD, SY. NO. 2314/3324, (OLD RAMRAJ TILES FACTORY), THALICODE, PATHANAPURAM TALUK, PUNALUR ANCHAL ROAD. 691 305 PH •074/738885

QUILANDY

1136. INDUS MOTOR COMPANY PRIVATE LIMITED (3001-30-01), BUILDING NO.13/53 A, CHENGOTTUKKAVE VILLAGE, QUILANDY, KOZHIKODE DISTT. - 673306 PH:9745997875.

RAMANATTUKKARA

1137. A M MOTORS (E601-KB-06), NEAR RED CRESCENT HOSPITAL, FEROKE, CHUNGAM, CALICUT DISTRICT, RAMANATTUKARA, - 673632 PH 9567886144

RANNI

1138. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-JX-06), CHELLAKKAD-PO, PATHANAMTHITTA(DISTRICT), RANNI - 689677 PH :9745998737.

SASTHAMKOTTAH

1139. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-RT-09), NO. SP IX/661, 662, 663, KADAPUZHA ROAD, PORUVAZHY P.O., BHARANIKUVU, SASTHAMKOTTAH, KOLLAM –, KERALA - 690520 PH : 9745998849.

SHORNUR

1140. POPULAR VEHICLES & SERVICES LTD. (2701-11-0E), PALAKKAD PATTAMBI ROAD, KULAPPULLY JUNCTION, VADANAMKURUSSI, SHORNUR - 679124 PH: 3589992432.

SULTHAN BATHERY

1141. POPULAR VEHICLES (VK6)1-VK-01), SURVEY NO. 421/5, 421/6, BLOCK NO. 22, KRISHNAGIRY VILLAGE, PATHIRIPALAM, KOLAGAPPARA (PO), TALUK & TOWN - SULTHAN BATHERY, WAYANAD DIST., KERALA. - 673 591 PH. 7564077561

ΤΔΙ ΙΡΔΡΑΜΒΑ

1142. HAR CARS (K101-9W-02), SREEKANDAPURAM MAIN ROAD, KANNUR (DIST), KERALA, THALIPARAMBA - 670141 PH 9539009473

THALASSERRY

1143. INDUS MOTOR COMPANY PRIVATE LIMITED (R002-R0-01), NETTUR POST, KODUVALLY, THALASSERY, KANNUR DISTRICT - 670105 PH:9745998022.

THALASSERY/ TELLICHERRY

1144. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-Y3-04), TEMPLE GATE, MAKKOOTAM, THALAYI, TELLICHERRY, KERALA - 670102 PH:9747520100.

THALAYOLAPARAMBU

1145. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-WN-0J), THODUPUZHA ROAD, THALAYOLAPARAMBU, VAIKOM(TALUK), DISTRICT-KOTTAYAM, KERALA - 686605 PH : 9746743003.

THAMARASSERY

- 1146. INDUS MOTOR COMPANY PRIVATE LIMITED (PB06-PB-01), RE-SY. NO. 44/5A, 44/6, RAROTH VILLAGE, (NEAR CHUNGAM), THAMARASSERY PANCHAYAT & TALUK, CALICUT DIST., KERALA. -673573 PH :9747553362.
- 1147. POPULAR (PB07-PB-10), SURVEY NO.43/4 BLOCK NO:005, RAROTH VILLAGE, THAMARASSERY TALUK, KOZHIKODE DISTRICT, KERALA - 673573 PH -9846397060

THIRUVALLA

- 1148. AVG MOTORS LTD. (Y501-Y5-01), M.C ROAD, PERUMTHURUTHI, THIRUVALLA, PATHANAMTHITTA DISTT - 689107 PH: 9446323999.
- 1149. POPULAR VEHICLES & SERVICE (B802-Y5-06), KAVUMBHAGOM P.O, THIRUVALLA, PATHANAMTHITTA (DIST.), KERALA - 689103 PH : 8088073489

THODUPUZHA

1150. INDUS MOTOR COMPANY PRIVATE LIMITED (7E01-HZ-04), PALA ROAD, THODUPUZHA -685584 PH: 9745998631. 1151. POPULAR VEHICLES & SERVICES LTD. (HZ02-HZ-01), SY.NO.124/7A-1, 124/TA-2, THODUPUZHA EHLOOR MAIN ROAD, VILLAGE & TOWN, THODUPUZHA, DISTT. IDUKI - 685585 PH :9072530120.

THRISSUR

- 1152. POPULAR VEHICLES & SERVICES LTD. (2701-A4-05), KUNNATHUMKARA, PARAVATTANI, THRISSUR, KERALA - 680655 PH :6282306495.
- 1153. SAI SERVICE PRIVATE LIMITED (2705-A4-06), 17/30,POOTHOLE,THRISSUR,KERALA - 680004 PH:9645105051.
- 1154. BRD CAR WORLD LIMITED (A404-A4-01), NH 47,BYE PASS,KONIKARRA POST,THALORE, THRISSUR - 680031 PH :9995807141.
- 1155. INDUS MOTOR COMPANY PRIVATE LIMITED (2702-A4-00), JYOTHI COMPLEX, GURUVAYOOR ROAD, WEST FORT, THRISSUR - 680004 PH:9745998014.
- 1156. BRD CAR WORLD LIMITED (A404-A4-07), GURUVAYOOR ROAD, PUNKUNNAM P.O., PUZHAKKAL, THRISSUR - 680002 PH: 9746476529.

THRITHALLUR

1157. BRD CAR WORLD LIMITED (A404-SS-04), PO-THRITHALLUR, NH-17, THRITHALLUR THRISSUR - 680619 PH :9539197888.

TIRUR

- 1158. A M MOTORS (E601-Y4-02), SATELLITE AUTO WORKS, PAYYANAGADI POST, TIRUR - 676101 PH:9995879706.
- 1159. KVR AUTOCARS PVT LTD (7H01-Y4-05), T.P. 7/204-B, TANUR ROAD,MOOCHIKKAL, MEENADATHUR P.O., TIRUR, DISTRICT-MALAPPURAM, KERALA 676307 PH :9747020673.
- 1160. A M MOTORS (E601-Y4-08), THALAKKADATHOOR PO, MALAPPURAM, MALAPPURAM DISTT. - 676103 PH: 9895705323.
- 1161. INDUS MOTOR COMPANY PRIVATE LIMITED (Y403-Y4-01), SURVEY NO. 119/3, 4, 9A, OLD MODERN PHARMACEUTICALS PVI. LTD., THRIKANDIYOOR VILLAGE, CHAMBAVATTOM ROAD, TIRUK, KERALA. 676105 PH 9747518883

TRIPPUNITHURA

1162. SAI SERVICE PRIVATE LIMITED (2705-AK-05), HILL PALACE ROAD, KARINGACHIRA, COCHIN -682301 PH 9645105067.

TRIPRAYAR

1163. POPULAR VEHICLES & SERVICES LTD.
(2701-87-08), SURVEY NO. 2966,8. 2696).
296/9-1, NATTIKA VILLAGE, NEAR CIVIL
STATION, POLY JUNCTION, TRIPRAYAR TOWN,
THRISSUR TALUK & DISTRICT, KERALA-680566
-680566
PH. 3946699245.

TRIVANDRUM

1164. INDUS MOTOR COMPANY PRIVATE LIMITED

(1602-16-01), T.C. 24/885 THYCAUD P.O., THYCAUD P.O., METTUKUDA, TRIVANDRUM -695014

PH:9745998001.

- 1165. POPULAR VEHICLES & SERVICES LTD. (1601-16-01), C.I.T. ROAD, KILLIPALAM, KARAMANA P.O, TRIVANDRUM - 695002 PH:9946104601.
- 1166. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-02), NH BYE PASS ROAD, VEMPALAVATTOM, TRIVANDRUM - 695029 PH:9745998003.
- 1167. SARATHY AUTODRIVES PVT LTD (1607-16-02), KOVALAM BYEPASS, SN NAGAR, MANACAUD (PO), TRIVANDRUM - 695009 PH :9947270665.
- 1168. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-05), G.G. MEDICAL COLLAGE P.O., MURINJAPALAM, TRIVANDRUM, MURINJAPALAM, , - 695011 PH 9745998010.
- 1169. POPULAR VEHICLES & SERVICES LTD. (1601-16-05), OPP. ST. JUDE CHURCH,CIT ROAD, KILLIPPALAM,TRIVANDRUM - 695002 DL 0466206610.
- 1170. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-11), SURVEY NO.3, TC-7/1069(9), MARUTHAMKUZHI, SASTHAMANGALAM VILLAGE, PTP NAGAR ROAD, KANJIRAMPARA P.O., TRIVANDRUM - 695030 PH:9747508822.
- 1171. SOUTH PARK MOTORS PVT. LTD. (1604-16-01), SURVEY NO. 986/3-4-5-6, VILLAGE -KADAKAMPALLY, CHACKAI BYPASS, TALUKA -TRIVANDRUM, TRIVANDRUM, KERALA. - 695029 PH :9526100008.
- 1172. SARATHY AUTODRIVES PVT LTD (1607-16-03), 77/2-11, NEMOM VILLAGE, PAPPANAMCODU INDUSTRIAL AREA, TALLIKA AND DISTRICT-THIRUVANANTHPURAM, KERALA. - 695019 PH -9961665865
- 1173. POPULAR VEHICLES (1601-16-12), RE-SURVEY NO. 264-1, MANANTHALA STADIUM ROAD, NEAR SURYAPRABHA AUDITORIUM, ULCOOR VILLAGE, MANANTHALA, TRIVANDRUM DIST., KERALA. - 695 015 PH: 9364498605.

- 1174. POPULAR VEHICLES (1861-16-17), BUILDING NO. 13/632,632-A, 633,633-A1,633-A2,634-636, 6TH MILE STONE, VAZHAYILA PO, PEROORKADA, THIRUVANANTHAPURAM, KERALA - 695521 - 695521 PH :9288023313.
- 1175. SARATHY AUTODRIVES PVT LTD (1607-16-01), SURVEY NO 24494, VILL MUTTATHARA, NH BYE PASS ROAD, KALLUMOOD JN., VALLAKADAU PO, ENCHAKKAL, THRUVANANTHAPURAM, KERALA-695008 -695008 PH 9662416665.

TRIVANDRUM-MANANTHALLA

1176. INDUS MOTOR COMPANY PRIVATE LIMITED (1602-16-08), NEAR MUSLIM JUMA MASJID, MUKKAM PLAMOODE, VATTAPPARA-MANNANTHALA M C ROAD, VATTAPPARA PO, MANNANTHALA, TRIVANDRUM - 695028 PH : 9747540100.

ΠΡΡΔΙ Δ

- 1177. POPULAR VEHICLES & SERVICES LTD. (4702-41-0A), N.H.17, KAIKAMPA, UPPALA P.O., KASARGOD (KERALA) - 671322 PH :8086078864.
- 1178. KVR CARS (4102-41-01), NH 17, BANDIYODE, MANGALAPADI (PO), UPPALA, KASARGOD DISTT.,KERALA - 671324 PH: 9526021876.

VADAKARA

- 1179. INDUS MOTOR COMPANY PRIVATE LIMITED (4701-85-07), BYE PASS JN,VATAKARA-673104,CALICUT, - 673104 PH :9745998021.
- 1180. POPULAR VEHICLES AND SERVICES (8S02-8S-01), NEAR MADAPPALLY GOVT. COLLEGE, MADAPPALLY, P.O. VADAKARA, KOZHIKODE (KERALA) - 673102 PH:8943345935.

VALENCHARRY

1181. A M MOTORS (CUK1-CUK-01), SURVEY NO. 132/4, KOLAMANGALAM, PERINTHALMANNA ROAD, VALANCHERY, DIST.-MALAPPURAM. -676552 PH: 9745986666.

VETTICHIRA

1182. KVR AUTOCARS PVT LTD (7H01-MZ-03), AP IV, 75A TO G, NH-17, CHUNKAM, DIST. MALAPPURAM, VETTICHIRA, - 676552 PH 9747020023

WADAKKANCHERY

1183. BRD CAR WORLD LIMITED (A404-MX-03), VAZHAKODE, CHELAKARA ROAD, MULLURKARA P.O., WADAKKANCHERY, THRISSUR DIST - 680583 PH :9567869403.

KERLA

1184. KVR (GMN1-GMN-01), SURVEY NO. 1087/1C-91, VAZHIKADAVU VILLAGE, OOTY ROAD, MUNDA, EDAKKARA TOWN, NILAMBUR TALUK, MALAPPURAM DIST., KERALA - 679 331 PH: 9747020777.

LADAKH

LEH

FDAKKARA

1185. DRUK AUTOZONE (9S02-9S-01), AIRPORT ROAD, LEH (LADAKH), DISTT. LADAKH, LEH -194101 PH -8082800205

MADHYA PRADESH

AGAR

1186. UNITARA MOTORS (BJT2-BJT-01), 27, UJJAIN ROAD, NEAR MARKETING FUEL STATION, AGAR, MADHYA PRADESH (465669) - 465669 PH: 9770018283.

ALIRAJPUR

1187. RUKMANI MOTORS PVT. LTD. (GLY1-GLY-01), WARD NO 1, JHABUA ROAD, ALIRAJPUR, MADHYA PRADESH, MP - 457887 PH :9755549200 9109978301.

ANUPPUR

1188. SHUBH MOTORS PVT. LTD. (BIB1-BIB-01), NEAR HDFC BANK, TEHSIL ROAD, ANNUPUR - 484224 PH :9303884800.

ASHOK NAGAR

1189. PREM MOTORS PVT. LTD. (DS01-DS-02). SURVEY NO. 67/2/3, SINGAKHEDI HOUSE GUNA BYPASS NEAR RAJ MATA CIRCLE, ASHOKNAGAR, MADHYA PRADESH. - 473331 PH-9926809866.

ASHTA

1190. JEEWAN MOTORS PVT. LTD. (BSF1-BSF-01),
KHASRA NO.111/1 NEAR RELIANCE PETROL
PUMP, BHOPAL ROAD, ASHTA, DISTT. SEHORE
(M.P.) - 466001
PH :9826429604
6264918307
8718911222.

BADNAWAR

1191. PATEL MOTORS (INDORE) PVT. LTD. (BPT1-BPT-01), KHASRA NO. 2194/1, BADNAGAR ROAD, BADI CHOUPATI, OPPOSITE BSNL TOWER, BADNAWAR, DISTT. - DHAR, MADHYA PRADESH. - 454660 PH. 3926332221.

BADWAH / BARWAHA (BOTH NAMES ARE OK)

1192. NIMAR MOTORS PVT. LTD. (AU01-UJ-05), NIRMAL COMPLEX, INDORE ROAD, BARWAH-451001 PH:7770878726, 9669569496.

BALAGHAT

1193. KUNAL MOTORS (U501-TP-04), KH NO.-1/56, JHULELAL DHARMSHALA ROAD, BALAGHAT, MADHYA PRADESH - 4811001 PH :8349992181.

BARELI

1194. RAJRUP MOTOR JUNCTION (A UNIT OF RM.)
MOTORS PVT. LTD.) (1303-13-01), SURVEY 423/2,
VILLAGE KAMTON, NH 12, BARELI, RAISEN,
MADHYA PRADESH. - 464668
PH :9826333501.

BARHI

1195. SHUBH MOTORS PVT. LTD. (GMK1-GMK-01), 1286/2, BARHI, DIST. - KATNI, MADHYA PRADESH - 483770 PH: 9755580253.

BARNAGAR

1196. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (BBK2-BBK-01), RUNIJA ROAD ,BARNAGAR CITY, DISTRICT UJJAIN -456771 PH :9755512100/7898900224.

BARWANI

 NIMAR MOTORS PVT. LTD. (AU01-SA-02), ANJAD ROAD, VILLAGE -KARAHI, BARWANI, MADHYA PRADESH - 451551 PH:7770804492, 9669569496.

BEGAMGANJ

1198. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIL1-CIL-01), IN FRONT OF DUSHERRA MAIDAN, SAGAR BHOPAL ROAD, BEGAMGANJ, DIST – RAISEN, MADHYA PRADESH – 464881 - 464881 PH : 9826333501.

BEOHARI

1199. SHUBH MOTORS PVT. LTD. (BKA1-BKA-01), REEVA ROAD, NEAR AARRA MACHINE, BEOHARI, DIST.-SHAHDOL, MADHYA PRADESH. - 484774 PH. 9755580253.

BERASIA

1200. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT, LTD.) (CKG1-CKG-01), BHOPAL ROAD, OPP, BERASIA HOSPITAL, BERASIA. DISTRICT - BHOPAL, MADHYA PRADESH. -463106

PH:7909997570.

RFTMA

1201. OCEAN MOTORS PVT. LTD. (BVR1-BVR-01), OPPOSITE MPEB OFFICE. INDORE-AHEMDABAD ROAD, BETMA, DISTRICT - INDORE, MADHYA PRADESH . - 453001 PH:7389936477.

BETUL

1202. KUNAL MOTORS (U501-U5-02), BHOPAL -NAGPUR NATIONAL HIGHWAY, NEAR BADORA CHOWK.. BETUL - 460001 PH -8349999177

1203. KAMTHI MOTORS (GKF1-HHI-01), KAMTHI MOTORS LLP(SERVICE CENTER) NEAR SUNITA COLONY NEAR FOREST NAKA, SONAGHATI, ITARSI ROAD RETUL - 460001

BHAVRA

PH:9329918424

1204. RUKMANI MOTORS (SPT1-SPT-01), GRAM PANCHAYAT, KALIYAVAHO, OPP SUNKER MANDIR, BHAVRA TEHSIL, ALIRAJPUR DISTRICT, MADHYA PRADESH - 457882. -457882 PH:9755549200 9109978301.

BHOPAL

1205. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (0309-03-01), 4/1, DAGA HEIGHTS, NEAR BUDHNA MANDIR, MAIN ROAD KOLAR ROAD. CHUNABHATTI, BHOPAL, MADHYA PRADESH, -462016 PH:9109900400.

1206. JEEWAN MOTORS PVT, LTD, (0302-03-01), 9E SECTOR A,INDUSTRIAL AREA, GOVINDPURA, BHOPAL - 462024 PH:9826017799 9826429605

1207. JEEWAN MOTORS PVT. LTD. (0302-03-04), KHASRA NO. 54-55/1/1, NEAR RELIANCE FRESH.CHUNA BHATTI MAIN ROAD, INDIAN OIL PETROL PUMP, BHOPAL (M.P.) - 462036 PH:8718802178.

1208. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (0308-03-01), 8A. SECTOR-C. J.K. ROAD, GOVINDPURA INDUSTRIAL AREA, BHOPAL, MADHYA PRADESH - 462023 PH:9826333501 9826032579

1209. SATYAM MOTORS (0307-03-01). NH-12.SUVEESHA NAGAR.HOSHANGABAD ROAD.MISROAD - 462040 PH:6261900423 6261900696.

BIAORA

1210. UNITARA (0F02-0F-01), OLD AB ROAD, KACHNARIA, BIAORA (M.P) - 465674 PH:9770018283.

BINA

1211. ADINATH CARS PRIVATE LIMITED (BHQ2-BHQ-01), PLOT NO. 2/3/4/5 AMANTIGEL LAND SEMI URBAN INDUSTRIAL AREA, BINA. KHURAI ROAD (NH 26) BINA, DISTRICT -SAGAR, MADHYA PRADESH - 470113 PH:9009780047.

BURHANPUR

1212. NIMAR MOTORS PVT, LTD, (BRR1-BRR-01). KHASRA NO. 654/15-16, BASEMENT OF HOTEL AMBIKA RESIDENCY, OPP, PAKIZA SHOWROOM, SANJAY NAGAR, AMRAVATI ROAD, BURHANPUR, MADHYA PRADESH -450331 PH:7694011374, 9669569496.

1213. CITY CARS (UNIT OF AGARWAL WHEELS) (GKQ1-GKQ-01), GRAM AND POST - CHANDAL CHAKGHAT TEHSIL - TEONTHER PRAGRAJ ROAD, NH 27, DIST- REWA, MP - 486226...-486226 PH:9754301199.

CHATTARPUR

1214. ADINATH CARS PRIVATE LIMITED (8B02-8B-01), MAHOBA ROAD, NEAR BUS STAND. CHHATARPUR, DISTT SAGAR - 471001 PH:9009785577.

CHHINDWARA

1215. KAMTHI MOTORS LLP (U502-U5-01), KHASRA NO.1/53. BESIDE MVM SCHOOL. NAGPUR ROAD, VILL.-SARRA, DISTT. CHHINDWARA, MADHYA PRADESH - 480001 PH:9111488444/9111535777.

1216. KUNAI MOTORS (U501-U5-03), OPP. KUNAI MOTORS SHOWROOM, .LAL BAGH TIRAHA.BEHIND TRUE VALUE OUTLET. NASIRABAD ROAD, CHHINDWARA(MP), - 480001 PH :9981852239

1217. KUNAL MOTORS (U501-U5-06), PLOT NO. 546. LAHGARUA NEAR MULLU BABA MANDIR, NARSINGHPUR ROAD, CHINDWARA, MADHYA PRADESH - 480002 PH :9981852239

CHITRAKOOT

1218. CITY CARS (UNIT OF AGARWAL WHEFLS) (GKS1-GKS-01), PILIKOTHI CHOURAHA, BESIDE SINGH AUTOMOBILE- A HERO AGENCY. CHITRA ROAD, CHITRAKOOT, DISTRICT-SATNA (MADHYA PRADESH)- 485334 - 485334 PH:9754301199.

DARRA

1219. PREM MOTORS PVT. LTD. (BOR1-BOR-01), PICHHORE TIRAHA, GWALIOR JHANSI ROAD. DABRA, DIST.-GWALIOR, - 475110 PH:9340059606

DAMOH

1220. ADINATH CARS PRIVATE LIMITED (RD02-RD-01), SAGAR JABALPUR BYPASS ROAD, DAMOH (M.P.). - 470661 PH:9009780035.

DATIA

1221. PREM MOTORS PVT, LTD, (3003-WE-05). NR.BHOJPURIA MOTORS, BHANDER ROAD, DATIA, MADHYA PRADESH - 475661 PH:9926809803.

DEORI

1222. ADINATH CARS PRIVATE LIMITED (CUO1-CUO-01), C/O VISHWANATH DIXIT, VIJAYSHRI GAS SERVICE, NEAR GOVT, HIGH SCHOOL, NARSINGHPUR ROAD, VILLAGE KHEER, DEORI DISTT, SAGAR (M.P.) - 470226 PH -9009787562

DEPALPUR

1223. OCEAN MOTORS PVT. LTD. (WB01-WB-03). NEAR LEELA RESIDENCY.INDORE ROAD.DEPALPUR.DIST.INDORE-MP - 453115 PH:7389936488

DEWAS

1224. UNITARA MOTORS PVT LTD (3Q02-3Q-01). SURVEY NO 255, A.B. ROAD. RASULPUR SQUARE, DEWAS, MADHYA PRADESH PIN 455001 - 455001 PH:9770018283.

DHAMNOD

1225. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT, LTD.) (UT01-UT-01), KHASRA NO. 484/1/2, OLD A B ROAD, OPPOSITE HP PETROL PUMP, DHAMNOD, DIST.-DHAR, MADHYA PRADESH. - 454552 PH:9109199032 7471111132.

DHAR

1226. RUKMANI MOTORS (P) I TD (5304-I M-02), 41/2 MAGAJPURA.DHAR.. - 454001 PH:9755549200 9109978301.

DINDORI

1227. STANDARD AUTO AGENCIES (AVA1-AVA-01). SUKKHAR WARD 1. NEAR DHURVE PETROL PUMP.DINDORI - 481661 PH:9131343928

FALI

1228. OCEAN MOTORS (SGH1-SGH-01), NH 47, NEAR GRAM - FALI, TEHSIL KHUDEL, INDORE, MADHYA PRADESH. - 452016 PH:7389936477.

GADARWARA

1229. STANDARD AUTO AGENCIES (BOI2-BOI-01). KHASRA NO. 130/31/A & 131/2, HALKA NO. 18/1, NO. 119. GADARWARA, DISTRICT -NARSINGHPUR - 487551 PH:7771003374

GANJ BASODA

1230. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AEA2-AEA-01), LAL BAGH, BARETH ROAD, GANJ BASODA, VIDISHA, 464221. - 464221 PH:9425148584.

GARRA

1231. KAMTHI MOTORS LLP (GJC1-GJC-01). LALBARRA ROAD, GARRA INDUSTRIAL AREA, GARRA, BALAGHAT, MADHYA PRADESH, -481331 PH:7723020684.

GAUTAMPURA

1232. OCEAN MOTORS PVT, LTD, (CFW1-CFW-01). RUNJI CHOURAHA, GAUTAMPURA, TEHSIL -DEPAI PUR. DISTT-INDORE, MADHYA PRADESH . - 453220 PH:7389936477.

GOTEGAON

1233. STANDARD AUTO AGENCIES (BLY1-BLY-01), JABALPUR ROAD, OPP, NEW KRISHI UPAJ MANDI, TEHSIL - GOTEGAON, DIST. -NARSINGHPUR. - 443 001 PH:7771003374.

1234. PREM MOTORS PVT, LTD, (S301-S3-01), OPP R.T.O., A.B. ROAD, GUNA, - 473001 PH -268015

GWALIOR

1235. NIKUNJ MOTORS (3006-30-01), GOLE KA MANDIR SQUARE, AIRPORT ROAD. GWALIOR, MADHYA PRADESH - 474005 - 474005 PH:9109105599.

1236. PREM MOTORS PVT. LTD. (3003-30-01), M. L. B. ROAD GWALIOR .. - 474002 PH:9926809803.

1237. PREM MOTORS PVT. LTD. (3005-30-01), SHIVPURI LINK ROAD, GWALIOR - 474002 PH -9926809803

HALALPURA - BHOPAL

1238. DAGA MOTORS (0309-03-02), KHASRA NO. 80/1/K, VILLAGE - HALALPURA, TEHSIL - HUZUR, DISTRICT - BHOPAL, MADHYA PRADESH. -462030 PH -9109900365.

HANSA KHEDI

1239. KATHED MOTORCORP (SGI1-SGI-01), MAIN DHARMAT ROAD, HANSA KHEDI (CHANDRAWATI GAND), TEHSIL -SANWER, DISTRICT -INDORE, MADHYA PRADESH. - 453551 PH :7471111132.

HARDA

1240. INFINITY CARS (A UNIT OF FOUZDAR CARS PVT. LTD) (KM01-VY-02), NEAR RTO,INDORE HIGHWAY ROAD,HARDA MP - 461331 PH :8889281113.

HATOD

1241. OCEAN MOTORS PVT. LTD. (BVT1-BVT-01), 726/6, INDORE-DEPALPUR MAIN ROAD, OPP. HP GAS AGENCY, HATOD DISTT. INDORE -453111 PH. 7389936477.

HATTA

1242. ADHINATH MOTORS (SKK1-SKK-01), NEAR NAVODAYA SCHOOL, DAMOH ROAD, HATTA, DISTT. DAMOH (M.P.) - 470775. - 470775 PH - 9000787562

HOSHANGABAD

1243. INFINITY CARS (A UNIT OF FOUZDAR CARS PYT. LTD) (KM01-KM-01), 185, RAMJIBABA GROUND, HOSHANGABAD, MADHYA PRADESH -461001 PH :8889281113.

ICHHAWAR

1244. RAJRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CIKT-CIK-01), SEHORE NADAN ROAD, NEAR SARASWATI SCHOOL, ICHHAWAR, DISTRICT – SEHORE, MADHYA PRADESH - 466115 PH :9826-333501.

INDERGARH

1245. PREM MOTORS (SPU1-SPU-01), NEAR KHERAPATI GARDEN, INDERGARH, MP - 475675 - 475675 PH 9926809818.

INDORE

1246. KATHED MOTOCORP(A UNIT OF KATHED MOTORS PVT. LTD.) (5307-53-01), PLOT NO. 483/2/2, MAIN DHAR ROAD, NEAR CHANDAN NAGAR POLICE STATION, INDORE, MADHYA PRADESH. - 452002 PH. 17471111132.

- 1247. KTL AUTOMOBILES (5309-53-C1), PLOT NO.5/RC, SCHEME NO 134,MR 10,VILLAGE KHAJRANA, DIST INDORE-452010,MADHYA PRADESH - 452010 PH :8889433301.
- 1248. OCEAN MOTORS PVT. LTD. (5306-53-01), SCHEME NO 97, PLOT NO 49, PART. -4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452001 PH :738939613.
- 1249. OCEAN MOTORS PVT. LTD. (5306-53-02), NEAR QUEENS COLLEGE, ASHARAM BAPU ASHRAM, KHANDWA ROAD, INDORE - 452017 PH: 8085916505.
- 1250. OCEAN MOTORS PVT. LTD. (5306-53-03), 171A, 174A, 175A, 180A, 181A, 82A, 182A, 182A, BRAUESHWARI EXTENSION, PIPLIYAHANA, INDORE 452001 PH : 7389393451.
- 1251. OCEAN MOTORS PVT. LTD. (5308-53-04), SCHEME NO 97, PLOT NO 142 & 151, PART - 4, COMMERCIAL MANDI, RING ROAD, NEAR CAT SQUARE, RAJENDRA NAGAR, INDORE, MADHYA PRADESH 452012 - 452012 PH :928100897.
- 1252. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-01), 428/3/3,NIRANJANPUR,A B ROAD,INDORE - 452010 PH :9826360699.
- 1253. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-02), 176/1,PIPLYA RAU,A.B. ROAD ,INDORE - 452017 PH -9826360699
- 1254. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-03), M.O.G. LINES, NEAR GANGWAL BUS STAND, DHAR ROAD, INDORE (M.P.) -452006 PH -9228360690
- 1255. PATEL MOTORS (INDORE) PVT. LTD. (5303-53-05), SURVEY NO. 174/5 AND 174/6, PIPLIYA RAO, INDORE, MADHYA PRADESH. -452012 PH: 9826360699.
- 1256. RANA MOTORS (5308-53-01), KHASRA NO. 293/2, 299/1, TEJPUR, GADBADI PUL, A.B. ROAD, INDORE. - 452009 PH :9109975566.
- 1257. RUKMANI MOTORS (P) LTD (5304-53-01), 2-3,,A.B. ROAD,INDORE - 452001 PH :9039088702 9109978301.
- 1258. RUKMANI MOTORS (P) LTD (5304-53-03), NO. -4/5, MANORAMA GANJ, INDORE - 452001 PH :9109107171 9109978301.

1259. RUKMANI MOTORS (P) LTD (5304-53-04), MANGAL COMPOUND, GODOWN NO. 11-12, VILLAGE 15/1, PIPLYA KUMAR, MR 11 RING ROAD, DEWAS NAKA, INDORE, MADHYA PRADESH. - 452010 PH. 9981078226 9110978301

JABALPUR

1260. MAA GAYTRI (AGGARWAL) (5404-54-01), MOUZA KARMETA N.B. 497, P.H. NO 23/26, KHASRA NO. 497 & DIV. KHASRA NO. 494/6, DIV. SHEET NO 2, PLOT NO 63/1, JABALPUR-PATAN ROAD, JABALPUR. - 482/012 PH. 7489901021.

- 1261. SHUBH MOTORS (5403-54-01), MAHANADDA, MADAN MAHAL ROAD, JABALPUR, MADHYAPRADESH - 482001 PH :9755581438.
- 1262. SHUBH MOTORS PVT LTD (5403-54-03), 156/5/1, 156/3KA, 156/3KHA, 156/3GHA, BEHIND OM PETROLEUM, ADHARTAL TIRAHA, JABALPUR, MADHYA PRADESH - 482002 PH 9755594512
- 1263. STANDARD AUTO AGENCIES (5405-54-07), NEW WARD NO. 71, IN FRONT OF ORIENTAL COLLEGE, KATNI BYPASS, JABALPUR, MP. -482003
- PH: 6387098013.
 1264. STANDARD AUTO AGENCIES (5405-54-01),
 OPPOSITE ALLAHABAD BANK, DELITE TALKIES
 ROAD, CIVIL LINES, JABALPUR 482001
 PH: 7771014822
 9074360320.
- 1265. STANDARD AUTO AGENCIES (5405-54-03), DEENDAYAL CHECK, DAMOH NAKA, JABALPUR - 482002 PH :7771006920.
- 1266. STANDARD AUTO AGENCIES (5405-54-06), CHIMNEY PLOT, MADAN MAHAL, NEAR GULZAR HOTEL, JABALPUR - 482001 PH :9302525012.

JAORA

1267. PATEL MOTORS (INDORE) PVT. LTD. (P801-BFR-04), SURVEY NO.57/11/11, RATLAM ROAD, RATLAM NAKA, OPP. KOTHARI AGRIKO, INDUSTRIAL AREA, INFRONT OF ST. PAUL SCHOOL, JAORA, DISTT. RATLAM, MADHYA PRADESH - 457226
PH 243399. 7089901505. 9926932221.

JHABUA

1268. PATEL MOTORS (INDORE) PVT. LTD. (AAR1-AAR-01), INDORE AHMEDABAD ROAD, MEGHNAGAR NAKA, JHABUA ,MADHYA PRADESH. - 457661 PH :9826634449.

JOBAT

1269. RUKMANI MOTORS (SOA1-SOA-01), BYEPASS ROAD, OPPOSITE JP COLLEGE, JOBAT, MP – 457990. - 457990 PH :9755549200 9109978301.

KARERA

1270. PREM MOTORS (SMO1-SMO-01), GRAM - JHASI ROAD, KARERA, DISTRICT - SHIVPURI, MADHYA PRADESH - 473660. - 473660 PH :9926823596.

KATNI

1271. SHUBH MOTORS PVT LTD (FK01-FK-01). KHASRA NO.850, NH-7, JHINJARI, INFRONT OF POLICE STATION, JABALPUR ROAD, KATNI, MADHYA PRADESH. - 483501 PH.9755518839.

KHANDWA

1272. NIMAR MOTORS PVT. LTD. (AU01-3R-03), BEFORE VIKAS UDYOG, INDORE ROAD, KHANDWA - 450001 PH :9575105697, 9669569496.

KHARGONE

- 1273. NIMAR MOTORS PVT. LTD. (AU01-AU-01), JETAPUR, SANAWAD ROAD, KHARGAONE, -451001 PH:9669569504, 9669569496.
- 1274. NIMAR MOTORS PVT. LTD. (AU01-AU-06), PH.
 NO. 35, VILLAGE DANAPUR, TEHSIL –
 KHARGONE, DISTRICT KHARGONE, MADHYA
 PRADESH. 451001
 PH. 7694011436, 9669569496.

KHATEGAON

1275. UNITARA (BXB2-BXB-01), NEMAWAR-INDORE ROAD, KHATEGAON, M.P - 455336 - 455336 PH:9770018283.

KOTMA

1276. SHUBH MOTORS (D001-D0-01), WARD NO.7, ANNUPPUR KOTMA ROAD, DISTT. ANNUPUR, KOTMA (M.P.) - 484336 PH:9303884800.

KUKSHI

1277. OCEAN MOTORS PVT. LTD. (BIO1-BIO-01), SURVEY NO.593/5/1, 593/6/1, BARWANI ROAD, TOLL KANTE KE PASS, TEHSIL-KUKSHI - 454331 PH :7389936477, 8085909001

LAKHNADON

1278. KAMTHI MOTORS LLP (SCL1-SCL-01), RANI DURGAVATI CHOWK, NH-7, WARD NO. - 05, JABALPUR ROAD, LAKHNADON, MADHYA PRADESH. - 480886 PH: 9285506128.

MAHESHWAR

1279. NIMAR MOTORS (SHH1-SHH-01), OPPOSITE DEVRAJ HOTEL, MAIN MANDLESHWAR-DHAMNOD ROAD, MAHESHWAR, MP - 451224 PH -9669569504, 9754979019.

MAHIDPUR

1280. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CWN1-CWN-01), 264/3, BHIMAKHEDA, MAHIDPUR, UJJAIN - 456443 PH :9755044300 9755512100.

MAIHAR

1281. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-GI-04), UNIT OF AGARWAL WHEELS PVT. LTD., NEAR RELIANCE PETROL PUMP, NH-7, REWA ROAD, MAIHAR (M.P.) - 485771 PH :9754301199.

MAJHAULI

1282. CITY CARS (SPN1-SPN-01), WARD NUMBER 14, NAGAR PARISAD MAJHAULI, DIST. SIDHI (M.P) -486666. - 486666 PH :9754301199.

MANASA

1283. PATEL MOTORS (INDORE) PVT. LTD. (BZX1-BZX-01), 982/1, RAMPURA ROAD, MANASA, DIST. NEEMUCH, MADHYA PRADESH. -458110 PH. 9977703139

MANAWAR

1284. OCEAN MOTORS PVT. LTD. (BVS1-BVS-01), NEAR SHANTIKUNJ COLONY, INDORE-MANAWAR MAIN ROAD, TEHSIL – MANAWAR, DISTRICT – DHAR. - 454335 PH - 7380936477

MANDLA

1285. STANDARD AUTO AGENCIES (5405-WD-04), KATARA ROAD, MANDLA, DIST. MANDLA MP -481661

PH:8959280989. MANDSAUR

1286. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-01), NEAR SHIVANA BRIDGE,RATLAM MANDSAUR ROAD,MANDSAUR - 458001 PH 9977703139

1287. PATEL MOTORS (INDORE) PVT. LTD. (WC01-WC-02), BLOCK 'C', SHED-5, WARD NO. 1, INDUSTRIAL AREA, CITY - MANDSAUR, MADHYA PRADESH. - 458001 PH :9977704817.

MANPUR

1288. PATEL MOTORS (INDORE) PVT. LTD. (BRL1-BRL-01), KHASRA NO. 302/1/3, AB ROAD, MANPUR, DIST- INDORE - 453661 PH 9826360699

MAUGANJ

1289. CITY CARS (SEY1-SEY-01), NEAR SENGAR PETROL PUMP, CHACK MODE WARD NUMBER 03.NH 7. MAUGANJ, DISTT – REWA, MADHYA PRADESH – 486331. - 486331 PH-975301199.

MHOW

1290. OCEAN MOTORS PVT. LTD. (WA01-WA-01), A.B. ROAD, NEAR KISANGANJ POLICE STATION, MHOW - 453441 PH : 7389336514

MORENA

1291. PREM MOTORS PVT. LTD. (RG01-RG-01), NEAR SALES TAX BARRIER SQUARE, AB ROAD MORENA - 476001 PH :9926809803.

NAGDA

1292. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHR2-CHR-01), PLOT NO. 17. STATE HIGHWAY NO.17, INDORIYA ROAD, NAGDA, DISTRICT – UJJAIN, MADHYA PRADESH. - 456338 PH. 97555044300/9755512100.

NARAYANGARH

1293. PATEL MOTORS (SFN1-SFN-01), 1742/11, NARAYANGARH, TEHSIL - MALHARGARH, DISTRICT- MANDSAUR, MADHYA PRADESH. -458553 PH 9977703139

NARSINGHPUR

1294. STANDARD AUTO ACENCIES (B801-BB-01), KH.
NO. 82/44 & 83/44, NB NO.519, PC NO. 19(42),
OLD 46 (NEW) MOUZA RONSRA R.I.M. 2, TEHSIL
& DISTRICT – NARSINGHPUR, MADHYA
PRADESH. - 487001
PH. 9179779400.

NASRULLAGANJ

1295. JEEWAN MOTORS PVT. LTD. (CIN1-CIN-01), KHASRA NO. 458, VILLAGE – RALA, TEHSIL – NASRULLAGANJ, DISTRICT – SEHORE, MADHYA PRADESH. - 466331 PH: 9303884800.

NEEMUCH

1296. PATEL MOTORS (INDORE) PVT. LTD. (P801-3T-02), MHOW-NEEMUCH ROAD,NEEMUCH(MP),, - 458441 PH :9977703907.

NIWARI

1297. ADINATH MOTORS (SFC1-SFC-01), ATKHASRA NO 2017/1, NEAR HDFC BANK MAIN ROAD, NIWARI, MADHYA PRADESH –472442. - 472442 PH :9009787562.

PANDHURNA

1298. KAMTHI MOTORS (SFG1-SFG-01), SHANKAR NAGAR, PANDHURNA, DIST. - CHHINDWARA, MADHYA PRADESH - 480334. - 480334 PH: 9111535777.

PANNA

1299. CITY CARS (UNIT OF AGARWAL WHEELS)
(EQ01-EQ-01), KHASRA NO. 378, MOHAN RAJ
VILAS CHOURAHA, BESIDE MOHAN RAJ HOTEL,
CIVIL LINE NH-75, PANNA, MADHYA PRADESH.
- 488001
PH. 9754301199.

PARASIA

1300. KAMTHI MOTORS LLP (GKF1-GKF-01), KHIRSADOHMAL, PARASIA, CHHINDWARA. MP -480441 PH 9285506109.

PATAN

1301. MAA GAYATRI (SHP1-SHP-01), BESIDE KRISHI UPAJ MANDI, PATAN, PIN-483119, MADHYA PRADESH - 483119 PH :7489901021.

PAWAI

1302. CITY CARS (UNIT OF AGARWAL WHEELS) (SIX1-SIX-01), NEAR ETORI PETROL PUMP, PANNA ROAD, PAWAI, DIST. – PANNA, MP-488446 - 488446 PH :9754301199.

PETLAWAD

1303. PATEL MOTORS (INDORE) PVT. LTD. (CJD1-CJD-01), NEAR H. P. PETROL PUMP, THANDLA ROAD, PETLAWAD, DISTRICT – JHABUA, MADHYA PRADESH. - 457773 PH. 9926932221.

PIPARIYA

1304. INFINITY CARS (A UNIT OF FOUZDAR CARS PYT. LTD) (CGB1-CGB-01), HATHWAS TIRAHA, SHOBHAPUR ROAD, PIPARIYA, MADHYA PRADESH. - 461775 PH :8889281113

PITHAMPUR

1305. PATEL MOTORS (INDORE) PVT. LTD. (5303-BVD-04), 254-A, SECTOR-1, INDUSTRIAL AREA, PITHAMPUR, DISTT. DHAR - 454775 PH :9826360699.

RAISEN

1306. JEEWAN MOTORS (RF02-RF-01), WARD NO 14, PATANDEV, SAGAR ROAD, RAISEN, MADHYA PRADESH - 464551 PH :9644712135. 1307. RAJRUP MOTORS (RF03-RF-01), OPPOSITE S P OFFICE, NEAR ST. FRANCIS SCHOOL, VIDISHA ROAD, RAISEN, MADHYA PRADESH. - 464551 PH :9826333501.

RAJGARH

1308. RUKMANI MOTORS (P) LTD (GKE1-GKE-01), CHANDRA SHEKHAR AZAD MARG, NEAR TRIMURTI NAGAR, RAJGARH, DIST. - DHAR, MP. - 454116 PH :9755549200 9109978301

RATLAM

1309. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-01), 76 C,D&E,INDUSTRIAL AREA,RATLAM - 457001 PH:99269-32221/93404-31858.

1310. PATEL MOTORS (INDORE) PVT. LTD. (P801-P8-03), 181/17/18,DOSHI GOAN,INDUSTRIAL AREA, JAORA ROAD,RATLAM - 457001 PH. 99269-32221/93404-31858.

REWA

1311. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-M2-03), NYPASS CHURHATA, DIST. REWA - 482001 PH :9754301199.

1312. SHUBH MOTORS (5403-M2-05), VILLAGE – RATHARA, TEHSIL – HUZUR, DISTRICT - REWA, MADHYA PRADESH - 486003 - 486003 PH :9755582351.

SADALPUR

1313. OCEAN MOTORS (SPS1-SPS-01), JAIN SHRI SUPER MARKET, SERVICE ROAD, MHOW-NEEMUCH ROAD, SADALPUR, DISTRICT DHAR (M.P). - 454001. - 454001 PH. 7389038477

SAGAR

1314. ADINATH CARS PRIVATE LIMITED (G102-G1-01), STATION ROAD, TILAK GANJ, SAGAR (M.P.). -470001 PH:9009780030.

SANWER

1315. RANA MOTORS PYT LTD (CWX1-CWX-01), S.NO. 356/3/1, OLD UJJAIN BYPASS ROAD, TALUKA SANWER, DIST.-INDORE, MADHYA PRADESH. -453551 PH :9109975566.

SATNA

1316. CITY CARS (UNIT OF AGARWAL WHEELS)
(D702-D7-05), (A UNIT OF AGRAWAL WHEELS)
PVT. LTD.), BESIDE BHASKAR PRESS, BEHIND
MARUTI SHOWROOM, WARD NO.27, AMOUDHA
KALA, PANNA ROAD, SATNA - 485001
PH. 9754301199.

SAUSAR

1317. KAMTHI MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), BESIDE SAUSAR COTTON INDUSTRIES, CIVIL LINE; NAGPUR-CHHINDWARA ROAD, SAUSAR, DIST-CHHINDWARA, M.P.—480106. -480106 PH: 9111535777.

SEHORE

1318. JEEWAN MOTORS PVT. LTD. (0302-EH-02), 869/1/2, OFFICERS COLONY, IN FRONT OF CHURCH GROUND, BHOPAL, INDORE ROAD -466001 PH: 9617990992.

SENDHWA

1319. NIMAR MOTORS PVT. LTD. (CIH1-CIH-01), KHASRA NO. 286/10 AND 287/14, HALKA NO. 11, VARLA ROAD, SENDHWA, TEHSIL – SENDHWA, DISTRICT – BARWANI, MADHYA PRADESH. -451666

PH:7694011408.9669569496.

SEON

 KUNAL MOTORS (U501-8X-05), JYARAT NAKA, JABALPUR NAGPUR ROAD, SEONI (M.P.) -480661
 PH: 8349999269

SHADOL

1321. SHUBH MOTORS (MF01-MF-01), JAMUA, NEAR GYAN GUPTA,BUDHAR ROAD,SHAHDOL, -484771 PH: 9755595423.

SHAHPURA

1322. STANDARD AUTO AGENCIES (CRD1-CRD-01), KHASARA NO.172/3, BHERAV MATA MANDIR NEAR TOLL NAKA MAIN ROAD, JABALPUR NARSINGHPUR ROAD, SHAHPURA. - 483119 PH. 7771003374.

SHAJAPUR

1323. UNITARA (RH03-RH-01), LAL GHATI, A B ROAD, SHAJAPUR, MP - 465001 PH :9770018283

SHAMGARH

1324. PATEL MOTORS (INDORE) PVT. LTD. (BF21-BF2-01), KHASRA NO. 1179/1, MOHALLA MAROTH, TEHSIL – SHAMGARH, DISTRICT – MANDSAUR, MADHYA PRADESH. - 458883 PH:9977703139.

SHIVPUR

1325. PREM MOTORS PVT. LTD. (3003-3U-04), A B ROAD, SIVPURI,, - 473551 PH:9926809976.

SHUJALPUR

1326. UNITARA (BGP2-BGP-01), KISHONI, OPPOSITE HP FUEL STATION, SHUJALPUR, M.P - 465333 -465333 PH 9770018283

SHYAMPUR

1327. DAGA MOTORS (SJX1-SJX-01), NEAR MAHADEV RESTAURANT, NH-12, SHYAMPUR, DISTRICT – SEHORE, MADHYA PRADESH - 466651. - 466651 PH :9752880210.

SIDHI

1328. CITY CARS (UNIT OF ACARWAL WHEELS) (BKM1-BKM-01), ADHIYAR KHOH, NEAR GYAN DHARAMKATA, SIDHI, MADHYA PRADESH. -486661 PH 9754301199

SIHORA

1329. SHUBH MOTORS PVT. LTD. (CIG1-CIG-01), KHASRA NO. 31/1, P.H. – 11, MOUZA – GHAT SIMARIYA, TEHSIL – SIHORA, DISTRICT – JABALPUR, MADHYA PRADESH,. - 483440 PH :9755580253.

SIMROL

1330. RUKMANI MOTORS (BZV2-BZV-01), AMRIT SAGAR COLONY, SIMROL, DIST. - INDORE, MADHYA PRADESH - 452020 - 452020 PH:9109978301.

SINGHOLI

1331. PATEL MOTORS (SEQ1-SEQ-01), BEGHU CHITTORGARH ROAD, SINGOLI, NEEMUCH, MP – 458228 - 458228 PH :9977703907.

SIRONJ

1332. RAJIRUP MOTOR JUNCTION (A UNIT OF RMJ MOTORS PVT. LTD.) (CVM1-CVM-01), OPPOSITE BALAJI DHAM, LINK ROAD, SIRONJ, MADHYA PRADESH. - 464228 PH :9826333501.

SITAMAU

 PATEL MOTORS (SLL1-SLL-01), MAUKHEDA, TEHSIL - SITAMAU, DISTRIST - MANDAUR, MADHYA PRADESH - 458990 - 458990 PH 9977703139

TARANA

1334. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (CHQ2-CHQ-01), HOUSE NO. 1/6, WARD NO. 1/0, TOTLA MARG, TARANA-UJJAIN ROAD, TARANA, MADHYA PRADESH. - 456665 PH :9893563031/9755512100.

TENDUKHEDA

1335. STANDARD AUTO AGENCIES (CRC1-CRC-01), KHASARA NO. 49/6, MOUZA – TENDUKHEDA, DISTRICT – NARSINGHPUR. - 470880 PH:7771003374.

THIKRI

1336. NIMAR CAR (SED1-SED-01), OPPOSITE OF SHREE BALAJI TYRE SALES & SERVICE, SHREE NAGAR, THIKRI, MADHYA PRADESH –451660. 451660 PH :9109202186.

TIKAMGARH

1337. ADINATH CARS PRIVATE LIMITED (RE02-RE-01), NEAR MAU CHUNGI NAKA, TIKAMGARH (M.P.) -472001 PH 9909987440.

UDAIPURA

1338. JEEWAN (SCI1-SCI-01), WARD NO 3, NH-12, UDAIPURA, DIST. - RAISEN, MADHYA PRADESH - 464770 PH :8718911777.

UJJAIN

1339. YUG CARS (3W03-3W-02), 54/3/2, AGAR NAKA, NEAR VARDHAN HOTEL, MAKODI AAM CHAURAHA, INDIRA NAGAR, UJJAIN, MADHYA PRADESH. - 456001 PH :9755512100.

7024235298.
1340. YUG CARS (A UNIT OF RUKMARANI CARS INDORE PVT. LTD) (3W03-3W-01), SURVEY NO. 59/3, DEWAS ROAD,UJJAIN - 456010 PH :9755512100, 7860011045

UMARIA

1341. SHUBH MOTORS (5403-BVY-04), 8/2 GRAM BHAGRA, KIRANTAL KHURD, UMARIA DISTRICT UMARIA (MADHYA PRADESH) - 484661 PH :9755505888.

VIDHISHA

1342. DAGA MOTORS (A UNIT OF DAGA HEIGHTS) (AY02-AY-01), PLOT NO 59/1, VILLAGE RANGAI, VIDISHA, MADHYA PRADESH - 464001 PH :9109900374.

VIDISHA

1343. RAJRUP (AY03-AY-01), UDAYNAGAR COLONY, NEAR OIL FACTORY, SAGAR ROAD, VIDISHA, DISTRICT-VIDISHA (M.P.) - 464001 - 464001 PH :7869755501.

WAIDHEN

1344. CITY CARS (UNIT OF AGARWAL WHEELS) (D702-JJ-02), NEAR VIJAY BANDHU PETROL PUMP, KACHANI, THE. WAIDHEN, DISTRICT, SINGRAULI, MADHYA PRADESH - 486886 PH : 9754301199.

MAHARASHTRA

AHMEDNAGAR

1345. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-01), SARDA MILLS, SAVEDI ROAD, AHMEDNAGAR, MAHARASTRA - 414001 PH:7410024227.

1346. KANKARIYA AUTOMOBILES PVT. LTD. (A501-A5-05), MIDC, AHMEDNAGAR - 414003 PH :7447700029.

AJARA

1347. SAI SERVICE PRIVATE LIMITED (CIR1-CIR-01), GAT NO. 30, PLOT NO. 24, GP MILKAT NO. 906/3, NEAR MAYUR PETROL PUMP, AJARA, DISTRICT – KOLHAPUR. - 416505 PH:7776837717. 9673331977.

AKLUJ

1348. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-RU-04), PLOT NO. 15/3-A, PANCHVATI STOP,MALINAGAR ROAD,AKLUJ - 413101 PH:0217-223033/8805986848.

AKOLA

1349. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-01), TIRUPATI CHAMBERS, CONVENT ROAD, AKOLA - 444005 PH :9767892552/9112220551.

1350. KHANDELWAL AUTOWHEELS PVT. LTD. (F101-F1-02), PLOT NO E/12-13-MIDC PHASE-2, AKOLA. - 444001 PH :9767892552/9112220551.

ALEPHATA

1351. THE KOTHARI WHEELS (CSZ1-CSZ-01), GAT NO.446, MATOSHRI PRIDE, NEAR SADHANA BANK, KALYAN ROAD, AP – ALEPHATA, TALUKA – JUNNAR, DISTT. PUNE, PIN-412411 - 412411 PH. 3421753278.

ALIBAUG

1352. SIMRAN MOTORS PVT. LTD. (7501-3X-05). SURVEY NO. 30/1, OPP. RCF COLONY, VILLAGE – VESHVI, ALIBAUG, DISTRICT – RAIGAD, MAHARASHTRA - 402201 PH :9223161512, 9270888786.

AMALNER

1353. MANRAJ MOTORS (EL01-EL-01), PRASAD MOTORS, RAVI NAGAR, NEAR NAYARA PETROL PUMP, DHULE ROAD, AMALNER, DIST.JALGAON-425401. -425401 PH #REF!.

AMBERNATH

1354. AHER AUTOPRIME ILP (COP1-COP1-01), PLOT NO-24,26,27/17, MIDC, KALYAN-BADLAPUR ROAD, VILLAGE - KOHOJ, KHUNTAVLI, AMBERNATH - 421501 PH :8422871720.

AMRAVATI

- 1355. ASPA BANDSONS AUTO PVT. LTD. (F201-F2-01), SATURNA BADNERA ROAD,AMRAVATI,MAHARASTRA, - 444607 PH :9423123665
- ASPA BANDSONS AUTO PVT. LTD. (F201-F2-05), A1/A2, OLD BY PASS ROAD, MIDC, AMRAVATI, DIST: AMRAVATI, MAHARASTRA. - 444607 PH: 9423339601.

APTA

1357. K.T.S. AUTOMOTORS PVT. LTD. (0582-7S-01), VILLAGE: APTA, OPP. APTA RAILWAY STATION, LADIWALI, DIST: RAIGAD, PANVEL (MAHARASHTRA) - 410207 PH :9420611356/94206611326.

AURANGABAD

- 1358. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-01), PLOT NO. 1,P.B.NO. 716, CHIKALTHANA, AURANGABAD - 431210 PH -9158000046
- 1359. PAGARIYA AUTO PVT. LTD. (2103-21-01), OPP. OLD HIGH COURT, NEAR HOTEL ASHOKA EXECUTIVE, JALANA ROAD, AURANGABAD -431005 PH :02406659902
- 1360. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-21-03), C-27,MIDC, CHIKALTHANA, N/R LUPIN LABORATORIES, AURANGABAD, MAHARASHTRA - 431006 PH :9158000059.
- 1361. PAGARIYA AUTO PVT. LTD. (2103-21-05). GAT NO. 46, PLOT NO. 50, NEAR MASTER COOK RESTAURANT (KAILASH HOTEL) BEED BYPASS ROAD, AURANGABAD, MAHARASHTRA - 431005 PH :986099948/1960999468.
- 1362. PAGARIYA AUTO PVT. LTD. (2103-21-06), PLOT NO.A-35 MIDC, NEAR MAIN RAILWAY STATION, AURANGABAD - 431001 PH :840886768/7387279311.

BADI APUR

1363. PRAKASH AUTO PVT. LTD. (9001-90-01), SHOP NO. 2, S. NO. 16, PLOT NO. 25 & 26, KRISHNA WATER SUPPLY, OPP. INDIAN OIL PETROL PUMP, MIDC ROAD, KATRAP, BADLAPUR (EAST) - 421503 PH: 4865791288/9870453155.

BALLARPUR

1364. TRISTAR CARS (H302-ZH-04), PLOT NO.11, BEHIND ZAWERI PETROL PUMP, NEAR GURU NANAK COLLEGE, ALLAPALLI ROAD, BAMNI, TAH. BALLARPUR - DIST. - 442701 PH:7447473304.

BARAMATI

1365. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-7R-01), BARAMATI- PHALTAN RD., KASBA, BARAMATI, DIST. PUNE - 413102 PH 9881370310.

BARSHI

1366. CHAVAN MOTORS DIVISION INDIA PVT LTD (BBA1-BBA-01), GAT NO.1407/1, LATUR ROAD, NEAR ESSAR PETROL PUMP, BARSHI. - 413401 PH:8378983726.

BEED

1367. PAGARIYA AUTO PVT. LTD. (V602-V6-01), GUT NO. 61, VILLAGE – GHOSAPURI, TALUKA AND DISTRICT – BEED, MAHARASHTRA. - 431122 PH :9834161614/02442256058/02442256056/02442256

BHANDARA

1368. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-FG-03), JINDAL'S BLDG, NEAR NAVKAR PETROL PUMP, SAINATH NAGAR, NH-6, BHANDARA - 441904 PH:7030932330/9673004280.

BHOR

1369. SEHGAL AUTORIDERS PVT. LTD. (BSV1-BSV-01), GUT NO. 929/1, UTTROLI, BHOR, TALUKA – BHOR, DISTRICT – PUNE, MAHARASHTRA. - 412206 PH :9527771016.

BOISAR

1370. SHIVAM AUTO ZONE (ES02-ES-01), PLOT NO. J-240, MIDC ROAD, BOISAR, TARAPUR INDUSTRIAL, MUMBAI, PIN-401501, MAHARAHSTRA - 401501 PH: 8082551155.

BRAMHAPURI

1371. TRISTAR CARS PVT LTD (H302-TW-02), 165, NAVEGAON, NEAR VIDYANIKETAN SCHOLL, WADSA ROAD, BRAHMPURI, DIST: CHANDARPUR, MAHARASHTRA - 441206 PH:7745883000.

BULDHANA

1372. MANRAJ MOTORS PVT LTD (COU1-COU-01), GAT NO. 94, PLOT NO. 11, SUNDERKHED, BULDHANA, MAHARASHTRA. - 443 001 PH:7875051521.

CHALISGAON

1373. MANRAJ MOTORS PVT LTD (AAE1-AAE-01), SL. NO 406, PLOT NO. 2, NEAR HOTEL RANI PARK, DHULE ROAD, CHALISGAON, DIST: JALGAON, MAHARASHTRA. - 424101 PH: 3408889861.

CHANDGAD

1374. SAI SERVICE PRIVATE LIMITED (BTF1-BTF-01), GAT NO.360, G.P.M NO.157, A/P HALKARNI TALUKA CHANDGAD, DISTT. KOLHAPUR, MAHARASHTRA. - 416507 PH :9673339103.

CHANDRAPUR

- 1375. TRISTAR CARS PVT LTD (H302-H3-01), NR. HOTEL KUNDAN PLAZA,NAGPUR ROAD,CHANDRAPUR - 442401 PH :7722068612
- 1376. TRISTAR CARS PVT LTD (H302-H3-03), NAGPUR ROAD, CHANDRAPUR - 442401 PH :7722068603.

HIPI LIN

1377. JAGRUT MOTORS PVT LTD (9A01-9A-01), SURVEY NO-543, NH-17, MUMBAI-GOA HIGHWAY,AT-KALAMBASTE,TAL-CHIPLUN, DIST-RATNAGIRI,MAHARASHTRA - 415605 PH.7083687172/8308917693.

DAHANU

1378. SAI SERVICE PRIVATE LIMITED (V901-TD-03), DAHANU-JAWAHAR ROAD, DAHANU(E), TAL-DAHANU, DIST. TAHNE - 401602 PH :9730302821/9167980005/9594952211.

DAPOLI

1379. JAGRUT MOTORS PVT LTD (G301-VG-06), AT/POST-DAPOLI, DAPOLI-KHED ROAD, DAPOLI.DIST RATANAGIRI. - 415712 PH :8308816572/7447752372.

DHAMANGAON

1380. ASPA (SFZ1-SFZ-01), RAMDEVBABA NAGAR, ANJANISINGH ROAD, DHAMANGAON RAILWAY, DIST- AMRAVATI - 444709 PH - 9850333558

DHULE

1381. SEVA AUTOMOTIVE LTD. (P301-P3-01), GATE NO. 90,AWADHAN,MUMBAI AGRA ROAD,DHULE - 424001 PH :02562-281128/29.

DINDORI

1382. AUTOMOTIVE MANUFACTURERS PVT. LTD. (AAF1-AAF-01), S.NO.753, NEAR PANDAV PETROL PUMP,NASIK DINDORI ROAD, TAL. DINDORI, DISTT. NASIK - 422202 PH:9673003132 / 9673006390.

DOMBIVALI

- 1383. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-JS-02), PLOT NO. B-43, PHASE-1,DOMBIVALI INDUSTRIAL AREA, DOMBIVALI,DISTT-THANE, MAHARASHTRA, -421201 PH. 8879050913/9769206095/9769206101.
- 1384. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-JS-02), SURVEY NO. 13, NEAR PIMPLESHWAR TEMPLE. OPP. MAHANAGAR CNG PUMP, KALYAN-SHILPHATA ROAD, MANGAON, SONARPADA, DOMBIVLI EAST. 421203 PH. 8422800740, 8422978490.

GADCHIROLI

1385. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (ZK02-ZK-01), PLOT NO. 10, GANESH NAGAR, MUL ROAD, GADCHIROLI, MAHARASTRA - 442702 PH.8669929188.

GADINGALAJ

1386. SAI SERVICE PRIVATE LIMITED (3802-DB-04), 581/7B, PLON NO-12, SANKESHWAR ROAD, OPP. HOTEL NEELKAMAL, TAL. GADINGLAJ -416502 PH 102327-222239

GONDIA

1387. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-02), ITI ROAD,NR. FULCHUR NAKA,OPP LAXMI FLOUR MILL,GONDIA - 441601 PH :8888837023/8888859487.

1388. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-4C-03), ITI KAWLEWADA ROAD, NEAR HIMGIRI LAYOUT, KARANJA, GONDIA, MAHARASHTRA. - 441 601 PH - 8888837073/8888850487

GUHAGAR

1389. JAGRUT MOTORS PVT LTD (BJV1-BJV-01), SURVEY NO. 23A, SHRUNGALTALI, GUHAGHAR-CHIPLUN ROAD, GUHAGAR, RATNAGIRI, MAHARASHTRA - 415703 PH:7218548798/7447752072.

HINGANGHAT

1390. SEVA AUTOMOTIVE PVT. LTD. (CDZ1-CDZ-01), PLOT NO. P-1, HINGANGHAT INDUSTRIAL AREA, NH-7, AJANTI, HINGANGHAT, TALUK – HINGANGHAT, DISTRICT – WARDHA, MAHARASHTRA. - 442301 PH. 772207843.

HINGOLI

1391. PAGARIYA AUTO PVT. LTD. (IF03-IF-01), PLOT NO.5,7 & 8, SURVEY NO.29/2, AKOLA BY PASS ROAD, HINGOLI. - 431513 PH:8411961177.

HUPARI

1392. SAI SERVICE PRIVATE LIMITED (CIQ1-CIQ-01), GAT NO.925/8K/I2, PLOT NO.7, HUPARI TO YALGUD ROAD, HUPARI, TAL-HATKANANGALE, DISTRICT – KOLHAPUR. - 416203 PH:9923208454.

ICHALKARANJI

1393. SAI SERVICE PRIVATE LIMITED (4D01-4D-01), GATE NO. 107, KOLHAPUR ROAD, KABNOOR, ICHALKARANJI - 416122 PH :0230-2425282.

INDAPUR

1394. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-NQ-02), STATE HIGHWAY NO. 151, INDAPUR - 412219 PH: 8308807314

ISLAMPUR

1395. CHOWGULE INDUSTRIES PVT. LTD. (PJ02-P-J01), GATE NO.905/N3, NEAR BOMBAY RAYAN, PUNE-BANGALOE HIGHWAY (NH-4), ISLAMPUR TALUKA: WALVA, DIST:SANGLI -415409 PH 02342-225757

JALGAON

1396. MANRAJ MOTORS PVT LTD (C401-C4-01), AJINTA ROAD, MIDC INDL AREA, JALGAON -425003

PH:9423969538.

.ΙΔΙ ΝΔ

1397. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2102-BC-02), PLOT NO. 4 & 5 , CTS NO. 11427/4-A, BALAJI COMPLEX, JALNA-AURANGABAD ROAD, JALNA, - 431203 PH :9158000063.

JATH

- 1398. CHOWGULE INDUSTRIES PVT. LTD.
 (J102-BLX-05), PLOT NO. 12, SAWANT ESTATE,
 MORE COLONY, OPP. CATTLE BAZAR, SATARA
 ROAD, JATH, DISTRICT SANGLI,
 MAHARASHITRA 416404
 PH. 10244-246588
- 1399. SIDHI WHEELS (BLX1-BLX-01), GAT NO- 27/1B, POST-RAMPUR, JATH-SANGLI ROAD, TALUKA-JATH, DISTRICT-SANGLI - 416404 PH: 8956454526.

JAYSINGPUR

1400. SAI SERVICE PRIVATE LIMITED (ASA1-ASA-01), GATE NO. 1239, NEAR ACHRYA TULSI BLOOD BANK, AIP UDGAON(JAYSINGHPUR), TALUKA: SHIROL, DIST: KOLHAPUR - 416134 PH-9673339762.

JEJURI

1401. EXCELL AUTO VISTA (SKY1-SKY-01), GAT NO -224, AT POST-SAKURDE, JEJURI, TALUKA-PURANDHAR, DISTRICT-PUNE, PIN-412303. - 412303 PH. 9146052651.

KAI WAN

1402. SHAAN CARS PRIVATE LIMITED (BNW1-BNW-01), GAT NO. 189, PLOT NO. 7, MALEGAON ROAD, A/P KALWAN, NASHIK. -423501 PH. 9075028780, 9689003988.

KALYAN

1403. AHER AUTOPRIME LLP (CFV-1-GFV-01), SURVEY NO.53 & 54, HIND MILL, OPPOSITE STATE BANK OF INDIA, ANDHARWADI ROAD, KALYAN, MUMBAI - 421301 PH :9819705444/8657402204/9769927505.

1404. AHER AUTOPRIME LLP (CFV1-CFV-02), SURVEY NO.318,MOHANE ROAD, NEAR SHAHAD RAILWAY STATION,SHAHAD,KALYAN. - 421103 PH :8422871720/88672402204/9833993075

KANKAVALI

1405. JAGRUT MOTORS PVT LTD (G301-V7-05), PLOT NO.32-33, SURVEY NO.-1886/1, MUMBAI-GOA HIGHWAY (NH-17), JANAVLI, KANKAVLI, MAHARASHTRA -416002 PH: 7499051071/9021095805.

KARAD

1406. CHOWGULE INDUSTRIES PVT. LTD. (F303-4E-02), 112/3, PUNE-BANGALORE ROAD, NEAR RELIANCE GAS PUMP, A/P MALKAPUR, TAL. KARAD, DISTT. SATARA - 415110 PH 9027560838

KAR.IAT

1407. SIMRAN MOTORS PVT. LTD. (7S01-TA-03), PANVEL-KARJAT ROAD, KARJAT, DIST. RAIGAD - 410201 PH :8691988895. 8108181978.

1408. KANKARIYA AUTOMOBILES PVT. LTD. (GJV1-GJV-01), KARJAT-NAGAR ROAD, KARJAT, MAHARASHTRA - 414402 PH 9890843771.

KARMAD

1409. PAGARIYA (CEB1-CEB-1), GAT NO-245, BHAKTI COMPLEX, BEHIND BHARAT PETROL PUMP, AURANGABAD ROAD, KARMAD – 431007. - 431007 PH :7575077181 / 9687668929.

KARMALA

1410. CHAVAN MOTORS DIVISION INDIA PVT LTD (GJQ1-GJQ-01), GAT NO. 105, SURVEY NO. 3961, KARMALA-NAGAR ROAD, AP- KARMALA, TALUKA - KARMALA, DIST.-SOLAPUR. - 413202 PH :8806665691.

KAVATE MAHANKAL

1411. CHOWGULE INDUSTRIES PVT. LTD. (SC02-SC-01), MAHANKALI BAAZAR, KAVATE MAHANKAL-JAT ROAD, KAVATE MAHANKAL, SANGLI, MAHARASHTRA - 416405 PH: 02341-222102.

KHAMGAON

1412. MANRAJ MOTORS PYT LTD (BXU1-BXU-01), GAT NO 41, OLD SURVEY NO. 12/1A, NEAR AMRUT PETROL PUMP, AKOLA ROAD, KHAMGAON, MAHARASHTRA - 444303 PH 07623-2500023.

KHANAPUR (SANGLI)

1413. CHOWGULE INDUSTRIES LTD (SNM1-SNM-01), KHANAPUR VITA ROAD, KHANAPUR, TAL-KHANAPUR, DIST-SANGLI - 415307 PH :75079 66715.

KHARGHAR

1414. EXCELL AUTOVISTA PVT LTD (AAC1-AAC-01), SURVEY NO.742/439, KOPRA VILLAGE, SECTOR-10, SION-PANVEL HIGHWAY, KHARGHAR, DIST. RAIGAD - 410210 PH.7666703636 / 9594153308 / 8422991300 / 9320357300

KHED

1415. JAGRUT MOTORS (COR1-COR-01), GAT NO -43/B, MAUZA-BHARNE NAKA, TALUKA-KHED, DIST-RATNAGIRI. - 415709 PH :9689533472.

KHOPOLI

1416. KIRAN MOTORS (9C02-9C-01), PLOT NO-68, VILLAGE-MULGAON, KHOPOLI INDUSTRIAL ESTATE, KHOPOLI, TALUKA-KHALAPUR DIST-RAIGARH - 410204 PH:8976791922, 8976791920.

KOLHAPUR

1417. SAI SERVICE PRIVATE LIMITED (3802-38-01), PLOT NO. 1, E WARD, BEHIND PARVATI TALKIES, SHIVAJI UDYAMNAGAR, KOLHAPUR -416008 PH -0231-2661676

1418. SAI SERVICE PRIVATE LIMITED (3803-38-01), C-6, SHIROLI MIDC, MENON OPP MENON PISTONS,NH-4, KOLHAPUR - 416122 PH :0230-2468376

1419. SAI SERVICE PRIVATE LIMITED (3802-38-06), R S NO. 1018/1, PLOT NO. 28, APATE NAGAR, KALAMBA RING ROAD, KOLHAPUR, MAHARASHTRA. - 416012 PH :0231-2329494

1420. KR MOTORS KOLKOHUR PVT LTD (3804-38-01), PLOT NO. 216/2, 216/3, 216/5, MUMBAI BANGALORE HIGHWAY, GOKUL SHIRGAON, KOLHAPUR. - 416234 PH :7447755586, 7447755504.

KONGAON

1421. PRAKASH AUTO PVT. LTD. (3903-AZ-02), SURVEY NO. 126/127,98/38,AT & POST KONGAON, - 421302 PH. 9702809668/9870453155.

KOPARGAON

1422. SHAAN CARS PRIVATE LIMITED (COV1-COV-01), SURVEY NO. 15/36 GAWARE PATIL ESTATE, NAGAR MANMAD HIGHWAY, NEAR ASHOKA HOTEL, KOPARGAON. - 423 601 PH :9075028780.

KOREGAON BHIMA

1423. SAI SERVICE (BUO1-BUO-01), GAT NO-373, VILLAGE-KOREGAON BHIMA, TALUKA-SHIRUR, DIST-PUNE. - 415501 PH :7774997005

KUDAL

1424. JAGRUT MOTORS PVT LTD (9B01-9B-01), SURVEY NO. 50/5, 51/5, A/P PINGULI, TEMBDHURI, TALUKA – KUDAL, DISTRICT – SINDUDURG, MAHARASHTRA - 416520 PH :880666457/28/08965235.

KURUDWADI

1425. CHAVAN MOTORS DIVISION INDIA PYT LTD (CUF1-CUF-01), GAT NO.:256, BYPASS ROAD, A/P KURDA, TALUKA-MADHA, DISTT. SOLAPUR. -413208 PH :880665691.

KURUNDWAD

1426. SAI SERVICE PVT. LTD. (BHO1-BHO-01), GAT NO. 250, AT POST - KURUNDWAD, TALUKA -SHUROO, DIST.-KOLHAPUR. - 416106 PH :9673339695.

LANJA

1427. JAGRUT MOTORS (SER1-SER-01), GAT NO-663, TALUKA-LANJA, DIST - RATNAGIRI, MAHARASHTRA -416701 - 416701 PH :8108718346

LASALGAON

1428. SHAAN CARS PRIVATE LIMITED (BZM1-BZM-01), PLOT NO. 337, LASALGAON MAIN ROAD, LASALGAON, TALUKA – NANDGAON, DISTRICT – NASHIK. - 422306 PH -9075028780. 7720094874.

LATUR

1429. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-01), CITY SURVEY NO. 2960, NANDED ROAD, OPP. TIRUPATHI LODGE, LATUR -413512 PH -9607909005

1430. AUTOMOTIVE MANUFACTURERS PVT. LTD. (V801-V8-02), PLOT NO. 28, 29, 30, SURVEY NO. 36, VARVATTI VILLAGE, LATUR - BARSHI ROAD, LATUR - 413512 PH

:9607999091/9607999092/9607999093/9607999094 /9607999007.

LONAVALA

1431. SEHGAL AUTORIDERS PVT. LTD. (CGA1-CGA-01), GATE NO. 120/1, VILLAGE – WAKSAI, TALUKA – MAVAL, LUNAVALA, DISTRICT – PUNE, MAHARASHTRA. - 410405 PH: 89753 73431.

MAHAD

1432. SIMRAN MOTORS PVT. LTD. (7S01-TX-04), NEAR RELIENCE PUMP, PANVEL-GOA ROAD, MAHAD, DIST. RAIGAD - 402301 PH :9870404323

MALEGAON

1433. SHAAN CARS PRIVATE LIMITED (3703-FF-02), PLOT NO. 572/81, CHANDANPURI SHIVAR, OLD MUMBAI, AGRA ROAD, DIST- NASIK, MALEGAON - 423203

PH:9922969620/9922969656

MANCHAR

1434. THE KOTHARI WHEELS (1906-AGA-04), SOHAM NAGARI, A-WING, SHOP NO.8 & 16, PUNE NASIK HIGHWAY, AP MANCHAR, TALUKA: AMBEGAON, DISTT: PUNE, MAHRASHTRA -410503 PH: 8411003608.

MANGALVEDHA

1435. CHAVAN MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), NEAR SWARAJYA HOTEL, PANDHARPUR ROAD, CHOKAMELANAGAR, MANGALWEDHA MAHARASHTRA, PIN-413305 -

413305 PH:8805778881

MANGAON

1436. SIMRAN MOTORS PVT. LTD. (BAM1-BAM-01), SURVEY NO.97, AT-POST-NANORE, NH-17, MUMBAI-GOA HIGHWAY, MANGAON, RAIGAD, MAHRASTHRA. - 402104 PH :9223181120.

MANMAD

1437. SHAAN CARS PRIVATE LIMITED (BNX1-BNX-01), GAT NO. 11/3, PLOT NO. 1 AND SHOP NO. 3 & 4, NANDGAON ROAD, MANMAD. - 423104 PH :9075028780, 8888832369.

MANOR

1438. SAI SERVICE PRIVATE LIMITED (CRE1-CRE-01), GUT NO. 37, NEAR MSEB POWER STATION, PALGHAR MANOR ROAD, AT POST – TAKVAHAL, DISTRICT – PALGHAR, MANOR. -401403 PH :9167980005

MIRA ROAD, THANE

1439. SUPREME AUTOMOBILES (3915-39-01), BRILLIANT COMPLEX, WESTERN EXPRESS HIGHWAY, MIRA ROAD, THANE- 401107. -401107 PH :8591942704.

MIRAI

1440. CHOWGULE INDUSTRIES PVT. LTD. (J102-SD-03), 42C, OPP. WHISPERING WOODS, MIDC AREA, TALUKA MIRAJ, DISTT. SANGLI, MAHARASHTRA - 416410 PH. 10233-2643221, 10233-264322.

MORGAON

1441. MAHALAXMI AUTO (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), GAT NO-179, MORGAON, -TALUKA- BARAMATI, DIST-PUNE - 412304 PH :9850994014.

MUMBAI

- 1442. SAI SERVICE PRIVATE LIMITED (0504-05-01), 462 SENAPATI BAPAT MARG, WORLI NAKA, LOWER PAREL, MUMBAI - 400013 PH: 9594952122/9594952088/9167980082.
- 1443. SAI SERVICE PRIVATE LIMITED (0504-05-02), ARVIND CHAMBERS, 194 ANDHERI KURLA ROAD, ANDHERI(EAST), MUMBAI - 400069 PH :43030606 /600, 95949552341 / 9594952084 / 9594952250.
- 1444. VITESSE PRIVATE LIMITED (0503-05-01), SHAH INDL.ESTATE, PLOT 11 LINK ROAD, ANDHERI (WEST), MUMBAI - 400058 PH
 - :02226730787/02226730280/02226730296/0226164 2500/02261642500.
- 1445. VITESSE PRIVATE LIMITED (0503-05-02), 77 AF PALKY GULLY, OFF VEER SAVARKAR MARG, PRABHADEVI, MUMBAI - 400025 PH :24229747/24223933/9821894915.
- 1446. SAH & SANGHI AUTO AGENCIES PVT. LTD (0505-05-01), PRAKASH MILLS COMPOUND, OFF. GLOBE MILLS PASSAGE, WORLI, MUMBAI -400013 PH .02224925452/02224925453/02224925454.
- 1447. SAI SERVICE PRIVATE LIMITED (0504-05-04), C/O SHAKTI INDUSTRIAL WIRE COMPOUND, DATTA PADA ROAD, BORIVILI (EAST), MUMBAI - 400066 PH:28707000 / 9594057006 / 9594952344 / 9594952417.
- 1448. EXCELL AUTOVISTA PVT LTD (0510-05-01), RESHAM SINGH COMPOUND, CST ROAD KALINA, SANTACRUZ EAST, MUMBAI -400098 PH :67743888, 26653242, 43, 46 / 7666703636 / 9594972889 / 7715804477.
- 1449. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-05-04), PLOT NO. 108, BAZAR WARD, KURLA(WEST), MUMB AII - 400070 PH:61563734 / 61563744 / 61563713 /9167773925.
- 1450. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-02), D-9, STREET NO. 21, OPP PATNI COMPUTERS, SEEEPZ, MIDC, ANDHERI, MUMBAI - 400096 PH:9694973889, 8422800747.

- 1451. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-01), CHARKOP INDUSTRIAL ESTATE, KANDIVLI(WEST), MUMBAI, MAHARASHTRA -400067 PH
 - :7718893072/9152001329/8082551017/9870938888
- 1452. VITESSE PRIVATE LIMITED (0503-05-07), PLOT NO.A59, KANDIVALI INDUSTRIAL CO-OP. SOC., GOVERNMENT INDUSTRIAL ESTATE, CHARKOP, KANDIVALI (W), MUMBAI - 400067 PH :02228674753.
- 1453. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (0521-05-03), C/O VARUN STEEL INDUSTRIES,AAM TOOL COMPOUND,BOAT HURT ROAD, BEHIND SEWARI POLICE STATION, DARUKHANA, REAY ROAD, MUMBAI 440010
 - PH:9594974678.8691045341.
- 1454. SHIVAM AUTO ZONE (I) PVT. LTD. (0531-05-02), PLOT NO. 485, RAMCHANDRA LANE EXTN., OFF LINK ROAD, KANCHPADA, MALAD-WEST. MUMBAI. 400064. - 400064 PH :80825511159862721124/9870938888.
- 1455. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-05-01), PLOT NO.115/116/117 MIVERVA INDUSTRIAL ESTATE, MULUND-WEST, MUMBAI - 400080 PH :8104989839/104989847.
- 1456. KIRAN MOTORS (65A7-05-01), CTS NO. 170 & 4081, BOMBAY AGRA ROAD, LB SHASTRI MARG, GHATKOPAR (WEST), MUMBAI, MAHARASHTRA, PINCODE: 400086. - 400086 PH 9152004292/7700988888
- 1457. MY CAR (PUNE) PVT LTD (05A8-05-01), PLOT NO-10, CHANDIVALI ESTATE, CHANDIVALI FARM ROAD, OPP LAKE HOMES, ANDHERI EAST, MUMBAI, MAHARASHTRA - 400072 PH 3104907081

MURBAD

1458. PRAKASH AUTO PVT. LTD. (BYO1-BYO-01). SURVEY NO. 61/2, KALYAN - MURBAD ROAD, VILLAGE – DAHAGAON, TALUKA – MURBAD, DISTRICT – THANE, MAHARASHTRA. - 421605 PH:7798725726.

MURGUD

1459. SAI SERVICE PRIVATE LIMITED (AWA1-AWA-01), R.S. NO. 188/4, A/P MURGUD, TALUKA: KAGAL, DIST: KOLHAPUR - 416219 PH :02325-265553.

MURTIZAPUR

1460. KHANDELWAL AUTOWHEELS (SHE1-SHE-01). SURVEY NO 38, MAUJA SONORI, NH 06, NEAR HOTEL DEVA, MURTIZAPUR, DISTRICT-AKOLA -444107 PH #RFF!

NAGPUR

- 1461. SEVA AUTOMOTIVE LTD. (2002-20-01), 34/3, KACHIMET AREA, NEAR VAYUSENA NAGAR BUS STOP, WADI, AMRAVATI ROAD, NAGPUR -440023 PH .0712-6652863.
- 1462. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-02), 575 KAMPTEE ROAD,NAGPUR-26,, - 440026
- PH:9673004226/9673004223.

 1463. SEVA AUTOMOTIVE LTD. (2002-20-03), PLOT NO. 33A, CENTRAL MIDC, HIGNA ROAD, NAGPUR, MAHARASHTRA, 440016 PH:0712-666444.
- 1464. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2004-20-01), NEAR PARDY NAKA (OUTSIDE), NH-6, BHANDARA ROAD, NAGPUR -440035 PH: 3888859506/888859534.
- 1465. AUTOMOTIVE MANUFACTURERS PVT. LTD. (2001-20-05), PLOT NO. 38/1, NEAR BOUDDHA VIHAR, OPP. DELHI PUBLIC SCHOOL, KAMPTEE ROAD, NAGPUR, MAHARASHTRA - 441001 PH.91686997019673004277.
- 1466. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-01), PLOT NO. 4, NEW COTTON MARKET, GHAT ROAD, NAGPUR, MAHARASTRA - 440018 PH :8R8859542
- 1467. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (2007-20-02), PLOT NO. 131, NH-6, BHANDARA ROAD, MAHALGAON, NAGPUR, MAHARASTRA. - 441202 PH: 8888820312.
- 1468. SEVA AUTOMOTIVE PVT. LTD. (2002-20-04). PLOT NO.05, 12, 13A, 13B CHANDRABHAGA GRUHA NIRMAN SAHAKARI LIMITED. KH NO.45/3, CITY SURVEY NO.570, MANEWADA RING ROAD, NAGPUR, MAHARASHTRA - 440027 PH: 3390446644.
- 1469. ARUN MOTORS (2008-20-01), PLOT NO-98-10, PATNI PLAZA, KHAMLA RING ROAD, SAWARKAR NAGAR, NAGPUR, MAHARASHTRA - 440025 PH :7757988800/7028688800.
- 1470. ARUN MOTORS (2008-20-02), C-48/1, MIDC HINGNA MAIN ROAD, WADI, NAGPUR, PIN-440028, MAHARASHTRA - 440028 PH:7757988800.

NALASOPARA

1471. SHIVAM AUTO (CUH1-CUH-01), SURVEY NO. 91,92 , PLOT NO. 7, VILLAGE- DHANIV, NALASOPARA, DIST. PALGHAR, MAHARASHTRA. - 401209 PH:9152001458/7777002930.

NANDED

1472. SEVA AUTOMOTIVE LTD. (6801-68-01), NANDED HYDERABAD ROAD, NANDED - 431604 PH :7447415607.

NANDURBAR

1473. SEVA AUTOMOTIVE LTD. (P301-KW-02), P NO. -324, BASILAL NAGAR SHAHADA BYPASS ROAD, NEAR HOTEL KAREN GARDEN, CHAUFULLY NANDURBAR-425412 - 425412 PH :7720017528

NARAYANGAON

1474. THE KOTHARI WHEELS (1906-FV-02), GATE NO. 747, PUNE NASIK HIGHWAY, WARULWADI, NARAYANGAON - 410504 PH :8411003608.

NASHIK

- 1475. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3702-37-01), P-1-12, ADDITIONAL NASIK INDL. AREA, AMBAD, NASIK - 422010
- PH :9673000262 / 9673000822 / 9673000842. 1476. SEVA AUTOMOTIVE LTD. (3701-37-01), PLOT NO. X - 46,MIDC. AMBAD, NASIK - 422010 PH :0253-6644444.
- 1477. SHAAN CARS PRIVATE LIMITED (3703-37-01), E-3 MIDC AREA,SATPUR, NASIK,MAHARASHTRA - 422007 PH :9075028780, 9922969646.
- 1478. SHAAN CARS PRIVATE LIMITED (3703-37-04), 03/810, NEAR NASARDI BRIDGE, WADALA ROAD, NASIK ROAD, NASIK - 422011 PH : 0253-2236080.
- 1479. SEVA AUTOMOTIVE LTD. (3701-37-06), SEVA FARMS, GATE NO. 82/2, AMBE BAHULA ROAD, VILHOLI, TALUKA & DISTRICT: NASIK, MAHARASHTRA - 422010 PH. 9146000709.
- 1480. SEVA AUTOMOTIVE PVT LTD (3701-37-07), PLOT NO.A-23, NICE INDUSTRIAL AREA, MIDC, SATPUR, NASIK (MAHARASHTRA) - 422006 PH :0253-6634444.
- 1481. SEVA AUTOMOTIVES PVT LTD (3701-37-08), SHOP NO. 1 & 2, SER. NO. 241/1-B-1/2, OPPOSITE NMC SCHOOL, DINDORI ROAD, MAHSRUL, NASHIK, MAHARASHTRA - 422004 PH:0253-6654444.

NAVI MUMBAI

- 1482. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-9K-01), D-234 MIDC TTC INDL AREA, SHIRVANE NERUL, NEW BOMBAY, -400706
- PH :66143900/66133923/66143924.
 1483. SIMRAN MOTORS PVT. LTD. (3913-9K-01),
 CAMEO FABRIC COMPANY, GEN 16, NEAR
 SULZER COMPANY, DIGHA, TTC AREA, AIROLI400701
 PH :8788582329. 8369658212.

NEVASA

1484. KANKARIYA AUTOMOBILES PVT. LTD. (BSU1-BSU-01), BELOW ADARSH GRAMIN BANK, OPP. ILAKSHI MOTORS, NEVAS PHATA, AURANGABAD ROAD, TALUKA – NEVASA, DISTRICT – AHMEDNAGAR. - 414603 PH. 9420494601.

NIPHAD

1485. SHAAN CARS PVT. LTD. (COX1-COX-01), GAT NO. 99/3, RASALPUR AURANGABAD HIGHWAY, NIPHAD, DISTRICT – NASHIK, MAHARASHTRA. -422303 PH. 9075028780.

OSMANABAD

1486. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-LW-03), PLOT NO. A-53, INDUSTRIAL AREA, MIDC, OSMANABAD - 413501 PH:8888867861.

PABAL

1487. MAHALAXMI (SKB1-SKB-01), 3733, SHINALKAR WASTI, PABAL, TALUK SHIRUR, PUNE, PIN 412403 - 412403 PH :895628087.

PAITHAN

1488. PAGARIYA AUTO PVT. LTD. (BNQ1-BNQ-01), GAT NO-277, MAUZA- PAITHAN, TALUKA-PAITHAN, DIST - AURANGABAD 431107. - 431107 PH 9022094237

PALGHAR

1489. SAI SERVICE PRIVATE LIMITED (TE01-TE-01), SURVEY NO. 86/1, TEMBHODE, MANOR-MAHIM ROAD, PALGHAR, DISTRICT: THANE - 401404 PH :9167980042/9167980005/9594952211.

PALUS

1490. CHOWGULE INDUSTRIES PVT. LTD. (J102-0Z-04), PLOT NO.B-3, MIDC AREA, TALUKA PALUS, DISTT. SANGLI. - 416308 PH :8888870122.

PANDHARPUR

1491. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-0H-05), GAT NO.56, ESABAVI, PUNE ROAD, TAL:PANDERPUR, SOLAPUR - 413001 PH -7774097005

PANVEL

1492. SIMRAN MOTORS PVT. LTD. (7S01-7S-01), PLOT2-8, SECTOR-15, OPP. HOTEL GARDEN, OLD MUMBAI PUNE HIGHWAY, PANVEL - 410206 PH. 8291957798, 8657443202. 1493. AUTOMOTIVE MANUFACTURERS PVT. LTD. (3901-75-03), PLOT NO:92/1, VILLAGE KOLAKHA, MUMBAI-GOA HIGHWAY, PANVEL, DISTT. RAIGAD - 410206 PH

:9769202055/9769206045/9769206018/8291467042

PARATWADA

1494. ASPA BANDSONS AUTO PVT. LTD. (CF21-CF2-01), SURVEY NO. 26/4A, RAMGAON, AMRAVATI PARATWADA ROAD, NEAR JAWARDI PHATA, PARATWADA TALUKA – ACHALPUR, DISTRICT – AMRAVATI. - 444 805 PH :772097106.

PARBHANI

1495. PAGARIYA AUTO PVT. LTD. (LN02-LN-01). SURVEY NO-301, PLOT NO-86/A, OPP GULMOHAR LODGE, BASMAT ROAD, PARBHANI -431401 PH :9511868433.

PATAS

1496. MAHALAXMI AUTOMOTIVES PVT. LTD. (7R01-PR-03), PUNE-SOLAPUR HIGHWAY, PATAS, TALUKA DAUND DISTT.-PUNE - 413106 PH :8888890957

PEN

1497. SIMRAN MOTORS (9101-91-01), AT SURVEY NO 75, PLOT NO 2, MUMBAI-GOA HIGHWAY, WADHKAL (PEN) - 402107 PH :9503381198.

PHALTAN

1498. CHOWGULE INDUSTRIES PVT. LTD. (KH02-KH-01), PLOT NO.83/1B/1, LONAND-PUNE ROAD, PHRANANDWADI, TALUKA:PHALTAN, DISTRICT: SATARA, MAHARASTRA. - 415523 PH :8888886301.

PIMPLEGAON

1499. AUTOMOTIVE MANUFACTURERS PVT. LTD. (BAY1-BAY-01), GAT NO.517/P NEAR MARKET COMMITTEE, MUMBAI AGRA HIGHWAY, NH3 A/P PIMPALGAON BASWANT, TALUKA: NIPHAD, DIST-NASHIK - 422202 PH :9673000844 / 9673001204

PIRANGUT

1500. MY CAR (SEC1-SEC-01), GAT NO-314, AT VILLAGE-KASAR AMBOLI, PIRANGUT, TALUKA -AMBOLI, DIST-PUNE, PIN-412108. - 412108 PH: 9325424613.

PUNE

1501. SAI SERVICE PRIVATE LIMITED (1901-19-01), BOMBAY PUNE ROAD, FUGEWADI, PUNE -411012 PH:020-46404440/020-46404448. 1502. SAI SERVICE PRIVATE LIMITED (1901-19-02), 889/90 J.M.ROAD, DECCAN GYMKHANA, PUNE -411004

PH:9923208347

1503. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-02), S.NO. 53, PUNE SATARA HIGHWAY, KATRAJ, PUNE - 411046 PH :020-66786200.

1504. SAI SERVICE PRIVATE LIMITED (1901-19-03), S.NO.15A GIDWANI COMPOUND, KONDWA BUDRUK, HAVELI, PUNE - 411046 PH 9923208345

1505. WONDER CARS PVT LTD (1903-19-02), 12, NPS LINES, SOLAPUR ROAD, OLD POOL GATE, CAMP, PUNE - 411001 PH :020-26332934/35.

1506. THE KOTHARI WHEELS (1906-19-01), 110/A, PUNE SOLAPUR ROAD, NEAR FATIMA NAGAR, PUNE - 411039 PH : 7498272309.

1507. MY CAR (PUNE) PVT. LTD. (1907-19-01), SURVEY NO. 131, MUMBAI BANGALORE HIGHWAY, WAKAD, PUNE - 411057 PH: 020-67922900.

1508. ACE KUDALE CAR PVT. LTD. (1910-19-01), 36/2C/1, MANJRI BUDRUK, PUNE-SOLHAPUR ROAD, TALUKA HAVELI, DISTRICT PUNE -412201

PH: 9552582454.

1509. CHOWGULE HOUSTRIES PVT. LTD.
(1911-19-01), S.NO.1, NEXT TO PODAR
INTERNATIONAL SCHOOL, KATRAJ BYPASS
ROAD, AMBEGAON-B, TALUKA-HAVELI, PUNE411048

1510. SAI SERVICE PRIVATE LIMITED (1901-19-05), NEAR NIGDI-BHOSARI ROAD, CHINCHWAD, PUNE - 411019 PH :020-46605999/020-46605995.

PH:02066803555/02066803500.

1511. SEHGAL AUTORIDERS PVT. LTD. (1913-19-01), SURVEY NO. 51, BAVDHAN KHRUD, TAL: HAVELI, DIST: PUNE - 411021 PH:8308304444, 020-41463625, 020-41463627.

1512. SAI SERVICE PRIVATE LIMITED (1901-19-06), SURVEY NO. 244/1, PHASE-II, NEAR BANK OF MAHARASHTRA, HINGEWADI, TAL - MULSHI, DISTRICT-PUNE, MAHARASHTRA - 411057 PH. 9923208302.

1513. ACE KUDALE CAR PVT. LTD. (1910-19-02), ATLAS TANKS VESSELS, SR. NO 232/2, PUNE-NASIK ROAD, KHANDOBAMAL, BHOSARI, PUNE. - 411039 PH :9552193904.

1514. THE KOTHARI WHEELS (1906-19-03), PLOT NO. 2B, D1 BLOCK, CHINCHWAD, PUNE, DIST. PUNE - 411019 PH :9168662302.

- 1515. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-03), 59/A, MUNDHWA KHARADI ROAD, OPP. MUNDHWA POLICE STATION, MUNDHWA, PUNE, MAHARASHTRA - 411036 PH :988874980
- 1516. WONDER CARS PVT LTD (1903-19-03), PLOT NO.52/1 BLOCK F2, MIDC, PIMPRI, PUNE. -411018
- PH:020-46608888
- 1517. SAI SERVICE PRIVATE LIMITED (1901-19-07), 4/A/1A, 1/3 A, SALUNKE VIHAR ROAD, BORADE NAGAR, KONDWA, PUNE, MAHARASHTRA. -411048 PH. 9923208358.
- 1518. MAHALAXMI AUTOMOTIVES PVT. LTD. (1912-19-04), NO.485/1, CTS NO.1041, OM SUPER MARKET, GHOKALE CROSS ROAD, MODEL COLONY, SHIVAJI NAGAR, PUNE -411016 PH :8888842887.
- 1519. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-05), 129/2/B/1, NEW PUNE MUMBAI HIGHWAY, KATRAJ DEHU ROAD BYPASS, TATHWADE, TAL-MULASHI, DISTT. PUNE (MAHARASHTRA) - 411033 PH :020-679157007385265700.
- 1520. SAI SERVICE PRIVATE LIMITED (1901-19-08), SURVEY NO. 37, HISSA NO. 2, SITUATED AT WADGAON KHURD, NEAR NANDED CITY, SINHAGAD ROAD, TALUKA - HAVELI, DISTRICT -PUNE, MAHARASHTRA. - 411 041 PH : 9923208312.
- 1521. THE KOTHARI WHEELS (1906-19-05), PLOT NO. 24/B, HADAPSAR INDUSTRIAL ESTATE, PUNE. -411028 PH :8411002005. 8087060432.
- 1522. CHOWGULE INDUSTRIES PVT. LTD. (1908-19-06), SR. NO. - 43/44/S, 7 PARVATI INDUSTRIAL ESTATE, OPP. ADINATH SOCIETY, PUNE: SATARA ROAD, PUNE. - 411009 PH :020-67273200
- 1523. EXCELL AUTOVISTA PVT LTD (1917-19-01), GATE NO.1232, 10TH MALL, PUNE SASWAD ROAD, VILLAGE – WADKI, TAL – HAVELI, DIST PUNE. - 412308 PH: 9594632888/9146052651.
- 1524. THE KOTHARI WHEELS (1906-19-06), SURVEY NO.46, HISSA 9/1 (CITY SURVEY NO.6181+6180), WADGAON SHERI, CHANDAN NAGAR, PUNE NAGAR ROAD, TAL-HAVELI, PUNE. - 411014 PH.8411003631.
- 1525. ACE KUDALE CAR PVT. LTD. (1910-19-03), SURVEY NO. 272, 1/4, NEAR MOSHI TOLL PLAZA, MOSHI GAON, TALUKA – HAVELI, DISTRICT – PUNE. - 412105 PH:7767814381.

- 1526. SUMANKIRTI CARS PVT. LTD. (1915-19-02), SURVEY NO. 9, NEAR BALEWADI SPORTS STADIUMM MUMBAI-BANGALORE HIGHWAYS, MAHALUNGE PUNE, MAHARASHTRA. - 411045 PH :8551990106
- 1527. MY CAR (PUNE) PVT. LTD. (1918-19-01), GAT NO. 625, HISSA NO. 1/3/1, VILLAGE – KURULI, TALUKA – KHED, CHAKAN, DISTRICT – PUNE. -410501 PH. 7755900000
- 1528. WONDER CARS PVT LTD (1903-19-04), SURVEY NO. 20, HISSA NO. 1/12, THERGAON, BAL KRISHNA MANGAL KARYALAYA, TALUKA – MULSHI, DANGE CHOWK, PUNE – 411 033. -411033 PH. 7887883311.

RAHATA

1529. KANKARIYA AUTOMOBILES PVT. LTD. (ZV03-ZV-01), SHIRDI ROAD, SAKORI, RAHATA, -423107 PH :8275033313.

RAHURI

1530. KANKARIYA AUTOMOBILES PVT. LTD. (COZ1-COZ-01), TRIMURTI CRANE SERVICE, NAGAR-MANMAD ROAD, RAHURI, MAHARASHTRA. - 413705 PH: 9130026767.

RAJAPUR

1531. JAGRUT MOTORS PVT LTD (AHA1-AHA-01), SURVEY NO. 14/8, TARALWADI, RAJAPUR, DIST: RATNAGIRI - 416702 PH :9527623663/8806665572.

RAJGURUNAGAR

1532. MY CAR (PUNE) PVT. LTD. (CBZ1-CBZ-01), SURVEY NO.94, SANDBHORWADI, NEAR TUKAI MANDIR, PUNE-NASIK HIGHWAY, TAL-KHED, RAJGURUNAGAR DISTT. PUNE. - 410505 PH: 9112231553.

RATNAGIRI

1533. JAGRUT MOTORS PVT LTD (G301-G3-01), D-25, MIDD MIRJOLE, MAHARASTRA, RATNAGIRI - 415639 PH :2352228380/9130013172.

ROHA

1534. EXCELL AUTOVISTA (COS1-COS-01), SHOP NO. 1 & 2, PANCHARATNA APARTMENTS, ROHA, ROHA KOLAD ROAD, RAIGAD - 402109 PH - 9209200073

SANGAMNER

1535. SHAAN CARS PRIVATE LIMITED (HE03-HE-01). GAT NO. 173/4/5/6, A/P VELHALE, NASHIK PUNE HIGHWAY, SANGAMNER, DIST AHMEDNAGAR, MAHARASHTRA - 422605 PH 102425-259191.

SANGLI

- 1536. CHOWGULE INDUSTRIES PVT. LTD. (J102-J1-01), GAT NO.243 SANGLI KOLHAPUR ROAD, OPP. TO GAJANAN MAHARAJ MANDIR, ANKALI, TAL-SANGLI, DISTT. SANGLI - 416416 PH '98R0G9RBRG
- 1537. SIDDHI WHEELS (J104-J1-01), SR NO. 917//2/B, SANGLI MIRAJ ROAD, MIRAJ, DISTRICT - SAGLI. - 416410

PH:9371727001, 0233-2211610/1620/1630.

SANGOLA

1538. CHAVAN MOTORS DIVISION INDIA PVI LTD (CUE1-CUE-01), GAT NO. 276/14/A, MAIN ROAD, KOLHAPUR HIGHWAY, A/P & TALUKA -SANGOLA, DIST.-SOLAPUR. - 413307 PH :880665691

SASWAD

1539. CHOWGULE INDUSTRIES PVT. LTD. (1905-PH-03), PLOT NO 74/2/A/P, BEHIND PURANDAR HIGH SCHOOL, BESIDE MAHADA COLONY, SASWAD, TALUKA PURANDAR, PUNE - 412301 PH :02115224450/0211525210.

SATANA

1540. SHAAN CARS (BSW1-BSW-01), GAT NO 322/2/A7, PUNDLIK NAGAR MALEGAON ROAD, AT POST SATANA DIST NASHIK - 423301 -423301 PH 9922969656.

SATARA

1541. CHOWGULE INDUSTRIES PVT. LTD. (F303-F3-01), PLOT NO. B-2,OLD MIDC,SATARA -415002 PH 9011015066/9850966823.

SAVNER

1542. ARYA CARS (UNIT OF BARBATE AUTOMOTIVE (I) PVT. LTD) (BTJ1-BTJ-01), PLOT NO -2 MADANE LAYOUT MOUZA GUJARKHEDI NEAR INDIN PETROL PUMP NAGPUR ROAD SAONER -441107 PH :8888859546.

SAWANTWADI

1543. JAGRUT MOTORS PVT LTD (BBL1-BBL-01), SHIVSHAMBHO APARTMENT, 1190, AP KOLGAON, SURVEY NO.187, HISSA NO.33B, TAL-SAWANTWADI, DISTT. SINDHUDURG. -416510 PH: 9970654699, 9689533472.

SHAHAPUR

1544. SHIVAM AUTO ZONE (I) PVT. LTD.
(BZU1-BZU-01), DR. DESHPANDE COMPOUND,
NEAR BHATSA COLONY, VILLAGE –
GOTHEGHAR, TALUKA – SHAHPUR, DISTRICT –
THANE, MAHARASHTRA - 421601
PH: 7718893483.

SHAHUWADI

1545. SAI SERVICE (BFT1-BFT-01), GATE NO. 1213, R/AT DONOLI, TALUKA - SHAHUWADI, DIST. -KOLHAPUR - - 416 213 PH :9923208448

SHILTPATA

1546. VELOX MOTORS (SGJ1-SGJ-01), SURVEY NO-99/2B, VILLAGE-DAIGHAR, KALYAN SHIL-PHATA ROAD, NEAR DATTA MANDIR, POST-PADALE, DIST-THANE, PIN-421204. - 421204 PH:8419984188.

SHIRUR

1547. MAHALAXMI AUTOMOTIVES PVT. LTD. (ZD01-ZD-01), 102311, NEXT INDIAN OIL PETROL PUMP, SARADWADI, PUNE-AHMEDNAGAR HIGHWAY, TAL: SJIRUR, DIST: PUNE, MAHARASHITRA. - 412210 PH: 888837082 /9011038682.

SHIRWAL

1548. CHOWGULE INDUSTRIES PVT. LTD. (BSD1-BSD-01), GAT NO.175, A/P SHINDEWADI, SHIRWAL-BHOR ROAD, SHIRWAL, TAL KHANDALA, DISTT. SATARA - 412801 PH :9837399003.

SHRIRAMPUR

1549. KANKARIYA AUTOMOBILES PVT. LTD. (LV03-LV-01), S.NO.139/1/3, NEAR NAKA NO.4, SANGAMNER ROAD, SHRIRAMPUR DISTT. AHMEDNAGAR - 413709 PH 9324034543

SIKRAPUR

1550. EXCELL AUTOVISTA PVT LTD (GKJ1-GKJ-01), AT POST SHIKARPUR MALTHAN PHATA, OPP. CHAURASIYA CHANA CENTER, PUNE NAGAR ROAD, TALUKA SHIRUR, DIST. PUNE, PIN-412208, PUNE - 412208 PH-91461949473.

SILLOD

1551. PAGARIYA AUTO PVT. LTD. (2103-ZG-04), PLOT NO. 19/20, SURVEY NO. 386, AURANGABAD NAKA, SILLOD, AURANGABAD - 431112 PH :8600037213.

SINNAR

1552. SHAAN CARS PRIVATE LIMITED (3703-FU-03), A-24, MIDC AREA MALEGAON, SINNAR TAL-SINNAR,, - 422103 PH : 02551-230305.

SOLAPUR

- 1553. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-02), 150, AKALKOT ROAD,OPP. SVCS HIGH SCHOOL,SOLAPUR, - 413006 PH:0217-260666/8805986818.
- 1554. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-01), 18,39, INDUSTRIAL ESTATE,HOTAGI ROAD,SOLAPUR, - 413224 PH:8805778881.

1555. CHAVAN MOTORS DIVISION INDIA PVT LTD (B102-B1-06), PLOT NO.95, IND. ESTATE, HOTAGI ROAD, SOLAPUR. - 413003 PH :8805986276

TALASARI

1556. SHIVAM AUTO ZONE (I) PVT. LTD. (BIN1-BIN-01), SURVEY NO. 191/1 PLOT NO. 5, AT-POST – VADAVALI, NH-8. TALASARI, THANE, MAHARASHTRA - 401606 PH :6355248143/T77002390.

TAI FGAON

1557. MY CAR (PUNE) PVT. LTD. (4K01-4K-01), SR.NO.113, HISSA NO.1/3/2/A, MUMBAI PUNE OLD HIGHWAY, MAVAL, TALEGAON - 410506 PH :9730855855

TALOJA

1558. EXCELL AUTOVISTA PVT LTD (AAC1-9K-02), PLOT NO-9,MIDC,NAVADE,TALCJA, TAL-PANVEL, DIST-RAIGAD - 410208 PH :9136948195/9320357300.

TASGAON

1559. SIDDHI WHEELS (A UNIT OF TARALEKAR MOTORS PVI. LTD.) (GKB1-GKB-01), SHETKARI MARKET, NEAR ISHA HOTEL, TASGAON-SANGLI ROAD, TALUKA - TASGAON, DIST.-SANGLI. - 416312 PH: 3275030748.

THAN

- 1560. FORT POINT AUTOMOTIVE (CARS) PVT. LTD. (3906-39-01). KOTHARI WAREHOUSE NO. 111, POKHRAN ROAD NO. 11, MANPADA, CHATALSAR, THANE - 400607 PH:9594974656, 8691039873.
- 1561. NAVNEET MOTORS (3908-39-02), B R T PLOT ,THANE (W) ,MAHARASHTRA - 400607 PH :9664496732, 9167215178.
- 1562. VELOX MOTORS (A UNIT OF CARCRAFT AUTOMOBILES PVT LTD) (05A3-39-02), NEW SURVEY NO. 171/1/B. NEAR BLUE ROOF CLUB, VILLAGE - OWALE, GHODBUNDER ROAD, THANE (W). - 400615 PH :8104989847,96536 88455.

TITWALA

1563. AHER AUTOPRIME (BYP2-BYP-01), SURVEY NO. 23/2, SHOP NO. 3, NEAR GOVELI, TITWALA ROAD, GHOTSAI, TITWALA, PIN-421301, MAHARASHTRA - 421301 PH :18008334369.

TURBHE

1564. SAI SERVICE (0504-9K-06), D 42, TTC INDUSTRIAL AREA, NAVI MUMBAI, PIN-400705 -400705 PH :022-268611111/8976999060.

ULHASNAGAR

1565. PRAKASH AUTO PVT. LTD. (3903-39-01), U NO-3, SHEET NO. 30, VITHALWADI STATION ROAD, ULHASNAGAR - 421003 PH -9887992127/9870453155

URALI KANCHAN

1566. EXCELL AUTOVISTA PVT LTD (GKI1-GKI-01), GAT NO-244, VILLAGE-SORTAPWADI, TALUKA HAVELI, URULI KANCHAN, DIST-PUNE, PIN-412201 - 412201 PH :9226039614.

VADUJ

1567. CHOWGULE INDUSTRIES PVT. LTD. (F303-GQ-03), KALEVASTI, VADUJ DAHIWADI ROAD, VADUJ - 415506 PH:888866659

VAIJAPUR

1568. PAGARIYA AUTO PVT. LTD. (BNR1-BNR-01), NEAR SUBHASH BUNGLOW, STATION ROAD, VAIJAPUR, AURANGABAD. - 423701 PH :9922994237.

VASAL

- 1569. SAI SERVICE PRIVATE LIMITED (V901-V9-01), ANDRADESH BHAVAN, SURVEY #27 A,NEAR UMELA PHATAK, VASAI (WEST), DIST. THANE, MAHARASTRA - 401202 PH. 9167980080/9167980036/9594952211.
- 1570. SAI SERVICE PRIVATE LIMITED (0504-V9-03), C/O MR. KENNETH NICHOLAS D'SOUZA, SURVEY NO-89, SATIVALI ROAD, VILLAGE-WALIV, VASAI (EAST), DIST-PALGHAR, MAHARASHITRA, PIN-410208 - 401208 PH : 9167980004/97890084/9594950000.

VASHI

 MY CAR (PUNE) PVT. LTD. (05A4-05-01), A-751/2, MIDC TTC, TURBHE MAHAPE ROAD, PAWANE, NAVI MUMBAI - - 400 071 PH:8104906953. 9372802861. 9326713481.

VELHE

1572. SUMANKIRTI CARS (SLO1-SLO-01), MAUZA NO-492/2, AIP-VELHA, TAL- VELHA, DIST-PUNE-412212 - 412212 PH:8554981603/8550995444.

VIKRAMGADH

1573. SHIVAM AUTOZONE (SKV1-SKV-01), NEAR GOVERNMET DISPENSARY HOSPITAL, DAHANU ROAD, TEHSIL-VIKRAMGADH, DIST-PALGHAR-401605 - 401605 PH. #REF!.

VIRAR

1574. SAI SERVICE PRIVATE LIMITED (V901-PG-02), SURVEY NO.16, AGASHI ROAD, PADMAN NAGAR, VIRAR-WEST, DISTT. PALGHAR. -401301 PH: 9594952343/9167980036/9594952211.

VITA

1575. CHOWGULE INDUSTRIES PVT. LTD.
(BSE1-BSE-01), S NO. 900, HISSA NO. 1,2,3/1/2,
SANGLI VITA ROAD, VITA, TALUKA –
KHANAPUR, DISTRICT – SANGLI,
MAHARASHITRA - 415311
PH: 3888870120.

WAGHOLI

1576. SAI SERVICE PRIVATE LIMITED (1901-AB-04), GAT NO 2406/1440, VILLAGE- WAGHOLI,TAL-HAVELI, DIST- PUNE - 412207 PH: 9923208313/9923208221/9923208133.

WAI

1577. CHOWGULE INDUSTRIES PVT. LTD. (BYC1-BYC-01), GAT NO. 407, A/P SHENDURJANE, MIDC ROAD, NEAR HOTEL GANDHARVA, OPP. DHOM LEFT CANAL, TAL – WAI, DISTT. SATARA - 412803 PH :8330080501.

WALUJ

1578. PAGARIYA AUTO PVT. LTD. (2103-MC-03), E-16,WALUJ,AURANGABAD - 431001 PH:9860999466.

WARANANAGAR

1579. SAI SERVICE PRIVATE LIMITED (CRB1-CRB-01), GAT NO.:1122/A, KODOLI, TALUKA: PANHALA, DIST. KOLHAPUR - 416114 PH:9923204173.

WARDHA

- 1580. SEVA AUTOMOTIVE LTD. (2002-AC-02), GOPURI CHOWK, OPP. BANK OF INDIA COLONY, NAGPUR ROAD, WARDHA - 442001 PH :07152-253545/253525
- 1581. SEVA AUTOMOTIVE PVT. LTD. (2002-AC-05), PLOT NO. 177, WARDHA-NAGPUR HIGHWAY, AT. PAVNAR, TEHSIL – WARDHA, DIST. -WARDH, PIN-442111, MAHARASHTRA - 442111 PH:7720009444.

WARUD

1582. ASPA BANDSONS AUTO PVT. LTD. (F201-UG-04), SURVEY NO. 50/3, SETURJANAGHAT ROAD, TALUKA: WARUD, DIST. AMRAWATI - 444906 PH :7248925687

WASHIM

1583. ASPA BANDSONS AUTO PVT. LTD. (F201-9D-02), NEAR RAILWAY CROSSING,HIGOLI ROAD,WASHIM, - 444505 PH :9922500981/ 9146191534.

YAVATMAL

1584. HIMALAYA CARS (4M01-4M-01), OPPOSITE RAUT PETROL PUMP, DARWHA ROAD, YAVATMAL, MAHARASHTRA - 445001 PH:9011014729.

YEOLA

1585. SEVA AUTOMOTIVES PVT LTD (BST1-BST-01), GAT NO. 65-A, PLOT NO. 41, AHMED NAGAR-MANNAD ROAD, NEAR TEHSIL OFFICE, YEOLA, TALUKA – YEOLA, DISTRICT – NASHIK, MAHARASHTARA. - 423401 PH. 9130033944.

YEWAT

1586. MAHALAXMI AUTOMOTIVES PVT. LTD. (AZA1-AZA-01), SOLAPUR PUNE NATIONAL HIGHWAY, SAHAJAPUR, YEWAT, TALUKA: DAUND, DISTT: PUNE (MAHARASHTRA). -412202 PH: 9308818948

MANIPUR

BISHNUPUR

1587. EASTERN MOTORS (CSA1-CSA-01), BISHNUPUR BAZAR, TIDIM ROAD, BISHNUPUR DISTT. MANIPUR. - 795126 PH :8415945626.

CHANDEL

1588. EASTERN MOTORS (CSB1-CSB-01), KAKCHING LAMKHAI, AH1 (INDO BURMA ROAD), CHANDEL (MANIPUR) - 795103 PH :8415945626.

CHURACHANDPUR

1589. EASTERN MOTORS (BBE1-BBE-01), HMUIA VENG,TEDDIM ROAD, CHURACHANDPUR, MANIPUR - 795128 PH :03874235969, 9862555472.

IMPHAL

- 1590. EASTERN MOTORS (7401-74-01), CHINGMEIRONG EAST, IMPHAL, MANIPUR - 795 001 PH :8415945626
- 1591. EASTERN MOTORS (7401-74-02), NH,39, CHINGMEIRONG, WEST, IMPHAL. - 795010 PH:8415945626
- 1592. SAMADON ENTERPRISE (7402-74-01), 82 GHARI MAKHA LEIKAI, IMPHAL WEST, MANIPUR. - 795 140 PH : 7005987123

JIRIBAM

1593. EASTERN MOTORS (SMG1-SMG-01), AT HILGHAT, IMPHAL SILCHAR ROAD, JIRIBAM -788104 PH :8415945626.

SENAPATI

1594. EASTERN MOTORS (CNN1-CNN-01), DIST. -COUNCIL (POULEA) VILLAGE, P.O. - SENAPATI, SENAPATI, MANIPUR. - 795 106 PH :8415945626.

THOUBAL

1595. EASTERN MOTORS (BJL1-BJL-01), THOUBAL ATHOKPAM KHUNOU, NEAR D.C. OFFICE COMPLEX, THOUBAL, MANIPUR - 795138 PH :9862662225.

UKHRUL

1596. SAMADON ENTERPRISE (SCK1-SCK-01), KAMPHASOM, UKHRUL, MANIPUR - 795142 PH :9774216305.

MEGHALAYA

BHOIRYMBONG

1597. RANI MOTORS (CHP1-CHP-01), VILLAGE – UMROI MADAN, DISTRICT – RI BHOI, MEGHALAYA. - 793103 PH -9774478291

JOWAI

1598. RANI MOTORS (3101-31-01), LADTHADLABHO, OPP. PWD OFFICE, JOWAI, DIST - JAINTIA HILLS, MEGHALAYA - 793150 PH :7085849525.

KHLIEHRIAT

1599. BANALARI WORLD CARS (8502-PZ-03), JOWAI-SICHAR ROAD, MEGHALAYA, KHLIEHRIAT - 793150 PH - 7005757760/7005569550

MAWKYRWAT

1600. RANI MOTORS (CGR1-CGR-01), DAK BANGLA, MAWKYRWAT, WEST KHASI HILLS, MEGALAYA - 793114 PH :9856005544.

MAWNGAP

1601. BANALARI WORLD CARS (CBK1-CBK-01), LAITPYNTER, SHILLONG NONGTION ROAD, MAWNGAP, DIST.-EAST KHASI HILLS, MEGHALAYA. - 793121 PH -7005757760/7005569550

MYLLIEM

1602. BANALARI WORLD CARS (CSK1-CSK-01), MADANIING SYIEM, MYLLIEM, SHILLONG CHERRAPUJI ROAD, DISTT: EAST KHASI HILLS, MEGHALAYA. - 793009 PH:7005757760/7005569550.

NONGPOH

1603. RANI MOTORS (8501-TN-05), NEAR D.T.O. OFFICE, G.S. ROAD, NONGHPOH, RIBHOI DISTT. - 793102 PH :9774478281

NONGSTOIN

1604. RANI MOTORS (8501-0P-04), OPP.IRANI PETROL PUMP, NEW NONGSTEIN, DISTRICT-WEST KHASI HILLS ,MEGHALAYA - 793119 PH :9856005544.

PYNURSULA

1605. BANALARI CAR WORLD (CBJ1-CBJ-01), PHLANGSHLAIN MAIN ROAD, SHILONG DAWKI, PYNURSLA, DISTRICT - EAST KHASI HILLS, MEGHALAYA - 793110 - 793110 PH :8415942700.

SHILLONG

- 1606. RANI MOTORS (8501-85-01), SUNNY HILLS, GARIKHANA, G.S.ROAD, SHILLONG - 793014 PH:9862099400.
- 1607. RANI MOTORS (8501-85-02), MAWBLEI, NH-44, SHILLONG JOWAI ROAD, MEGHALAYA. - 793021 PH:8014734780.
- 1608. BANALARI WORLD CARS (8502-85-01), MAWLAI NONGKWAR, G.S. ROAD, SHILLONG - 793017 PH :7005757760/7005569550.

TURA

1609. RANI MOTORS (CLF1-CLF-01), AGILLANGRE, ARAIMILE, PO NEW TURA, TURA - 794101 PH:7005563791.

UMSAW

1610. BANALARI WORLD CARS (CH21-CH2-01), UMSAWKHWAN RAID MAWBUH, MYLLIEM SYIEMSHIP, RI BHOI DISTRICT, MEGHALAYA. -793123 PH -7005757780/7005599550

MIZORAM

AIZAWL

1611. G.I.G. MOTORS (9103-91-01), EDENTHAR, AIZAWL, MIZORAM. - 796001 PH:8974559065.

MP

NAINPUR

1612. STANDARD AUTO (SEZ1-SEZ-01), MANJU SAHU, MANDLA ROAD, NEAR MPEB OFFICE, ADJOINING TO BAJJ SHOW ROOM, NAINPUR, DISST MANDLA, MADHYA PRADESH -481776. -481776 PH :7771003374

NAGALAND

DIMAPUR

1613. PROGRESSIVE MOTORS (3201-32-01), OPPOSITE AIRPORT, N.H.39, DIMAPUR KOHIMA ROAD, DIMAPUR - 797112 PH:7005254089.

KOHIMA

1614. SEYIE AUTO (4N02-4N-01), TSIECIE, NH-29, PHEK ROAD, KOHIMA, NAGALAND - 797001 PH:7005867051.

MOKOKCHUNG

1615. PROGRESSIVE MOTORS (CGL1-CGL-01), SUNGKONMEN ROAD, MOKOKCHUNG, NAGALAND. - 798601 PH :87877325534.

WOKHA

1616. PROGRESSIVE MOTORS (SFH1-SFH-01), NIROPEN COLONY, WOKHA-797111, NAGALAND - 797111 PH :9774070707.

ODISHA

ANANDAPUR

1617. JYOTE MOTORS PYT LTD (CIUZ-CIU-01), KHATA NO. 246/407, PLOT NO. 76, P.S. – GHASIPURA, MOUZA – SUDUSUDIA, DISTRICT – KEONJHAR, ANANDPUR, ODISHA. - 758021 PH .7381028525.

ANGUL

1618. ODYSSEY MOTORS PVT LTD (W101-W1-01), AT/PO KULAD (NEAR NALCO CPP PLANT), KANDASAR, NALCO NAGAR, ANGUL (DISTT: ANGUL). - 759145 PH :9439817308.

BALASORE

1619. JYOTE MOTORS (BALASORE) PVT. LTD (L501-L5-01), PLOT NO. 276, GANESHWARPUR-NH-5, POST-JANUGANJ VIA REMUNA, DIST.-BALASORE - 756019 PH -7381072600

BALUGOAN

1620. JYOTE MOTORS (CWG1-1-CWG-01), .M/S PLOT NO 758/31,KHATA NO 350/30,MOUZA-GOBARDHANPUR,BALUGAON, DISTRICT-KHORDA, ODISHA-752030 - 752030 PH-9776615001.

BAMRA

1621. ODYSSEY MOTORS (SIA1-SIA-01), M/S ODYSSEY MOTORS, NEAR SATSANG KENDRA, DUMERMUNDA COLLEGE ROAD, BAMRA, GOVINDPUR-768221. - 768221 PH:9439314464.

BARGARH

1622. ODYSSEY MOTORS PVT LTD (D401-SJ-04), AT/PO -BARGARH, NH-6, DISTT.-BARGARH, ORISSA - 768028 PH :8908944206.

BARIPADA

1623. JYOTE MOTORS (BALASORE) PVT. LTD (L501-RQ-02), PLOT NO. 90/523/904, SWARUP VILLA, NH-5, BARIPADA - 757001 PH: 7381072624

BERHAMPUR

1624. SKY AUTOMOBILES (E203-E2-01), PLOT NO.80/1191 DHARMA NAGAR, MAIN ROAD, BERHAMPUR - 760002 PH:7381266000. 1625. SKY AUTOMOBILES (E203-E2-02), PLOT NO. 876, WESTERN ROW NH-5, KONISI HATO, VILLAGE – KONISI, BERHAMPORE, GANJAM, ODISHA. - 761008 PH :7381266000.

BHADRAK

1626. JYOTE MOTORS (BALASORE) PVT. LTD (IZ01-IZ-01), PLOT NO. 14/4837, KHATA NO. 1345/1087, TRISHALPUR, CHARMPA, BHADRAK, ODISHA - 756101 PH 9776345311

BHAWANIPATNA

1627. LEGEND CARS PVT. LTD. (SW01-TB-02), NH-201, KESINGA ROAD, BHAWANIPATNA - 766001 PH :9937198684

BHUBANESHWAR (NAYAPALLI)

1628. JYOTE MOTORS PVT LTD (0405-04-01), A/62, NAYAPALLI,NH-5,BHUBANESHWAR,ORISSA-751 003 - 751003 PH:7381028525.

BHUBANESWAR

- 1629. NARAYANI MOTORS PVT. LTD. (0403-04-01), 217, CUTTACK ROAD, JHARPARA, BHUBANESWAR - 751006 PH :9583022031.
- 1630. JYOTE MOTORS PVT LTD (0402-04-01), A-62, NAYAPALLI,NEAR CRPF SQUARE, BHUBANESWAR - 751003 PH:7064493302.
- 1631. SKY AUTOMOBILES (0404-04-01), PLOT NO. 435/1866, NEAR KIIT SQUARE PATIA, BHUBNESHWAR, - 751022 PH:8117829611.
- 1632. NARAYANI MOTORS PVT. LTD. (0403-04-02), PLOT NO 56 AND 57, RASULGARH, BHUBANESHWAR, ODISHA - 751010 PH :9583022046.
- 1633. JYOTE MOTORS PVT LTD (0402-04-04), PLOT NO. 22 & 23, SECTOR-A, ZONE-D, MANCHESWAR INDUSTRIAL ESTATE AREA, BHUBANESHWAR. - 751010 PH:7978910223.
- 1634. SKY AUTOMOBILES (0404-04-02), KHATA NO. 457/675, PLOT NO. 543, 756, 789 AND 546, SRIVIHAR, INFRONT OF IOCL OFFICE, P.S. -CHADRASHEKARPUR, BHUBANESHWAR, ODISHA - 751 024 PH.7440011604.

BOLANGIR

1635. ODYSSEY MOTORS PVT LTD (D401-MW-03), NH-201, MADHIAPALI, SAMBHALPUR ROAD, BOLANGIR, ORISSA - 767001 PH:8895418122.

CHANDIKHOLE

1636. SKY AUTOMOBILES (BXI.1-BXL.01), PLOT NO.285/3, SHANTI MANDAP MOUZA -SUNGUDA, TEHSIL-DARPANI, PO CHANDIKHOL, DIST. -JAJPUR, ODISHA, - 755044 PH 9776645798

CUTTACK

- 1637. SKY AUTOMOBILES (6701-67-02), BHANPUR, NH-5, CUTTACK 753011 PH:9776645798.
- 1638. TUSHI MOTORS PVT. LTD. (6702-67-01), PLOT NO. C-14, PLOT NO. C-13, INDUSTRIAL ESTATE KHAPURIA, TAHASIL - CUTTACK SADAR CUTTACK DISTRICT, BHUBANESWAR - 753001 PH:9692912345.

DEOGARH

1639. ORBIT MOTORS PVT. LTD. (CBB1-CBB-01), KHATA NO. 270, OI MOUZA, DEOGARH, ODISHA - 768108 PH :9437607865.

DHENKENAL

1640. SKY AUTOMOBILES (6701-4P-04), PLOT NO-136/1103, KATHAGARA, NEARASSAM OIL, NH-42, DHENKANAL. - 759001 PH:7440025919.

GANDAL

1641. SPARSH AUTOMOBILES (SHU1-SHU-01), M/S SPARSH AUTOMOBILES, WARD NO – 7, NEAR KRISHI UPAI MANDI, GANDAI RAJNANDGAON ROAD,GANDAI – 491888 - 491888 PH :9926626662.

JAGATSINGHPUR

1642. NARAYANI MOTORS PVT. LTD. (CFM1-CFM-01), KHATTA NO. 827/221 & 827/222, PLOT NO. 1197 & 1199/3065, MOUZA-MARKHANDPUR, PO PUNABGA, DISTT. JAGATSINGHPUR, ODISHA -754103 PH :9556511213.

JAJPUR

1643. SKY AUTOMOBILES (6701-RZ-05), P.O JAHNA, P.S KORAI, KEONJHAR ROAD, JAJPUR, ORRISSA - 7553019 PH :9583011010

JALESWAR

1644. JYOTE MOTORS (BALASORE) PVT. LTD (BXP1-BXP-01), KHATA NO. 422/744, PLOT NO. 2304 AT P.O. - NAYABAZAR, JALESWAR, DIST.-BALASORE, ODISHA. - 756032 PH. 7381072600.

JEYPORE

1645. LEGEND CARS PVT. LTD. (SW01-SW-03), SOURAGUDA, JEYPORE, DISTT-KORAPUT, ORISS A, INDIA - 764001 PH: 9437575188.

JHARSUGUDA

1646. ODYSSEY MOTORS PVT LTD (BJU1-BJU-01), KHATA NO. 466/502, PLOT NO. 966, JHARSUGUDA TOWN, UNIT NO. 7, SARBAHAL P.S. JHARSUGUDA, ORISSA - 768201 PH: 9439548823.

KEONJHAR

1847. JYOTE MOTORS PVT LTD (7001-70-01), NH 215, DHRUPADA, BARBIL ROAD, KEONJHAR. -758001 PH : 7064499047.

NAYAGARH

1648. JYOTE MOTORS PVT LTD (0402-DC-02), PLOT NO. 1319/3750, KHANDAPADA, NAYAGARH -752069 PH. 7064499048.

NIMPARA

1649. NARAYANI MOTORS PVT. LTD. (CFL1-CFL-01), PLOT NO. 345/1344, GANESH BAZAR, NIMAPARA, DISTRICT – PURI, ODISHA. - 752106 PH. 738109362.

PALLAHARA

1650. ODYSSEY MOTORS PVT LTD (CHV1-CHV-01), KHATA NO. 260, PLOT NO. 998/3720, PAHALLARA, ODISHA. - 759119 PH: 9439817308.

PARADEEP

1651. NARAYANI MOTORS PVT. LTD. (OE01-0E-01), PLOT NO. 1438, UDAYA VIHAR, NEAR DO CHOWKI SQUARE, PARADEEP, ODISHA. -754141 PH: 9583022020.

PARLAKHEMUNDI

1652. SKY AUTOMOBILES (CLG1-CLG-01), PLOT NO. 273, KHATA NO. 78, WARD NO. 1, PARLAKHEMUNDI, GAJAPATI, ORISSA. - 761211 PH:9776999977.

PURI

1653. NARAYANI MOTORS PVT. LTD. (4Q01-4Q-01), PLOT NO. 1797/2449, KHATA NO. 187A/32, AT. BATAMANGLA, PO HAREKRISHNAPUR, BATAGAON, PURI, ODHISA - 752002 PH 9583022220.

RAIRANGPUR

1654. JYOTE MOTORS (BALASORE) PVT. LTD (CES1-CES-01), PLOT NO.1077/2466, PURNAGHATI, RAIRANGPUR, DISTT: MAYURBHANJ, ODISHA - 757046 PH : 7064499936

RAYAGADA

1655. LEGEND CARS (YB01-YB-01), M/S LEGEND CARS, JK PUR ROAD, KOMTALPETA, NEAR ENFIELD SHOWROOM, RAYAGADDA, ODISHA - 765001

ROURKELA

PH ·7008771180

1656. ORBIT MOTORS PVT. LTD. (8701-87-01), VEDVYAS, NEAR PAAHADI BAR, ROURKELA, ORRISA - 769041 PH :9437061040.

SAMBALPUR

1657. ODYSSEY MOTORS PVT LTD (D401-D4-01), AINTHAPALI, SAMBALPUR, ORISSA - 768004 PH : 7381083571

SORO

1658. JYOTE MOTORS (SQF1-SQF-01), PLOT NO 15/1269,KHATA NO 442, SORO, BALASORE, ODISHA STATE. - 756045 PH :9776615001.

SUBARNAPUR

1659. ODYSSEY MOTORS PVT LTD (BUK1-BUK-01). KHATA NO. 32, MOUZA – SANJHINIK, SONEPUR (ALSO KNOWN AS SUBARNAPUR), DISTRICT – SUBARNPUR, ODISHA - 767017 PH :8896418129

SUNDERGARH

1660. ORBIT MOTORS PVT. LTD. (BWJ1-BWJ-01), M/S ORBIT MOTORS, AT - PATRAPALI, PO SUNDERGARH, BY PASS ROAD, NEAR BJP OFFICE, SUNDERGARH - 770001 PH :8249354447.

UDALA

1661. JYOTE MOTORS (BALASORE) PVT. LTD (CHW1-CHW-01), MOUZA - UDALA, TOWN UNIT NO. 7, NAGBANI, TEHSIL NO. 325, THANA NO. 110, DIST.-MAYURBHANJ, ODISHA. - 757041 PH:8249877935.

ODISHAN

NIRGUNDI

1862. NARAYANI (0403-SIP-4), KHATA NO 251/255, PLOT NO 233,MALGOWDINI-MOUZA BLITERUA, NIRGUNDI,DISTRICT-CUTTACK, ORISSA. -754025 PH.9583001877.

ORISSA

BHUBANESWAR

1663. NARAYANI (0403-04-03), KHATA NO-652,PLOT NO 4493, MAUZA PANDRA THANA-RASULGARH,BHUABNESHWAR - 751025 PH 9583001877.

KENDRAPARA

1664. JYOTE MOTORS (SFI1-SFI-01), M/S JYOTE MOTORS, KHATA NO: 351/85, PLOT NUMBER 633, MOUZA-ALBANKA, KENDRAPARA, ODISHA. 754208 PH :9776615001.

KUCHINDA

1665. ODYSSEY MOTORS (SLN1-SLN-01), /S ODYSSEY MOTORS, PLOT NO 146,KHATA NO 769,MOUZA-KUNDAPOSHI,NEAR KUNDESHWAR MANDIR,KUCHINDA, SAMBULPUR. - 768222 PH 9439314464.

PADAMPUR

1666. ODYSSEY MOTORS (SFB1-SFB-01), M/S ODYSSEY MOTORS, CHARPALLI, PADAMPUR, NEAR REGENCY HOTEL, DISTRICT: BARGARH, ORISSA - 770039 PH: 9439314464.

PUDUCHERRY

KARAIKAL

1667. SHENBAKA CARS PVT. LTD. (CCF+CCF-01), R. S. NO. 173/3PT, T. S. NO. 9/5, WARD, L-BLOCK, NO. 3, KARAIKAL NAGORE MAIN ROAD, VILLAGE - ODUTHURAI REVENUE, NERAVY COMMUNE, KARAIKAL MUNICIPALITY, KARAIKAL - 609602 Pt. 10-498-227800/1/2.

MADAGADIPET

1668. SHENBAKA CARS PVT. LTD (CUD1-CUD-01), SURVEY NO. 129/4/A/2, MADAGADIPET REVENUE VILLAGE, MADAGADIPET, PONDICHERRY - 605 107 PH: 8220046178.

PONDICHERRY

1669. SHENBAKA CARS PRIVATE LIMITED (9601-96-01), 133/1A, MOOLAKULAM, VILLUPURAM MAIN ROAD, PONDICHERRY -605010 PH :0413-2293391/92/93.

PUNJAB

ABOHAR

1670. TARA AUTOMOBILES (ABOHAR) (H501-H5-01), SHREE GURU JAMBHESHWAR CHOWK, MALOUT SHREE GANGA NAGAR BYPASS, ABOHAR, PUNJAB - 152116 PH-9876047847.

ADAMPUR

1671. LOVELY AUTOS (CHA1-CHA-01), KHASRA NO.107/1, JALANDHAR-HOSHIARPUR HIGHWAY, ADAMPUR DISTT. JALANDHAR -144102 PH:8288050777.

AJNALA

1672. SWANI MOTORS PVT. LTD. (CBP1-CBP-01). KHASRA NO. 71, AJNALA-AMRITSAR ROAD, VILLAGE - BHARKA TARA SINGH, TEHSIL -AJNALA, DISTRICT - AMRITSAR, PUNJAB. -143102 PH: 3872001731.

AMRITSAR

- 1673. SWANI MOTORS LTD. (1701-17-01), 81,COURT ROAD, AMRITSAR - 143001 PH:9877482175, 8872000000.
- 1674. JAYCEE MOTORS (1704-17-01), 274 EAST MOHAN NAGAR, G.T.ROAD, AMRITSAR - 143006 PH :9780038335.
- 1675. RISHABH FOURWHEELS PVT. LTD. (1703-17-01), ADARSH SOAP COMPLEX, BATALA ROAD, AMRITSAR - 143004 PH: 9914841577.

ANANADPUR SAHIB

1676. CM AUTOSALES PVT. LTD. (0F01-0F-01), VILLAGE MIYANPUR, NAINA DEVI ROAD, ANANDPUR SAHIB, TEHSIL ANANDPUR SAHIB, DISTT. ROPAR, PUNJAB - 140123 PH :9915022897.

APRA

1677. LOVELY AUTOS (CVW1-CVW-01), SAMRAI CHOWK PHILLAUR ROAD, VILLAGE - APRA, TEHSIL - PHILLAUR, DIST.-JALANDHAR, STATE -PUNJAB. - 144416 PH :9915020515.

AUR

1678. LOVELY AUTOS (CVY1-CVY-01), KHATUNI NO. 479/588, KHASRA NO. 27/20/04(2-18), 21/2(2-10), VILLAGE - AUR, TEHSIL - NAWASHAR, DIST. -SBS NAGAR, STATE - PUNJAB. - 144417 PH :9915020510.

BAGHA PURANA

1679. REMIRA MOTORS PVT. LTD. (BAH2-BAH-01), BUILDING NO.68, OPP. SHINA ENCLAVE, MOGA ROAD, BAGHA PURANA, DISTT. MOGA, PIN-142038 - 142038 PH.7087025009.

BALACHAUR

1680. LOVELY AUTOS (XVOI-XV-01), NEAR MCDONALD - GHUGGI JUNCTION), VPO-GARHI KANUGO, NAWANSHAHR CHANDIGARH HIGHWAY, CHANDIGARH ROAD, BALACHAUR, DISTRICT-S.B.S. NAGAR, PUNJAB (NAWANSHAHR) - 144521 PH :9878427910.

BALBEHRA

1681. HIRA AUTOWORLD (SOG1-SOG-01), NEAR HDFC BANK LTD., SAMANA ROAD, BALBEHRA -147101 PH 9888341118.

BANGA

1682. LOVELY AUTOS (3503-MS-03), NAWASEHAR-JALANDHAR ROAD, BANGA -144505 PH :9915028625

BANUR

1683. TRICITY AUTOS PVT. LTD. (BRT1-BRT-01), SANDHU MARKET NEAR SALES TAX BARRIER, BANUR RAJPURA HIGHWAY, BANUR, PUNJAB -140601 PH .998882330.

BARNALA

1684. MAX AUTOMOBILES (4S02-4S-01), NR. HANDIYAN CHOWK,MANSA BYE PASS,BARNALA,PUNJAB - 151001 PH :285022 9216529220

BATALA

1685. PATHANKOT VEHICLEADES PVT. LTD. (A701-V5-05), NEAR VMS INSTITUTE, SAID MUBARAK, GT ROAD, BATALA - 143505 PH :9417900850 . 9417900918.

REGOWAL

1686. MARWAHA AUTOS (BHF2-BHF-01), PELIA TOWN, BHADAS ROAD, WARD NO. 11, JALANDHAR ROAD, VPO. BEGOWAL, KAPURTHALA, PIN-144621, PUNJAB - 144621 PH: 9779166004.

BHADSON

1687. HIRA AUTOMOBILES LTD (BAG1-BAG-01), VILLAGE CHASWAL, NABHA ROAD, BHADSON -147202 PH 9217048236, 9217048250.

BHAGTA BHAI KA

1688. TARA AUTOMOBILES (BHG1-BHG-01), NEAR SARPANCH HOUSE, BHAGTA BHAI KA, DISTRICT – BHATINDA. - 151206 PH :8437030666.

BHATINDA

1689. TARA AUTOMOBILES (BHATINDA) (7002-70-01), MANSA ROAD, OPP. I.T.I, BATHINDA - 151001 PH :0164-2235349. 50.

BHIKHIWIND

1690. RISHABH FOURWHEELS PVT. LTD. (BPK1-BPK-01), KHASRA NO. 67/3/2. 4/1, 7/2, 8/1, 8/2, PIND BHIKHIWIND, TEHSIL – PATTI, DISTRICT – TARN TARAN, PUNJAB. - 143303 PH 9914708577.

BHOGPUR

1691. LOVELY AUTOS (BRUZ-BRU-01), KHASRA NO. 31/114, 17/2 18/2 23, MAIN JALANDHAR-PATHANKOT HIGHWAY, OPP-AJIT PALACE, BHOGPUR - 144201 PH :987203006.

BHULATH

1692. LOVELY AUTOS (CHB1-CHB-01), WARD NO. 1, NADALA-BEGOWAL ROAD, VPO BHULATH, DISTRICT – KAPURTHALA, PUNJAB. - 144622 PH:9876541065, 8288050777.

BILGA

1693. LOVELY AUTOMOBILES (SPM1-SPM-01), VPO BILGA, NEAR GOVT. PRIMARY SCHOOL, TEHSIL PHILLAUR, JALANDHAR. - 144036 PH :9815069814.

CHUNNI KALAN

1694. HOSHIARPUR AUTOMOBILES (CFG1-CFG-01), NEAR RAJINDER MOTORS, SIRHIND-CHANDIGARH ROAD, VILLAGE CHUNNI, DIST. FATEHGARH SAHIB. - 140307 PH -248005 9815131766

DASUYA

1695. HOSHIARPUR AUTOMOBILES (H402-8D-04), OPP CHEEMA PETROL PUMP, G.T. ROAD, DASUYA - 144205 PH :9815131766. 9872312371.

DERABASSI

1696. AUTOPACE NETWORK PVT LTD (0705-AW-02), AT NH-2, NEAR DERABASSI, TOLL BARRIER-DERABASSI - 140507 PH :9815011669.

DEVIGARH

1697. HIRA AUTOMOBILES LTD (OG01-OG-01), CHANNA MOUR, PEHOWA PATIALA ROAD, DEVIGARH, DISTT. PATIALA (PUNJAB). - 147111 PH :8872034118, 9217048250.

DHILWAN

1698. MARWAHA AUTOS (SGU1-SGU-01), MIANI BAKARPUR,AMRITSAR ROAD, OPP-INDIAN OIL PETROL PUMP, DHILWAN DISTT KAPURTHALA -144804 PH: 9779166004.

DORAHA

1699. GULZAR MOTORS (QC02-QC-01), G.T. ROAD, NEAR ARRICHAN CHOWK, DORAHA, DISTT. LUDHIANA, PUNJAB. - 141421 PH:9814191122.

FARIDKOT

1700. MAPSKO AUTO INDIA PVT. LTD. (4U02-4U-01), FARIDKOT- KOTKAPURA ROAD, FARIDKOT, PUNJAB - 151204 PH :01639- 264001.7347000520.

FATEHGARH CHURIAN

1701. PATHANKOT VEHICLEADES PVT. LTD. (BAO1-BAO-01), KHASRA NO. 17 R. DERABABA NANAK ROAD, FATEHGARH CHURIAN, TEHSL: BATALA, DIST.-GURDASPUR, STATE - PUNJAB. - 143 602 PH: 9417900850 , 9875930180.

FAZILKA

1702. TARA AUTOMOBILES (H501-4V-03), NH-10, NEAR SARVHITKARI BAL VIDYA MANDIR, FAZILKA - 152116 PH :9876047847.

FEROZEPUR

1703. BABA AUTOS (7C01-7C-01), MOGA ROAD, FEROZEPUR CANTT - 152002 PH:8872013211.

GARHSHANKAR

1704. HOSHIARPUR AUTOMOBILES (H402-V4-02), OPP. COURT, CHANDIGARH ROAD, GARHSHANKAR, DIST. HOSHIARPUR - 144527 PH:9815131766, 9781543131.

GHANAUR

1705. HIRA AUTOWORLD LLP (CVX2-CVX-01), WARD NO. 1, OPPOSITE OLD PETROL PUMP GHANAUR PATIALA ROAD, SUB TEHSIL -GHANAUR, TEHSIL - RAJPURA, DIST.-PATIALA, STATE - PUNJAB. - 140401 PH-9217048437.

GHAROTA

1706. PATHANKOT VEHICLEADES (SFF1-SFF-01), VILLAGE AND PO GHAROTA, OPPOSITE PUNJAB GRAMIN BANK, TEHSIL & DISTT. PATHANKOT – 143533. - 143533 PH: 3264105000.

GHOMAN

1707. PATHANKOT VEHICLEADES PVT. LTD. (CUL1-CUL-01), KHEWAT NO. 36, KHATAUNI NO. 122, KHASRA NO. 11//25 (7-18), VILLAGE -BALRAMPUR ADDA, KHASBA - GHOMAN. -143514 PH. 8054500130.

GIDDARBAHA

1708. HIRA AUTOMOBILES LTD (AUA1-AUA-01), NEAR BHARU CHOWK, BATHINDA-MALOUT ROAD, GIDDERBAHA, DISTT. SRI MUKTSAR SAHIB (PUNJAB) - 152101 PH :231510.9217048250.

GORAYA

1709. LOVELY AUTOS (BJR1-BJR-01), NEAR MILAN PALACE, G.T. ROAD, GORAYA. - 144409 PH:9417804049.

GURDASPUR

1710. PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-03), V.P.O. BABRI NH-15, DIST. GURDASPUR - 143521 PH:9417900870, 9878050710.

 PATHANKOT VEHICLEADES PVT. LTD. (A701-4X-06), VPO - JEEWANWAL BABRI, NH-15, GURDASPUR (PUNJAB) - 143521 PH :9417900870.

HOSHIARPUR

1712. HOSHIARPUR AUTOMOBILES (H402-H4-01), SINGRIWALA, JALLANDHAR ROAD, HOSHIARPUR, - 146001 PH:9815131766, 9878632537.

JAGRAON

1713. SANDHU AUTOMOBILES (6206-LT-05), NATIONAL HIGHWAY-64, JAGRAON - 142026 PH :8437025969.

JAITU

1714. MAPSKO AUTO INDIA PVT. LTD. (YX02-YX-01), NEAR CANAL, BATHINDA ROAD, JAITO, DISTRICT – FARIDKOT. - 151202 PH: 7347000520.

JALALABAD

1715. TARA AUTOMOBILES (H501-8E-02), F.F. ROAD, NEAR THANA SADAR, JALALABAD - 152024 PH:9876047847.

JALANDHAR

- 1716. LOVELY AUTOS (3503-35-01), DR. AMBEDKAR CHOWK, JALANDHAR CITY - 144001 PH :9915020515.
- 1717. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (3506-35-01), OPP DPS SCHOOL, G.T. ROAD, JALANDHAR - 144010 PH :9779166004.
- LOVELY AUTOS (3505-35-01), KHASRA NO.
 24/20/4, B D ENCLAVE, VILLAGE JALANDHAR,
 DIST.-JALANDHAR, PUNJAB. 144001
 PH:9876044001
 9915020615

JANDIALA GURU

1719. BABA AUTOS (7C01-GL-03), GT ROAD, NEAR TARN TARAN BYE PASS, JANDIALA GURU -143115 PH :8872013029.

JANDIALA MANJKI

1720. LOVELY AUTOS (BJS1-BJS-01), SANT MARKET, JANDIALA-BUNDALA ROAD, VILLAGE – JANDIALA MANJKI, TEHSIL – NOORMAHAL, DISTRICT – JALANDHAR, PUNJAB. - 144033 PH -7087438797

KAHNUWAN

1721. PATHANKOT VEHICLEADES PVT. LTD. (CGM1-CGM-01), KHASRA NO.606, VPO-KAHNUWAN, THE. & DISTT. GURDASPUR. -143528 PH.8288993301.

KALA SANGHIAN

1722. MARWAHA AUTOS (SPL1-SPL-01), MAIN CHOWK, KALA SANGHIAN, DISTRICT KAPURTHALA, PUNJAB - 144623 PH:9779166004.

KAPURTHALA

1723. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (4202-42-01), SIDHU COMPLEX, CIRCLE ROAD -KAPURTHALA, PUNJAB - 144602 PH :9779166004.

KATHU NANGAL

1724. JAYCEE MOTORS (CSP2-CSP-21), KHASRA NO.1220/2, 21/1 KHATA NO.212/186/229 GILL KHETI STORE, GT ROAD, VILLAGE-KATHUNANGAL, DISTT. AMRITSAR, PUNJAB - 143502 PH : 9780038335.

KHANNA

1725. HOSHIARPUR AUTOMOBILES (N302-N3-01), VILLAGE-KAUNI, NEAR GILL PETROL PUMP, GT ROAD, KHANNA, DIST.-LUDHIANA, PUNJAB. -141401 PH :9888716261.

KHARAR

1726. CM AUTOSALES PVT. LTD. (7K01-JH-03), NH-95, MORINDA ROAD,KHANPUR, KHARAR. DIST. MOHALI - 140301 PH 9915022878

KILANWALI

1727. HIRA AUTOMOBILES LTD (BFV1-BFV-01), GT ROAD (NH NO. 09), NEAR GURU NANAK COLLEGE, KILANWALI, TEHSIL – MALOUT, DISTRICT – MUKTSAR SAHIB. - 152107 PH :8872034131

KOTKAPURA

1728. MAPSKO AUTO INDIA PVT. LTD. (BIS2-BIS-01), MOGA ROAD, NEAR GREEN DHABA OPPOSITE FUN PLAZA, KOTKAPURA, DISTRICT – FARIDKOT - 151204 PH:7347000518.

LALRU

 AUTOPACE NETWORK PVT LTD (BRJ1-BRJ-01), VILLAGE – LALRU, DERA BASSI, SAS NAGAR MOHALI, PUNJAB. - 140501 PH :9815011669.

LUDHIANA

- 1730. GULZAR MOTORS LTD. (6204-62-01), G.T.ROAD, DHOLEWAL, OPP. MILITARY CARMP, LUDHIANA - 141003 PH 9814160099
- 1731. SANDHU AUTOMOBILES (6206-62-01), DHOLEWAL CHOWK, LINK ROAD, LUDHIANA -141203 PH :9815600095.
- 1732. LIBRA AUTO CAR CO. LTD (6207-62-01), G.T. ROAD, NEAR AIRPORT, LUDHIANA - 141020 PH: 0160-2512701 03
- 1733. LIBRA AUTO CAR CO. LTD (6207-62-02), G.T ROAD, NEAR AIRPORT, LUDHIANA. - 141020 PH:0160-25035130.

- 1734. LOVELY AUTO (6209-62-01), BABA NAND SINGH NAGAR, NEAR AYALLI CHOWK, FEROZEPUR ROAD, LUDHIANA – 141001 - 141001 PH :9875928451, 9875928450.
- 1735. LOVELY AUTOS (6209-62-02), GILL ROAD, NEAR CANAL BRIDGE, LUDHIANA, PUNJAB - 141003 PH :9815069814.
- 1736. LOVELY AUTOS (6209-62-03), OPPOSITE BHAI BALA SAHIB GURUDWARA, VILLAGE DAD, PAKHOWAL ROAD, LUDHIANA, PIN-141001, PUNJAB - 141001 PH -9815060814
- 1737. LOVELY AUTOS (6209-62-04), EURO MART COMPLEX, HAMBRAN ROAD, NEAR RADHA SWAMI SATSANG BHAWAN - 141008 PH :9815069814.

MACHIWARA

1738. HOSHIARPUR AUTOMOBILES (9T03-9T-01), SAMRALA ROAD, MACHIWARA, NEAR SHEEVA MARRIAGE PALACE - 141115 PH: 9875900147.

MAHILPUR

1739. HOSHIARPUR AUTOMOBILES (H402-DD-05), NEAR NEW BUS STAND, CHANDIGARH ROAD, MAHILPUR, DIST. HOSHIARPUR - 146105 PH:9914720424.

MAJITHA

1740. RISHABH FOURWHEELS PVT. LTD. (CDR1-CDR-01), PLOT NO.130, OPP. DANA MANDI, AMRITSAR ROAD, MAJITHA. - 143601 PH:9914841577.

MALERKOTLA

1741. MAX AUTOMOBILES (CCI2-CCI-01), MALERKOTLA-LUDHIANA MAIN ROAD, VILLAGE - BHOGIWAL, MALERKOTLA, DIST.-SANGRUR, PUNJAB. - 148023 PH-9814403131 . 9056903131.

MALOUT

1742. HIRA AUTOMOBILES LTD (6302-LE-05), TINKONI CHOWK, NEAR LIC BUILDING, MALOUT - 152107 PH:299524, 264724,9988417000.

MANDI GOBINDGARH

1743. HOSHIARPUR AUTOMOBILES (U903-U9-01), PLOT GOYAL MOTORS, NEAR YES BANK, MANDI SIRHIND ROAD, NH-1, MANDIGOBINDGARH, PUNJAB. - 147301 PH-9815131766, 9914119292

MANSA

1744. TARA AUTOMOBILES (7002-TL-02), BALATA ROAD, NEAR ARVIND NAGAR, MANSA , PUNJAB - 151505 PH :01652-216042.

MEHTA

1745. RISHAB (CDS1-CDS-01), KHASRA NO. 343, BABA BAKALA ROAD, VILLAGE MEHTA CHOW, TEHSIL: BABA BAKALA, DIST AMRITSAR, PUNJAB - 143114 PH :7760315710.

MOGA

1746. REMIRA MOTORS PVT. LTD. (H602-H6-01), INDUSTRIAL AREA, OPPOSITE ITI, GT ROAD, MOGA. - 142001 PH:7087025402.

MOHALI

1747. NAVDESH AUTOS LLP (L105-L1-01), PLOT NO.C-89, INDUSTRIAL AREA, PHASE-7, MOHALI - 160059 PH :8877016453

1748. CM AUTOSALES PVT. LTD. (0706-L1-03), PLOT NO. B-64, INDUSTRIAL AREA PHASE-7, MOHALI – PUNJAB - 140110 PH :8284800597.

MORINDA

1749. CM AUTOSALES PVT. LTD. (BHH1-BHH-01), KHASRA NO. 1092. CHANDIGARH-SAMRALA ROAD, MORINDA, DIST.-ROPAR, PUNJAB. - 140 101 PH :9915022811

MUKERIAN

1750. HOSHIARPUR AUTOMOBILES (IP01-IP-01), VILL. TALWANDI KALAN, GT ROAD, MUKERIAN -144211 PH 9815131766. 8437919900.

MUKTSAR

 HIRA AUTOMOBILES LTD (6302-J8-03), BHAI COMPLEX, MALOUT ROAD, MUKTSAR, PUNJAB - 152026
 PH :9217048250. 9056900042.

MULLANPUR

1752. SANDHU AUTOMOBILES (YY01-YY-01), OPPOSITE DHAKA ROAD, FEROZEPUR ROAD, MULLANPUR - 141101 PH :8437025969.

MULLANPUR GARIBDASS

1753. NAVDESH AUTOS LLP (CVZ2-CVZ-01), H NO. 341, POST OFFICE - MULLAPUR GARIBDASS, TEHSIL - MAJRI, DIST.-SAS NAGAR, STATE -PUNJAB. - 140901 PH:8872004676.

NABHA

1754. HIRA AUTOMOBILES LTD (6302-UF-06), RADHA SWAMI ROAD, NABHA - 147201 PH :9317000004 ,9217048250.

NAKODAR

1755. LOVELY AUTOS (3503-5B-04), JALANDHAR ROAD, NEAR MALARI GATE, NAKODAR - 144040 PH:9915028603.

NANGAL

1756. CM AUTOSALES PVT. LTD. (7K01-8F-02), PLOT#36,AJOLI MOR, FOCAL POINT INDUSTRIAL AREA, NAPA NANGAL ,PUNJAB -140126 PH :9592916811.

NAWANSHAHR

1757. LOVELY AUTOS (3503-J7-02), NAWANSHAHR CHANDIGARH ROAD, VILL- LANGROHA, DISTT:-NAWANSHAHR, PUNJAB - 144514 PH :9915028682.

NIHAL SINGH WALA

1758. REMIRA MOTORS PVT LTD (OB02-QB-01), BARNALA ROAD, NEAR DEAR BABA SEWA DASS, TEHSIL-NIHALSINGHWALA, DIST.-MOGA. - 142 055 PH.7067025009.

PATHANKOT

1759. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-01), NEAR MAMOON CHOWK, DALHOUSIE ROAD, PATHANKOT, - 145001 PH :8264105000 . 9417900883.

1760. PATHANKOT VEHICLEADES PVT. LTD. (A701-A7-04), NEAR A. B. COLLEGE, PATAHANKOT - 145001 PH :9417900828 ; 9417900842.

PATIALA

1761. HIRA AUTOMOBILES LTD (6302-63-01), 13-B, FACTORY AREA, PATIALA - 147001 PH :2360131 2360562 9217048250

1762. HIRA AUTOMOBILES LTD (6302-63-04), C-20 & C-45, FOCAL POINT, PATIALA, PUNJAB - 147001 PH :2232377, 9217048234, 9217048250.

1763. HIRA AUTOMOBILES LTD (6302-63-07), D-1A, INDUSTRIAL FOCAL POINT, PATIALA (PUNJAB). - 147001

PH:2232295, 2232296, 9217048250.

1764. ATELIER AUTOMOBILES (6304-63-01), VILLAGE MITHUMAJRA, RAJPURA-PATIALA ROAD, NEAR CASABA RESORT, PATIALA - 147001 PH :75270001106 . 75270001111.

PATRAN

1765. HIRA AUTOMOBILES LTD (6302-V3-02), NARWANA ROAD, PATRAN, PUNJAB, - 147105 PH :244445. 245788. 9217048250.

PATTI

1766. JAYCEE MOTORS (BQA2-BOA-01), KHASRA NO. 64/19/2/1 KA 16/49 & KHASRA NO. 64/20 KA 29/94, NEAR RADHA SWAMI, TARN TARAN ROAD, VILLAGE - PATTI, DISTT.-TARN TARAN, PUNJAB. - 143416 PH :978-0138335.

PHAGWARA

1767. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (5C02-5C-01), PLOT NO-62, INDUSTRIAL AREA, NEAR JCT BRIDGE LUDHIANA - 141001 PH:9779166004.

PHILLAUR

1768. LOVELY AUTO (XU01-XU-01), OLD NAWANSHAHR ROAD CIVIL LINE, PHILLAUR, DISTRICT JALANDHAR - 144410 PH :9815069814.

RAIKOT

1769. GULZAR MOTORS PVT LTD (XT02-XT-01), BARNALA BY PASS ROAD, RAIKOT - 141109 PH '9814160099

RAJPURA

 HIRA AUTOWORLD LLP (HK02-HK-01), VILLAGE BADHAK, RAJPUR PATIALA ROAD, RAJPURA -140401
 PH :244881-84, 9217048437,9217048250.

RAMPURA PHUL

1771. TARA AUTOMOBILES (XR01-XR-01), RAMPURA -BARNALA ROAD, RAMPURA PHUL - 151103 PH:01651-266643.

RAYYA

1772. RISHABH FOURWHEELS PVT. LTD. (CAK1-CAK-01), NH-1, GT ROAD RAYYA, TEHSIL - BABA BAKALA, DISTRICT - AMRITSAR. -143112 PH. 9914708577.

ROPAR

1773. CM AUTOSALES PVT. LTD. (7K01-7K-01), CHANDIGARH ROPAR ROAD, ROPAR - 140001 PH:9915022802.

SAMANA

1774. HIRA AUTOMOBILES LTD (BFU1-BFU-01), KEWAT NO. 948/950, KHATUNI NO. 1427, KHASRA NO. 101/27(4-7), PATIALA SAMANA ROAD, SAMANA, DIST.-PATIALA, STATE PUNJAB. - 147101 PH :9217048236.

SANGRUR

1775. MAX AUTOMOBILES (G402-G4-01), DHURI ROAD, SANGRUR, - 148024 PH:01672-239627.

SHAHKOT

1776. LOVELY AUTOS (BHT1-BHT-01), PUBLIC SCHOOL ROAD, SHAHKOT, DISTRICT – JALANDHAR, PUNJAB. - 144702 PH:8437938811

SIRHIND

1777. HOSHIARPUR AUTOMOBILES (TF03-TF-01), KHEWAT KHATONI NO. 802/1049 & 821/1070 KHEWAT KHAS NO. 43/1/2/1 (1-0), BESIDE SBI BANK, BASSI ROAD, SIRHIND, TEHSIL AND DISTRICT – FATEHGARR JAHIB - 140406 PH :9815131766. 7527082471.

SULTANPUR LODHI

1778. MARWAHA AUTOS (A UNIT OF INDERJIT MARWAHA AUTOS PVT. LTD.) (ZY02-ZY-01), NEAR TALWADI BRIDGE, TALWANDI ROAD, SULTANPUR LODHI, DISTRICT -KAPURTHALA -144626 PH :9779166004.

TALWANDI BHAI

1779. BABA AUTOS (GMF1-GMF-01), FEROZEPUR ROAD, NEAR FUNISLAND, TALWANDI BHAI, DISTT. FEROZEPUR - 142050 PH:8872013002.

TALWANDI SABO

1780. TARA AUTOMOBILES (ON01-ON-01), TALWANDI RAMA MAIN ROAD, NEAR VILLAGE-JALJAL, RAMAMANDI,TALWANDI SABO, BHATINDA -1551302 PH:9646691047, 8437008666.

TALWARA

1781. HOSHIARPUR AUTOMOBILES (H402-LR-07), DAM ROAD, NEAR KALI MATA MANDIR, VILLAGE-NAGAR, TALWARA, PUNJAB - 144216 PH :9815131766, 9781842244.

TANDA

1782. HOSHIARPUR AUTOMOBILES (H402-DE-06), VILL-PULPUKHATA, MIANI ROAD, TANDA -144203 PH :9815131766. 8437430400.

TARAGARH

1783. PATHANKOT VEHICLEADES PVT. LTD. (BVC1-BVC-01), VILLAGE - RAHIMPUR, VPO-TARAGARH, TEHSIL & DISTT. PATHANKOT, HIMACHAL PRADESH - 143534 PH: 9988639963.

TARN TARAN

1784. JAYCEE MOTORS (BLP2-BLP-01), VILLAGE – KAKKA, KANDIALA, NEAR SANDHU PETROL PUMP, AMRITSAR ROAD, TARAN TARAN, PUNJAB - 143401 PH : 9780038039.

ZIRA

1785. BABA AUTOS (7C01-GK-02), FEROZEPUR ROAD, ZIRA - 142047 PH:8872013230.

ZIRAKPUR

1786. TRICITY AUTOS (9M01-9M-01), PATIALA HIGHWAY, VILLAGE - NABHA, ZIRAKPIR, PUNJAB - 140603 PH : 9988882330

RAJASHTHAN

JAIPUR

1787. AURIC MOTORS (1116-11-C1), COMMERCIAL PLOT NO. J4, COMMERCIAL BELT B, VT ROAD, NEW SANGANER ROAD, MANSAROVAR SCHEME, JAIPUR, RAJASTHAN 302020 - 302020 PH 9571105651.

RAJASTHAN

ABU ROAD

1788. NAVNEET MOTORS (OQ01-OQ-01), PLOT NO. E-26, RIICO AMBAJI INDUSTRIAL AREA, PALANPUR HIGHWAY, ABU ROAD DISTT. SIROHI - 307026 PH :99501 56579.

ACHROL

1789. KTL AUTOMOBILE PVT. LTD. (GKD1-GKD-01), #REF! - 303002 PH:7412077022.

AHORE

1790. AURIC MOTORS (SHN1-SHN-01), MADHOPURA, NEAR KARNAWATI HOSPITAL, AHORE, DISTRICT – JALORE, RAJASTHAN PIN CODE: 307029 - 307029 PH #RFF!

AJMEI

1791. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-01), SRINAGAR ROAD,AJMER (RAJASTHAN) - 305001 PH:9314955201.

1792. RELAN MOTORS (B203-B2-01), NEAR BIRLA WATER TANK, PARABATPURA BYEPASS, AJMER - 305001 PH :95876 87000. 84400 41027.

1793. RELAN MOTORS (B203-B2-02), F-243 RIICO INDUSTRIAL AREA, PALRA, AJMER - 305001 PH :95876 87000, 87400 16329.

1794. AJMER AUTO AGENCIES PVT. LTD. (B201-B2-05), KHASRA NO.343/2, 344, 345, 347 GHUGHRA GHATI, JAIPUR ROAD, AJMER. -305001 PH. 9314955201.

AKLERA

1795. BHATIA AND COMPANY (SGK1-SGK-01), NH-52, RAM NAGAR COLONY, AKLERA, JHALAWAR, PIN-326033, RAJASTHAN - 326033 PH:9057047891.

ALWAR

- 1796. MG MOTORS (F901-F9-01), MUKESH GENERAL FINANCE COMPANY, ROAD NO. 2, NEAR MEO BOARDING, ALWAR - 301001 PH :9001795520
- 1797. MG MOTORS (F901-F9-02), KHASRA NO.803/198, BHUGORE TIRAHA, NEAR ALWAR PUBLIC SCHOOL, JAIPUR ROAD, ALWAR - 301001 PH :9001795520.

ANOOPGARH

1798. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BFE1-BFE-01), PLOT NO. AMEDICAR CHARAHARA, RAILWAY STATION ROAD ANUPGARH (ANOOPGARH), DISTT SRI GANGANAGAR. - 335701 PH: 3982638516.

ANTA

1799. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTG2-CTG-01), KOTA-BARAN ROAD, ANTAH, DIST.-BARAN. -325502

PH:9414032859.

ASIND

1800. CHAMPION CARS (SID1-SID-01), DEV TOWERS, BEAWAR ROAD, ASIND, DISTRICT – BHILWARA, RAJASTHAN - 311301 - 311301 PH:7073461987.

BAGRU

 PREM MOTORS PVT. LTD. (US02-US-01), JAIPUR-AJMER HIGHWAY, BAGRU, DISTRICT-JAIPUR - 303007 PH :01414711118.8058411181.

BALESAR

1802. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CWO1-CWO-01), KHASRA NO. 2167 JODHPUR JAISALMER ROAD, VILL: BALESAR SATTA, TEH: BALESAR, DIST:- JODHPUR (RAJ)- 342203 PH:7412087344.

BALOTRA

1803. LMJ SERVICES LTD. (6502-9G-05), JODHPUR BALOTRA ROAD, BALOTRA, RAJASTHAN -344022 PH :8005898360

BANSUR

1804. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (BQP1-BQP-01), KOTPUTLI ROAD, NEAR SUBHASH CHOWK, BANSUR, RAJASTHAN - 301402 PH :8875005116.

BANSWARA

1805. NAVNEET MOTORS (X903-X9-01), NEAR J.C. MILL,OPPOSITE AKASHWANI,DAHOD ROAD,BANSWARA - 327001 PH:86023 83260.

BARAN

1806. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-PM-03), BESIDE OJHA METAL, ATRU ROAD, BARAN -325205 PH: 9413379013.

BARMER

- 1807. LMJ SERVICES LTD. (6502-SH-06), G-216, RIICO INDUSTRIAL AREA, BARMER 344001 PH :8005898360
- 1808. LMJ SERVICES LTD. (SH01-SH-01), NH# 68, OPP. SADAR THANA - 344001 PH :8005898360.

BASSI

1809. PREM MOTORS PVT. LTD. (VF02-VF-01), MOHAN PURA BASSI, JAIPUR, RAJASTHAN -303301 PH:01414711118.8058794151.

RAYTU

1810. LMJ SERVICES (SIT1-SIT-01), NH-8, NEAR JAGDAMBA PETROL PUMP, BAYTU - 344034 PH:8094011126.

RFAWAR

1811. RELAN MOTORS (FL03-FL-01), PLOT NO 1, INDIRA GANDHI UDYOGPURI, AJMER ROAD BEAWAR, RAJASTHAN. - 305202 PH 9587687000

BEGUN

1812. BHATIA & CO (BTD1-BTD-01), BHATIA & CO, (A UNIT OF BHATIA CORPORATION PVT LTD), IN FRONT OF GURUKUL, CHITTOR ROAD, BEGUN, TEHSIL – BEGUN, DISTRICT CHITTORGARH, 312023 - 312023 PH :95097 06827.

BEHROR

1813. MG MOTORS (FQ01-FQ-01), B-168, RIICO INDUSTRIAL AREA, PHASE-II, OPP. APEX TUBE, BEHROR, DISTT: ALWAR. - 301701 PH :9001795520.

BHADRA

1814. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIF1-BIF-01), CHAK NUMBER-8,BARANI, NEAR HISAR BYEPASS BHADRA -BALSAMAND ROAD ,BHADRA - 335501 PH -9166712222 ,9413311745.

BHARATPUR

1815. TM MOTORS PVT. LTD. (5J01-5J-01), BRIJ VIHAR COLONY, JMADARPUR ROAD, BHARATPUR, RAJASTHAN - 321001 PH 9251423392

BHAWANI MANDI

1816. SUWALKA MOTORS PVT LTD (SDB1-SDB-01), K.NO. 327 MANDAVI OPPOSITE SDM OFFICE JHALAWAR ROAD, BHAWANIMANDI,JHALAWAR- 326502, - 326502

BHILWARA

PH:9116178571.

- LOHIA AUTOMOBILES (E301-E3-01), AJMER ROAD, NEAR OCTROI POST, BHILWARA - 311001 PH: 82094 11856.
- 1818. CHAMPION CARS (UNIT OF PREM CARS PVT. LTD) (E302-E3-01), NEAR GRAM BHARTI, CHITTORGARH ROAD, BHILWARA, RAJASTHAN, - 311001 PH :7073461987.
- 1819. LOHIA AUTOMOBILES (E301-E3-03), PLOT NO. H-11, EVERGREEN TEXTILE PARK, RIICO INDUSTRIAL AREA, PUR ROAD, BHILWARA. -311001 PH :82094 11856.

BHINDER

1820. TECHNOY MOTORS INDIA PVT. LTD. (CBS1-CBS-01), NEAR RAILWAY STATION, SALUMBAR CHOURAHA, BHINDER -313603 PH 9901234056.

BHINMAL

1821. SHRI KRISHNA AUTOSALES PVT LTD (CQN1-CQN-01), KHASRA NO. 2281, KARADA CROSSING, BHINMAL, DISTRICT - JALORE, RAJASTHAN. PH :9610242790.

BHIWADI

- 1822. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-01), OPP. INDAG RUBBER,MAIN ROAD, BHIWADI - 301019 PH :9214794326,8875005116.
- 1823. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-02), F-458-C,RIICO,INDUSTRIAL AREA,BHIWADI -

PH:9214794326,8875005116.

1824. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-9H-04), KHASRA NO. 656/431, ALWAR ROAD, BHIWADI. - 301019 PH 9214794326.8875005116.

BIJAYNAGAR

1825. AJMER AUTO AGENCIES PVT LTD (GLF1-GLF-01), KHASRA NO 39, AJMER -BHILWARA HIGHWAY CITY -BIJAYNAGAR DISTRICT - AJMER ,RAJASTHAN - 305624 PH :8890902472.

BIJOLIA

1826. LOHIA AUTOMOBILES (E301-UA-02), R/O GOLDEN CORRIDOR, OPP. ASHOK LEYLAND W/S, CHITTOR-BIJOLIA HIGHWAY, BIJOLIA, DIST. -BHILWARA - 311602 PH :82094 11856.

BIKANER

- 1827. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-01), OPP. URMUL DAIRY PLANT, GANGANAGAR ROAD, BIKANER - 334004 PH: 1512253984, 9414138511.
- 1828. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-04), JAIPUR BYE PASS, BIKANER , - 334004
 - PH:1512230384,8875010507.
- 1829. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-71-05), OPP. AVYYAPPA TEMPLE, K. K. COLONY, BIKANER - 334003 PH:7014063193,9413311949.
- 1830. DUDI AUTOMOBILES (A UNIT OF DMAS AUTOMOBILES) (7102-71-01), KHASRA NO. 376/33, JAIPUR ROAD, NH-11, BIKANER, RAJASTHAN. - 334001 PH :8929834417

BILARA

1831. LMJ SERVICES LTD. (BZB1-BZB-01), BANGANGA MOD, JODHPUR ROAD, BILARA, RAJASTHAN -342602 PH: 8104698935.

BUNDI

1832. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PUT. LTD.) (6101-EF-02), SUMAN PLAZA, NEAR TEACHER'S COLONY, CHITTOR ROAD, OPPOSAITE ICICI ATM, BUNDI - 323001 PH: 9413353099.

CHAKSU

1833. K P AUTOMOTIVES PVT LTD (1104-JM-03), TONK ROAD, CHAKSU - 303901 PH:0141-4071111, 4071101,8696934973.

CHANDAN

1834. LMJ SERVICES LTD. (SHR1-SHR-01), JAISALMER ROAD, CHANDAN, DISTT JAISALMER, RAJASTHAN - 345031 PH:8094011126.

CHIRAWA

1835. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SY02-SY-01), NEAR PILANI CIRCLE, LOHARU ROAD, STATE HIGHWAY-8, CHIRAWA -333026 PH :01596-217163,7230081668.

CHITTORGARH

1836. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (K901-K9-01), PLOT NO. 1001/1-1002/1.NIMBAHERA ROAD,CHITTORGARH - 312001 PH:97854 61267.

CHOMU

1837. KTL AUTOMOBILES (HW02-HW-01), KHARSA NO.695, JAIPUR SIKAR BYPASS ROAD, CHOMU, RAJASTHAN. - 303702 PH :7412077034.

1838. SATNAM MOTORS (HW03-HW-01), NEAR CM CHOPRA HOSPITAL, JAIPUR ROAD, CHOMU, DISTRICT – JAIPUR, RAJASTHAN - 303702 PH :8302090000.

CHURU

1839. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (MD03-MD-01), NEAR DTO OFFICE, JAIPUR ROAD, CHURU - 331001 PH :8696543564

DATA RAMGARH

1840. JAMU AUTOMOBILES PVT LTD (CTQ1-CTQ-01), KHASRA NO. 1016/256, VILLAGE - RAMGARH, TEHSIL - DATAH RAMGARH, DIST.-SIKAR. -332703

PH:9799501048.

DAUSA

1841. VIPUL MOTORS PVT. LTD. (1102-FM-03), AGRA JAIPUR ROAD, DAUSA - 303303 PH:9672211333.

DEGANA

1842. SHRI MANGALAM (SDJ1-SDJ-01), NEAR NAGAUR FATAK, STATION ROAD, DEGANA -341512 PH :7230055955.

DEOLI

1843. K P AUTOMOTIVES PVT LTD (Z001-Z0-01), KOTA- JAIPUR HIGHWAY, NH-12, DEOLI -304804 PH: 8696925259.

DEVGARH

1844. LOHIA AUTOMOBILES (CUQ1-CUQ-01), NEAR KRISHI MANDI, KAMLIGHAT ROAD, TEHSIL – DEVGARH, DISTRICT – RAJSAMAND, RAJASTHAN. - 313331 PH: 8306009399.

DHARIYAWAD

1845. BHATIA & CO. (SMC1-SMC-01), PRATAPGARH ROAD, DHARIYAWAD, DIST. - PRATAPGARH, RAJASTHAN - 313605 - 313605 PH: 98287 46677.

DHOLPUR

1846. TM MOTORS PVT. LTD. (5K01-5K-01), TM MOTORS PVT. LTD., GT ROAD DHOLPUR, RAJASTHAN. - 328001 PH:8094777862.

DIDWANA

1847. SHRI MANGLAM AUTO PVT. LTD. (FT03-FT-01), DIDWANA BYPASS, MAIDASAR CHORAHA, DIDWANA - 341303 PH :7230055924

DUDU

1848. PREM MOTORS PVT. LTD. (BRY1-BRY-01), KHASRA NO.1107 & 1108, OPPOSITE POWER HOUSE SERVICE LANE, NH-8, DUDU. - 303008 PH :8058411181.

DUNGURPUR

1849. NAVNEET MOTORS (4902-GP-02), G-71, INDUSTRIAL AREA, DUNGARPUR - 314001 PH :94141 04833.

FALNA

1850. LMJ SERVICES LTD. (BBR1-BBR-01), OPPOSITE PRAKASH DINING HOTEL ,FALNA - 306116 PH #RFF!

FATEHNAGAR

1851. TECHNOY MOTORS INDIA PVT. LTD. (4903-SV-03), PLOT NO.15, FATENAGAR SANWAR ROAD, UDAIPUR-CHITTORGARH HIGHWAY NO.76, FATEHNAGAR-313205 DISTT. UDAIPUR - 313205 PH :9829793402.

GANGAPUR CITY

1852. PREM MOTORS PVT. LTD. (BUT1-BUT-01), KHASRA NO. 5854, 5858, 5860, 5861, VILLAGE UDAI KALAN, THE GANGAPUR CITY - 322201 PH :8058794122

GUDHAGORJI

1853. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGC1-CGC-01), BHORKI ROAD, GUDHAGORJI, DISTRICT – JHUNJHUNUN, RAJASTHAN. - 333022 PH :7412059848.

HANUMANGARH

1854. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (7101-87-03), JUNCTION TOWN ROAD,HANUMANGARH - 335512 PH :01552-231295,9166712222, 9413311745.

HINDAUN

1855. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (S002-S0-01), KHASRA NO. 737, VILLAGE – PATTI NARAINPUR, NEAR HANUMAN MANDIR, HINDAUN-MAHWA ROAD, HINDAUN. - 322230 PH : 7017024146 7017024146.

JAIPUR

1856. VIPUL MOTORS PVT. LTD. (1102-11-01), F-124A,MALVIYA INDUSTRIAL AREA,MALVIYA NAGAR,JAIPUR - 302017 PH:9269117654,8949686508.

- 1857. K P AUTOMOTIVES PVT LTD (1104-11-01), E-198, SANGANER INDUSTRIAL AREA,MANSAROVAR,JAIPUR - 302020 PH:0141-4071111, 4071101,6377203709,
- 1858. PREM MOTORS PVT. LTD. (1112-11-02), 12 13,SUDARSHANPURA INDUSTRIAL AREA, JAIPUR - 302006

6377203731

- PH :0141-4711111,8058703388, 8058794122. 859. SANGA AUTOMOBILES PVT. LTD. (1110-11-01), SECTOR 35, PRATAP NAGAR,SANGANER, JAIPUR - 302033 PH :9772210922
- 1860. VIPUL MOTORS PVT. LTD. (1102-11-05), 29, INDUSTRIAL AREA, JHOTWARA, JAIPUR -302012
 - PH:0141-3524203,9672211333.
- 1861. PREM MOTORS PVT. LTD. (1112-11-01), PLOT NO. E101/A, VKI, JAIPUR - 302039 PH:01414411123.8929409921.
- 1862. SATNAM MOTOCORP PVT. LTD. (1113-11-01), PLOT NO. E-524, SITAPURA INDUSTRIAL AREA, JAIPUR – 302 022, RAJASTHAN. - 302022 PH:1412771976.8302390000.
- 1863. KTL AUTOMOBILE PVT. LTD. (1115-11-01), PLOT NO. 13B, JHOTWARA INDUSTRIAL AREA, JAIPUR. - 302012 PH. 7412077022
- 1864. PREM MOTORS PVT. LTD. (1112-11-03), PLOT NO. B-12, MALVIYA NAGAR, JAIPUR. - 302017 PH:9358715550.8929409921.
- 1865. KTL AUTOMOBILES (1115-11-02), KHASRA NO 1210-1216/2959 , BHANKROTA , TEH SANGANER , DISTRICT JAIPUR. - 302026 PH :7412077007
- 1866. KTL AUTOMOBILES (1115-11-03), ORBIT MALL CIVIL LINES METRO STATION AJMER ROAD JAIPUR. - 302006 PH -7412077007
- 1867. K.P. AUTOMOTIVE (1104-11-G1), B-1, GOVIND MARG, ADARSH NAGAR, JAIPUR – 302004 -302004
- PH :9549656559.

 1868. KTL AUTOMOBILES (1115-11-04), CHOKDI HAWALI SHAHAR, SHIRKI SHAHAR, NEAR IDGAH, BILOCHOYAN MOHALLA, TRANSPORT NAGAR, DELHI ROAD, JAIPUR - 302002 - 302002 PH :9772/110922

JAISALMER

1869. LMJ SERVICES LTD. (5L01-5L-01), PLOT NO.36, 37, MAHESH REFUGEE COLONY, HDC SOCIETY, DABLA ROAD, JAISALMER (RAJASTHAN) -345001 PH : 8005898360

JAITARAN

 LMJ SERVICES LTD. (BNY1-BNY-01), KHASRA NO. 784, JAIPUR-JODHPUR BYE PASS ROAD, JAITARAN, DIST.-PALI. - 306302 PH 9269971266

JALORE

1871. SHRI KRISHNA AUTOSALES PVT LTD (VD01-VD-01), KHASRA NO. 6809/2616, 2623, INDUSTRIA AREA, JALORE-BHINMAL ROAD, JALORE - 343001 PH: 2973211613,9829203644.

JAMWA RAMGARH

1872. K P AUTOMOTIVES PVT LTD (BZL-1-01), KHASRA NUMBER -228/169,OPP UDAY AUTOMOBILES,JAIPUR ALWAR ROAD -JAMWA RAMGRAH. - 303109 PH :6377203709 : 6377203731.

JHADOL

1873. TECHNOY MOTORS (SKO1-SKO-01), KHASRA NO. 186/1, NH# 8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT, PIN-306104, RAJASTHAN - 306104 PH:7726809510.

JHALAWAR

1874. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-RV-02), OPP. BALAJI KI CHHATRI , KHEL CIRCULAR STADIUM, BUS STAND ROAD, JHALAWAR - 326001 PH :9414034728.

JHUNJHUNU

1875. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (FN03-FN-02), E1-2, AUTOMOBILES SERVICE SECTOR, RIICO INDUSTRIAL AREA, PHASE-2, SIKAR JAIPUR ROAD, JHUNJHUNU. -333001 PH :01592-250045.7412087489.

JOBNER

1876. PREM MOTORS PVT. LTD. (BRD1-BRD-01), KHASRA NO. 758 & 754, BABER WALON KI DHANI, JOBNER. TEHSIL – PHULERA, DISTRICT – JAIPUR, RAJASTHAN - 303328 PH :8058411181.

JODHPUR

- 1877. LMJ SERVICES LTD. (6502-65-01), PRATAP NAGAR, JODHPUR - 340002 PH:9950496202.
- 1878. LMJ SERVICES LTD. (6502-65-04), OPP TO RFC OFFICE,NEW POWER HOUSE ROAD,JODHPUR - 342003
- PH:8094011127. 879 SHRI KRISHNA AL
- 1879. SHRI KRISHNA AUTOSALES PVT LTD (6503-65-01), 32-A,HEAVY INDUSTRIAL AREA,NR FCI GODOWNS, JODHPUR - 342005 PH :2912748402,9001894669.

- 1880. LMJ SERVICES LTD. (6502-65-09), B-8,9,10, MARUDHAR INDUSTRIAL AREA, PHASE 1, BASNI, JODHPUR - 342008 PH :8094011147
- 1881. LMJ SERVICES LTD. (6502-65-0C), 21/1, PAL MAIN BALOTRA ROAD, NEAR D.P.S. CIRCLE, JODHPUR - 342002 PH: 7230057721.
- 1882. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (6504-65-01), C-62 BASNI INDUSTRIAL AREA, PHASE-1, JODHPUR - 342005 PH 7412059839
- 1883. LMJ SERVICES LTD. (6502-65-0D), PARSHWANATH COLONY, KAYLANA ROAD, JODHPUR. - 342 001 PH :8696916455
- 1884. LMJ SERVICES LTD. (5502-65-10), KHASRA NO. 3575, BANAR ROAD, OPPOSITE VIDHYA PUBLIC SCHOOL, JODHPUR, RAJASTHAN - 342 003 PH :7222002424.

KAPRAIN

1885. BHATTA & COMPANY (A UNIT OF BHATTA CORPORATION PVT. LTD.) (BGG1-BGG-01), MEGA HIGHWAY ROAD, NEAR PETROL PUMP, KAPRAIN DISTT. BUNDI - 323301 PH :9587894896.

KEKRI

1886. AJMER AUTO AGENCIES PVT. LTD. (B201-GZ-03), KOTA SAWAR ROAD, KEKRI -305404 PH: 9314955201.

ΚΗΔ.ΙΙΙWΔΙ Δ

1887. AURIC MOTORS (SJC1-SJC-01), DANTOR ROAD, KHAJUWALA, DIST. - BIKANER, RAJASTHAN. -3340323 PH 9982299866

KHANDAR

1888. PREM MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), SAWAI MADHOPUR-KHANDAR RD., KHANDAR, RAJASTHAN - 322025. - 322025 PH: 9058899960.

KHERLI

1889. MG MOTORS (BZE1-BZE-01), KHERLI KATHUMAR ROAD, VILLAGE KHERLI, DISTT. ALWAR, RAJASTHAN - 321606 PH:9001795520.

KHERWARA

1890. TECHNOY MOTORS (SEE1-SEE-01), OPP. ATITHI PALACE, VILLAGE BADLA, NH 8.KHERWARA, TEHSIL – KHERWARA, DISTRICT – UDAIPUR, RAJASTHAN PIN CODE: 313803 -313803 PH:7726809510.

KISHANGARH

1891. AJMER AUTO AGENCIES PVT LTD (TU01-TU-01), R K LINK ROAD, - 305802 PH:9314391011.

KISHANGARH BAS

1892. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (9H01-TU-03), KISHANGARH BIWADI HIGHWAY, NEAR KISHANGARH, DISTRICT ALWAR - 301405 PH :8875007753, 8875007753.

KOTA

- 1893. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-01), 13-16 B,INDUSTRIAL ESTATE, KOTA - 324007 PH: 9414085574.
- 1894. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6102-61-01), AUTO MOBILE ZONE, 6-11/12 INDUSTRIAL AREA, KOTA - 324005 PH 9001027933.
- 1895. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-04), 3(K),CHAMBAL INDUSTRIAL AREA,KOTA,RAJASTHAN - 324007 PH - 9414077682
- 1896. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-05), E-46, CHAMBAL INDUSTRIAL AREA, KOTA - 324007 PH :9414085574.
- 1897. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (6101-61-06), PLOT NO. E-222, ROAD NUMBER 5, INDRAPRASTHA INDUSTRIAL AREA, KOTA, RAJASTHAN. -324005 PH. 9116108613.
- 1898. SUWALKA MOTORS PVT. LTD. (6104-61-01), RIDDHI SIDDHI NAGAR, KUNHARI, BUNDI ROAD, KOTA, RAJASTHAN. - 324008 PH 9116178516.

KOTPUTLI

- 1899. PREM MOTORS PVT. LTD. (MH09-MH-01), NH-8, BUCHARA COLONY, OPP. SHAKTI VIHAR, KOTPUTLI, JAIPUR - 303108 PH :01414711118.8058411181.
- 1900. PREM MOTORS PVT. LTD. (MH09-MH-02), KHASRA NO- 636, KOTPUTLI, DIST. JAIPUR, RAJASTHAN - 303108 PH:01414711118.8058411181.

KUCHAMAN

1901. SHRI MANGLAM AUTO PVT. LTD. (VA02-VA-01), SUDHRSHAN NAGAR, BUDSU ROAD KHASRA NO.148 KUCHAMAN - 341508 PH. 7230055928.

LADNU

1902. SHRI MANGLAM AUTO PVT. LTD. (CUP1-CUP-01), KHASRA NO. 1011 SUJANGARH ROAD, LADNUN - 341206 PH:7412044506

LALSOT

1903. VIPUL MOTORS PVT. LTD. (BZF1-BZF-01), PLOT NO.22,23, KHASRA NO.1502-03, NARAYAN VIHAR, SAWAI MADHOPUR ROAD, LALSOT, RAJASTHAN - 303502 PH :9672211333.

LOSAL

1904. JAMU MOTORS (SMD1-SMD-01), LOSAL-SALASAR-DIDWANA ROAD, OPPOSITE SHIV MANDIR, WARD NO. 1, LOSAL, RAJASTHAN - 332025. - 332025 PH:9571959931.

LUNI

1905. LMJ SERVICES (SFD1-SFD-01), NEAR SBI BANK, SALAWAS ROAD, LUNI, TEHSIL – LUNI,DISTRICT – JODHPUR,RAJASTHAN PIN CODE: 342802 -342802 PH:8094011126.

MAHWA

1906. VIPUL MOTORS PVT. LTD. (BKZ1-BKZ-01), KHASRA NO.37/384, BHARATPUR ROAD BYE-PASS, NH.-11, MAHWA, DISTT. DAUSA (RAJASTHAN) - 321608 PH. 9872211333

MAKRANA

1907. SHRI MANGLAM AUTO PVT. LTD. (CFX1-CFX-01), MANGLANA ROAD, MAKRANA -341512 PH :7230055934.

MALPURA

1908. K P AUTOMOTIVES PVT LTD (BLB1-BLB-01), PLOT NO.07, SHRI KALYAN NAGAR COLONY, JAIPUR-KEKRI ROAD, MALPURA - 304502 PH :8898925262

MANDALGARH

1909. CHAMPION (SHA1-SHA-01), OPP. MODEL SCHOOL, BIJOLIA ROAD, MANDALGARH, DISTRICT – BHILWARA, PIN-311604, RAJASTHAN - 311604 PH -7073461987

MERTA

1910. SHRI MANGLAM MOTORS (NG03-NG-01), KHASRA NO.1679, NH89, MERTA - 341015 PH:9116007201.

NAGAUR

1911. SHRI MANGLAM AUTO PVT. LTD. (HL03-HL-01), KHASRA NO.1479/982 & 1478/83 BIKANER ROAD, NAGAUR - 341001 PH :9116008624.

NAINWA

1912. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTJ1-CTJ-01), UNIARA ROAD, OPP: PETROL PUMP, NAINWA, DIST. KOTA - 323801 PH 9413379001

NASIRABAD

1913. AJMER AUTO AGENCIES PVT. LTD. (B201-VB-04), CHAVANI BOARD NO:1613, HAWA CHAKKI, NASIRABAD ROAD, NASIRABAD, DISTT. AJMER - 305601 PH 9314955201

NATHDWARA

1914. LOHIA AUTOMOBILES (X201-TZ-02), NH-8, LAL BAG, NATHWARA, DISTRICT: RAJSAMAND -313301 PH:8306009399.

NAWALGARH

1915. AURIC MOTORS (SIE1-SIE-01), KHATA NO. 76, PUNIA KI DHANI, SIKAR ROAD, NAWALGARH, DISTRICT – JHUNJHUNU, RAJASTHAN PIN CODE: 333042 - 333042 PH: 9928720360.

NEEM KA THANA

1916. JAMU AUTOMOBILES PVT LTD (K701-TV-03), NEAR TOLL PLAZA, KOTPUTLI ROAD, NEEM KA THANA, SIKAR - 332713 PH 9529178046.

NEEMRANA

1917. FORTUNE CARS (A UNIT OF JYOTI AUTOMOBILES PVT LTD) (OP01-0P-01), F-42 & 42(B), PHASE-1, NEEMRANA, TEHSIL: BEHROR, DISTT. ALWAR - 301705 PH :9610715222, 9636139386.

NIMBAHERA

1918. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (CTH1-CTH-01), PLOT NO. 7-8, 33-34, 35-36, NIMBAHERA, DIST. -CHITTORGARH. - 312601 PH. 97854 61267.

NIWAI

1919. K P AUTOMOTIVES PVT LTD (BLA1-BLA-01), VANASTHALI CIRCLE, NEAR PRATEEK GAS AGENCY, TONK ROAD, NIWAI, DISTRICT – TONK. - 304021 PH:8696925262.

NOHAR

1920. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (VE02-VE-01), OPP. RAILWAY STATION, NOHAR, DISTRICT-HANUMANGARH - 335523 PH:0155-5221485,7412059821, 8875010541.

NOKHA

1921. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (1501-15-01), F-46, RIICO EXTENSION, NOKHA INDUSTRIAL AREA, NOKHA DISTT-BIKANER (RAJASTHAN) - 334803 PH :7412058805

PADAMPUR

1922. DUDI MOTORS (SGC1-SGC-01), NEAR BASANT PLACE, BHAGAT SINGH CHOWK, KARANPUR ROAD, PADAMPUR SRI GANGANAGAR 335041 335041

PH:8619215475.

PALI 1923.

1923. LMJ SERVICES LTD. (6502-J9-03), KHASRA NO. 771/1, JODHPUR PALI ROAD, PALI - 306401 PH :9269971266

PAOTA

1924. K P AUTOMOTIVES PVT LTD (BRH1-BRH-01), PATTA SANKHYA 31, MISAL SANKHYA 89, NEAR BAMORIA PETROL PUMP, NH-8, PAOTA, RAJASTHAN. - 303106 PH :6377203709. 6377203731.

PARRATSAR

1925. SRI MANGLAM (SKT1-SKT-01), NEAR IFL HOUSING FINANCE CO, KISHAN - 341512 PH :8740909096.

PARTAPUR

1926. NAVNEET MOTORS (BKY1-BKY-01), AAASHAPURA CHAURAHA, BHAGORA MOR, NEAR AAASHAPURA MANDIR, PARTAPUR ,RAJASATHAN - 327024 PH :94140 10306.

PHALODI

1927. SHRI KRISHNA AUTOSALES PVT LTD (BQ11-BQI-01), OPP. RCP GUEST HOUSE, NAGAUR KHICHAN ROAD, PHALODI, RAJASTHAN - 342301 PH :9116011958.

PHULERA

1928. KTL AUTOMOBILE PVT. LTD. (CUS1-CUS-01). KHASRA NO. 21 TO 24 AND PLOT NO. 189 IN RAM VIHAR COLONY, PANCHBHATI, PHULERA, DISTRICT - JAIPUR, RAJASTHAN - 303338 PH.7412077022.

PINDWARA

1929. NAVNEET MOTORS (CQP1-CQP-01), OPPOSITE WOLKEM FACTORY, SIROHI ROAD, PINDWARA, DIST. - SIROHI. - 307022 PH:86197 44672.

PIPAR

1930. LMJ SERVICES LTD. (BTI1-BTI-01), KHASRA NO. 1095, PIPAR CITY, DIST.-JODHPUR. - 342601 PH :9462616268.

PISANGAN

1931. AJMER AUTO AGENCIES PVT. LTD. (CTL1-CTL-01), PLOT NO.11, SHIV VIHAR COLONY, MANGLIYAWAS ROAD, PISANGAN, DISTRICT – AJMER, RAJASTHAN. - 305204 PH 9314955201.

POKHRAN

1932. LMJ SERVICES (BOA1-BOA-01), SUNDER NAGAR, TEHSIL POKHRAN, DISTRICT – JAISALMER, RAJASTHAN. - 345021 PH: 9610115660.

PRATAPGARH (RAJASTHAN)

1933. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD. (PN01-PN-01), CHITTORGARH-PRATAPGARH ROAD, GRAM-BAMBOTARA, PRATAPGARH (RAJASTHAN) - 312605 PH :9723 78682.

RAIPUR

1934. LMJ SERVICES LTD. (CRZ1-CRZ-01), NATIONAL HIGHWAY, PALI ROAD, VILLAGE – RAIPUR, DISTRICT – PALI. - 306304 PH 9269971266.

RAISINGHNAGAR

1935. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHK1-BHK-01), PLOT NO. H-2, INDUSTRIAL AREA, RAISINGHNAGAR, DISTRICT - SRIGANGANAGAR. - 335051 PH - 9987938516

RAJGARH

1936. MG MOTORS (IY01-IY-01), ALWAR SIKANDRA MEGA HIGHWAY, VILLAGE DIGAWARA, TEHSIL RAJGARH DISTT. ALWAR - 301408 PH 9001795520

1937. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (CGD1-CGD-01), NH-65, OPP. BHAGAT SINGH CHOWK, RAJGARH DISTT. CHURU, -331023 PH :9802261977.

RAJSAMAND

1938. LOHIA AUTOMOBILES (X201-X2-01), BHILWARA ROAD,KHANKROLI,RAJSAMAND DISTT, RAJSAMAND - 313301 PH :8306009399

RAMGANJMANDI

1939. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (BAZ1-BAZ-01), KHAIRABAD ROAD, KHASARA NO. 753, A.S.I COLONY, RAMGANJ MANDI - 326519 PH: 9414085790.

RANIWARA

1940. SHRI KRISHNA AUTOMOBILES (SGX1-SGX-01), NEAR RAILWAY GATE, BHINMAL ROAD ,RANIWARA, TEHSIL – RANIWARA, DISTRICT – JALORE, RAJASTHAN,PIN CODE: 343040 -343040 PH: 9928377669.

RATANGARH

1941. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BHJ1-BHJ-01), PLOT NO. AREA F-186 INDUSTRIAL AREA, RATANGARH. - 331 022 PH -7412087301

RAWATBHATA

1942. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (J001-JQ-01), NEAR INDIAN OIL PETROL PUMP, KOTA ROAD, RAWATBHATA, DIST. CHITTORGARH, RAJASTHAN. 323307 PH 3901027933.

RAWATSAR

1943. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (SDA1-SDA-01), CHAK 21-22,DWD,PLOT NUMBER - 10 & 11, RAWATSAR (RAJASTHAN). -335524 PH :9166712222, 9413311745.

REENGU

1944. JAMMU MOTORS (SGL1-SGL-01), REENGUS HIGHWAY, REENGUS DISTT. SIKAR -332404 -332404 PH :9785030973.

RENWAL MANJHI

1945. PREM MOTORS PVT. LTD. (GKZ1-GKZ-01), KHASRA NUMBER 2286/110, OPP ROHINI NAGAR 1 JAIPUR BHILWARA HIGHWAY ,RENWAL,TEHSIL PHAGI JAIPUR ,RAJASTHAN (303904) - 303904 PH :01414711118,9928494441.

REVDAR

1946. TECHNOY MOTORS INDIA PVT. LTD. (CRY1-CRY-01), OPP. TIRUPATI PETROL PUMP, KAROTI ROAD, REVDAR, DISTT. SIROHI, RAJASTHAN. - 307514 PH. 9530396882

SAGWARA

1947. TECHNOY MOTORS INDIA PVT. LTD. (CK01-CK-01), BANSWARA ROAD, CHUNGINAKA, NR. CENTRAL JAIL, SAGWARA, DUNGARPUR DISTT., RAJASTHAN - 314025 PH: 9894970143.

SALUMBAR

1948. NAVNEET MOTORS (BZH1-BZH-01), GANESH GHATI, BANSWARA ROAD, SALUMBAR, DISTRICT – UDAIPUR. - 313027 PH: 76652 01980.

SAMBHAR

1949. KTL AUTOMOBILE PVT. LTD. (CVD1-CVD-01), PLOT NUMBER -C1 NEAR SHAKUMARI PG COLLEGE , PHULERA ROAD , SAMBHAR 303604 -303604 PH :7412077022.

SANCHORE

1950. SHRI KRISHNA AUTOSALES PVT LTD (GY01-GY-01), PLOT NO. 217, KHASRA NO. 844, 865, 867, MANMOHAN SINGH PARK, NH-15, BARMER ROAD, SANCHORE, DIST.-JALORE. -343041 PH :9636224546.

SANGARIA

1951. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (GKK1-GKK-01), HANUMANGARH ROAD NEAR KARMA PETROL PUMP - 335035 PH :7412059827.

SANGOD

1952. BHATIA & COMPANY (A UNIT OF BHATIA CORPORATION PVT. LTD.) (GLG1-GLG-01), KHASRA NO 1637, SANGOD BAPAPAR MAIN ROAD, SANGOD - 325601 PH 19251641358.

SARDARSHAHAR

1953. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BID1-BID-01), KHASRA NO.134, MOTOR MARKET, RATANGARH SARDARSHAHAR ROAD, SARDARSHAHAR DISTT. CHURU, RAJASTHAN -331403 PH 9799833995.

SAWAI MADHOPUR

1954. PREM MOTORS PVT. LTD. (FY03-FY-01), PLOT NO.14, RIICO INDUSTRIAL AREA, KHERDA, SAWAI MADHOPUR - 322001 PH :014147111118.9358725409.

SAYALA

1955. AURIC MOTORS (SHM1-SHM-01), NEAR PETROL PUMP, HANUMAN MANDIR SOUTH STYLE, MAIN ROAD SAYALA, SAYALA TEHSIL – SAYALA, DISTRICT – JALORE, RAJASTHAN PIN CODE: 343022 - 343022 PH: 9460739993.

SHAHPURA

1956. K P AUTOMOTIVES PVT LTD (1104-NH-05), VILLAGE RAJPURA, GRAM PANCHAYAT BIDARA,NH-8, SHAHPURA - 303103 PH :0141-4071111, 4071101,8696934964, 9358220012.

1957. LOHIA AUTOMOBILES (CCP1-CCP-01), OPPOSITE LIC OFFICE, BHILWARA ROAD, SHAHPURA DISTT. BHILWARA - 311404 PH:7568378555,9462979238.

SHEO

1958. LMJ SERVICES LTD. (SD01-SD0-01), NEAR RIDDI SIDDHI HOTEL, OPPOSITE HP PETROL PUMP, TEH SHEO, DISTT – BARMER -335521 PH:80940111144.

SIKAR

1959. JAMU AUTOMOBILES PVT LTD (K701-K7-01), F-54,,JAIPUR ROAD (NH-11),SIKAR - 332001 PH :9057400761.

SIROHI

1960. NAVNEET MOTORS (4902-LK-03), PLOT NO. 8,BHADRANAGAR NAGAR, ANADRA ROAD, SIROHI - 307001 PH - 9166261788

SIVANA

1961. LMJ SERVICES LTD. (CCO1-CCO-01), BALOTRA ROAD, SIWANA, DISTRICT - JODHPUR, RAJASHTHAN. - 344044 PH :8005898360.

SOJAT

1962. LMJ SERVICES LTD. (BWI1-BWI-01), KHASRA NO. – 186/1, NH-8, NEAR ASHOK LEYLAND WORKSHOP, SARDARPURA, SOJAT , RAJASTHAN - 306104 PH :9269971266.

SRI DUNGARGARH

1963. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BIG1-BIG-01), 1563/1273, NH-11, MOMASAR BASS, DUNGARGARH, DISTRICT -BIKANER, RAJASTHAN. - 331803 PH: 39414138511.

SRI KARANPUR

1964. AURIC MOTORS (SDL1-SDL-1), PADAMPUR ROAD, NEAR DHAN MANDI, SRI KARANPUR, TEHSIL – SRI KARANPUR, DISTRICT – SRI GANGANAGAR, RAJASTHAN, PIN CODE: 335073 - 322243 PH:8875088998.

SRI MADHOPUR

1965. JAMU AUTOMOBILES PVT LTD (BZD1-BZD-01), WARD NO.4, RINGUS ROAD, SRI MADHOPUR DISTT. SIKAR. - 332715 PH :9672822166.

SRIGANGANAGAR

1966. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-01), NEW AUTOMOBILE MARKET, SURATGARH-HANUMANGARH ROAD, SRIGANGANAGAR - 335001 PH: 0154-2465226,7412059837.

1967. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-U2-03), CHAK 1G CHOTI, NH15, SRIGANGANAGAR, RAJASTHAN - 335001 PH :8875911503.

SUJANGARH

1968. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (BRB1-BRB-01), KHASRA NO.459/333, SALASAR ROAD, NEAR ANAJ MANDI, SUJANGARH, DISTT. CHURU - 331507 PH-8875011561.

SULTANPUR

1969. SUWALKA MOTORS PRIVATE LIMITED (GKY1-GKY-01), KHASRA NUMBER 485, NEAR PETROL PUMP, SULTANPUR ROAD, SULTANPUR, DISTT KOTA - 325204 PH 9116178594

SUMERPUR

1970. LMJ SERVICES LTD. (6502-VC-08), G-14 JAKHAMATA INDUSTRIAL AREA, OPP. DASHEREA GROUND, SUMERPUR - 306902 PH:8094002633.

SURATGARH

1971. AURIC MOTORS (A UNIT OF AUDI MOTORS PVT LTD) (U201-LG-02), OPP. RELIANCE PETROL PUMP,NH-15, SURATGARH - 335804 PH :8875012667.

TONK

1972. K P AUTOMOTIVES PVT LTD (GM01-GM-01), F-94, RIICO INDUSTRIAL AREA, TONK , RAJASTHAN - 304001 PH:9549651972.

TUNGA

1973. PREM MOTORS (SMB1-SMB-01), VILLAGE GWALANI, BASSI-LALSOT ROAD, TUNGA, TEHSIL- BASSI, JAIPUR - 303302 - 303302 PH: 8058998123.

UDAIPUR

1974. NAVNEET MOTORS (4901-49-01), 7 CITY STATION ROAD, UDAIPUR - 313001 PH:90017 58531.

1975. NAVNEET MOTORS (4902-49-01), S-140,MADRI INDUSTRIAL AREA,OPP. BSNL OFFICE, UDAIPUR - 313002 PH -95888 86349

1976. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-02), NH-8, GOVERDHAN VILLAS, DEVALI, NEAR JEEVAN TARA RESORT, UDAIPUR - 313002 PH: 9414165429.

1977. TECHNOY MOTORS INDIA PVT. LTD. (4903-49-04), KHASRA NO. 546, 547, 554 AND 555, NEAR CHITRAKOOT NAGAR, OPP. BHIRAVGARH HOTEL, SUKHER, TEHSIL – BADGAON, DUAIPUR, RAJASTHAN. - 313001 PH 9530336896

VIRATNAGAR

1978. K.P. AUTOMOTIVES PVT. LTD. (SCB1-SCB-01), KHASRA NUMBER 1156, OPP HOTEL GULMOHAR "JAIPUR ROAD ,VIRATNAGAR, DISTT JAIPUR - 303102 PH :0141-4071111, 4071101, 9358220012.

SIKKIM

GANGTOK

1979. ENTEL MOTORS (B901-B9-01), 6TH MILE, P.O.TADONG, GANGTOK, SIKKIM - 737102 PH:9933031828 9933032059.

JORTHANG

1980. ENTEL MOTORS (B901-B9-02), PIPALEY ROHTAK, NEAR JNU SCHOOL, WEST SIKKIM, JORTHANG - 737121 PH :9733164882 933019934

TAMIL NADU

ALANDURAI

1981. AADHI CARS PVT. LTD. (CTO1-CTO-01), NO.69/1 A. SIRUVANI MAIN ROAD, URIPALLAM PUDHUR, ALANDURAI, COIMBATORE (TAMIL NADU) -641101 PH 8754045816

ALANGULAM

1982. AADHI CARS PVT. LTD. (SJF1-SJF-01), SURVEY NO. 495/7, TIRUNELVELI - TENKASI ROAD, ALANGULAM, TIRUNELVELI DISTRICT, TN -627851 PH :8754044143.

AMBASAMUNDRAM (AMBAI)

1983. AADHI CARS PVT. LTD. (BXT1-BXT-01), DOOR NO. 2/253, SURVEY NO. 104/2, RTO OFFICE ROAD, VILLAGE - VAGAIKULAM, AMBASAMUNDRAM. - 627 401 PH.739718858

ANAMALAI

1984. ABT (CHE1-CHE-01), SITE NO. 6/12, NEAR ABT SAMUGA KOODAM, SETHUMADAI ROAD, ANAMALAI, COIMBATORE DISTRICT, TAMILNADU - 642 104 PH:9788174244.

ANNUR

1985. JAIKRISHNAA AUTOSALES PVT. LTD. (DN01-DN-01), SF NO.266/1B, OTTRAPALAYAM VILLAGE, OPP. TO KG SCHOOL, ANNUR, COIMBATORE (DIST), TAMILNADU -641653 PH :9788850733.

ANTHIYUR

1986. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUX1-CUX-01), SURVEY NO.49514, OLD NO.724B, KANCHI THOTTI THOTTAM, BHAVANI MAIN ROAD,ANTHIYUR. - 638501 PH :8754086777.

ARAKKONAM

1987. GANESH CARS PVT. LTD. (BKQ1-BKQ-01), SURVEY NO. 556A/3, VILLAGE – ICHIPUDHUR, TALUKA – ARAKKONAM, VELLORE. - 631003 PH :9842345399.

ARIYALUR

1988. PILLAI & SONS MOTOR CO. (EB01-EB-01), NO.1/1, NEAR ULAVAR SANTHAI, JAYAMKONDAM ROAD, ARIYALUR (TAMIL NADU). - 621704 PH :04329-228300. 9442281302.

ARNI

1989. GANESH CARS PVT. LTD. (BKP1-BKP-01), DOOR NO. 1151/3, VELLORE MAIN ROAD, OPPOSITE TO HERO MOTORS SHOWROOM, RATNAMANGALAM BUS STOP, ARNI, THIRUVANAMALAI, TAMIL NADU. - 632301 PH :9365553266.

ARUPPUKKOTTAI

1990. ASIR AUTOMOBILES PYT LTD (CWF1-CWF-01), SURVEY NO. 205/1, 5/5C, NEHRU NAGAR, ARUPPUKKOTTAI TO MADURAI BYPASS ROAD, ARUPPUKKOTTAI, DIST.-VIRUDHUNAGAR. - 626 101 PH :9944059911.

ATTUR

 S.M.CAR PVT. LTD. (QT02-QT-01), SF NO. 351/10A, SALEM TO CHENNAI BY PASS ROAD, APPAMASAMDURAM, ATTUR, SALEM. - 636108 PH.:7094440057.

AVADI

1992. VISHNU CARS PVT. LTD. (5P01-5P-01), SURVEY NO. 146, 147/1F & 147/G, NO. 17 VILLAGE – KAVARAPALAYAM, CTH ROAD, AVADI, DISTRICT – THIRUVALLUR, CHENNAI, TAMIL NADU - 600054 PH: 7338888021, 7358024470

AVINASHI

1993. SHASHTI CAR PVT LTD (CLK1-CLK-01), SURVEY NO. 373/1E, THEEKU THOTTAM, NALIGOUNDANPALAYAM, PALANGARAI, KUPOUDAMPALAYAM POST, NH ROAD, AVINASHI EAST, TIRUPPUR DISTRICT, TAMILNADU - 641654 PH 9942903319.

BHAVANI

1994. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-IG-05), NO.5/1072, LAKSHMI NAGAR, NH-47, VASAVI COLLEGE (P.O.), BHAVANI, ERODE (DIST), TAMIL NADU. - 638316 PH-967388777

CHENGALPETTU

- 1995. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-01), PLOT NO. 9811, PULIPAKKAM VILLAGE, CHENGALPETTU, DISTRICT-KACHEEPURAM, TAMIL NADU. -603002 PH: 7299057387.
- 1996. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (BBS1-BBS-02), DOOR NO. 41, GST ROAD, PULIPAKKAM, CHANGELPET, TAMILNADU -603202 PH:7299057387.

CHENGAM

1997. GANESH CARS PVT. LTD. (BUP1-BUP-01), SURVEY NO. 293/3A, 3A1,VILLAGE -THUKAPETTAI, CHENGAM, DIST. -TIRUVANNAMALAI. - 606 701 PH : 730736589

CHENNAI

- 1998. ABT LIMITED (1401-14-01), 102, MOUNT ROAD, GUINDY, CHENNAI - 600032 PH :044-42254544, 42254554.
- 1999. KHIVRAJ MOTORS PVT LTD. (1404-14-01), 623 MOUNT ROAD, CHENNAI - 600006 PH:9043014530.
- CARS INDIA PVT. LTD. (1403-14-01), 16 & 17 INDUSTRIAL ESTATE, AMBATTUR, CHENNAI -600058 PH: 9952000089.
- CARS INDIA PVT. LTD. (1403-14-02), NO.17, LATTICE BRIDGE ROAD, ADYAR, CHENNAI -600020 PH:044-24462020.
- 2002. POPULAR VEHICLES & SERVICES LTD. (1410-14-02), OLD NO.155, NEW NO.123, PONRANJITHAM COMPLEX, MEDAVAKKAM MAIN ROAD, NEAR BUS TERMINUS, KEEKATTALIA, CHENNAI - 600117 PH : 9176906334. 9176906335. 9176906336.
- 2003. ABT LIMITED (1401-14-05), A/A2, BHARANI STUDIO COMPLEX, DR. BHANUMATHI KRISHNA ROAD,22, ARCOT ROAD, SALIGRAMMAM, CHENNAI - 600093 PH :044-23650488, 23650490.
- 2004. ABT LIMITED (1401-14-06), NO. 1 & 2, VASANTHA PRESS,ROAD, OPPOSITE MALAR HOSPITAL, ADYAR, CHENNAI - 600020 PH :044-24465814 , 24465815.
- 2005. CARS INDIA PVT. LTD. (1403-14-03), 4/321, OLD MAHABALIKPURAM RD., KOTTIVAKKAM, CHENNAI - 600040 PH: 044-24540182 (43590913.

- 2006. POPULAR VEHICLES & SERVICES LTD. (1410-14-01), NO.11, ARUNACHALAM ROAD, SALIGRAMAM, CHENNAI - 600093 PH:9282405819, 9282348331, 8939915206.
- 2007. ABT LIMITED (1401-14-07), NO. 422, KOLAPERUMAL SCHOOL STREET, POONMA MALLE HIGH ROAD, CHENNAI - 600106 PH :044-42267628/604.
- 2008. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-14-01), 5,THIRUMURUGAN ST, KOYAMBEDU, CHENNAI - 600107
- 2009. ABT LIMITED (1411-14-01), 29, WALLES ROAD, OPP. ALBERT THEATER, EGMORE, AMBATTUR, CHENNAI - 600058 PH :044-42281707 / 714 / 719 / 720 / 721 / 737/.
- 2010. CARS INDIA PVT. LTD. (1403-FP-04), NO.503, G.N.T. ROAD, REDHILLS, CHENNAI - 600066 PH :9952000078
- VISHNU CARS PVT. LTD. (1427-14-02), 176/1, LUZ CHURCH ROAD, NEAR KAMADHENU THEATRE MYLAPORE, CHENNAI - 600004 PH: 0427-24661973/74/75.
- 2012. VISHNU CARS PVT. LTD. (1427-14-01), NO. 91, GST ROAD, ALWITONE ESTATE, BEHIND LAXMI THEATRE, PALLAVARAM, CHENNAI - 600043 PH :044-66813729/7338888000.
- POPULAR VEHICLES & SERVICES LTD. (1410-14-03), NO. 3, 200 RING ROAD, RETTERI JUNCTION, RETTERI, CHENNAI - 600099 PH: 7448814776/23/33
- 2014. CARS INDIA PVT. LTD. (1403-14-05), PLOT NO.-80, BABU JAGAGEVAN RAM STREET, GERUGAMBAKKAM, CHENNAI - 600112 PH - 995200072
- 2015. KHIVRAJ MOTORS PVT LTD. (1404-14-03), SURVEY NO. A1& A2, SIDCO INDUSTRIAL ESTATE, GUINDY, CHENNAI - 600032 PH :799971978
- 2016. ABT LIMITED (1401-14-0D), NO 2/170, ECR ROAD, INJAMBAKKAM, CHENNAI TAMIL NADU. -600041 PH :044-24490584 / 585 /586.
- 2017. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-01), PLOT NO.1,2,3 & 4, SURVEY NO.91/2, B1, A2 & B, NEELANKARAI, EAST COAST ROAD, CHENNAI - 600115 PH.7401211553.
- 2018. RAJALAKSHMI CARS PVT. LTD. (1486-14-01), OLD DOOR NO.69, NEW DOOR NO.20,GRAND NELLORE TRUNK ROAD, MADHAVARAM, CHENNAI. - 600060 PH: 8939995454/8939995404.
- 2019. KHIVRAJ MOTORS PVT LTD. (1480-14-02), PLOT NO.119 & 120, ELECTRICAL & ELECTRONICS INDUSTRIAL ESTATE, PERUNGUDI, CHENNAI -600096 PH :98414 23569.

- 2020. ABT LIMITED (1401-14-0E), NO. 1/132, RAJEEV GANDHI SALAI, SHOLINGANALLUR, DISTRICT – CHENNAI, TAMIL NADU. - 600119 PH :044-24502185 / 87 / 88 / 89.
- 2021. VISHNU CARS PVT. LTD. (1427-14-03), 4/13 LOYAL GARDEN, KALAHATHAMMAN KOVIL STREET, RAMAPURAM, CHENNAI, TAMIL NADU. - 600089
- PH :8754440002/ 9677244332.
 2022. VISHNU CARS PVT. LTD. (1487-14-01), NO.203
 TO 206 MOUNT POONAMALLE ROAD,
 KATTUPAKKAM, CHENNAI 600056
 PH :9677127432
- 2023. VISHNU CARS PVT. LTD. (1487-14-02), NO.120, MAMBAKKAM MAIN ROAD, MEDAVAKKAM, CHENNAI - 600100 PH :9840929994/ 9840944478.
- 2024. VISHNU CARS PVT. LTD. (1427-14-04), NEW S. NO. 314/1B1A, PALLAVARAM – THORAIPAKKAM RADIAL ROAD, NEAR OLD CHETTINADU CEMENT GOWDOWN, KEELAKATTALAI, CHENNAI. - 600117 PH :9940057775.
- 2025. VISHNU CARS PVT. LTD. (1427-14-06), PLOT NO. 4, MORISON 4 STREET, ALANDUR, CHENNAI. -600016 PH 1044-45500293
- 2026. RAJALAKSHMI CARS PVT. LTD. (1486-14-02), OLD NO. 27, NEW NO. 22A, ALAPAKKAM MAIN ROAD, MADURAVOYAL, CHENNAI. - 600095 PH 9841427572/9500125083
- 2027. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (1493-144-03), PLOT NO. G30, 3RD MAIN ROAD, 9TH STREET, AMBATTUR INDUSTRIAL ESTATE, DIAGONALLY TO TELEPHONE EXCHANGE, CHENNAI. - 600058 PH:7305087033.
- 2028. POPULAR VEHICLES AND SERVICES LTD (1410-14-06), PLOT NO. 10, NEW SURVEY NO. 88/1A1, 88/1C, 88/1B & 88/2B, NOOMBAL MAIN ROAD, VANAKARAM, CHENNAI. - 600 077 PH: 044-61343434, 46490006/9.
- 2029. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (1484-14-02), PLOT NO. L-1 SIDCO INDUSTRIAL ESTATE, VILLIVAKKAM, CHENNAI, TAMIL NADU. - 600 049. PH: 9841742926.
- 2030. VISHNU CARS PVT. LTD. (1427-14-07), SURVEY NO. 19142, 83/18, DOOR NO. 113, NEAR PARIMALAM THEATER, KUNDRATHUR MAIN ROAD, MANNADY THALAI, NALLUR, SAMBA THALAI, MOONRAMKATTALAI VILLAGE, ONDI COLONY, KUNDRATHUR, CHENNAI. 600069 PH :95000 82346.

- 2031. VISHNU CARS PVT. LTD. (1427-14-08). SURVEY NO. 62/2B, DOOR NO. 1/63, AGARAM MAIN ROAD, THIRUVANCHERRY VILLAGE, TAMBARAM TALUK, SELAIYUR, KANCHIPURAM DIST., CHENNAI, TAMIL NADU. - 600 073 PH :8056260022.
- 2032. ABT LIMITED (1401-14-10), S. NO: 32/2, NANDAMBAKKAM, PADMINI GARDEN, CHENNAI - 600089, TN.. - 600089 PH: 044-22320161, 8220011558.

CHEYYAR

2033. GANESH CARS PVT. LTD. (BUD1-BUD-01), NO.16, KANCHEEPURAM ROAD, CHEYYAR, TIRUVANNAMALAI DISTT. - 604407 PH. 9787669339.

CHIDAMBARAM

2034. VISHNU CARS PVT. LTD. (CPK1-CPK-01). SURVEY NO. 102/2 & 102/5. BHUVANAGIRI MAIN ROAD, KEERAPALAYAM, CHIDAMBARAM TOWN, CUDDALORE, TAMIL NADU. - 608 602 PH. 1041-44241347/358004555.

COIMBATORE

- 2035. ABT LIMITED (4101-41-06), 744, PULIYAKULAM ROAD, P.N. PALAYAM, COIMBATORE - 641037 PH :9944400987
- 2036. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-01), IYER HOSPITAL PREMISES, TRICHY ROAD, COIMBATORE - 641005 PH :8220862666.
- 2037. ABT LIMITED (4101-41-05), LAKSHMI THEATRE BUILDING, T.S. NO. 1199/2, TS WARD NO. 3, KEMPATTY COLONY, SOUTH UKKADAM, COIMBATORE - 641001 PH: 044-4232660, 4232666.
- 2038. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-03), 555, NSR ROAD, SAIBABA COLONY, COIMBATORE - 641011 PH :9047055667.
- 2039. ABT LIMITED (4101-41-08), 15/55-C, ALAGESAN ROAD (EAST), METTUPALAYAM ROAD, COIMBATORE - 641043 PH :96009 66056.
- 2040. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-01), 860-C88/62-D, METTUPALAYAM ROAD, G.N.MILLS POST, NEARJOHNBOSCO CHURCH,COIMBATORE - 641029 PH: 044-4519140.
- 2041. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-07), NO 44, KANNUSAMY GOUNDER STREET, OORGOUNDER THOTTAM, SANGANUR, COIMBATORE - 641027 PH :9655219900.
- 2042. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-08), SF-94, SATHY MAIN ROAD, VISWASAPURAM, SARAVANNAMPATTI, COIMBATORE, - 641013 PH :985897775.

- 2043. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-41-02), DOOR NO. 48, KAMARAJAR ROAD, LAKSHMIPURAM, PEELAMEDU, COIMBATORE, TAMIL NADU - 641004 PH 1022-283920
- 2044. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0D), 98/1 VILANKURICHI MAIN ROAD, THANEER PANDAL ROAD, COIMBATORE -641004 PH 9655345775
- 2045. AADHI CARS PVT. LTD. (4108-41-01), SURVEY NO.469/2,DOOR NO: 46-2,SATHY MAIN ROAD, RAMAKRISHNAPURAM, GANAPATHY, COIMBATORE - 641035 PH :0422-4000600.
- 2046. ABT LIMITED (4101-41-0D), 36-A GANDHI NAGAR, SUNDARAPURAM, COIMBATORE (DIST) COIMBATORE - 641024 PH : 78457 74069
- 2047. AADHI CARS PVT. LTD. (4108-41-02), NEAR KOVAI MEDICAL CENTRE & HOSPITAL, AVINASHI ROAD, CIVIL AERODROME POST, CHINNIYAMPALAYAM, COIMBATORE - 641004 PH: 0422-3007701.
- 2048. AADHI CARS PVT. LTD. (4108-41-03), NO.71, OLD SRIRAM THEATRE COMPLEX, MARUDHA MALAI MAIN ROAD, VADAVALLI, COIMBATORE - 641041 PH :0422-3000201
- 2049. AADHI CARS PVT. LTD. (4108-41-04), PLOT NO.295, RADHA RANI THEATER COMPLEX, NEAR JAYASHANTHI THEATER, TRICHY ROAD, ONDIPUDUR, COIMBATORE. - 641005 PH -0422-4000777
- 2050. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-41-0E), PLOT NO. 210, PALAKAD ROAD, BK PUDUR, COIMBATORE, TAMIL NADU. -641008 PH 10422-2251225
- 2051. AADHI CARS PVT. LTD. (4108-41-06), SF NO. 14/78-A, RENUKA SHELTERS, VILANURICHI MAIN ROAD, KALAPATTI, COIMBATORE, TAMIL NADU-641048. 641 006 PH :8754045840
- 2052. SREE SARADHAMBAL AUTOMOBILES PVT. LTD. (4103-41-11), PLOT NO. 1, RAJA STREET, KALLIMADAI, NANJAPPA NAGAR, COIMBATORE, TAMIL NADU - 641005 PH :9344870035.

COONOOR

2053. SREE SARADHAMBAL AUTOMOBILES PVT LTD (3C01-3G-01), 78 E, BRINDAVAN SCHOOL ROAD, CONOOR, NILGRIS DIST- TN - 643102 PH :95852 77775.

CUDDALORE

2054. ABT LIMITED (5Q01-5Q-01), K. V. SUBRAMANIAM NAGAR, CHIDAMBARAM MAIN ROAD, CUDDALORE O. T - 607003 PH:04142-224567. 2055. VISHNU CARS PVT. LTD. (5Q02-5Q-01), SURVEY NO. 35/8, 35/8A, 35/21, 35/6, 35/6A1A, 35/20, VILLAGE - PERIYA KANANGAKUPPAM, CUDDALORE - 607 001 PH. 7338884131.

CUMBUM

2056. MEENAKSHI AUTO ZONE PVT. LTD. (CJS1-CJS-01), PATTA NO. 4388, SURVEY NO. 1003/2 & 1003, VILLAGE - UTHAMAPURAM, SUB DIST.-CUMBUM, TAMIL NADU. - 625516 PH :9940094881

DEVAKOTTAI

2057. SIVA AUTOMOTIVE TRADING PVT LTD (GKV1-GKV-01), SURVEY NO. 5/1A, MULL IGUNDU (SOMANENTHAL VILLAGE), DEVAKOTTAI TALUK, SIVAGANGAI DISTRICT, TAMILNADU - 630 303 PH :7094688870.

DHARAPURAM

2058. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-QN-04), OPP. TO ANJANEYAR TEMPLE, NEAR FIVE CORNER, MADURAI ROAD, DHARAPURAM - 638656 PH :9897550777.

DHARMAPURI

2059. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-5R-02), NEAR COLLECTOR BUNGALOW, OLD HOSUR ROAD, JETTIHALLI (PO), DHARMAPURI, TAMILNADU - 636807 PH-9750938892 9 159008622 D

DINDIGUL

2060. PLA MOTORS (S401-S4-01), NO. 5, TRICHY MADURAI BY PASS ROAD, NH-45, DINDIGUL -624001 PH :7010075200.

EDAYARPALAYAM, COIMBATORE

2061. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CJK1-CJK-01), SITE NO. 2, SY. NO. 404/1A1, THADAGAM ROAD, TVS NAGAR, EDAYARPALAYAM, COIMBATORE. - 641025 PH :9047081914.

ERODE

- 2062. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-01), 23/1, PERUND, URAI ROAD, ERODE, - 638011 PH:9677987777.
- 2063. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-H7-06), SURVEY NO. 1363/3, 1363/5, 1363/6, BEHIND MANIKAVASAKAR COLONY BUS STOP, OPPOSITE TO CANARA BANK, KARUR BYPASS ROAD, SOLAR, ERODE. - 638 002 PH:6385005777.

- 2064. SRI CITY AUTO (A UNIT OF CITY AUTO PVT LTD) (H702-H7-01), OLD G.S. NO. 337 (1 TO 4), RS NO. 259/11A, 10,9.8., SATHY ROAD, PERIYA SEMUR VILLAGE, ERODE, TAMILNADU - 638003 PH 94171791941
- 2065. SRICITY AUTO (H702-H7-02), R.S. NO:1098/3, VINAYAGAR KOVIL STREET, TELEPHONE NAGAR, POONDURAI MAIN ROAD, ,ERODE, TAMILNADU - 638002 PH:9626671444.

GOBICHETTIPALAYAM

2066. SREE SARADHAMBAL AUTOMOBILES PVT LTD (H701-QM-03), NO. 318, CUTCHERY, GOBICHETTIPALAYAM - 638476 PH: 9597560777.

GUDIYATHAM

2067. GANESH CARS PVT. LTD. (CQW1-CQW-01), SURVEY NO.250/1, NEAR NH-75, GANDHI NAGAR, SETHUVADAI, GUDIYATTAM. - 653803 PH:04171-290172.

GUDUVANCHERY

2068. VISHNU CARS PVT. LTD. (BAD1-BAD-01), 52, THAILAVARAM VILLAGE, BEHIND HOTEL PATTIKADU, GUDUVANCHERRY, KANCHEEPURAM DISTT. - 603203 PH.9500121553/9677122225.

GUMMIDIPOONDI

2069. RAJALAKSHMI CARS PVT. LTD. (BIZ1-BIZ-01), PLOT NO. F-13, SURVEY NO. 262/2, SIPCOT INDUSTRIAL COMPEX, VILLAGE – PAPPANAKUPPAM, GUMMIDIPONNDI, THIRUVALLUR - 601201 PH: 044-27922060.

HARUR

2070. SRI AMMAN CARS INDIA PVT. LTD. (AAV1-AAV-01), 429/9, HARUR SALEM MAIN ROAD, HARUR POST, DHARMAPURI, TAMIL NADU - 636903 PH 8220014380/7339071500

HOSUR

2071. SRI AMMAN CARS INDIA PYT. LTD. (7Q01-7Q-01), P.O. PERANDAPALLI.NH-7, KRISHINAGIRI MAIN ROAD, HOSUR, TAMILNADU - 635109 PH. 9790036377/8883259555.

ΙΠΑΡΡΑΠΙ

2072. THRIVENI CAR COMPANY PVT LTD. (HI01-HI-01), SURVEY NO.330/3B1B, AVANI PERUR KILMUGAM VILLAGE, IDAPPADI DISTT. SALEM -637101

PH:9003311488. KALLAKURICHI

215/4,NEAR AKT SCHOOL, DÜRUGAM ROAD, NEAR DOORDARSHAN BLDG, NEELAMANGALAM VILLAGE., KALLAKURICHI TALUK & DIST., TAMILNADU - 606 202 PH :9047514890.

2073. ABT LIMITED (CHG1-CHG-01). SURVEY NO.

2074. S M CARS (CHG2-CHG-01), SF: 31/3B, NO. 19 EMAPPER VILLAGE, KALLAKURICHI, TAMILNADU - 606213 PH :7094440010

KANCHEEPURAM

2075. GANESH CARS PVT. LTD. (C601-JA-02), ANBU NAGAR, DHIMMA SAMUDRAM POST., NEAR VELLA GATE, CHENNAI BANGALORE NH-4, KANCHEEPURAM - 631502 PH-9842306601.

KANGAYAM

2076. SREE SARADHAMBAL AUTOMOBILES PYT LTD (GJI1-GJI-01), NO. 407/263, TIRUPPUR ROAD, KANGAYAM TALUK & TOWN, TIRUPPUR DIST. ,TAMIL NADU. - 638701 PH :7708531777.

KARAIKUDI

2077. ABT LIMITED (4202-HX-05), 42-43 KOVILOOR ROAD, OPP. TNSTC DEPOT - 630302 PH :4565-232484, 232486...

KARUMATHAMPATTI

2078. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CJO1-CJQ-01), SF: NO 281/B. NEAR BHARAT PETROL BUNK, VILLAGE - VAGUTHANKADU, SOMANUR ROAD, KARUMATHAMPATTI TOWN, TALUK-PALLADAM, DISTT. COIMBATORE. - 641659
PH. 9159210008.

KARUNGAL

2079. ATHEN (SGE1-SGE-01), SURVEY NO. 639/5, KARUNGAL TOWN, VILAVANCODE TALUK, KANYAKUMARI DISTRICT, TAMILNADU - 629157 PH:7094434179.

KARUNGALPALAYAM, ERODE

2080. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-08), RF. NO. 17/1, 2, CAVERI ROAD, KARUNGALPALAYAM, ERODE, TAMILNADU -638003 PH :8098825000.

KARUR

2081. ABT LIMITED (K401-K4-01), SF NO. 529/1, SALEM BY PASS,ROAD, VENGAMEDU CIRCLE, SEMMADAI - 639002 PH:04324-222261/62/63.

KATPADI

2082. GANESH CARS PVT. LTD. (C601-APA-04), 170/2B THIRUVALLAM ROAD, ARUMPARUTHI VILLAGE, KATPADI, VELLORE DISTT. - 632004 PH:9842313139.

KATTUMANNARKOIL

2083. VISHNU CARS (SKG1-SKG-01), SURVEY NO. 6& 7, PERIYAKULAM VADA KARAI, OPP TO GNANAVINAYAGAR KOIL, KATTUMANNARKOLL TOWN AND TALUK, CUDDALORE DIST., TAMILNADU - 608301 PH :7386004555.

KFI AMBAKKAM

2084. CRESCO (A UNIT OF NEXGEN VENTURE PVT LTD) (SJV1-SJV-01), AGP MAHAL, SURVEY NO 43, OMR, 60 FEET VEERANAM HIGH ROAD, PADUR, KELAMBAKKAM, CHENGALPATTU DISTRICT, TAMIL NADU - 603 103 PH 1736087002

KINATHUKADAVU

2085. AADHI CARS PVT. LTD. (BBI1-BBI-01), NO 212, KAMARAJ NAGAR, SOLAVALAM PALAYAM PANJAAYATH, KINATHUKADAVU DISTT. COIMBATORE (T.N.) - 642109 PH :0422-3000506 3000505.

KODUMUDI

2086. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CUY1-CUY-01), SURVEY NO.548/A, KARUR MAIN ROAD, NEAR BUS STAND, KODUMUDI. -638151 PH. 8754756777.

KOTAGIRI

2087. AADHI CARS PVT. LTD. (BAS1-BAS-01), SURVEY NO.8979, OOTY MAIN ROAD, KOTAGIRI, DISTT. NILGIRIS, TAMIL NADU. - 643217 PH :8754045891/8754045442.

KOVILPATTI

2088. ASIR AUTOMOBILES PVT LTD (NO01-NO-01), OLD NO.1, NEW NO.13, SATTUR MAIN ROAD, KOVILPATTI (TAMIL NADU) - 628501 PH:4632-232220.

KRISHNAGIRI

2089. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-QL-03), NH-7, NR. AAVIN DAIRY,MOTTUR,SALEM BYE PASS ROAD, KRISHNAGIRI, TAMILNADU - 635001 PH 9500202416/8220004270.

KUMBAKONAM

2090. PILLAI & SONS MOTOR CO. (E701-N4-02), 369/2 B, KUMBAKONAM CHENNAI MAIN ROAD, KUMBAKONAM , TANJAVUR - 612501 PH :0435-2442566, 2442565, 9443264696.

MADURA

2091. ABT LIMITED (4202-42-02), MADURAI-DINDIGAL BYE PASS ROAD, NEAR FATHIMA COLLEGE, MADURAI - 625018 PH :9994400615

- 2092. ABT LIMITED (4202-42-04), 09, 109A, GST ROAD, TIRUPARANKUNDRAM, MADURAI - 625005 PH:9600966164.
- 2093. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-01), 2C, GATE LOCK ROAD, NEAR NEW RAMNAD ROAD, MADURAI - 625016 PH : 7402780000.
- 2094. SIVA AUTOMOTIVE TRADING PVT. LTD. (4205-42-02), NO. 6-A, TPK ROAD, NEAR SAIBABA TEMPLE, ANDALPURAM, MADURAI. -625003 PH. 7402788840.
- 2095. ASIR AUTOMOBILES PVT LTD (4206-42-01), D. NO. 28/5B, MELUR MAIN ROAD, UTHANKUDI, MADURAI. 625107 PH :9944059911
- 2096. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-01), PLOT NO. 25 D, SIDCO INDUSTRIAL ESTATE, KAPPALUR, MADURAI, TAMIL NADU. - 625008 PH :9442799581.
- 2097. MEENAKSHI AUTO ZONE PVT. LTD. (4207-42-02), SURVEY NO. 238/2A, PLOT NO. 36, 37, 38, TALLAKULAM VILLAGE, SIVAGAMI NAGAR, NATHAM MAIN ROAD, MADURAI - 652 014 PH :9940224881.

MADURANTHAKAM

2098. AIE CARS (A UNIT OF AI ENTERPRISES PVT LTD) (CEW1-CEW-01), SURVEY NO. 38/3 A2B, NH-45, MADURANTHAKAM, KANCHIPURAM. -603306 PH. 7401212797.

MALLASAMUDRAM

2099. SREE SARADHAMBAL AUTOMOBILES PVT LTD (CWY1-CWY-01), SF NO. 194/3C, MALLASAMUDRAM MAIN ROAD, MALLASAMUDRAM TOWN, TIRUCHENGODE TALUK, NAMAKKAL DIST., TAMIL NADU. - 637503 PH :9894932019.

MALLUR

2100. THRIVENI CAR COMPANY PVT LTD. (CDH1-CDH-01), SURVEY NO.50/4A, AMANI AMMAPALAYAM VILLAGE, DISTT: DADHAGAPATTY SUB REGISTRATION, MALLUR DIST: SALEM - 636309 PH: 0427-2422399

MANAMADURAI

2101. ABT LIMITED (CHF1-CHF-01), NO. 35, OLD RAMNAD ROAD, MANAMADURAI TOWN, DISTRICT – SIVGANGAI. - 630606 PH :9994450331.

MANAPPARAI

2102. PILLAI AND SONS MOTOR COMPANY (SKW1-SKW-01), PLOT NO 262, TRICHY DINDIGUL BYPASS ROAD, VENGAIKURUCHI VILLAGE,MANAPPARAI, TRICHY,TN - 621307 PH :8489900908.

MANGALAPURAM

2103. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CLX1-CLX-01), DOOR NO. 1/518, SURVEY NO. 75/1, ATTUR MAIN ROAD, MANGALAPURAM (POST), TALUK – RASIPURAM, DISTRICT – NAMAKKAL. - 636202 PH:7094447871.

MANNARGUDI

2104. PILLAI & SONS MOTOR CO. (BKR1-BKR-01), NO. 37, THIRUTHURAIPOONDI ROAD, MANNARGUDI, THIRUVARUR DISTRICT, TAMIL NADU. - 614001 PH-7094411675

MAYILADUTHURAI

2105. PILLAI & SONS MOTOR CO. (E701-AG-04), 46, VELLALAGARAM VILLAGE, MAYILADUTHURAI, TAMILNADU - 609007 PH: 04364-251767, 251765, 9442141703.

MECHERI

2106. SM CARS (CVK1-CVK-01), SURVEY NO. 139A/5, PATTA NO. 653, AMANI M.KALIPATTY VILLAGE, MECHERI TOWN, METTUR TALUK, SALEMN DIST., TAMIL NADU. - 636 453 PH -7094440011

MELUR

2107. SIVA AUTOMOTIVE TRADING PVT. LTD.
(CHC1-CHC-01), OLD SN. 138/1, SURVEY WARD
C, BLOCK NO. 1, T.S. NO. 21/7, VILLAGE AND
TOWN – MELUR, MELUR, DIST.-MADURAI. 625109
PH: 8098120000.

METTUPALAYAM

2108. ABT LIMITED (4101-EU-0C), PLOT NO. 6 TO 9,PONVIZHA NAGAR, KARAMADAI KOVAI MAIN ROAD, METTUPALAYAM - 641043 PH:95009 45094.

MINJUR

2109. RAJALAKSHMI CARS PVT. LTD. (BPE1-BPE-01), PLOT NO. 27, SRI JANAKI RATHINA NAGAR, VILLAGE AND TOWN – MINJUR, PONNERI – 601 203. DISTRICT – THIRUVALUR. - 601203 PH :044-27933331.

NAGAPATTINAM

2110. PILLAI. & SONS MOTOR CO. (CQQ1-CQQ-01), NO.181, KEELA ANTHANAPETTAI, ANTHANAPETTAI, P.O. - MANJAKOLLAI, PUTHUR, NAGAPATTINAM DISTT. TAMIL NADU -611106 PH :4365220250.

NAGARCOIL

 ATHEN (S503-S5-01), RESURVEY NO. G.3/9-7, BUILDING NO. 254-A/3 & 4 K.P ROAD PARAVATHIPURAM, NAGERCOIL KANYAKUMARI DISTRICT TAMILNADU - 629003 PH:8012029777.

ΝΔΜΔΚΚΔΙ

- 2112. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-01), SURVEY NO. 1/10-11, NEAR MURUGAN TEMPLE, SALEM ROAD, NAMAKKAL -637001 PH 937164888
- 2113. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-X4-03), 1/41/21 NEAR PON NAGAR, MUDALAIPATTY, SALEM ROAD, NH-7, NAMAKKAL (TAMIL NADU) - 637001 PH. 737192888.

NATRAMPALLI

2114. GANESH CARS PVT. LTD. (SPR1-SPR-01), NO:812-1, NEAR RAJUNA SULOCHANA MAHAL, BENGALURU- CHENNAI MAIN ROAD, VELAKAL NATHAM, NATRAMPALLI, TIRUPATTUR DIST. TAMIL NADU - 635854. -635854

NEGAMAM

2115. ABT LIMITED (CHD1-CHD-01), 68, 69, ABT BUS STAND, PALLADAM ROAD, PERIA NEGAMAM, POLLACHI, TAMIL NADU - 642120 PH: 99948 76794.

OMALUR

- 2116. SRI AMMAN CARS INDIA PVT. LTD. (7Q01-UM-04), 123, 3B, NH-7, BANGALORE BYE PASS ROAD, KOTTAMETTUPATTI, OMALUR, SALEM (DIST.), TAMIL NADU - 636012 PH :8220010070/8883529888.
- 2117. THRIVENI CAR COMPANY PVT LTD.
 (UM01-UM-01), PLOT NO. 44 & 45, PALANIYAPPA
 NAGAR LAYOUT, NH-7, KAMALAPURAM
 VILLAGE, OMALUR, DISTRICT SALEM, TAMIL
 NADU 636309
 PH :4290-222711.

OOTY

2118. SREE SARADHAMBAL AUTOMOBILES PVT LTD (4103-Y1-05), VIJAYANAGARAM FARM ROAD, NEAR ROSE GARDEN, OOTY - 643001 PH:97511 09229.

P.N. PALAYAM, COIMBATORE

2119. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-OH-04), NO. 12/190 SRKV PORT, MTR ROAD, P.N. PALAYAM, COIMBATORE - 641020 PH:0422-698899.

PADAPPAI

2120. VISHNU CARS PVT. LTD. (CRO1-CRO-01), SURVEY NO.368/2A/1, 368/2A/2, VANDALLUR-WALAJABAD MAIN ROAD, PADAPPAI EAST, CHENNAI. - 601301 PH :8754417168

PALANI

2121. PLA MOTORS (S401-GLR-02), NO:13-1-11C-1, WEST AYAKUDI, DINDIGUL ROAD, PALANI, DINDIGUL DISTRICT, TAMIL NADU - 624613 PH:04545-290900.

PARAMATHIVELUR

2122. SREE SARADHAMBAL AUTOMOBILES PYT LTD (CC01-CC-01), SURVEY NO. 171, NEAR KONGU SCHOOL, NAMAKKAL BYPASS ROAD, PADAMUDI PALAYAM, TALUKA – PARAMATHIVELUR, NAMAKKAL, TAMIL NADU. -638182 PH :88706665599

PATTUKKOTTAI

2123. PILLAI & SONS MOTOR CO. (CJA1-CJA-01), SURVEY NO. 85/6, 85/4, 84/6, DOOR NO.314/11, SRI JANAGALAKSHMI NAGAR, THANJAVUR ROAD, ALADIKUMULAI VILLAGE, TALUK PATTUKOTTAI, THANJAVUR. - 614615 PH. 7084433074

PAVITHRAM

2124. SREE SARADHAMBAL AUTOMOBILES PVT LTD (TWT1-TWT-01), SURVEY NO. 102/1B, NAMAKKAL MAIN ROAD, PAVITHRAM - 637 021 PH 9600320888.

PENNAGARAM

2125. SRI AMMAN CARS INDIA PVT. LTD. (BXZ1-BXZ-01), SURVEY NO. 419/1, VILLAGE – PARUVADHANAALLI, PENNAGARAM, DHARMAPURI. - 636810 PH :9715044700.

PERAMBALUR

2126. PLA MOTORS (2305-DQ-04), SURVEY NO.88/1, A3,NH45, ELAMBALUR VILLAGE, PERAMBALUR, TAMILNADU - 621212 PH :8870004960.

PERNAMBUT

2127. SRI AMMAN CARS INDIA PYT LTD (CODE UNDER CREATIONS-CODE UNDER CREATIONS), SURVEY NO.708, PLOT NO: 87,88 8,89, PERNAMBUT TO GUDIYATTAM ROAD, PERNAMBUT, VELLORE DISTRICT, TAMIL NADU - 635810 - 635810 - 67094403100.

2128. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BTX1-BTX-01), SF NO.542/1, KOVAI MAIN ROAD, PERUNDURAI VILLAGE, PERUNDURAI DISTT. ERODE, TAMIL NADU - 638052 PH -9507490777

POCHAMPALLI

2129. SRI AMMAN CARS PVT. LTD. (CUW1-CUW-01), NEW SURVEY NO. 561/5, VILLAGE – JUMBUKUTTANPATTI, POCHAMPALLI, KRISHNAGIRI. - 635206 PH 9600469888

POLLACHI

2130. ABT LIMITED (L301-L3-01), NACHIMUTHU POLYTECHNIC CAMPUS, UDUMALPET ROAD, POLACHI - 642003 PH:99944 53265.

POLUR

2131. GANESH CARS PVT. LTD. (GLV1-GLV-01), AZHAGO COMPILEX, SURVEY NO.77/1, CUDADALOR TO CHITTOOR ROAD, POLUR, THIRUVANNAMALAI DISTRICT,TAMILNADU -606803 PH :9842345200.

PUDUKOTTAI

 PLA MOTORS (2305-5U-02), NO. 10, MARIAMALAI NAGAR, ALANGUDI-THIRUMAYAM ROAD, PUDUKOTTAI, - 622003 PH :0432-265566/67

PUNJAI PULIAMPATTI

2133. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BKO1-BKO-01), SURVEY NO. 250/1, PANKAU PULIYAMPATTU MUNICIPALITY, PUNJAI PULIYAMPATTI - 638459, SATHY THALUK, ERODE. - 638459 PH : 638810777.

RAJAPALAYAM

2134. MEENAKSHI (5V02-01), DOOR NO. 96, COTTON MARKET, TENKASI-MADURAI ROAD, RAJAPALAYAM, VIRUDHUNAGAR DIST., TAMILNADU - 626117 PH. 9443785681.

RAMANATHAPURAM

2135. SIVA AUTOMOTIVE TRADING PVT. LTD. (0U02-0U-01), SURVEY NO. 172/182C, 172/2C, VILLAGE - ACHUNTHANVAYAL, ACHUNTHANGAL GROUP, TALUK - RAMANATHAPURAM, RAMANATHAPURAM. - 623502 PH :8098110000.

RAMESHWARAM

2136. SIVA AUTOMOTIVE (SKI1-SKL-01), NO:2307, SURVEY NO:279/3A, RAMNAD ROAD, ARIYANKADU, RAMESHWARAM, RAMANATHAPURAM DISTRICT, TAMILNADU -623529 PH:7402788898.

RANIPFT

2137. GANESH CARS PVT. LTD. (CJJ1-CJJ-01), SURVEY NO. 441, PLOT NO. 484, OPPOSITE TO THIRUMALAI CHEMICALS, SIPCOT LAYOUT OF HOUSE SITES, SIPCOTS INDUSTRIAL COMPLEX, RANIPET, TAMIL NADU. - 632403 PH: 9842330388.

RASIPURAM

2138. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BSJ1-BSJ-01), SURVEY NO-41/1 B1A, MOOLAKADU VILLAGE, MASAKALIPATTI, SALEM MAIN ROAD, RASIPURAM DISTT. NAMAKKAL - 637401 PH :4288-23140275539972888.

SALEM

2139. ABT LIMITED (4101-A2-03), 32 THAMANA CHETTY ROAD, ARISIPALAYAM, SALEM -636009

PH:0427-4066988, 406999.

2140. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-01), 12/2E1, SUBRAMANIA NAGAR, 2ND GATE, JUNICTION ROAD, SALEM. - 636005 PH:0427-2440000.

2141. S.M.CARS PVT. LTD. (A204-A2-01), SF NO. 64/2C3, ATTUR SALEM BYPASS ROAD, PINANGUKARAR THOTTAM, SEELANIKANPATTY, SALEM. - 636202 PH.7094448000, 7034449000.

2142. THRIVENI CAR COMPANY PVT. LTD. (A203-A2-03), SURVEY NO. 57, VILLAGE -MASINAICKENPATTY, AYOTHIAPATTINAM, AMMAPET, SALEM. - 636103 PH :0427-2291000.

2143. S M CAR PRIVATE LIMITED (A204-A2-02), DOOR NO. 50/28, SF NO. 1/10B, SARADHA COLLEGE MAIN ROAD, ALAGAPURAM PUDHUR VILLAGE, HASTHAMPATTY, SALEM, TAMILNADU - 636007 PH. 7094440053.

SANKAGIRI

2144. THRIVENI CAR COMPANY PVT LTD.

(BTN1-BTN-01), SURVEY NO.171/5B, KCK
PLAZA, KACHERIDADU, DEPUTY COLLETCTOR
ROAD, SALEM, SANKAGIRI (TAMIL NADU) 637301
PH :+914283242600
+914283242601

SANKARANKOVII

2145. AADHI CARS PVT. LTD. (BXS1-BXS-01), PLOT NO. 132/H, OPPOSITE TO NEW TALUK OFFICE, TIRUVENGADAM ROAD, SANKARANKOVIL. -627756 PH. 7397728025.

SATHY ROAD, ERODE

2146. SREE SARADAMBAL AUTOMOBILES PVT. LTD. (H701-H7-09), SF:N0:245, KANDHAIYAN THOTTAM, SOCUAI, SATHY ROAD, VEERAPPANCHATTIRAM, ERODE, TAMILNADU - 638004 PH :9855240486.

SATHYAMANGALAM

2147. SREE SARADHAMBAL AUTOMOBILES PVT LTD (BGU1-BGU-01), SURVEY NO. 51, 54 & RS NO. 37, KOTTUVEERAMPALAYAM VILLAGE, SATHYAMANGALAM – 638 401, DISTRICT – ERODE, TAMIL NADU - 638401 PH :9897592777.

SATTUR

2148. MEENAKSHI AUTO ZONE PYT. LTD.
(SDR1-SSP.01), SURVEY NO.
18/10,CHATRAPATTI VILLAGE, MADURAI
KANYAKUMARI NATIONAL HIGHWAYS,
SATTUR, VIRUDHUNGGAR
DISTRICT,TAMILNADU - 626203
PH. 3940094881.

SEYDUNGANALLUR

2149. ASIR AUTOMOBILES PVT LTD (S603-GJG-02), SURVEY NO. 59/3E, TIRUCHENDUR ROAD, SEYDUNGANALLUR TOWN, TALUK. SRIVAIKUNTAM, TUTICORIN DIST., TAMIL NADU. - 628809 PH : 33-44992220.

SHOLINGUR

2150. GANESH CARS PVT. LTD. (GLU1-GLU-01), NO:401, ARAKKONAM MAIN ROAD, OPPOSITE TVS FOUNDARY, PANDIYANELLORE, SHOLINGHUR, WALAJA TALUK, RANIPET DISTRICT, TMILANADU -631102 PH:7397395259.

SIVAKASI

2151. MEENAKSHI AUTO ZONE PVT. LTD. (X602-X6-01), 372 D & E, ARUNACHALAM COMPLEX, THIRUTHANGAL ROAD, SIVAKASI. -626123 PH :4562-231281.

SRIPERUMBUDUR

2152. RAJALAKSHMI CARS PVT. LTD. (7801-78-01). SURVEY NO. 150/1A. DOOR NO 1C, THERADI STREET, NEW VILLAGE NO 42, SRIPERUMBADUR, KANCHEEPURAM DISTRICT, TAMIL NADU. - 602105 PH. 3939995469.

PERUNDURAI

SRIVILLIPUTHUR (RAJAPALYAM)

2153. ABT LIMITED (4202-5V-03), NO. 10/32, PADIKKASUVAITHANPATTI, NEAR RTO OFFICE, SRIVILLIPUTHUR, VIRUDHUNAGAR, TAMIL NADU - 626125 PH 96009 05020

SULUR

2154. JAIKRISHNAA AUTOSALES PVT. LTD. (4107-TK-05), DOOR NO. 37 F, RANGANATHAPURAM, TRICHY ROAD, SULUR-641 402 PH: 0422-3199901.

TENKASI

- 2155. AADHI CARS PVT. LTD. (BXR1-BXR-01), DOOR NO. 3/50-1, SURVEY NO. 447B, TIRUNELVELI MAIN ROAD, VILLAGE – KUNARAMANALLUR, TENKASI. - 627814 PH 9601091476.
- 2156. AADHI CARS PVT. LTD. (BXR1-BXR-02), DOOR NO. 47, MADHALAMPARAI, TENKASHI AMBAI HIGHWAY, TENKASHI, TIRUNELVELI DIST., TAMILINADU. - 627 814 PH -96700941475

THAMMAPATI

2157. SM CARS (SNH1-SNH-01), SURVEY NO # SF: 328/11, NAGIAMPATTI, THAMMAPATTI, SALEM DISTRICT, TAMILNADU - 636113. - 636113 PH -7094440010

THANJAVUR

 PILLAI & SONS MOTOR CO. (E701-E7-01), 12A, SELVAM NAGAR, TANJAVUR, TAMILNADU -613007
 PH: 04362-271723, 271724, 9443264164.

THARAMANGALAM

2159. THRIVENI (CSQ1-CSQ-01), NO. 1/122, KATTAMPATTI, JALAKANDAPURAM, THARAMANGALAM, SALEM DIST., TAMIL NADU: - 636501 PH. 9159355999/9003504760.

THENI

2160. MEENAKSHI AUTO ZONE PVT. LTD. (9U02-9U-01), DOOR NO. 871/1, RATHINAM NAGAR, PERIYAKULAM MAIN ROAD, THENI TOWN, DISTRICT – THENI - 625531 PH -9789703881.

THIRUMULLAIVOYAL

2161. CRESCO (A UNIT OF NEXGEN VENTURES PVT LTD). (CDW2-CDW-01), NO. 48, BALAJI NAGAR, NEW SIR IRVANSTADE FORD HOSPITAL, THIRUMULAIVOYAL DISTT. CHENNAI - 600062 PH:7305087044.

THIRUVALLUR

2162. KHIVRAJ MOTORS PVT LTD. (1404-HH-04), 2151, KAKKULUR ROAD, THIRUVALLUR - 602001 PH:99520 78443.

2163. KHIVRAJ MOTORS PVT LTD. (1404-HH-05), PLOT NOS.218,219,220,225,226,227.228 AND S.NOS.18/5,18/6, EMPIRE CITY PART-3, KAKKALLUR VILLAGE, THIRUVALLUR THALUK, THIRUVALLUR - 602001 PH -97103 04818

THIRUVANNAMALAI

2164. GANESH CARS PVT. LTD. (C601-LX-03), NO.-5, NH-78, KRISHANAGIRI PONDY ROAD, CHINA KANKEYANUR, OPP SKP ENGG. COLLEGE, THIRUVANNAMALAI - 606601 PH :9842305072.

THIRUVARUR

- 2165. PILLAI & SONS MOTOR CO. (E701-LJ-03), THANJAI NAGARI ROAD, OPP. TO S. P. OFFICE - 610001
- PH: 04366-250250, 9442163707.
 2166. PILLAI & SONS MOTOR COMPANY (LJ01-LJ-01),
 NO. 9, WARD NO.-4, BLOCK NO. 10, NEW SY,
 NO. 601/681, SUNDARAVILAGAM,
 NARSINGHAMPET, THIRUVARUR TOWN &
 DIST., TAMIL NADU 610001
 PH: 9442163509.

THISAYANVILLAI

2167. AADHI CARS PVT. LTD. (CVL1-CVL-01), SURVEY NO. 240/1, 7/1, HIGHWAYS ROAD, OPP. TO VO OFFICE, SELVA MARUTHUR, THISAYANVILLAI -627 657 PH. 7339511187.

THUCKALAY

2168. ATHENS (BW02-BW0-01), DOOR NO. 5/76B, (RE SURVEY NO-5307) THRUVITHANCODE ROAD, KERALAPURAM, MUTHALAKURICHI, VILLAGE – MUTHALAKURUCHI, KALKULAM-TALUK, THUCKALAY, DISCTRICT – KANYAKUMARI, TAMILNADU - 629174 PH :8012029888.

THURAIYUR

2169. PLA MOTORS (CSE1-CSE-01), D.NO.:5/300, SINGALANDHAPURAM VILLAGE, THURAIYUR DISTT. TRICHY (TAMIL NADU) - 621010 PH: 9486763725.

TIRUCHENDUR

2170. ASIR AUTOMOBILES PVT LTD (CCJ1-CCJ-01), SURVEY NO. 220/101A, 221/3, 221/4, 221/5, 221/5A, 221/5B, PODHIGAI NAGAR, VILLAGE-VEERAPANDIYAPATINAM, THIRUCHENDUR, TUTUCORIN. - 628215 PH : 737/3900220

TIRUCHENGODE

2171. SREE SARADHAMBAL AUTOMOBILES PVT LTD (X401-QP-02), PLOT NO-10, OPP TO PONNUSWAMY KALYANA MANDAPAM, KOOTAPALLI COLONY, TIRUCHENGODE -637001 PH :4288-282292.

TIRUNFI VELI

- 2172. AADHI CARS PVT. LTD. (A303-A3-01), PLOT NO. 261, MADURAI MAIN ROAD, KARAIERUPPU, TIRUNELVELI, TAMIL NADU - 627357 PH 9500991610.
- 2173. AADHI CARS PVT. LTD. (A303-A3-03), DOOR NO. 37, RAMNAGAR, KTC NAGAR, TIRUNELVELI, TAMIL NADU. - 627 011. PH :9500991610.

TIRLINVFI I

2174. AADHI CARS PVT. LTD. (A303-A3-04), SF NO:161/4, SF NO: 893/2, NORTH BYEPASS ROAD, GALAXY HOSPITAL BACKSIDE, PALAYANKOTTAI, TIRUNELVELI, TAMILNADU -627001 PH: 95009 91479.

TIRUPATHUR

2175. GANESH CARS PVT. LTD. (BPD1-BPD-01), SURVEY NO.54/4, TIRUPATHUR TO KRISHNAGIRI ROAD, PALLIPET VILLAGE, TIRUPATHUR DISTT. VELLORE - 635601 PH :9842308909.

TIRUPATTUR(SIVAGANGAI)

2176. ABT LIMITED (CHH1-CHH-01), DOOR NO. 8/2/29A, KARAIKUDI ROAD, TIRUPATHUR, DISTRICT – SIVAGANGAI. - 630211 PH:9994450331.

TIRUPUR

- 2177. ABT LIMITED (4101-Y7-09), NO. 4, SABHAPATHI PURAM, NEAR TMF HOSPITAL, TIRUPUR -641601
- PH:95009 98368. 2178. SHASHTI CAR PVT LTD (Y701-Y7-01), SRI PADMINI GARDENS, KANGEYAM ROAD, OPP. ST JOSEPH SCHOOL, ITRUPUR - 641604 PH:044-2430275/2430276.

TIRUTHANI

2179. CARS INDIA PVT. LTD. (CIC1-CIC-01), NO. 9/13, CHENNAI BY PASS ROAD, OLD CHENNAI ROAD, DISTT. THIRUVALLUR, TIRUTHANI, TAMILNADU-631209
PH. 7258/72380

TIRUVANNAMALAI

2180. SRI AMMAN CARS INDIA PVT LTD. (LX02-LX-01), 2A/2, SURVEY NO. 3676/3, ANNA SALAI, TIRUVANNAMALAI-CHENNAI NH-101, TIRUVANNAMALAI TOWN AND DIST., TAMILNADU - 602801 PH :7094471293.

TONDI

2181. SIVA AUTOMOTIVES (SHW1-SHW-01), SURVEY NO: 85/16, WARD 10/78, SOUTH THOPU STREET, ECR MAIN ROAD, ECR, THONDI, RAMANATHAPURAM DISTRICT, TAMIL NADU -623409 PH:7402788820.

TRICHY

- 2182. ABT LIMITED (2302-23-02), 4/40, COLLECTOR OFFICE ROAD, CANTONMENT, TRICHY 620001 PH:0431-4221620.
- 2183. PLA MOTORS (2305-23-01), NO. 18/2, NA-45, DHEERAN NAGAR, TRICHY-DINDUGAL MAIN ROAD, TRICHY - 620009 PH :9994599777/9600950960
- 2184. ABT LIMITED (2302-23-03), MADRAS TRUNK ROAD, MAMBALASALAI, TRICHY - 620005 PH:0431-4221555
- 2185. PLA MOTORS (2305-23-03), 10A & B, ALXANDRIA ROAD, CANTONMENT, TRICHY - 620001 PH:0431-2411540/530.
- 2186. PILLAI & SONS MOTOR CO. (2306-23-01), SURVEY NO. 10B, 1A/D, CHENNAI TRICHY BY-PASS ROAD, VILLAGE - THIRUNALLUR, TRICHY. - 620002 PH :8489900902. 9384826814.

TUTICORIN

2187. ASIR AUTOMOBILES PVT LTD (5603-56-01), SURVEY NO. 25/18, MAPPILLAIURINI VILLAGE, ETTAYAPURAM ROAD, TUTICORIN, TAMIL NADU - 628002 PH :7373501220.

UDUMALPET

2188. ABT LIMITED (QR01-QR-01), 2/3, PERIYAKOTTAI PIRIVU, S.V. MILL POST, UDUMALPET - 642126 PH:99944 41645.

UTHANGARAI

2189. SRI AMMAN CARS INDIA PVT. LTD. (CFY1-CFY-01), SURVEY NO. 104/1, 104/1B, VILLAGE – THANDIYAPANNUR, UTHANGARAI, KRISHNAGIRI. - 635304 PH:9715044600.

UTHUKOTTAI

2190. KHIVRAJ MOTORS PVT LTD. (CUC1-CUC-01), SURVEY NO. 442/1, NEHRU BAZZAR STREET, UTHUKOTTAI, DIST.-THIRUVALLUR - 602 026 PH:7299635536.

VALLIYUR

2191. AADHI CARS PVT. LTD. (BX01-BXC-01), DOOR NO. 314A/11-14, WITHIN VADAKU VALLIOOR, REVENUE VILLAGE, VADAKKU VALLIOOR PANCHAYAT, RADHAPURAM TALUK, VALLIOOR. - 627002 PH: 7373091462.

VANDAVASI

2192. GANESH CARS PVT. LTD. (CRN1-CRN-01), SURVEY NO.272, KEELSATHAMANGALAM VILLAGE, CHETPET ROAD, VANDAVASI, TIRUVANNAMALAI, DISTT. T.N. - 604408 PH 1739SR0/284

VANIYAMBADI

2193. GANESH CARS PVT. LTD. (BJY1-BJY-01), NO. 1977/BI, NH-46, KH-7.), PETHAKALLUPALL VILLAGE, NEAR TOLL GATE, VANIYAMBADI, VELLORE (DIST), TAMIL NADU. - 635801 PH :9842327709.

VELLORE

- 2194. GANESH CARS PVT. LTD. (C601-C6-01), 91 NEW BY-PASS ROAD, VELLORE - 632004 PH:9842377110.
- 2195. SRI AMMAN CARS INDIA PVT. LTD.
 (C602-C6-01), DOOR NO. 68, SURVEY NO. 66/7,
 NEAR RANGALAYA KALYANA MANDAPAM,
 VELLORE-KATPADI ROAD, KALINJUR VILLAGE,
 KATPADI TALUKA, GANDHINAGAR, VELLORE
 DIST., TAMIL NADU. 6322006
 PH. 7094471320, 7094471321.
- 2196. SRI AMMAN CARS INDIA PVT. LTD. (C602-60-602). SURVEY NO. 316/382, 316/8A, 316/8B, NEAR SHELL PETROL PUMP, MELMONAVUR VILLAGE, YELLORE TALUK & DIST. ON 1148 (CHENNAL BENGALURU HIGHWAY), VELLORE, TAMILNADUR 632010 PH. 7094471320.

VII I LIPLIRAM

2197. ABT LIMITED (5Q01-QQ-02), 264/1, GINGEE MAIN ROAD, AYINAMPALAYAM, VILLUPURAM -605602

PH:04146-225509/225590.

VIRUDHACHALAM

2198. ABT LIMITED (BMA1-BMA-01), PLOT NO. 56, JUNCTION ROAD, NEAR SHANMUGA LODGE, VIRUDHACHALAM, DISTRICT – CUDDALORE, TAMIL NADU. - 606101 PH : 04143-262631/262632/262633.

VIRUDHUNAGAR

2199. MEENAKSHI AUTO ZONE PYT LTD (SCF1-SCF-0A), DOR DN:06/504, SURVEY NO. 11/6, PELAMPATTI VILLAGE,VIRUDHUNAGAR MADURAI HIGH WAY, OPPOSITE TO VW COLLEGE., TALUK & DIST. VIRUDHUNAGAR, TAMILNADU - 626001 PH : 9940094881.

TAMILNADU

CHENNAI

2200. VISHNU CARS (1488-14-01), DOOR NO. 8, NP INDUSTRIAL ESTATE, JAWAHARLAL NEHRU ROAD, EKKATUTHANGAL, CHENNAI,TN - 600032 PH :7550360444

CHENNAI- MAMBAKKAM

2201. KHIVRAJ MOTORS (1404-14-61), SURVEY NO:76/A, NO:27, PLOT NO. D-2, KEELAKOTTAYUR, VANDALUR TO KELAMBAKKAM MAIN ROAD, MAMBAKKAM, CHENGALPET, CHENNAI, TN - 600127 PH :9841591558.

CHETPET

2202. GANESH CARS (SGY1-SGY-01), DOOR NO: 35/C, CHETPET TOWN, CHETPET TALUKA, TIRUVANNAMALAI DIST.,TAMILNADU, - 606 801 PH: 98423 06337.

CHINNAMANUR

2203. ABT LIMITED (SKX1-SKX-01), SF NO. 446 /1A, WARD A, BLOCK-2, TS NO.8/15, PERIYAKULAM TO CHINNAMANUR MAIN ROAD, KEELAPOOLANANDHAPURAM, CHINNAMANUR MINICIPAL TOWN & TALUK, THENI DIST..TN-625515 - 625515 PH : 9715682213.

DENKANIKOTTAI

2204. AMMAN CARS (SDT1-SDT-01), SURVEY NO:766/ 1B11, THABILAGOUNDAN THOTTI, DENKANIKOTTA1, KRISHNAGIRI DISTRICT, TAMILNADU - 635107 PH -9865599935

GANGAVALI

2205. THRIVENI CARS (SOS1-SOS-01), SURVEY NO # SF NO. 22/3A1A, 106 ATTUR MAIN ROAD,GANGAVALLI, SALEM, TN - 636105 PH : 9159722999.

KAWALKINARU

2206. AADHI CARS PVT. LTD. (CSUI-CSU-01), SURVEY NO.1943/1, SURESH COMPLEX, KANYAKUMARI BYEPASS ROAD, KAVALKINARU JUNCTION, KAVALKINARU (VADAKANKULAM), TIRUNELVELI, - 627105 PH : 7339111259.

KUMBAKONAM

2207. PILLAI AND SONS MOTOR CO. (E701-E7-06), D.
NO. HP-1, GOVT. INDUSTRIAL ESTATE, SIDCO,
THIRUBHUVANAM TOWN & POST,
KUMBAKONAM, THANJAVUR DISTRICT,
TAMILNADU - 612103
PH :848990136.

NEYVELI

2208. VISHNU CARS (CPN1-CPN-01), SURVEY NO:545/2A1A, NH-45C, OPP. NATIONAL COLLEGE, KUMBAKOMAM - CHENNAI HIGH WAY, NEAR NEVVELI ARCH GATE, NEYVELI T.S, KEELAKOLLAI, MARUNGUR POST, PANRUTI, CUDDAL ORE DISTRICT, TAMILNADU - 607/103
PH :9384059575.

SIVAGANGAI

2209. ASIR AUTOMOBILES (SDC1-SDC-01), S. NO: 144/1, SIVAGANGAI-THONDI ROAD, PAIYAURPILLAIVAYAL, SIVAGANGAI, TAMILNADU - 630561 PH -0750372920

THANJAVUR

2210. PLA MOTORS FIRM (E702-E7-01), SURVEY NO. 173/6B4, TRICHY-THANJAVUR ROAD, NANJIKOTTAI BYPASS, THANJAVUR, TAMILNADU - 613005 PH :9344006433/9344003877.

THOPPUR

2211. SRI AMMAN CARS (SLU1-SLU-01), SITE NO. 422 /2A, BANGALORE TO SALEM HIGH WAY, AMMAN, THOPPUR VILLAGE & TOWN.NALLAMPALLI TK, DHARMAPURI DISTRICT, - 636352 PH 979004273

TINDIVARAM

 VISHNU CARS (SDI1-SDI-01), SURVEY NO. 50/4, 50/5 & 63, NEAR RTO OFFICE, MOLASUR, TINDIVANAM, VILUPPURAM, TAMILNADU -604102
 PH 9500039023.

TIRUPPUVANAM

2213. MEENAKSHI AUTO ZONE PVT LTD (CODE UNDER CREATIONS-CODE UNDER CREATIONS), NO:21 BAKHYA NAGAR, WARD NO:1. MANDAPAM MAIN ROAD, TIRUPPUVANAM, SINAGANGA DISTRICT, TAMIL NADU - 630611 - 630611 PH :9442799581.

UTHIRAMERUR

2214. AIE CARS (SHG1-SHG-01), SURVEY NO:383/38-B2, UTHIRAMERUR MAIN ROAD, UTHIRAMEUR, KANCHEEPURAM DISTRICT, TAMILNADU - 603406 PH:7299057387.

VELLAKOVIL

2215. SRI CITI AUTO (SG01-SG0-01), SURVEY NO:502/C &371/D, NO. 196,197,KOVAI KARUR MAIN ROAD, VELLAKOVIL, TIRUPUR DIST., TAMILNADU - 638111 PH :9994606000.

TELANGANA

ADILABAD

2216. ADARSHA AUTOMOTIVES PVT LTD (BTM1-BTM-01), SURVEY NO:131/6 & 131/7, NH-44, ADILABAD TOWN ROAD, MAVALA, ADILABAD, TELANGANA. - 504001 PH:9133307724.

ARMUR

2217. VARUM MOTORS PVT. LTD. (BBM1-BBN-01), SURVEY NO.277, ARGUL VILLAGE, JAKARANPALLY (MANDAL), ARMUR, NIZAMABAD DISTT. (A.P.) - 503224 PH: 8142281424 9052901888.

BATCHUPALLY, HYDERABAD

2218. SAI SERVICE PRIVATE LIMITED (1011-10-09), SURVEY NO 499/1, MIYAPUR TO BACHUPALLY ROAD,BACHUPALLY,HYDERABAD. - 500090 PH : 7330771111

BHUPALAPALLY

2219. ADARSHA AUTOMOTIVES PVT LTD (D502-BCT-04), 6-113, JAWAHAR NAGAR, MAIN ROAD, SBH MAIN BRANCH ROAD, BHUPPALPALLY, DISTRICT - WARANGAL, ANDHRA PRADESH - 506169 PH 7799790528

BODHAN

2220. VARUN MOTORS PVT. LTD. (0801-08-01), PLOT NO. 5/2, ACHANAPALLY CROSS ROAD, OPP: APNA FUNCTION HALL, BODHAN, DIST. -NIZAMABAD, TELANGANA. - 503 185 PH: 9581966691 8142077222

CHEVELLA

2221. GEM MOTORS (INDIA) PVT. LTD. (CBL1-CBL-01), SURVEY NO. 17/A, MANDAL – CHEVELLA, DISTRICT – RANGA REDDY, TELANGANA. -510101 PH. 9912899128. 9912834567.

ETUNAGARAM

2222. WIN MOTORS (SOJ1-SOJ-01), H.NO 12-412 & 12-413, AKULAVARI GHANPUR, ETURNAGARAM, MULUGU DISTRICT, TELANGANA - 506165 PH :8688828005.

GADWAL

2223. SRI JAYARAMA MOTORS PVT. LTD. (WP01-BHR-02), PLOT NO. 5 & 6, BESIDE RURAL POLICE STATION, KURNOOL ROAD, MAHABUB NAGAR DISTRICT, ANDHRA PRADESH - 500125 PH :809699074. 809699671.

GAJWEL

2224. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYU1-BYU-01), SURVEY NO. 220, VILLAGE – PRAGNAYPUR, GAJWEL, DISTRICT – MEDAK, TELANGANA. - 502311 PH:888508071.

GHATKESAR

2225. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (BYL1-BYL-01), 3-21, JODIMETLA, CHOUDA RIGID VILLAGE GHATKESAR MANDAL, DISTRICT – RANGA REDDY. - 501301 PH:3885088075.

HUSNABAD

2226. ADARSHA AUTOMOTIVES PVT LTD (GJE1-GJE-01), SURVYEY NO. 202/E, H. NO. 12-114 & 12-11A, VILLAGE & MANDAL -HUSNABAD, DIST.-SIDDIPET, TELANGANA. -505467

PH:8886092222.7995835552.

HYDERABAD

- 2227. THE MITHRA AGENCIES (1002-10-01), 1-8-670, NEAR RTC CROSS ROAD, AZAMABAD INDUSTRIAL AREA, HYDERABAD, - 500020 PH:9966838294.
- 2228. RKS MOTORS PVT. LTD. (1003-10-01), SABOO TOWERS, RAJBHAVAN ROAD, SOMAJIGUDA, HYDERABAD - 500482 PH: 040 44454443, 9010811166.
- 2229. RKS MOTORS PVT. LTD. (1003-10-02), B-4/A,IDA BLOCK, INDUSTRIAL ESTATE,UPPAL, HYDERABAD - 500039 PH: 040 23434504, 9010822210.
- 2230. VARUN MOTORS PVT. LTD. (4603-10-04), B-11 CO-OPERATIVE INDUSTRIAL ESTATE, BALANAGAR, HYDERABAD, - 500037 PH :9885208555, 9985745222.
- 2231. VARUN MOTORS PVT. LTD. (4603-10-0B), ADITYA NAGAR COLONY, ADITYA NAGAR COLONY, TOLICHOWKI, SHAIKPET (VILLAGE, HYDERABAD, HYDERABAD - 500008 PH: 64551700. 8886114856.
- 2232. VARUN MOTORS PVT. LTD. (1010-10-01), PLOT NO. VI- VII A & B,UNDER WARD NO. 10, AUTONAGAR, VANASTALIPURAM, HYDERABAD, R. R. DISTT. 500070 PH :9885208555.
- VARUN MOTORS PVT. LTD. (4603-10-06), SHOP NO. 31, SRIKRUPA MARKET, D.NO. 16-10-1/F/31, MALAKAPET, HYDERABAD - 500036 PH :4553395. 4547676. 9885093360.
- 2234. RKS MOTORS PVT. LTD. (1003-10-04), H: NO 16-9-409/P,PLOT NO.4/1,4/2,SY.NO. 97,98,OLD MALAKPET OPP GOLNAKA BRIDGE, MOOSARAMBAGH,HYDERABAD - 500036 PH: 9010811192.
- 2235. THE MITHRA AGENCIES (1002-10-03), PLOT NO. 3-4-10, NEAR MADHAPUR POLICE STATION, MADHAPUR, HYDERABAD - 500081 PH :04023113399 04023113388 9959912702.
- 2236. RKS MOTORS PVT. LTD. (1003-10-05), 11-6-191/192,OPP. HOTEL HARSHA, PUBLIC GARDEN ROAD, NAMPALLY, HYDERABAD -500001 PH :9848811158.

- 2237. VARUN MOTORS PVT. LTD. (4603-10-0A), 1-11-200, SHAMLALA BUILDING BEGUMPET, HYDERABAD - 500016 PH 9885206555
- 2238. THE MITHRA AGENCIES (1002-10-04), 8-18-138, PLOT NO. 8.NEAR MARGADARSI CHIT FUND.L.B. NAGAR RING ROAD, RR DIST,HYDERABAD - 500074 PH :9963551265.
- 2239. GEM MOTORS (INDIA) PVT. LTD. (1009-10-01), RAGHUVENDRA SOCIETY,KONDAPUR,HYDERABAD, ANDHRA PRADESH - 500084 PH :9912889128.
- 2240. GEM MOTORS (INDIA) PVT. LTD. (1009-10-02), 2-11, SURVEY NO: 165,172,HYDERNAGAR, KUKATPALLY, HYDERABAD, ANDHRA PRADESH - 500072 PH. 9912344538
- 2241. SAI SERVICE PRIVATE LIMITED (1011-10-01), 6-6-29/5/1/NIR, VIMANA PURI, QUTHBULLAPUR, HYDERABAD, TELANGANA 500055 - 500055 PH :9010827755.
- 2242. THE MITHRA AGENCIES (1002-10-05), PLOT NO. 19,20 & 21,ROAD NO. 10,IDA NACHARAM, HYDERBAD - 500076 PH:04027176999 040271777999 9963551267.
- 2243. VARUN MOTORS PVT. LTD. (1012-10-01), MARUTI AUTHORISED DEALER, SURVEY NO.115, IT PARK, NANAKRAMGUDA, GACHIBOWLI, HYDERABAD - 500008 PH 9985104860 69997979
- 2244. RKS MOTORS PVT. LTD. (1003-10-08). D.NO.1-10-1/285/1, OPP. VEGITABLE MARKET, ECIL CROSS ROADS, KUSAIGUDA, HYDERABAD -500062 PH.7799779810.
- 2245. SAI SERVICE PRIVATE LIMITED (1011-10-04), H.NO. 16-2-839/4/10, SAIDABAD, L.B.NAGAR, HYDERABAD. - 500059 PH:7799352000.
- 2246. VARUN MOTORS PVT. LTD. (4603-10-0G), 1-10-28/1 SV, NO.285, KUSHAIGUDA, NEAR ECIL X ROADS, HYDERABAD - 500062 PH:7799600093.
- 2247. VARUN MOTORS PVT. LTD. (4603-10-0H), PLOT NO. 1354/1, ROAD NO. 1, NEAR IOC PETROL PUMP, JUBLEE HILLS, HYDERABAD, ANDHRA PRADESH - 500033 PH :8886322776.
- 2248. VARUN MOTORS PVT. LTD. (4603-10-0J), PLOT NO. 1-45, SY.NO:1 TO 7, GOPINATH COMPLEX, TARANAGAR, LINGAMPALLY, HYDERABAD, RANGAREDDY DISTRICT, TELANGANA STATE-500019 PH: 8886067847.

- 2249. SAI SERVICE PRIVATE LIMITED (1011-10-07), PLOT NO.B-21 & B-34, BHEL ANCILLARY INDUSTRIAL ESTATE, RAMACHANDRAPURM, HYDERABAD - 502032 PH-9703811411.
- 2250. ADARSHA AUTOMOTIVES PVT LTD (1014-10-01), 18-2-45 NEAR FLYOVER, CHANDRAYANGUTTA "X" ROAD, HYDERBAD - 500005 PH 81427376833
- 2251. RKS MOTORS PVT. LTD. (1003-10-09), SURVEY NO.434, 5-5-33/19, BEHIND HUDA TRUCK PARKING, KUKATPALLY, DISTT: RANGAREDDY, HYDERABAD - 500072 PH :9010811131.
- 2252. SAI SERVICE PRIVATE LIMITED (1011-10-08), DOOR NO.7-2-C33 & C34, INDUSTRIAL ESTATE, SANATH NAGAR, HYDERABAD. - 500018 PH : 7799360003
- 2253. KALYANI MOTORS PVT. LTD. (1018-10-01), PLOT NO. A-23 & A31/1, LD.A., NACHARAM, HYDERABAD. - 500076 PH:91000 56490.
- 2254. GEM MOTORS (INDIA) PVT. LTD. (1009-10-03). SURVEY NO. 135/A & 135/AA, MANIKONDA, RAJENDRA NAGAR MANDAL, RANGAREDDY DISTRICT, HYDERABAD, TELANGANA. - 500089 PH. 9912341524.
- 2255. ADARSHA AUTOMOTIVES PVT LTD (1014-10-02), H. NO. 8-64/1, RUDRA COLONY, SHAMSHABAD, HYDERABAD. - 501218 PH :9603296633
- 2256. JAYABHERI AUTOMOTIVES PYT. LTD. (1017-10-01), PLOT NO. 113, 114, 115 IN LUMBINI ENCLAVE CB SQUARE, VILLAGE – GACHIBOWLI, SHERLINGAMPALLY MNADAL, HYDERABAD, TELANGANA STATE. - 500032 PH. 9100090401.
- 2257. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-02), SURVEY NO.11/36, PLOT NO.32, 39 & 40, NEAR N CONVENTION CENTRE, KHANAMET, HYDERABAD, SHERLINGAMPALLY MANDAL, HYDERABAD. - 500081 PH. 7799916668.
- 2258. KAL YANI MOTORS PVT. LTD. (1018-10-02), M/S
 VIDHATA BINNY MODERN RICE MILL, BEARING
 NO. 8-4-15 IN SURVEY NO. 239 8 240 OF
 VILLAGE KARMANGHAT, MANDAL –
 SAROORNAGAR, DISTRICT RANGA REDDY,
 HYDERABAD. 500079
 PH :9100222377.
- 2259. ADARSHA AUTOMOTIVES PVT LTD (1019-10-01),
 H. NO. 2-4-33/15, SURVEY NO. 34, SOGBOWLI
 (PILLER NO. 185 OF P.V. NARSIMHA RAO
 EXPRESSWAY), RAJENDRANAGAR,
 UPPERPALLY, ATTAPUR, RANGA REDDY,
 HYDERABAD, TELENGANA. 500048
 PH 3076348633. 8297426833.

- 2260. THE MITHRA AGENCIES (1002-10-06), SURVEY NO.57, D.NO.8-2-108, BIRAMALGUDA, KARMANGHAT NAGARJUN SAGAR ROAD, HYDERABAD, TELANGANA. 500079 PH :886621232.
- VARUN MOTORS PVT. LTD. (4603-10-0M), KSN GARDENS, 5-162/6, BORABANDA MAIN ROAD, HYDERABAD. - 500018 PH :9885579623.
- 2262. JAYABHERI AUTOMOTIVES PVT. LTD. (1017-10-03), SURVEY NO.283, PLOT NO.D-46 & 47, PHASE-V, IDA, JEEDIMETLA, QUTUBULLAPUR MANDAL, RANGA REDDY DISTT., HYDERABAD (TELANGANA). - 500055 PH. 7799745457.
- 2263. ADARSHA AUTOMOTIVES PVT LTD (1014-10-03), SURVEY NO. 220/A, AMBEDKAR ROAD, OPP HERITAGE FRESH, NEAR AMBEDKAR STATUE, NEAR ALWAL, SECUNDERABAD. - 500 010 PH :9291859954.
- 2264. KALYANI MOTORS PVT. LTD. (1018-10-03), SURVEY NO. 305, NIZAMPET, MANDAL -QUTBULLAPUR, DIST.-RANGA REDDY, HYDERABAD. - 500 072 PH.72079 33677.
- 2265. THE MITHRA AGENCIES (1002-10-07), SURVEY NO.12,13,148.15, MEDIPALLY, GHATKESAR MANDAL, RANGA REDDY DISTRICT, HYDERABAD, TELANGANA 500098 PH :888697954.

IBRAHIMPATNAM

2266. PAVAN MOTORS PVT. LTD (CSF1-CSF-01), S.NO.123/E, MPP PATELGUDA, IBRAHIMPATNAM, RANGA REDDY - 501506 PH :8790144499.

JAGITIAL

2267. ADARSHA AUTOMOTIVES PVT LTD (N601-NU-04), HOUSE NO.-1-5-216/A, OPPOSITE TO KVA SUBSTATION, KARIMNAGAR ROAD, JACTIAL, - 505327 PH :8886152222.

JANGAON

2268. ADARSHA AUTOMOTIVES PVT LTD (KI01-KI-01), H.NO.339, HYDERABAD ROAD, JANGAON. -506167 PH:7799626633.

KAMAREDDY

2269. VARUN MOTORS PVT. LTD. (KX01-KX-01). H.NO.11-107/61, BESIDE:GURU RAGHAVENDRA COLONY, CHINNA MALLAREDDY VILLAGE, KAMAREDDY. - 503111 PH. 9985557570 8142551166.

KARIMNAGAR

- ADARSHA AUTOMOTIVES PVT LTD (N601-N6-01), H.NO. 8-6-313/1, HYDERABAD ROAD, BY-PASS JUNCTION, KARIMNAGAR -505001 PH :8886600315.
- ADARSHA AUTOMOTIVES PVT LTD (N601-N6-05), H.NO.8-6-301/18, BY-PASS ROAD, AUTONAGAR, KARIM NAGAR, TELANGANA. -505001 PH :8886152222.
- 2272. VARUN MOTORS PVT. LTD. (N603-N6-01), BEARING NO. 1-81/3/10/2, SURVEY NO. 221 & 222, REKURTHY VILLAGE, KARIMNAGAR-JAGTIAL ROAD, KARIMNAGAR MANDAL & DIST., TELANGANA. - 505 001 PH: 8886619373
- 2273. VARUN MOTORS (N603-N6-2), SURVEY NO. 277,278/B, AREPALLY VILLAGE, TEEGALAGUTTAPALLI GRAM PANCHAYAT, KARIMNAGAR - 505001 PH :91549 03258.

KEESARA

 JAYABHERI AUTO (SEI1-SEI-01), H-NO 3-56/9/6A, SURVEY NO 5, KEESARA, MEDCHAL-MALKAJGIRI, TELANGANA - 501301 PH 9676076666

KHAMMAM

2275. MITHRA AUTO AGENCIES PVT LTD (2604-1G-02), SURVY NO. 182,WARANGAL ROAD, OPP. FCI GODOWNS,PEDA THANDA,KHAMMAM - 507003 PH :8886063527.

KODAD

2276. PAVAN MOTORS PVT. LTD (BRP2-BRP-01), SURVEY NO. 42, KOMARBANDA REVENUE LIMITED, KODAD, DISTRICT – NALGONDA, TELANGANA - 508206 PH :8790902114.

KOLLAPUR

2277. SRI JAYARAMA (SHC1-SHC-01), SURVEY NO 259/AA2, 259/E2, KOLLAPUR, NAGAR KURNOOL DISTRICT, TELANGANA - 509102 PH :9985880015.

KOTHAGUDEM

2278. VARUN MOTORS PVT. LTD. (2603-HF-04), DOOR NO. 5-35/4/B_LAKSHMIDAVI PALLI,BHADRACHALAM ROAD, KOTTHAGUDEM - 507101 PH :9581494499.

MAHABUBABAD

2279. ADARSHA AUTOMOTIVES PVT LTD (CQS1-CQS-01), SY. NO.38/A, MAHBUBABAD REVENUE VILLAGE AND MANDAL, MAHBUBABAD. - 506101 PH :9177746333, 7799700525.

MAHABUBNAGAR

2280. SRI JAYARAMA MOTORS PVT. LTD. (WP01-WP-01), PLOT NO.C1 & C2, INDUSTRIAL ESTATE, METTUGADA, MEHBOOBNAGAR -504001 PH :8096998846.

MAHESHWARAM

2281. ADARSHA AUTOMOTIVES PVT LTD (CQR1-CQR-01), (BEARING #S-187, SURVEY NO.33861A, VILLAGE & MANDAL: MAHESHWARAM DISTT. RANGA REDDY -501359 PH :8142326633. 9703152222.

MANCHERIAL

2282. ADARSHA AUTOMOTIVES PVT LTD (N601-CM-03), BEHIND MAHINDRA TRACTORS SHOWROOM, BELLAMPALLY ROAD, MANCHIRIAL , DISTT. ADILABAD - 504208 PH :8866302222.

MEDAK

2283. VARUN MOTORS PVT. LTD. (KF01-KF-01), SY.NO.:1486/A3, HYDERABAD ROAD, MEDAK (MDL & TOWN) - 502110 PH:9154953337.

MEDCHAL

2284. AUTOFIN LIMITED (CID1-CID-01), H. NO. 11-27/1, SURVEY NO. 401, MEDCHAL VILLAGE AND MANDAL, DIST. - MEDCHAL. - 501401 PH : 8885040020

METAPALLY

2285. ADARSHA (BJF1-BJF-01), SURVEY NO. 40/U/2 CHOULAMADHI, METPALLY PIN CODE 505325 -505325 PH :8886092222.

MIRYALGUDA

2286. PAVAN MOTORS PVT. LTD (WR01-WR-01), SURVEY NO-940 8943, (OPPOSITE TO MINA ENGINEERING COLLEGE) NARKETPALLY ADDANKI BY-PASS ROAD, MIRYALAGUDA , NALGONDA DISTRICT, ANDHRA PRADESH -508207 PH 3701001399

MOINABAD

2287. GEM MOTORS (INDIA) PVT. LTD. (CFM1-CFN-01), SURVEY NO. 70, PLOT NO. 4, VILLAGE AND GRAM PANCHAYAT – HIMAYATH NAGAR, MANDAL – MOINABAD, DISTRCT – RANGA REDDY. - 500075 PH. 991289128, 7997994845.

NAGARKURNOOL

2288. SRI JAYARAMA MOTORS PVT. LTD. (EV01-EV-01), SURVEY NO.44/A AND 45/A, UYYALWADA VILLAGE, NAGARKURNOOL, TELANGANA - 509209 PH :809699074.

NALGONDA

2289. PAVAN MOTORS PVT. LTD (AN01-AN-01), CHERLAPALLY VILLAGE, NALGONDA ROAD, NALGONDA - 50801 PH :8790902146.

NARAYANKHED

2290. VARUN MOTORS PVT. LTD. (CGI1-CGI-01), D. NO. 1-6-111/25/B/5/M1, SY NO. 57/2, BHUMD. COLONY, GRAM PANCHAYAT 8 MANDAL -NARAYANKHED, DISTRICT – MEDAK, TELANGANA - 502286 PH :9882/10555.

NARAYANPET

2291. SRI JAYARAMA MOTORS PVT, LTD.
(BPG1-BPG-01), SURVEY NO. 46814,
MAHABUBNAGAR ROAD, NARAYANPET TOWN,
DIST.-MAHABUBNAGAR, STATE - TELANGANA. 509210
PH: 8096997701, 7893177448.

NARSAPIJI

2292. KALYANI MOTORS PVT. LTD. (SCX1-SCX-01), SURVEY NO 66, BLOCK NO-19,NARSAPUR.DISTRICT:MEDAK, TELANGANA. - 534275 PH:9573179790.

NIRMAL

2293. ADARSHA AUTOMOTIVES PVT LTD (N601-AA-02), H. NO. 1-1-131, ,SHASTRINAGAR, ,MANCHIRIAL ROAD, DISTT. ADILABAD, NIRMAL - 504106 PH :8886342222.

NIZAMABAD

2294. VARUN MOTORS PVT. LTD. (1H02-1H-01), PLOT NO. GP 1-51/4/1,PANGARA BORGOAN,NIZAMABAD, TELANGANA - 503230 PH :8297848999. 9052080444.

PALWANCHA

2295. VARUN MOTORS PVT. LTD. (HF01-CSS-01), SURVEY NO.758 & 757, NEHRU NAGAR, PALWANCHA (NEW POLANCHA) MANDAL & TOWN, BHADRADRI KOTHAGUDEM DISTT., TELANGANA - 507115 PH :9642252588.

PARGI

2296. VARUN MOTORS PVT. LTD. (CB01-CB0-01), HOUSE NO. 2-356 JANGAIJAH COMPLEX, SURVEY NO. 217/EE4, JAYANTHI NAGAR COLONY, MANDAL – PARGI, DISTRICT – RANGA REDDY. - 510501 PH :988521055.9885200000.

PARKAL

2297. ADARSHA (SEK1-SEK-01), SY.NO 946, H.NO 5-27, VIKAS NAGAR, PARKAL, WARANGAL. -506164 PH :8886742222

PEDAPALLY

2298. ADARSHA AUTOMOTIVES PVT LTD (GKN1-GKN-01), SURVEY NO 142, H NO 185, RANGAMPALLI VILLAGE, PEDDAPALLI , TELANGANA - 505172 PH :8886618155 : 8886672222.

RAMAGUNDAM

2299. ADARSHA AUTOMOTIVES PVT LTD
(BGA1-BGA-01), 5-6-172 SURVEY NO. – 259/B,
MEDIPALLY SHIVAR, RAMAGUNDAM
MUNICIPALITY, DISTRICT – KARIM NAGAR,
ANDHRA PRADESH - 505209
PH: 8886144550.

RAMAYAMPET

2300. VARUN MOTORS PVT. LTD. (CDO1-CDO-01), SURVEY NO. 1626 & 1626/2 SITUATED AT BLOCK NO. 16, RAMAYAMPET, DISTRICT – MEDAK. - 502101 PH :9885208555. 9703803399.

SADHASHIVPET

2301. SAI SERVICE (SF01-SF0-01), PLOT NO. 2, SY NO. 974, GURUNAGAR COLONY, OLD BOMBAY HIGHWAY ROAD, SADASHIVPET, SANGAREDDY DIST. 502291 . - 502291 PH -9966377888.

SANGAREDDY

2302. SAI SERVICE PRIVATE LIMITED (1011-01-05), H.NO.4-8-92/1/4/5, AHMED NAGAR, OPP.GOVT.ITI, SANGAREDDY, MEDAK (DIST), ANDHRA PRADESH - 502001 PH.7661811000.

SATUPALLI

2303. MITHRA AUTO AGENCIES PVT LTD (SHD1-SHD-01), SURVEY NO. 75 NEAR VIVEKANANDA STATUE, SATHUPALLI, KHAMMAM. - 507303 PH :8886063508.

SECUNDERABAD

2304. ACER MOTORS (A DIVISION OF KRISHNAIAH MOTORS PVT. LTD) (K601-K6-01), A1, MOTI VALLEY,TRIMULGHERRY,SECUNDERABAD, -500015 PH:8885088080.

- 2305. AUTOFIN LIMITED (K606-K6-01), SURVEY NO. 33, MEDCHAL ROAD, BOWENPALLY, SECUNDERABAD - 500011 PH :8885040130
- 2306. VARUN MOTORS PVT. LTD. (4603-K6-01), 1-10-176/1, BEHIND VARUN TOWERS-I, OPP. HYDERABAD PUBLIC SCHOOL, BEGUMPET, SECUNDERABAD, HYDERABAD, TELANGANA STATE. - 500016 PH :998-555/245?
- 2307. RKS MOTORS PVT. LTD (K605-K6-01), PLOT NO. 207, TADBUND, SECUNDERABAD. - 500003 PH:9010801004
- 2308. AUTOFIN LIMITED (K606-K6-02), SURVEY NO. 177/B & 178/C SITUATED AT VILLAGE – KOMPALLY, MANDAL – QUTHBULLAPUR, HYDERABAD. - 500090 PH: 8885040126.
- 2309. PAVAN MOTORS PVT. LTD (K608-K6-02), PLOT NO. 1-12, 749, 750, SURVEY NO. 751/2, VENKATADRI NAGAR, NEW MIRJAL GUDA, MALKAJGIRI, SECUNDERABAD, TELANGANA -500047 PH :9121293690.

SHAD NAGAR

2310. SRI JAYARAMA MOTORS (P) LTD. (WS01-WS-01), SERVEY NO.445, FAROOQ NAGAR, SHADNAGAR, MAHABUB NAGAR DISTT. ANDHRA PRADESH. - 500216 PH. 8096996671.

SHAMIRPET

2311. RKS MOTOR PVT. LTD. (SDE1-SDE-01), SHED NO 2-242, MAJEEDPUR CROSS ROADS, SHAMIRPET, MEDCHAL-MALKAJGIRI, TELANGANA - 500078 PH: 9948866618.

SHANKARPALLY

2312. SAI SERVICE PRIVATE LIMITED (CEXT-CEX-01), SURVEY NO. 203, HYDERABAD ROAD OPP. SM FUNCTION HALL ROAD, SHANKARPALLY, RANGA REDDY DISTT. - 501203 PH :9969377888 9912899128. 9703811011.

SIDDIPET

2313. ADARSHA AUTOMOTIVES PVT LTD (CAL1-CAL-01), SURVEY 197/A, VILLAGE – PONNALA, SIDDIPET, IDISTRICT – MEDAK, TELANGANA. - 502103 PH :09703716633, 9160746633.

SIRCILLA

2314. ADARSHA AUTOMOTIVES PVT LTD (BYW1-BYW-01), H. NO. 10-1-7/2, 10-1-7/3, 10-1-7/3/A/1, KARIMNAGAR ROAD, SIRCILLA, DISTRICT – KARIMNAGAR, TELANGANA -505301 PH :8886618155, 8142244131.

SURYAPET

2315. PAVAN MOTORS PVT. LTD (BLC1-BLC-01), SURVEY NO. 493, THALLAGADDA, SURYAPET MANDAL, NALGONDA DISTRICT, ANDHRA PRADESH. - 508213 PH :8790902545.

TALLADA

2316. MITHRA AUTO (SOU1-SOU-01), SURVEY NO 890/A, D.NO 7-8, NARAYANAPURAM, TALLADA, TELANGANA - 507167 PH :8886063527.

TANDUR

2317. VARUN MOTORS PVT. LTD. (CFR1-CFR-01), H. NO. 2-1-20/3, 2-1-20/3/A & 2-1-20/9, PLOT NO. 45, 46, 47, SURVEY NO. 57 OF MALREDDYPALLY VILLAGE, TANDUR MUNICIPALITY, VIKARABAD DISTRICT, TELANGANA. - 501141
PH :8886619370.

THORRUR

2318. ADARSHA AUTOMOTIVES PVT LTD (BYV1-BYV-01), SURVEY NO.1 TO 5, BEARING M. NO.4-1531, VILLAGE & MANDAL THORRUR DISTT. WARANGAL - 506163 PH 9059438007. 7799790527.

TOOPRAN

2319. ADARSHA (SEJ1-SEJ-1), PLOT NO 7&8, SY NO 185,184,179U, NAGULAPALLY VILLAGE, TOOPRAN MANDAL, TELANGANA STATE: TELANGANA CITY: TOOPRAN PIN: 502334 CITY CATEGO - 502334 PH: 9291859954.

VIKARABAD

2320. GEM MOTORS (INDIA) PVT. LTD.

(BYM1-BYM-01), SHOP NO. 3-2-932, VILLAGE –
YENNAPALLY, VIKARABAD MUNCIPALITY,
VIKARABAD, DISTRICT – RANGA REDDY,
TELANGANA. - 501101
PH. 9912349840.

WANAPARTHY

2321. SRI JAYARAMA MOTORS (P) LTD. (WQ01-WQ-01), SURVEY NO.1149, KURNOOL ROAD, WANAPARTHY (A.P.) - 509103 PH:8096903879.

WARANGAL

- 2322. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-02), PLOT NO.10, INDUSTRIAL AREA, MULUGU ROAD, WARRANGAL - 506007 PH: 8886132222.
- 2323. ADARSHA AUTOMOTIVES PVT LTD (D502-D5-03), OPPOSITE TO ORUGALLU FILLING STATION, HUNTER ROAD, SHAYAMPET, HUNAMKONDA, WARANGAL 506001 PH :8886492222.

2324. WIN MOTORS (A UNIT OF BHADRAKALI AUTO-CARE PYL. TLD) (D503-D5-01), SURVEY NO. 16, 16/A & 16/B. OPPOSITE KAKATIYA UNIVERSITY GATE-2, LASHKERSINGARAM REVENUE VILLAGE, HANAMKONDA MANDAL, WARANGAL. - 506 001 PH :8688828010.

2325. WIN MOTORS (A UNIT OF BHADRAKALI AUTOCARE PVT. LTD) (D503-D5-02), PLOT NUMBER 9,10,11 & 13/A, SURVEY NUMBER 148/A&B OF BHEEMRAM VILLAGE, WARANGAL. - 506015

PH:8688828015.

2326. SAI SERVICE PRIVATE LIMITED (BAT1-BAT-01), PLOT NO-5, NEAR IBP PETROL BUNK, NH-9, ALIPUR, ZAHIRABAD, MEDAK (DIST), ANDHRA PRADESH - 502220 PH-76R0005206

TELENGANA

KAGHAZNAGAR

ZAHIRABAD

2327. ADARSHA AUTOMOTIVES (SCN1-SCN-01), H.NO :1-61/3,BORIGAON,KAGHAZNAGAR,KOMARAMB HEEM - 504296 PH :8886092222

PALAKURTHY

2328. WIN MOTORS (SCY1-SCY-01), SURVEY NO 537/B, MAIN RAOD, PALAKURTHY, JANGAON DISTRICTTELANGANA. - 506317 PH:8688838005.

TRIPURA

AGARTALA

- 2329. JAIN UDYOG (6901-69-01), ARUNDHUTI NAGAR, OPP. INDUSTRIAL ESTATE, AGARTALA - 799003 PH:9862149275.
- 2330. JAIN UDYOG (6901-69-05), 58-B/C, INDUSTRIAL AREA ARUNDHATI NAGAR, AGARTALA. - 799003 PH:70057 71216.
- JAIN UDYOG (6901-69-06), KHATIAN NO. 1843, MOUJA & TEHSIL – KHAYERPUR, JIRANIA SUBDIVISION, AGARTALA - 799008 PH :97746 16831.

AMARPUR

2332. JAIN UDYOG (CVR1-CVR-01), NEAR MOTOR STAND, AMARPUR, TRIPURA - 799101 PH:97748 45751.

AMBASSA

 JAIN UDYOG (CDT1-CDT-01), A.A. ROAD, OPPOSITE OF CHANDRAI PARA HS SCHOOL, AMBASSA, DHALAI, TRIPURA. - 799289 PH: 70052 88437.

DHARMANAGAR

2334. JAIN UDYOG (6901-RN-03), DHARMANAGAR COLLEGE ROAD, DHARMANAGAR, TRIPURA(NORTH). - 799250 PH :97747 93164

UDAIPUR

2335. JAIN UDYOG (YU01-YU-01), DHWAJANAGAR INDUSTRIAL ESTATE, UDAIPUR, TRIPURA (SOUTH) - 799116 PH : 9774020152.

UP

BULANDSHAHAR

2336. SK UNIVERSE (M502-M5-02), KHASRA NO.2261, NEAR T POINT , BYPASS SIKARPUR ROAD ,BULANDSHAHR - 203001 PH : 7055118430.

DIBYAPUR

2337. KULDEEP MOTORS (SLA1-SLA-01), AURAIYYA ROAD, DIBIYAPUR - 206244 PH:9235258425.

MEERUT

2338. TR SAWHNEY (4808-48-01), MUNICIPAL NO 101, KHASRA NO 1926/ MINJUMLA & 1927/1, MAHAL LEKHRAJ MUJBITA, MAIN DELHI ROAD, MEERUT, UP - 250002 - 250002 PH :9999163125.

MOOSANAGAR

2339. MY CAR (SLP1-SLP-01), VILL GAUSGANJ, POST MOOSANAGAR, KANPUR DEHAT, UTTAR PRADESH. - 209208 PH :97929 70005.

UTTAR PRADESH

AGRA

- 2340. MADHUSUDAN MOTORS PVT LTD (6603-66-01), B-5 LAWYERS COLONY, BYE PASS ROAD, AGRA - 282005 PH :531102-05.
- 2341. MADHUSUDAN MOTORS PVT LTD (6603-66-02), GANESH GANJ, PRATAPPURA, AGRA - 282001 PH :9837097887.
- 2342. MADHUSUDAN MOTORS PVT LTD (6603-66-03), 6-A, VIBHAV INDUSTRIAL STATE, AGRA -282007 PH :3299221.
- 2343. MADHUSUDAN MOTORS PVT LTD (6603-66-04), 26/253, SULTAN GANJ KI PULIA, MAUZA LASKARPUR, AGRA - 283203 PH :9837097894.
- 2344. PREM MOTORS PVT. LTD. (6605-66-01).
 KHASRA NO.382,386,387,388, VILLAGE
 ARTHONI, DELHI-AGRA HIGHWAY, NH-2, AGRA,
 UTTAR PRADESH 282007
 PH -9690010839.
- 2345. KTL PVT. LTD. (6606-66-01), MUGHAL ROAD, KAMLA NAGAR, AGRA - 282004 PH :8449715033,8449715099.

- 2346. PREM MOTORS PVT. LTD. (6607-66-01), 45, OPPOSITE AGRA COLLEGE, GOKULPURA, AGRA, UTTAR PRADESH - 282002 PH :9690010799
- 2347. KTL PVT. LTD. (6606-66-02), KHASRA NO. 171, SEWLA JAT, GWALIOR ROAD, AGRA, UTTAR PRADESH - 282001 PH :8449715099.
- 2348. MERAK VEHICLES (6609-66-01), KHASRA NO 65 & 74, MAUZA MOHAMMADPUR, AGRA-DELHI ROAD (NH-2), SIKANDRA, AGRA UTTAR PRADESH-282007. - 282007 PH 9604286139

AKBARPUR

- 2349. KTL PVT. LTD. (2801-LH-03), KANPUR ROAD, AKBARPUR - 209206 PH :7408409348.
- 2350. SMARTWHEELS PVT. LTD. (7201-LH-08), TANDA ROAD, VILL-BUDHAEEPUR, PO-KATRIYA YAKOOBPUR, AKBARPUR, DIST-AMBEDKAR NAGAR (U.P.) - 224122 PH. 7705803248

ALIGARH

- 2351. DEV MOTORS (P) LTD (B601-B6-01), NEAR BANNA DEVI, G.T.ROAD, ALIGARH - 202001 PH -521771
- 2352. DEV MOTORS (B601-B6-04), PLOT NO 97, VILLAGE SIKANDERPUR, BHUKRAVALI, GT ROAD BYE PASS, ALIGARH - 202002 PH:7351345577.

ALLAHABAD

2353. AMITDEEP MOTORS (2901-29-01), 26 SULEM SARAI, G.T ROAD, ALLAHABAD - 211001 PH:8948122749, 9026111339, 7738555692, 9839890333, 9936413399.

AMETHI

2354. KTL AUTOMOBILE PVT. LTD. (BBB2-BBB-01), PLOT NO – E 32, INDUSTRIAL AREA TEKARIA, UPSIDC, GAURIGANJ, DIST: C.S.M.NAGAR -227409 PH: 7379557377.

AMROHA

2355. AKANKSHA AUTOMOBILES PVT. LTD. (AOJ-AQ-01), AMROHA – JOVA ROAD, NEAR PUNJAB NATIONAL BANK, AMROHA, UTTAR PRADESH, PIN CODE: 244221 - 244221 PH. 7895400003.

ANPARA

2356. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (NJ02-NJ-01), KAHUWA NALA, AURI-BINA ROAD, AURI ANPARA, DISTRICT — SONEBHADRA. - 232101 PH : 7052547903, 9721905002, 9151154306, 9450544961.

AONLA

2357. KAVISHA MOTORS PVT LTD (CVI1-CVI-01), COMMERCIAL PLOT, RAN NAGAR ROAD, NEAR MUNICIPALITY OFFICE, TEHSIL - AONLA. DIST., BAREILLY, STATE- UTTAR PRADESH. - 243301 PH :07895980222, 07895980230.

AURAI

2358. VARANASI MOTORS PVT LTD (CBM1-CBM-01), KHATA / KHATAUNI NO. 00045, GT ROAD (EHAK BHAURA), OPP. CHINI MILL, VILLAGE & TEHSIL AURAI, DISTT: BHADHOI, UTTARPRADESH, PIN 2221 301 - 2221301 PH :983360662. 7617002786.

AURAIYA

2359. KULDEEP MOTORS (QJ01-QJ-01), NEAR INDIAN OIL TIRAHA, KANPUR ROAD, AURAIYA. - 206241 PH:9235358444.

AZAMGARH

2360. DEEP MOTORS (K501-K5-01), HARBANSHPUR NARAULI, AZAMGARH - 276001 PH :9838072905.

BARRAI A

 AKANKSHA AUTOMOBILES PVT. LTD. (SJU1-SJU-01), CHANDAUSI ROAD, BABRALA, DISTRICT SAMBHAL, UTTAR PRADESH. - 243751 PH:9837649177.

BACHRAWAN

2362. KTL AUTOMOBILE PVT. LTD. (CGX2-CGX-01), VISHNUPUR, PHARWAN, RAEBARELI-LUCKNOW ROAD, DIST. -RAEBARELI. - 229301 PH : 99184512222.

BAH

2363. KTL PVT. LTD. (CHI1-CHI-01), 16B, DHOBAIR, VILLAGE - BAH, DIST.-AGRA, UTTAR PRADESH. - 283104

PH:7055707169, 8449715033.

BAHERI

2364. KAVISHA MOTORS PVT LTD (BSB1-BSB-01), KASRA NO. 530, 531, 532, 533. NAINITAL ROAD, OPP. RAMILLA GROUND, BAHERI, DISTRICT – BAREILLY, UTTAR PRADESH - 243201 PH:875600000. F067698666.

BAHRAICH

2365. ANAND MOTORS AGENCIES LTD (1301-5Z-05), LUCKNOW ROAD,BEHRAICH,UTTAR PRADESH -271801

PH:9519596080.

BALLIA

2366. DEEP MOTORS (K501-BA-03), MAIDEYPUR, RAJDHANI ROAD, BALLIA - 277001 PH :9838072917.

BALRAMPUR

2367. ANAND MOTORS AGENCIES LTD (XB01-XB-01), NEAR BALRAMPUR CHINI MILLS, GONDA ROAD,BALRAMPUR-UTTAR PRADESH - 271201 PH:6307995976.

BANDA

- 2368. MY CAR PVT. LTD. (2803-KV-03), KALUKUAN, TINDWARI ROAD, BANDA - 210001 PH:9792971223.
- 2369. SUMITRA DS MOTORS (SPB1-01-SPB-01), PURANPUR ROAD, BANDA, TEHSIL BANDA, THANA BANDA, DISTT. SHAHJAHANPUR – U.P. -242042

PH:9336408074. BANSI

2370. ARBIT AUTOMOBILES PVT LTD (GMD1-GMD-01), KHASRA NO. 66 M, GRAM: BHAWNI, TAPPA:

KUNDARANA, PARGANA: BANSI EAST, TEHSIL BANSI, DISTT: SIDARTHNAGAR - 272153 PH:89534 12821.

BANTHRA

 MEGA MOTORS (SGQ1-SGQ-01), KHASRA NO.1628 AMARPUR, SIKANDARPUR MARKET, BANTHRA, KANPUR ROAD LUCKNOW - 226401 PH :9919101456.

BARABANKI

2372. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-6A-03), VILL. DHARSANIA, LUCKNOW ROAD, NAWABGANJ, BARABANKI - 225001 PH. 9838075960.

BARAUT

 TANYA AUTOMOBILES (LL02-LL-01), 240/2 SHAHPUR-BADOLI, DELHI SAHARANPUR ROAD, BARAUT, BAGHPAT, UTTAR PRADESH. - 250611 PH:7055300019.

BAREILLY

- 2374. CORAL MOTORS (P) LTD. (5602-56-01), STATION ROAD, BAREILLY - 243001 PH:559191.
- 2375. CORAL MOTORS (P) LTD. (5602-56-03), PILIBHIT BYE PASS ROAD, EXECUTIVE CLUB CROSSING, BAREILLY, UTTAR PRADESH - 243002 PH 1681-2564022
- 2376. KAVISHA MOTORS PVT LTD (5601-56-01), 4TH KM, RAMPUR ROAD, CLUTTER BUCKGANJ, BAREILLY - 243502 PH: 8756000000, 7607696666
- 2377. ETERNITY MOTORS LLP (5603-56-01), KHASRA NO. 803/2, PILIBHIT BYPASS ROAD, PEER BAHORA, OPP, FUN CITY, BAREILLY, UTTAR PRADESH. - 243001 PH. 9105555746.

BASTI

2378. SMARTWHEELS PVT. LTD. (7201-6B-05), MANORI CHAURAHA, DUMARIYA GANJ ROAD, BASTI - 270002 PH : 286294

BEHTA

2379. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (GMI1-GMI-01), KHASRA NO. 254, OPPOSITE SANGAM MOTORS, KURSI ROAD, BEHTA - 226026 PH :6388901514.

BHADOHI

2380. VARANASI MOTORS PVT. LTD. (8402-TT-02), VARNASI ROAD, BHADOHI - 221401 PH :9838360662

BHINGA

2381. ANAND MOTORS (BVG1-BVG-01), PATNAKHARGAURA, BHINGA, SHRAVASTI -271831 PH :9415013059.

BHOJPUR

2382. MOTORCRAFT SALES INDIA PVT LTD (SDQ1-SDQ-01), OPPOSITE PRIMARY GOVERNMENT SCHOOL, HAPUR ROAD, VILLAGE BHOJPUR, TEHSIL – MODINAGAR, DISTRICT – GHAZIABAD. - 201204 PH :9410038456.

BIJNOR

2383. SHAKUMBARI AUTOMOBILES (P) LTD (6001-60-01), PLOT & KHASRA NO. 253/3 & 258/1 ADJACENT KHEDI CHAURAHA, NEAR PULKIT HOSPITAL, DELHI-BLINOR HIGHWAY, BLINOR, DIST. – BIJNOR, UTTAR PRADESH. - 246701 PH :8630881409.

BILARI

2384. AKANKSHA AUTOMOBILES PVT. LTD. (SDM1-SDM-01), 2KM-BILARI NH 509, NEAR SBS SCHOOL, BILARI, MORADABAD 244001 - 244001 PH :9927459707.

BILASPUR

2385. AKANKSHA AUTOMOBILES PVT. LTD. (BCN1-BCN-01), NH-87, OPPOSITE SHAGUN BANQUET HALL, NEAR MILTON ACADEMY SCHOOL, RAMPUR NAINITAL ROAD, BILASPUR, DISTRICT – RAMPUR. - 244921 PH: 9917745000.

BISALPUR

2386. CORAL MOTORS PVT LTD (CXB1-CXB-01), KHASRA NO. 668, VILLAGE: BISALPUR, DISTT: PILIBHIT, UTTAR PRADESH - 262201 PH:9837891846.

BISWAN

2387. CONCEPT CARS LIMITED (SEW1-SEW-01), BILJHARIYA, OPPOSITE-555, BRICK FIELD, BISWAN - 261201 - 261201 PH -7607696666

BUDAUN

2388. CORAL MOTORS (P) LTD. (5602-NF-04), PLOT NO.- 72, BAREILY-MATHURA HIGHWAY, BUDAUN, UTTAR PRADESH - 132103 PH :9837891846.

BULANDSHAHR

2389. SK UNIVERSE (M502-M5-01), KHASRA NO 561, BHOOR, OPP PANDIT PETROL PUMP, BULANSHAHR - 203001 PH - 9219694600

CHAKIA

2390. STAR CARS (A UNIT OF SARASWATI VEHICLES LLP) (CJH1-CJH-01), KATHSILA NAHER, NEAR SAINT JOHN'S SCHOOL CHAKIA, DISTRICT – CHANDAULI. - 232101 PH :9450544961.

CHANDAUSI

 AKANKSHA AUTOMOBILES PVT. LTD. (XA01-XA-01), AZAD ROAD, NEAR ROADWAYS, CHANDAUSI (BHEEM NAGAR) - 202412 PH: 7247800008.

CHAURI CHAURA

2392. ARBIT AUTOMOBILES (SIR1-SIR-01), ARAZI NO 561 DOMARI KHURD, CHAURI CHAURA, GORAKHPUR - 273201 PH:8953412821

CHIBRAMAU

2393. KTL PVT. LTD. (BMY1-BMY-01), PLOT GHATA NO. 70, MAUJA - LALAKPUR, VILLAGE -CHHIBRAMAU, DIST.-KANNAUJ, UTTAR PRADES. - 209721 PH:7408409200. 9414113666.

CHITRASENPUR

 AGR (SMM-SMM-01), KHASRA NO-194, CHITRASENPUR, KACHHUWA ROAD, VARANASI, PIN -221313 - 221313 PH: 9889803355.

DALMAU

2395. KTL AUTOMOBIELS (SGZ1-SGZ-01), DALMAU ROAD, OPPOSITE BHAGIRATHI GUEST HOUSE - 229203 PH:9918451222.

DANKAUR

2396. MOTORCRAFT SALES (HG01-HG-01), OPP. SHRI DRONACHARYA DEGREE COLLEGE, DANKAUR, DIST. - GAUTAM BUDH NAGAR, HARYANA. -203201 PH. 9810289355.

DEOBAND

2397. ATELIER AUTOMOBILES (XK02-XK-01), OPPOSITE CIVIL COURT, MUZZAFARNAGAR HIGHWAY, DEOBAND - 247001 PH :7500220011.

DEORIA

2398. SMARTWHEELS PVT. LTD. (M601-M6-01), PLOT NO. C-7, AND SHED NO. D-3, GOVERNMENT INDUSTRIAL ESTATE MEHRA, DEORIA, DIST. -DEORIA, UTTAR PRADESH. - 274001 PH :7705800602.

DHAMPUR

2399. SHAKUMBARI AUTOMOBILES (P) LTD (CPQ1-CPQ-01), KHASRA NO. 205, OPPOSITE, UHSA SMAPAK SCHOOL, MORADABAD ROAD, TEHSIL - DHAMPUR, MOJA - ALEHPUR, DIST. -BUNOR, UTTAR PRADESH. - 246761 PH - 867088145R

DOMARIAGANJ

2400. SMARTWHEELS (SMW1-SMW-01), VILL & POST – CHAUKHARA, DOMARIAGANJ, DISTT – SIDDHARTH NAGAR - 272193 PH :7705800602.

ETAH

 MADHUSUDAN VEHICLES PRIVATE LTD. (XG01-XG-01), 472 ASROLI, GT ROAD, ETAH -207125 PH :9837097894.

ETAWAH

2402. KULDEEP MOTORS (6E01-6E-01), PAKKA BAGH, KANPUR ROAD, ETAWAH - 206001 PH :257029.

FAIZABAD

2403. SMARTWHEELS PVT. LTD. (7201-F5-02), SAHADAT GANJ, LUCKNOW ROAD, FAIZABAD, UTTAR PRADESH. - 224001 PH:7705803245.

FARIDPUR

2404. KAVISHA MOTORS PVT LTD (CEM1-CEM-01), GATE NO. 216, KASBA SARAI, TEHSIL – FARIDPUR, DISTRICT – BAREILLY, UTTAR PRADESH. - 243503 PH.07895980222. 07895980300.

FARRUKHABAD

2405. MY CAR PVT. LTD. (2803-TS-04), NEKPUR KALAN, FARRUKHABAD - 209625 PH :9792970093.

FATEHABAD

2406. KTI. PVT. LTD. (BLQ1-BLQ-01), KHASRA NO. 730/731, GRAM MAUJA, MADAYNA SIKRARA MODE, FATEHABAD, DISTRICT – AGRA, UTTAR PRADESH - 283111 PH :9754979019.

FATEHPUR

2407. KTL PVT. LTD. (2801-TM-04), NH-2, OPP. RTO OFFICE, KANPUR ROAD, FATEHPUR - 212601 PH:7408409383, 7408400000.

FEROZABAD

2408. MADHUSUDAN VEHICLES PRIVATE LTD. (DF01-DF-01), 746, ALI NAGAR KEJRA, NEAR RAJA KA TAL CROSSING, NH 2, FEROZABAD -283203 PH 9680003077.

GAJRAULA

2409. AKANKSHA AUTOMOBILES PVT. LTD. (XDD1-XD-01), JHANAKPURI OPPOSITE RELIANCE PETROL PUMP, DELHI ROAD, GAJRAULA - 244235 PH 9690518865

GHAZIABAD

2410. ROHAN MOTORS LTD. (5904-59-01), 432 MUKAND NAGAR, G.T.ROAD, GHAZIABAD -201001 PH: 3971466644

011-204170810, +911204170816, +911204170826, +911204170819.

2411. REGENT AUTOLINKS (P) LTD (5902-59-01), A-10/9 INDUSTRIAL AREA, SITE NO 3, MEERUT ROAD, GHAZIABAD - 201001 PH

:0120-4641900,904,911,8744042111,9999740464,9711127008.

2412. ROHAN MOTORS (5904-59-02), PLOT NO.46, MEERUT-DELHI ROAD, MORTA, GHAZIABAD -201102

PH:09310404354, 9971466644.

2413. T.R. SAWHNEY MOTORS PVT LTD (5905-59-01), PLOT NO. 96, RAJINDER NAGAR INDUSTRIAL AREA, MOHAN NAGAR, GHAZIABAD, DISTT. -GHAZIABAD, U.P. - 201007 PH :9999052148: 9999130612.

2414. SNV AUTO (5906-59-01), PLOT NO. 15, SOUTH SIDE GT ROAD INDUSTRIAL AREA, GHAZIABAD, UTTAR PRADESH - 201001 - 201001 PH 9650324325.

GHAZIPUR

2415. AGR AUTOMOBILES PVT. LTD. (8403-KT-03), RKBK PETROL PUMP, NEAR BANSI BAZAR, GAZIPUR - 2333001 PH :2361136.

GHIROR

2416. KULDEEP MOTORS (CVA1-CVA-01), KARHAL ROAD, TEHSIL – GHIROR, DISTRICT – MAINPURI, UTTAR PRADESH. - 205121 PH:9536755555.

GONDA

2417. SMARTWHEELS PVT. LTD. (7201-FZ-07), JANKI NAGAR, OPP INDIAN OIL DEPOT, BAHRAICH ROAD, GONDA, UTTAR PRADESH, - 271001 PH:7705803261.

GORAKHPUR

2418. SMARTWHEELS PVT. LTD. (7201-72-01), MOHADDIPUR, (NEAR RAMGARH TAL), GORAKHPUR (U.P.) - 273012 PH :7705803152.

2419. SMARTWHEELS PVT. LTD. (7201-72-06), NEAR T B HOSPITAL, LACHCHIPUR, NEPAL ROAD, GORAKHPUR - 273012 PH :7705803109.

2420. SMARTWHEELS PVT. LTD. (7202-72-01), PLOT NO.AL-4, SECTOR-9, GIDA, GORAKHPUR. - 273209

PH:9235401004.

2421. ARBIT AUTOMOBILES PVT LTD (7203-72-01), ARAZI NO. 66/1/1 MI & 66/2/1MI, 66 MI, MAUZA -MAHEWA MUSTAKIL, NEAR FALMANDI CHOWK, TRANSPORT NAGAR, GORAKHPUR, UTTAR PRADESH - 273016 PH : 3953412821.

GOSAIGANJ

2422. BRIGHT 4 WHEEL SALES PVT. LTD. (CWK1-CWK-01), KHASRA NO. 24, VILLAGE -SHEKHANPUR, PARGANA MOHANLALGANJ, TEHSIL - MOHANLALGANJ, DIST.-LUCKNOW, UTTAR PRADESH. - 226501 PH -9838075090

GREATER NOIDA

2423. ROHAN MOTORS LTD. (T201-T2-01), 63-A, UDYOG VIHAR, GREATER NOIDA, UTTER PRADESH - 201306 PH :4513739, 4513736, 4513734, 45137009958506111.

HAIDERGARH

2424. BRIGHT 4 WHEEL SALES PVT. LTD.
(CVU1-CVU-01), PROPERTY SHOP NO. 5, 6 AND 7, VILLAGE - GOTAUNA, PARGANA - HAIDERGARH, TEHSIL - HAIDERGARH, DISTRICT - BARABANKI. - 225124 PH :9935275786, 9338075929.

HAMIRPUR

2425. KTL PVT. LTD. (QH01-QH-01), VILLAGE RAMEDI,KANPUR ROAD, HAMIRPUR - 210301 PH:7704907587.

HAPUR

2426. ROHAN MOTORS (6G01-6G-01), DELHI-HAPUR ROAD, OPPOSITE SSV INTERCOLLEGE,HAPUR, DISTRICT- GHAZIABAD - 245101 PH:8476853930, 9536129292.

HARDOI

2427. CONCEPT CARS PVT. LTD. (QE01-QE-01), NANAK GANJ, LUCKNOW ROAD, HARDOI -241001 PH :8756000000, 7607696666. 2428. CONCEPT CARS PVT. LTD. (QE01-QE-04), PLOT NO. 1609 & 1605 GANGA BUX PURVA, BILGRAM ROAD, HARDOI KANPUR HIGHWAY, HARDOI, UTTAR PRADESH. - 241001 PH:7607696666, 8756000000.

HATHRAS

2429. DEV MOTORS (P) LTD (B601-LP-03), NEAR NAGLA UMMED, ALIGARH ROAD, HATHRAS -204101 PH :9917435500.

IGLAS

2430. DEV MOTORS (SOD1-01-SOD-01), MATHURA ROAD, IGLAS, DISTRICT ALIGARH. - 202124 PH 9837549000

ITUNJA

2431. BRIGHT 4 WHEEL (SJD1-01-SJD-01), 90M GATA GRAM MANDOLI, ITTAUNJA, LUCKNOW, UTTAR PRADESH-226203. - 226203 PH :7011482503.

JAGDISHPUR

2432. BRIGHT 4 WHEEL SALES PVT. LTD. (XC01-XC-01), KATHORA,MUSAFIRKHANA,LUCKNOW SULTANPUR ROAD,JAGDISPUR-UTTAR PRADESH - 227817 PH -9721526961 , 9628374814.

JAGNER

2433. MERAK VEHICLES (SPJ1-SPJ-01), SHRI RAM GARDEN, AGRA ROAD, NEAR RADHA KRISHNA MANDHIR, JAGNER, UTTAR PRADESH, 283115 -283115 PH. 7896500400.

JALALABAD

2434. SIMITRA DS MOTORS PVT. LTD. (GJX1-GJX-01), GRAM: SUJAWALPUR, BARIELLY ROAD, TEHSIL: JALALBAD, DIST. SHAHJHANPUR - 242221 PH: 933408074, 9897019488.

JAUNPUR

2435. KIRTIKUNJ AUTOMOBILES PVT. LTD. (6H01-6H-01), KHANPUR AKBAR, KUTTUPUR TIRAHA - 222001 PH : 9554051026

JHANSI

2436. SURI AUTOMOBILES (6001-60-01), BALAJI UNNA ROAD, ANSAL COLONY, JHANSI PIN – 284002. -284002

PH : 3881811383.

2437. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (6002-60-01), PLOT NO 486, 487, 488, 489 AND 477 (PATTA NUMBERS), MAUZA - KOCCHABHANWAR, BLOCK - BADAGAON, TEHSIL AND DISTT - JHANSI. - 284128
PH : 9889440999.

KANNAUJ

2438. KTL PVT. LTD. (2801-EM-05), PLOT NO. - 377, AKBARPUR, KANNAUJ - 209725 PH :7408409305.

KANPUR

- 2439. KTL PVT. LTD. (2801-28-01), 9/46, BENAJHABAR ROAD, HARSH NAGAR, KANPUR - 208002 PH:7408409341.
- 2440. MY CAR PVT. LTD. (2803-28-01), 84/54 C, JARIB CHOWKI ,G.T. ROAD, KANPUR - 208003 PH - 9792970511
- 2441. KTL PVT. LTD. (2801-28-02), SHVAATRA KRISHNA NAGAR, G T ROAD, KANPUR - 208007 PH '7408409253
- 2442. MY CAR PVT. LTD. (2803-28-02), C-16, SITE-1, PANKI INDUSTRIAL AREA, KANPUR - 208022 PH 9792970086
- 2443. S B CARS PVT.LTD (2806-28-01), 77B , FAZALGANZ, KANPUR - 208012 PH : 2241660
- 2444. MY CAR PVT. LTD. (2803-28-05), 88, BLOCK-T, FACTORY AREA, FAZALGANJ, KANPUR - 208004 PH: 9792970081
- 2445. S B CARS PVT.LTD (2806-28-05), 1/6-7 AMBEDKAR PURAM, AWAS VIKASH, KALYANPUR, KANPUR - 208017 PH -7408525252
- 2446. KULDEEP MOTORS KANPUR LLP. (2808-28-01), BUKHAND NO. 756, 756A, 757, BLOCK: W, YOJNA: 2, JUHI KALAN, BARRA BYE PASS, KANPUR. - 208017 PH :9076608701.
- 2447. KTL PVT. LTD. (2801-28-07), ARAZI NO. 1110, VILLAGE BAIRI, AKBARPUR, KACHHAR, INDIRA NAGAR, KANPUR, UTTAR PRADESH - 208 026 PH:7408409379.

KARW

2448. MY CAR PVT. LTD. (CBU1-CBU-01), ARAJI NO. 58, MAUJA - AMANPUR, TEHSIL - KARWI, DIST. -CHITRAKOOT, UTTAR PRADESH. - 210205 PH :9839029868, 9792970391.

KASGANJ

2449. MADHUSUDAN VEHICLES PRIVATE LTD. (BVX1-BVX-01), ARAJI NO. 646, SAURO ROAD, KASGANJ, DISTRICT - KASGANJ, UTTAR PRADESH. - 207123 PH. 9837097863, 9690003034.

KASIA

2450. ARBIT AUTOMOBILES PVT LTD (GMJ1-GMJ-01), MAUJA BHAISAHA, HETIMPUR KASIA, KUSHINAGAR, UTTAR PRADESH - 274206 PH: 8953412821

KATRA

2451. SUMITRA DS (SHY1-SHY-01), GRAM: SAALPUR NAVADIYAM, NH24, KATRA, TEHSIL - TILHAR, SHAHJAHANPUR - 242301 PH 9336408074

KAYAMGANJ

2452. MY CAR PVT. LTD. (CBV1-CBV-01), BYE PASS ROAD, NEAR KHAN PETROL PUMP, VILLAGE: KAYAMGANJ, DISTT: FARUKHABAD - 209502 PH:9839029868, 9792970391.

KHAIR

2453. DEV MOTORS (SHQ1-SHQ-01), PLOT 117, ALIGARH PALWAL ROAD, VILLAGE CHAMAN NAGARIYA, KHAIR - 202138 PH 17351345577

KHANDAULI

2454. MADHUSUDAN MOTORS PVT LTD
(BVV1-BVV-01), KHASRA NO. 97,
AGRA-SADABAD, HATHRAS ROAD, OPP. HDFC
BANK, VILL-KHANDAULI, TEHSIL ETHMADPUR,
DIST. AGRA, UTTAR PRADESH. - 283126
PH. 9837097863, 9690003034.

KHUTAR

2455. SUMITRA DS MOTORS PVT LTD (CIO1-CIO-01), VILLAGE – NARAINPUR, VIKRAMPUR GOLA ROAD, KHUTAR, DISTRICT – SHAHJAHANPUR, UTTAR PRADESH. - 242405 PH :9336408074.

KIRAOL

2456. PREM MOTORS PVT. LTD. (BJZ1-BJZ-01), GOVIND PALACE, NEAR KIRAWALI TEHSIL, AGRA – JAIPUR HIGHWAY, KIRAWALI, DISTRICT – AGRA, UTTAR PRADESH. - 283122 PH:9690010799.

KOSI

2457. UMA MOTORS PVT. LTD. (CPV1-CPV-01), KHASRA NO. 245, CITY - KOSI, DIST.-MATHURA. - 281004 PH: 9997683333. 9997511006.

KUBERPUR

2458. KTL PVT. LTD. (6606-CRU-04), KHASRA NO.248,249,251, NAWALPUR, BHAGPUR, POST-ETHMADPUR, NH-2, KUBERPUR, AGRA, UTTAR PRADESH - 282006 PH :8449715099

KUNDA

2459. SARASWATI MOTORS (CBF2-CBF-01), ALLAHABAD-LUCKNOW HIGHWAY, KUNDA, DISTRICT PRATAPGARH. - 230204 PH :8090854005.

LAKHIMPUR

2460. SUMITRA DS MOTORS PVT LTD (W201-M3-02), GATA NO. 66, LRP ROAD, TOWARDS GOLA, LAKHIMPUR KHERI - 242001 PH:7522888333, 9415770000. 2461. SUMITRA DS (M301-M3-01), GATE NO 604, PALIA ROAD, NEAR FCI WEAR HOUSE, VILLAGE -BHARDSARIYA, KHERI, LAKHIMPUR - 262702 PH :7522888333, 9415770000.

LALGANJ

2462. KTL AUTOMOBILE PVT. LTD. (CSL2-CSL-01), JEEWAN DEEP COMPOUND, ALLAHABAD ROAD, LALGANJ, DISTT. RAIBARELLI - 229206 PH: 9918451222.

LALITPUR

2463. SURI AUTOMOBILES (6001-6J-03), JAHANSI SAGAR ROAD, LALITPUR - 284001 PH :9451496015.

LUCKNOW

2464. ANAND MOTORS AGENCIES LTD (1301-13-01), 11TH KMS, FAIZABAD ROAD, CHINHAT, LUCKNOW - 227105 PH :7080000462.

2465. KTL AUTOMOBILE PVT. LTD. (1311-13-01), MATIYARI CHAURAHA, CHINNHAT, FAIZABAD ROAD, LUCKNOW - 227105 PH -7408411453

2466. ANAND MOTORS AGENCIES LTD (1301-13-02), 47, NEHRU ROAD, SADAR BAZAR, LUCKNOW -226016 PH :3098257, 7080000463.

2467. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-01), 11/CP- 6, VIKAS NAGAR, RING ROAD, LUCKNOW - 226022 PH :2739501.

2468. ONE UP MOTORS INDIA PVT. LTD. (1306-13-01), C-16A, TRANSPORT NAGAR, KANPUR ROAD, LUCKNOW, KANPUR ROAD, LUCKNOW - 226012 PH:9918100801.

2469. KTL AUTOMOBILE PVT. LTD. (1311-13-02), INDRA NAGAR, OPP. HALFAIZABAD ROAD, LUCKNOW, UTTAR PRADESH - 226016 PH :7408411478.

2470. KTL AUTOMOBILE PVT. LTD. (1311-13-03). BEHIND N S KOHLI PETROL PUMP, SARDARI KHEDA, KANPUR ROAD, ALAMBAGH, LUCKNOW - 226005 PH :9918451222.

2471. ANAND MOTORS AGENCIES LTD (1301-13-04), G-3, LDA MARKET, ALIGANJ, LUCKNOW -226024 PH :4103406/407/408. 7080000464.

2472. ONE UP MOTORS INDIA PVT. LTD. (1306-13-03), CHHANNILAL CROSSING, MANDIR MARG, LUCKNOW - 226005 PH :9918500451.

2473. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-02), PARGANNA MOHANNA, STP ROAD, CHATMEEL, LUCKNOW - 226021 PH:9838075960.

- 2474. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-II-04), PLOT NO: 57 TO 60, KAUSHALABAD, BADHAULI BKT, PARGANA MOHANNA, SITAPUR ROAD, BAKSHI KA TALAB, LUCKNOW - 226020 PH. 7317040010
- 2475. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-05), PLOT NO. 68, BUTLER GANJ, BAALU ADDA, LUCKNOW. - 226001 PH:8756000000, 7607696666.
- 2476. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-01), CP1 (COMMERCIAL PLOT 1), VIBHAV KHAND, GOMTI NAGAR, LUCKNOW. -226 010 PH. 9935096417, 7054631666.
- 2477. KTL AUTOMOBILE PVT. LTD. (1311-13-07), B-6/1A, AMAUSI INDUSTRIAL AREA, NADARGANJ, LUCKNOW, UTTAR PRADESH. -226008 PH. 7800007376
- 2478. BRIGHT 4 WHEEL SALES PVT. LTD. (1305-13-06), KHASRA NO. 418, MISHRAPUR PARGANA MAHONA, KURSI ROAD, LUCKNOW. -226022 PH. 9935275786.
- 2479. ONE UP MOTORS INDIA PVT. LTD. (1314-13-01), KHASRA NO. 20 TO 25, 30, 35, 37, 42, 43, 45, 47, 48, 49, 67, 68, 71 & 99, RAJJABGANJ, HARDOI ROAD, LUCKNOW. - 226003 PH :9821026545, 7800005200.
- 2480. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (1313-13-02), KHASRA NO. 614, VILLAGE: BHADRUKH, VIP CANNEL RINGI ROAD, DEVI KHERA, TELIBAGH (VIP ROAD), TEHSIL: SAROUNI NAGAR, LUCKNOW, USAR PRADESH 226002 - 226002 PH 4388901514

MADHOGANJ

2481. CONCEPT CARS PVT. LTD. (BHI1-BHI-01), KANPUR ROAD, NEAR RAILWAY CROSSING, MADHOGANJ DIST. HARDOI. - 241001 PH:220016, 220064, 7607696666.

MAHARAJGANJ

- 2482. SMARTWHEELS PVT. LTD. (EI01-EI-01), NEAR PHARENDA TAXI STAND, NAHAR ROAD, PIPAR DEORA, MAHARAJGANJ, DIST. MAHARAJGANJ, UTTAR PRADESH. - 273303 PH:7705800602. 7705803109.
- 2483. KTL AUTOMOBILE PVT. LTD. (CSM2-CSM-01), MUNNA MARKET HAIDERGARH ROAD TOWN AREA, TEHSIL – MAHARAJGANG, DISTRICT – RAIBAREILLY, UTTAR PRADESH. - 229306 PH:99184512222.

MAHMUDABAD

2484. CONCEPT CARS PVT. LTD. (AAN1-AAN-01), IN FRONT OF POWER HOUSE, SIDAULI ROAD, MAHMOODABAD (U.P.) - 261203 PH:7607696666. 8756000000.

MAHOBA

- 2485. SURI AUTOMOBILES (6001-RM-02), NEAR PARMANAND CHOWK, GANDHINAGAR, MAHOBA, UTTAR PRADESH, - 284001 PH:244344, 9451496015.
- 2486. VELOCITY MOTORS (RM02-RM-01), BAJRANG CHOWK, SAGAR-KANPUR HIGHWAY, MAHOBA -210427 PH :9560998709.

MAHOLI

2487. CONCEPT CARS PVT. LTD. (CWS1-CWS-01), MUSKAN TRACTORS, NEAR MELA MAIDAN, SHAHLHANPUR ROD, MAHSUNIYAGANJ, MAHOLI, DIST.-SITAPUR, UTTAR PRADESH. -261141 PH. 7607696666.

MAHRONI

2488. SURI AUTOMOBILES (CGN1-CGN-01), LALITPUR ROAD, MEHRONI, DISTRICT – LALITPUR, UTTAR PRADESH. - 384405 PH :7705000558. 8881811383.

MAINPURI

2489. KULDEEP MOTORS (6E01-SG-02), SKP-4A, MAINPURI - 205001 PH : 9235258444

MAI IHARAD

2490. ONE UP MOTORS INDIA PVT, LTD. (BOD1-B0D-91), KHASRA NO. 326/1 AND 327, VILLAGE PARGANA, TEHSIL – MALIHABAD, DISTRICT – LUCKNOW, UTTAR PRADESH. -227111 PH. 3918100781.

MANDURI

2491. DEEP MOTORS (K501-K5-04), VILLAGE – BALDEV MADURI, TEHSIL – SAGRI, DISTRICT – AZAMGARH, UTTAR PRADESH. - 276138 PH :09838072902.

MATHURA

2492. UMA MOTORS PVT. LTD. (H801-H8-01), 68, MAHOLI,NEAR JAI GURUDEV TEMPLE, NH-2, KM STONE 146, MATHURA - 281004 PH :2463043/ 6290700.

ΜΔΤΙ

2493. MEGA MOTORS (A UNIT OF AKM MOTORS PVT. LTD) (SCG1-SCG-01), GATA NO 761, NEAR MATI POLICE CHOWKI, VILLAGE-MATI, PARGANA-DEWA, TEHSIL- NAWABGANJ, BARABANKI, UTTAR PRADESH - 225 003 PH 4538901514

MAURANIPUR

2494. VELOCITY CARS (A UNIT OF BASERA VELOCITY AUTOHUB PVT. LTD) (GJJ1-GJJ-01), BASERA CITY, MAURANIPUR - GARUTHA ROAD, MAURANIPUR, DISTT: JHANSI, UTTAR PRADESH - 248204 PH :8299202863.

MAWANA

2495. RADHA GOVIND AUTOMOBILES PVT LTD (CWZ1-CWZ-01), MAIN SHANTI NAGAR ROAD, MAWANA KALAN, SUBDIVISION HASTINAPUR, TEHSIL MAWANA, DISTRICT MEERUT - 250401 PH 9012575727.

MEERUT

- 2496. TANYA AUTOMOBILES PVT. LTD. (4802-48-01), GOVT. INDUSTRIAL TRAINING INSTITUTE, BACHHA PARK, MEERUT - 250001 PH 9837077003
- 2497. TANYA AUTOMOBILES PVT. LTD. (4802-48-03), 90, NAUCHANDI GROUND, GARH ROAD, MFERUT - 250001
- PH :9837077004. 2498. RADHA GOVIND AUTOMOBILES PVT. LTD. (4807-48-01), VILLAGE – BARAL, KUNDA GATE NEAR YOGI FARM HOUSE, PARTAPUR, DELHI ROAD, MEERUT. - 250002
- 2499. TANYA AUTOMOBILES PVT. LTD. (4802-48-04), MUNICIPAL NO. 9, 9/2, 9/3, 9/4, 11, 11/1, VILLAGE - ROSHANPUR DORLI, OPP. KONARK COLONY, NEAR RAJMANDIR MANDAP, ROORKEE ROAD, TEHSIL - SARDHANA, MEERUT, U.P. - 250001 PH. 7900201515.

MIRZAPUR

PH -9821217610

2500. STAR CARS (6K02-6K-01), PILI KOTHI, STATION ROAD, MIRZAPUR, UTTAR PRADESH - 231001 PH :7052547903, 9721905002, 9151154306, 9450544961

MISHRIKH

2501. CONCEPT CAR (SKJ1-SKJ-01), NEAR ARYAVART BANK, SITAPUR ROAD, MISHRIKH, SITAPUR, U.P, PINCODE: 261401 - 261401 PH 7607604666

MODINAGAR

2502. MOTORCRAFT SALES PVT. LTD. (5903-M7-02), OPPOSITE SONIA ENCLAVE, ADJACENT SUMAN CINEMA, NH-58, MODINAGAR - 201204 PH: 09557338222 & 07042427140.

MOHANLAL GANJ

2503. BRIGHT 4 WHEEL SALES PVT. LTD. (BWU1-BWU-01), KHASARA PLOT NO.581, VILLAGE PURSANI, PARGANA AND TEHSIL MOHANLALGANJ, LUCKNOW DISTT., UTTAR PRADESH - 227305 PH : 7571905966.

MORADABAD

- 2504. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-01), DELHI ROAD, 5TH.KM, MORADABAD (U.P.) - 244001 PH:7247800008.
- 2505. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-03), 5TH KM DELHI ROAD, MORADABAD - 244001 PH :7895600007.
- 2506. AKANKSHA AUTOMOBILES PVT. LTD. (B401-B4-04), KHASRA NO. 569-570, VILLAGE – KAJIPURA, KANT ROAD, MORADABAD, UTTAR PRADESH. - 244001 PH -7895500007

MUZAFFARNAGAR

2507. RADHA GOVIND (H903-H9-01), NH -58 ,121 KM STONE, BY-PASS ROAD, NEAR TRANSPORT NAGAR, MUZAFFARNAGAR - 251001 PH -9760092000

NAJIBABAD

2508. SHAKUMBARI AUTOMOBILES (P) LTD (CPS1-CPS-01), NEAR BUS STAND, BIJNORE BYPASS ROAD, NAJIBABAD, DIST.-BIJNORE, UTTAR PRADESH. - 246 701 PH :9045815209

NAUGARH

2509. SMARTWHEELS PVT. LTD. (QG01-QG-01), NEAR PAKARI CHAURAHA, NAUGARH ROAD, SIDDHARTHNAGAR - 272205 PH: 7705803129.

NAUTANWA

2510. SMARTWHEELS PVT LTD (SDW1-SDW-01), OPP. RAJIV GANDHI DEGREE COLLEGE, BYPASS ROAD, NAUTANWA, DISTT - MAHARAJGANJ -273164 PH.:77058 00602.

NAWABGANJ

2511. KAVISHA MOTORS PVT LTD (CHT1-CHT-01), VILLAGE – EIDH JAGIR NEAR GURUDWARA AT NH-74, TEHSIL – NAWABGANJ, DISTRICT – BAREILLY. - 262406 PH:07895980222, '07895980300.

NIGOHA

2512. BRIGHT 4 WHEELS (SGV1-SGV-01), GATA NO 146, VILL NIGOHA, TEHSIL MOHANLALGANJ, LUCKNOW - 226302 PH:7011482503.

NOIDA

- 2513. ROHAN MOTORS LTD. (A102-A1-01), C-8/9, SECTOR - I, NOIDA - 201301 PH:4071900, 4071909, 4071931, 4071932, 4071209, 4071949/9582210152.
- ROHAN MOTORS LTD. (A102-A1-02), C-11, SECTOR-1, NOIDA, UTTAR PRADESH - 201301 PH:4071900, 209,31,32/9582210152.

- 2515. FAIR DEAL PREMIUM WHEELS PVT.LTD. (A108-A1-01), D-39, SEC-10, NOIDA - 201301 PH:08448296694 & 09654326008.
- 2516. VIPUL MOTORS PVT. LTD. (A101-A1-02), B-124 & B-125, SECTOR – 5, NOIDA, UTTAR PRADESH -201301 PH:4603100/28/33/8527835888.
- VIPUL MOTORS PVT. LTD. (A106-A1-01), J-14, SECTOR-63, NOIDA, DISTT. GAUTAM BUDDH NAGAR (U.P.) - 201301
 PH :4758600/01/02/8448589759.
- 2518. MOTORCRAFT SALES PVT. LTD. (5903-A1-04), PLOT NO.15, SECTOR-140, NOIDA (U.P.) -201305 PH: 09818532222 & 09971733233.
- 2519. MOTORCRAFT SALES (5903-A1-05), PLOT NO 19 ECOTECH 12 GREATER NOIDA WEST ,GB NAGAR , UP - 201306 PH :8826312222

ORAI

2520. S B CARS PVT.LTD (2806-LU-02), KANPUR ROAD, ORAI - 285001 PH :9307219303

PADRONA

2521. SMARTWHEELS PVT. LTD. (BGJ1-BGJ-01), AARJI NO. 37 8.38, MAUUA. - BEUWA MISRA, TAPPA PAKOI, PARAGNA - SIDHUMA JAUBNA, TEHSIL - PADRAUNA, DIST.-KUSHINAGAR, UTTAR PADBESH. - 274304 PH. :7705803259.

PANWARI

2522. SURI AUTOMOBILES (SLC1-SLC-01), PANWARI, NEAR RAM LEELA GROUND, TEHSIL KULPAHAR, DISTRICT MAHOBA. - 210429 PH :9452287690.

PAPHUNDA

2523. TANYA AUTOMOBILES (4802-SIB-05), 354/1, MAIN HAPUR ROAD, PHAPHUNDA. - 245206 PH :93193 24588.

PEPPEGANJ

2524. ARBIT AUTOMOBILES PVT LTD (GKG1-GKG-01), GHATA NO. 466, 465 & 472, PEPPEGANJ, MOUZA - SAHABGANJ, TEHSIL - CAMPIERGANJ, DISTT: GORAKHPUR - 273165 PH :89543 12821.

PILIBHIT

2525. CORAL MOTORS (P) LTD. (IL01-IL-01), BISALPUR ROAD, PILIBHIT, U.P. - 262001 PH :9837891846.

PRAYAGRAJ

2526. SARASWATI MOTORS (2904-29-01), PLOT NO 24, INDUSTRIAL AREA MNIT COLLEGE, TELIYARGANJ, PRAYAGRAJ, UTTAR PRADESH. - 211004 PH: 8090854053. 2527. BRIGHT 4WHEELS (2905-29-01), ARAZI NO 390 AND 389 AT KATKA, ANDAWA SAHSON BYPASS, PRAYAGRAJ - 211002 PH :9415324201

PURANPUR

2528. CORAL MOTORS (P) LTD. (CAD1-CAD-01), KHASRA NO. 768 & 770, VILLAGE – KHAMRIYA PATT, PURANPUR – PILIBHIT ROAD, TEHSIL AND PARGANA – PURANPUR, DIST. PILIBHIT. -262124 PH. :9837891846, 9927001120.

RAIBAREILLY

2529. KTL AUTOMOBILE PVT. LTD. (HS07-HS-01), PLOT NO. 1550, GULLUPUR, P O KATWARA, HIJARCHANDRAPUR, RAIBAREILLY - 229303 PH :7800001601.

RAM SANEHI GHAT

2530. BRIGHT 4WHEELS (SDH1-SDH-01), GATA NO 76, VILLAGE - BHENDUWA BRAHMANAN, TEHSIL -RAM SANEHI GHAT, BARABANKI, UTTAR PRADESH, PIN 225409 - 225409 PH :933275786.

RAMNAGAR

2531. BRIGHT 4 WHEEL SALES PVT. LTD. (BRK1-BRK-01), KHASRA NO. 629, VILLAGE -BUDHAWAL, TEHSIL - RAMNAGAR, DIST. -BARABANKI, UTTAR PRADESH. - 225205 PH. 903575780 938075029

RAMPUR

2532. AKANKSHA AUTOMOBILES PVT. LTD. (B401-6L-02), SHAHZAD NAGAR BAREILLY ROAD RAMPUR UTTAR PRADESH - 244901 PH - 7248000002

RAYA

2533. UMA MOTORS PVT. LTD. (BXK1-BXK-01), CHAUDHARY PADAM SINGH MARKET, NEAR INDIA INTER COLLEGE, RAYA - MAANT ROAD, RAYA, DISTT. MATHURA (U.P.) - 281204 PH :9997683333, 9997611008.

ROBERTSGANJ

2534. STAR CAR (CTY1-CTY-01), UMRAURA, PIMPRI ROAD, ROBERTSGANJ, UTTAR PRADESH. - 231 216 PH :7052547903, 9721905002, 9151154306, 9450544961.

SAHARANPUR

2535. ATELIER AUTOMOBILES (S203-S2-01), NEAR BARI NAHAR, AMBALA ROAD, SAHARANPUR -247001 PH:7500250042.

SAHIBABAD

2536. FAIR DEAL WHEELS PVT. LTD (08E1-M9-01), 12/67. SITE 4, INDUSTRIAL AREA, SAHIBABAD, GHAZIABAD - 110095 PH :4740409/102/436, 886088850

- 2537. MOTORCRAFT SALES PVT. LTD. (5903-M9-01), S-7 SITE-IV, SAHIBABAD INDUSTRIAL AREA, NEAR DABUR CHOWK, SAHIBABAD - 201010 PH :4172222 / 4102222, 09958562222 & 09560605122
- 2538. T.R. SAWHNEY MOTORS PVT LTD (0819-M9-03), 28/1/1, SITE-IV, SAHIBABAD INDUSTRIAL AREA, DISTT- GHAZIHABAD, UTTAR PRADESH -201010

PH:9999399152:9999399143.

SAI EMPUR

2539. SMARTWHEELS PVT LTD (GKA1-GKA-01), GHATA NO. 48, GRAM: DEVPAR, TEHSILL: SALEMPUR, PARGANA: SALEMPUR MAUJHAULI, DISTT: DEORIA - 274509 PH:7705800602. 7705803321.

SALON

2540. KTL AUTOMOBILES (SCP1-SCP-01), SALON BYPASS, PARSHEDAPUR ROAD, SALON, DISTRICT RAIBARELLI, UTTAR PRADESH -229127 PH:9918451222.

SAMBHAL

2541. AKANKSHA AUTOMOBILES PVT. LTD. (BBP1-BBP-01), PLOT NO. 303, NEAR TAJ MILK FACTORY, MORADABAD SAMBHAL ROAD, SAMBHAL, UTTAR PRADESH - 244302 PH -9997776876.

SANDILA

2542. CONCEPT CARS PVT. LTD. (WY01-WY-01), PLOT NO.371, SARAY MARUFPUR, LUCKNOW ROAD, SANDILA-241204 DISTT. HARDOI. -241204 PH:8756000000. 7607696666.

SARDHANA

2543. RADHAGOVIND AUTOMOBILES (MM01-MM-01), DAURALA ROAD, NEAR RADHASWAMI SATSANG, SARDANA - 250342 PH:7456003222.

SHAHABAD

CONCEPT CARS PVT. LTD. (AAX1-AAX-01),
 VILLAGE MUJAGADH, SHAHABAD - 241124
 PH:8756000000, 7607696666.

SHAHJAHANPUR

2545. SUMITRA DS MOTORS PVT LTD (W201-W2-01), SITAPUR ROAD, NH-24, SHAHJAHANPUR -242001 PH:7522888333, 9415770000.

SHAMLI

2546. RADHA GOVIND AUTOMOBILES PVT. LTD. (XJ01-XJ-01), KHERI KARMU, OPPOSITE POWER HOUSE, PANIPAT-KAIRANA ROAD, SHAMLI UTTAR PRADESH - 247776 PH :8979862084.

SHIKOHABAD

2547. MADHUSUDAN VEHICLES PRIVATE LTD.
(XH01-XH-01), 2508, KATRA MIRA,
MAHAMMABAD, OPP PROFESSOR COLONY, NH
2, BYE PASS ROAD, SHIKOHABAD, DISTT:
FIROZABAD, UTTAR PRADESH - 283203
PH :9837097894 9890003001

SIDHAULI

2548. CONCEPT CARS PVT. LTD. (BF01-BF0-01), R/O MISHRIKH ROAD NOROTTAM NAGAR, DAKSHIDI, OPP. BLOCK, SIDHAULI, SITAPUR. -261303 PH.:7607596666.

SIKANDRA

2549. KTL PVT LTD (SJE1-SJE-01), YADAV MARKET, NEAR SURYA DHABA, NH-19, ETAWAH-KANPURROAD, SIKANDRA, U.P. -209715 PH :9414113666.

SIKANDRABAD

2550. SK UNIVERSE (CWO1-CWO-01), NEAR R K SCHOOL, VILLAGE – SANWALI SIKANDRABAD, DIST - BULANDSHAHR UTTAR PRADESH , PIN 203202 - 203202 PH .7310106565.

SITAPUR

 CONCEPT CARS PVT. LTD. (QE01-6M-02), LUCKNOW-DELHI ROAD, NH-24, VILLAGE JAMMAYAPUR, SITAPUR - 261001 PH:7607696666, 8756000000.

SIYANA

2552. SK UNIVERSE (SIN1-SIN-01), BULANDSHAHR ROAD, SIYANA DIST- BULANDSHAHR, UTTAR PRADESH PIN CODE 203412 - 203412 PH: 9219694600.

SULTANPUR

2553. KIRTIKUNJ AUTOMOBILES PVT. LTD. (N101-N1-01), SHAURYAMAU, MIRANPUR, VARANSI-LUCKNOW HIGHWAY, NH-56 (FAIZABAD BYPASS) SULTANPUR - 228001 PH :227760 , 220107.

SWAR

2554. AKANKSHA AUTOMOBILES PVT. LTD. (CQX1-CQX-01), IN FRONT OF EIDGAH, TEHSIL – SWAR, DISTRICT – RAMPUR, UTTAR PRADESH. - 244924 PH :9528004006.

TAMBOUR

2555. CONCEPT CARS (SOB1-SOB-01), NEAR INDIAN GAS GANJAR, SITAPUR ROAD TAMBOUR -261208 PH :7607696666

THAKURDWARA

2556. AKANKSHA AUTOMOBILES PVT. LTD.
(K001-KO-01), 2 KM. MORADABAD ROAD, NEAR
JEETA KA DHABA, SAHAB GANI, (MUNSHI
GANJ), THAKURDWARA, DISTT. MBD. UTTAR
PRADESH - 244601
PH : 9917224562

TILOI

2557. KTL AUTOMOBILE PVT. LTD. (CGY2-CGY-01). VILLAGE PURE LANGDA, PAKAR GAON, MOHAN GUNJ, TEHSIL - TILOHI, DIST.-RAIBARELI. -229309 PH. 99184512222.

UJHANI

2558. ETERNITY MOTORS LLP (GJK1-GJK-01), BADAUN BYE PASS ROAD, UJHANI - 243639 PH :94122 89074.

UNCHAHAR

2559. KTL AUTOMOBILE PVT. LTD. (IH02-IH-01), ALLAHABAD LUCKNOW ROAD, NEAR PURANA PETROL PUMP, WARD NO. 5, UNCHAHAR, DISTT: RAIBARELI - 229404 PH: 99184512222.

UNNAO

2560. S B CARS (2806-KL-04), HUSSAIN NAGAR BYPASS,KANPUR-LUCKNOW HIGHWAY ROAD, UNNAO,U.P. - 209801 PH :9839806451.

VARANASI

- 2561. VARANASI MOTORS PVT. LTD. (8402-84-01), THE MALL, CANTONMENT, VARANASI - 221001 PH:2509068, 2509069.
- 2562. AGR AUTOMOBILES PVT. LTD. (8403-84-01), B-38/2A, MAHMOORGANJ, GOPAL VIHAR, VARANASI - 221010 PH - 2360436
- 2563. VARANASI MOTORS PVT. LTD. (8402-84-03), AARAJI NO.2 AND 48, G.T. ROAD, TODAPUR, MOHANSARAI, RAJATALAB, VARANASI (U.P.) -221311 PH :2632786. 9838360662.
- 2564. AGR AUTOMOBILES PVT. LTD. (8403-84-04). ARAZI NO. 399, 398, 400, 401,NH2 PANDITPUR, DEHAT AMANAT, TEHSIL - RAJATALAB, VARANASI - 221112 PH -98898 03355.

UTTARAKHAND

ALMORA

2565. NAINITAL MOTORS PVT LTD (J603-SQ-04), PAWAR BHAWAN, JOSHI KHOLA RAJPURA, PITHRAGARH ROAD, ALMORA - 263601 PH :9997194132

BAGESHWAR

2566. NAINITAL MOTORS PVT LTD (J603-8I-05), VILL. BILOMA, SERA, BAGESHWAR, UT, BAGESHWAR - 263642 PH:9557200522.

BAZPUR

2567. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CGU2-CGU-01), KHASRA NO. 96/2, VILLAGE – BHONA, ISLAM NAGAR, TEHSIL – BAZPUR, UTTARAKHAND. - 262401 PH 9634151501

CHAMPAWAT

2568. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SF02-SF-01), TANAKPUR LOHAGHAT ROAD, CHAMPAWAT, UTTARAKHAND - 262523 PH :8929400545, 8191000832.

CHAUKHUTIYA

2569. NAINITAL MOTORS PVT LTD (CVG1-CVG-01), NH-58, BADRINATH ROAD, CHAUKHUTIYA, DIST.-ALMORA, UTTARAKHAND - 263656 PH :9997026565.

DEHRADUN

- 2570. ROHAN MOTORS LTD. (5702-57-01), 130/1 CHAKRATA ROAD, YAMUNA COLONY, DEHRADUN - 248001 PH :9997036800.
- DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (5707-57-01), 918/221, PATEL NAGAR, INDUSTRIAL AREA, DEHRADUN - 248001, PH :9368193007.
- 2572. ROHAN MOTORS LTD. (5702-57-02), 257/2, GMS ROAD, WILL. NIRANJANPUR, ADJ TO KAMLA PALACE, DEHRADUN - 248001 PH :8630956832, 9897227227.
- FUTURE AUTO WHEELS PVT LTD (5706-57-01), KHASRA NO. 8KHA, MOHABEWALA INDUSTRIAL AREA, DEHRADUN, - 248001 PH : 0135-2640263, 7895956011.
- 2574. FUTURE AUTO WHEELS (5706-57-02), MUNICIPAL NUMBER 45 AND 46, RAJPUR ROAD, DEHRADUN, PIN: 248001 - 248001 PH: 9760444430.

DIDIHAT

2575. NAINITAL MOTORS (SKN1-SKN-01), SUBHASH CHANDRA BOSE WARD, NEAR D.I.E.T., DIDIHAT, DISTT PITHORAGARH, PINCODE: 262551. -262551 PH. 9634092692.

DOIWALA

2576. FUTURE AUTO WHEELS PVT LTD (BRI1-BRI-01), 26, MISSARAWALA, DOIWALA, DISTRICT – DEHRADUN, UTTARAKHAND. - 248140 PH : 7983071196.

GADARPUR

2577. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVS1-CVS-01), BHASIYA MOD, RUDRAPUR ROAD, GADARPUR, UDHAM SINGH NAGAR, UTTARAKHAND. - 263152 PH :9258156028

GAIRSAIN

2578. ROHAN MOTORS LTD (CRH1-CRH-01), KHASRA NO. 1048, RANIKHET ROAD, OPP. GIC GROUND, GAIRSAIN, DISTRICT – CHAMOLI, UTTARA KHAND. - 246428 PH :8758839951.

GANGOLIHAT

2579. NAINITAL MOTORS (CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS-CODE UNDER CREATIONS), VILL- KHETIGARA, PITHORAGARH-GANGOLIHAT ROAD, GANGOLIHAT, DISTT: PITHORAGARH - 262522 PH .9997093043.

GOPESHWAR

2580. ROHAN MOTORS LTD. (5702-MV-03), CHOPTA MANDAL ROAD, NEAR FOREST GATE, GOPESHWAR - 131028 PH-0634852988

HALDWANI

- 2581. NAINITAL MOTORS PVT LTD (J603-J6-01), VILLAGE JEETPUR NEGY, 5TH KM RAMPUR ROAD, HALDWANI - 263139 PH:7060201024.
- 2582. NAINITAL MOTORS PVT LTD (J603-J6-02), KALA DUNGI ROAD, NEAR HARIPRIYA BANQUET HALL, KATHGHARIYA, HALDWANI - 263139 PH:8126359222.

HARIDWAR

2583. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-6N-01), E-5/6, INDUSTRIAL AREA, HARDWAR - 249407 PH:9897476897.

JASPUR

2584. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (BKL2-BKL-01), GANGUWALA, INFRONT OF ROOPAM CONVENT, KASHIPUR ROAD, JASPUR, UTTARAKHAND. - 244712 PH :8958023786.

KARANPRAYAG

2585. ROHAN MOTORS LTD (CRG1-CRG-01), BADRINATH ROAD, KARANPRAYAG, DISTRICT – CHAMOLI, UTTARAKHAND. - 246444 PH: 8755011005.

KASHIPUR

2586. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (DG02-DG-01), BAZPUR ROAD, KASHIPUR -244713 PH :7307704864

KHATIMA

2587. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (XLO2-XL-01), VILLAGE: CHARUBETA,NEAR RTO CHECK POST,PILIBHIT ROAD KHATIMA, U.S NAGAR,UTTRAKHAND - 262308 PH :8191000132.

KOTDWAR

2588. SHAKUMBARI AUTOMOBILES (P) LTD (6N02-21-02), PLOT NO.23 & 30 INDUSTRIAL ESTATE, SITABPUR, KOTDWAR, DIS. PAURI (GARHWAL), UTTRAKHAND - 249001 PH:8755989075, 310106565.

LAKSAR

2589. SHAKUMBARI AUTOMOBILES (CTF1-CTF-01), HARIDWAR ROAD, LAKSAR - 247664 PH :8630087926.

NANAKMATA

2590. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CVT1-CVT-01), KHATIMA ROAD, OPP GURURAMDAS HOSPITAL, NANAKMATTA, U.S. NAGAR, UTTARAKHAND. - 262311 PH. 7830033763.

PITHORAGARH

2591. NAINITAL MOTORS PVT LTD (J603-NM-03), VILLAGE PANDA, ODSAINI, DHARCHULA ROAD, PITHORAGARH - 262501 PH :9634092692.

RAMNAGAR

2592. NAINITAL MOTORS PVT LTD (XM01-XM-01), OPP. GAYATRI VIHAR, VILL. BASAI, 7TH KM. KASHIPUR ROAD, RAMNAGAR - 244137 PH :9639016895.

RANIKHET

2593. NAINITAL MOTORS PVT LTD (AXA1-AXA-01), GANYADYOLI, NEAR DRUG FACTORY, RANIKHET DISTT. ALMORA (UTTARAKHAND) -263645 PH 9557243222

RISHIKESH

2594. FUTURE AUTO WHEELS PYT LTD (AAS1-AAS-01), 640, LAXMAN JHULA ROAD, RISHIKESH. DISTT. DEHRADUN, UTTARAKHAND - 249201 PH. 7:409241219.

ROORKEE

2595. SHAKUMBARI AUTOMOBILES (P) LTD (1201-11-201), 3RD KM STONE, DELHI-ROORKEE HIGHWAY, NEAR IOC PETROL BUNK, ROORKEE DISTT HARIDWAR - 247667 PH :7055104191.

RUDRAPRAYAG

2596. ROHAN MOTORS (IK01-IK-01), GULABRAI-BADRINATH ROAD, RUDRAPRAYAG - 246171 PH :8650876815.

RUDRAPUR

2597. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (U404-U4-01), KICHHA BYE PASS ROAD, INDUSTRIAL AREA, RUDRAPUR - 263153 PH:8859502864.

SELAQUI

2598. ROHAN MOTORS LTD (CRF1-CRF-01), KHASRA NO.783, BAHADURPUR ROAD, NH-72, SELAKUI, DISTT.-DEHRADUN, UTTARAKHAND. - 248011 PH :8006000439.

SITARGANJ

2599. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (CD02-CD-01), PLOT NO.228/5 AND 228/6 KHATIMA ROAD, SITARGANJ, DISTT -RUDRAPUR, UTTARAKHAND. - 262405 PH :8192000375

SRINAGAR

2600. SHAKUMBARI AUTOMOBILES (ANA1-ANA-01), SRICOT GANAGANALI, NEAR MEDICAL COLLEGE, PO- SRICOT, SRINAGAR - 246174 PH:8077425944.

TEHRI

 DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (QA02-QA-01), PLOT NO. 541, SECTOR-8E, DISTT. - NEW TEHRI - 249001 PH :9690994366.

UTTARKASHI

2602. DD MOTORS (A DIVISION OF D.D. PREM PVT.LTD.) (6102-61-01), HOTEL RAMOLA, BARETHI CHUNGI, GANGOTRI NATIONAL HIGHWAY, UTTARKASHI. - 249151 PH.7248886807.

UTTRAKHAND

DEHRADUN

2803. SHAKUMBARI AUTOMOBILES (5708-57-01), KHASRA NO.15-ANA, MOHABBEWALA, SAHARANPUR ROAD, DEHRADUN, PIN-248001, UTTARAKHAND - 248001 PH.9639698871.

PATI

2604. AKANKSHA AUTOMOBILES (RUDRAPUR) PVT LTD (SFX1-SFX-01), LOHAGHAT- HALDWANI MAIN ROAD, NEAR PITHORAGARH CO-OPERATIVE BANK, PATI-262528 - 262528 PH 38191000832.

WEST BENGAL

ALIPURDUAR

2805. PODDAR CAR WORLD PVT. LTD.
(BZ01-182O-01), BIRPARA MORE, COOCH
BEHAR ROAD, BESIDE GOYENKA PETROL
PUMP, ALIPURDUAR, WEST BENGAL. - 736121
PH: 8945533002
9735008343
974970707.

ΔΜΤΔΙ Δ

2606. BHANDARI AUTOMOBILES PVT LTD (BQH1-BQH-01), VILLAGE - UDAYRAMPUR, P.O. - KANYANAGAR, P.S. - BISHNUPUR, AMTALA, DIST.-24 PARGANAS SOUTH, WEST BENGAL 743 398 PH :9903850402.

ARAMBAGH

2607. SANEI MOTORS PVT. LTD. (7T02-7T-01), R.S. DAG NO. 1887, R.S. KHATIAN NO. 104, HAL KHATIAN NO. 1233, MOUZA-PARUL, JLL.NO. 38, R.S.NO. 3111, P.S. ARAMBAGH, DISTT. HOOGHLY, WEST BENGAL - 712601 PH :8584050184.

ASANSOL

2608. BEEKAY AUTO PVT LTD (F601-F6-01), CHANDA MORE, N.H.-2, ASANSOL - 713301 PH :9932049425, 9932049435.

BADURIA

2609. PREMIER CARWORLD (SOE1-SOE-01), VILL-KIRRTIPUR, P.O. MANDRA, P.S. - BADURIA, DIST - NORTH 24 PARGANAS, WEST BENGAL. PIN -743438. - 743438 PH 9831414996

BAGDAH

2810. SANEI MOTORS PVT. LTD. (BON1-BON-01), C/O. DINABANDHU TARAFDAR, S/O LATE NARENDRANATH TARAFDAR, VILLAGE – HALENCHA SOUTH, P.O. – HALENCHA COLONY, P.S. – BAGOBAH, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL. - 743270 PH :8584050184.

BAHRAMPUR

2611. BEEKAY AUTO PVT LTD (DJ02-DJ-01), BOKULTALA (PASCHIM GAMINI), NH-34, BAHARAMPUR, DISTT. MURSHIDABAD. - 742101 PH :267340

2612. BEEKAY AUTO PVT LTD (DJ02-DJ-01), NH-34 MANKARA NEAR NEKRATALA, BAHRAMPUR, MURSHIDABAD - 742165 PH :267340.

BAJKUL

2613. BHANDARI AUTOMOBILES PVT LTD (CAV1-CAV-01), VILLAGE – KAPTYAPA BARI, P.O. – KAJLAGARH, P.S. – BHAGWANPUR, BAJKUL, DISTRICT – PURBA MIDNAPORE. -721626 PH :9933055539.

BAI AGARH

2614. SANEI MOTORS PVT. LTD (BMI1-BMI-01), DAG NO. 671, MOUZA - BARUIPARA, J L NO. 100, P.O. - BALAGARH, DIST.-HOOGLY, WEST BENGAL -712 501 PH :8584050184.

BALURGHAT

2615. J K WHEELS PVT. LTD. (PT01-PT-01), BARO RAGHUNATHPUR, P.O. - BELTALA PARK, P.S. -BALURGHAT, DIST.-DAKSHIN DINAJPUR. - 733 103 PH 9064301464.

BANKURA

2616. BHANDARI AUTOMOBILES PVT LTD (G701-6Q-02), PLOT NO.-156, KH NO.-173, MITHILA MOUZA, AT/PO-BANKURA (WB) -722101 PH :256766.

BARASAT

2817. PREMIER CARWORLD PVT. LTD. (X203-X2-01). R S DOA DO. 512 AND PARTY IN DAG NO. 513, MOUZA-KHILKAPUR, P.O BARASAT, POLICE STATION: DUTTA PUKUR, TOUZI NO. 146, J.L NO. 4, DISTRICT – NORTH 24 PARGANAS, WEST BENGAL - 700125 PH 8420122407

BARDHAMAN

2618. BEEKAY AUTO PVT LTD (T301-T3-03), NH-2, PAMRA VILLAGE ROAD, CHANDNI MORE, SATTAR MILE, BURDWAN, WEST BENGAL -713101 PH-9932049454.

BARJORA

2619. BHANDARI AUTOMOBILES PVT LTD (BED1-BED-01), VILLAGE + P.O. + P.S. – BARJORA, MOUZA – BARJORA, JI. NO. 46, KHATIAN NO. 3380, PLOT NO. 2795, BARJORA DISTRICT – BANKURA, WEST BENGAL. - 722202 PH :8016087297.

BARRACKPORE

2620. STARBURST MOTORS PVT LTD (BXJ1-CIY-02), NEAR RAIL GATE, WARD NO. 24, WEST BARASAT ROAD, P. S. TITAGARH, BARRACKPORE, DISTRICT – NORTH 24 PARGAINAS, KOLKATA. - 700120 PH: 8335061333.

BARSUNDRA

2621. BHANDARI AUTOMOBILES PYT LTD (G701-BJW-05), PLOT NO. 610, BARSUNDARA, ISHWARDAHA, JALPAI, P.S. BHAWANIPUR, EAST MIDNAPORE. WEST BENGAL - 721654 PH 9933055539

BASIRHAT

2622. BHANDARI AUTOMOBILES PVT LTD (X701-0D-03), RAGHUNATHPUR, TALKI ROAD, BASIRHAT NR. INDIAN PERTOL PUMP, NORTH-24 PARGANAS. - 743428 PH :8017569789

BELACOBA

2623. PODDAR CARWORLD (SCU1-SCU-01), PRASANNA NAGAR, BELACOBA, BATTALA, JALPAIGURI - 735133 - 735133 PH:8945533002.

BIRPARA

2624. SEVOKE MOTORS (CQL1-CQL-01), BHAGAT PARA, NH - 31, MADARIHAT ROAD, BIRPARA, BESIDE TASHI HOTEL, OPP - HIMLYAN HOTEL, P.S - MADARIHAT, DIST - ALIPURDUAR, PIN -735204 - 735204 PH :980069144.

BISHNUPUR

2625. BHANDARI AUTOMOBILES PVT LTD (AAG1-AAG-01), STATION ROAD, P.O+P.S-BISHNUPUR, DIST: BANKURA, WEST BENGAL -722122 PH 9933055539

BOLPUR

2626. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-TC-03), KABI JOYDEB ROAD, NEAR BOLPUR BY PASS, BOLPUR, DIST: BIRBHUM-731204 PH:9647444888 8977895511

BONGAON

2627. STARBURST MOTORS PYT LTD (TQ02-TQ-01), 376/D, R D B ROAD, NEAR JESSORE ROAD, BAKSHIPALLY, BONGAON, NORTH 24 PARGANAS, WEST BENGAL - 743235 PH :9748298939.

BUDGE BUDGE

2628. ONE AUTO PVT. LTD. (BAV1-BAV-01), MAHESH TALA, NEAR DAKGHAR KALIMANDIR, BUDGE BUDGE TRUNK ROAD, DAKGHAR, WARD NO. 22, POLICE STATION-MAHESHTALA, WEST BENGAL - 700141 PH: 3584878802 7604094762.

C K ROAD

2629. BHANDARI AUTOMOBILES PVT LTD (D01-D0-01), P.O:SAT BANKURA, PS:GARBETA, CHANDRAKONA ROAD, DIST: PASCHIM MIDNAPORE, WEST BENGAL - 721252 PH:9933055539.

CANNING

2630. ONE AUTO (CEG2-CEG-01), SUSUMAPALLY, CANNING, DIST – SOUTH 24 PARGANAS, WB -743329 PH :8442830001.

CHAKDAHA

2631. BHANDARI AUTOMOBILES PVT LTD (OM01-OM-01), VILLAGE – PUMLIA, P.O. – CHAKDAHA, DISTRICT – NADIA, WEST BENGAL. -741222 PH :9073940368. 9674735303. 9674169007.

CHANDITALA

2632. BHANDARI AUTOMOBILES PYT LTD (BPC3-BPC-01), RS DAG NO 2986, LR DAG NO. 3150, UNDER L R KHATIAN NO 3859, MOUZA-KRISHNARAMPUR, J.L. 59, POLICE STATION-CHANDITALA, HOOGHLY, WEST BENGAL -712702. PH :6296900498.

CHANDRAKONA

2833. BHANDARI AUTOMOBILES PYT LTD (D001-CIP-02), AT. VILL. GOSAI PO+PS CHANDRAKONA TOWN, MOUZA DHARABILA, JL.NO. 095, KHATIAN NO. 315, PLOT NO. 203 & 189, NEAR MUNIPAL GATE TOWARDS C.K. ROAD. - 721201 PH 9845528833

CONTAI

2634. BHANDARI AUTOMOBILES PVT LTD (G701-GV-03), SERPUR BAMUNBAR, P O-MARISHDA, NEAR MECHEDA BYPASS, CONTAI, WEST BENGAL - 721401 PH :254572.

COOCH BEHAR

2635. PODDAR CAR WORLD PVT. LTD.

(BWZ1-BWZ-01), CHAKCHAKA, NEELKUTHI

BAZAR, NEAR ADA FACTORY, NH-31, COOCH

BEHAR, WEST BENGAL. - 736101

PH :894553002

9735008343.

DARJEEL ING

2636. BEEKAY AUTO PVT LTD (4301-6U-05), MERRY VILLA, DARJEELING, DISTRICT-DARJEELING. -734101 PH :9932049347 9932049382

DHUPGURI

7478004430

2837. BEEKAY AUTO PVT LTO (BWD1-BWD-01), MOUZA – DHUPGURI, PLOT NO. 1814, WARD NO. 16, DHUPGURI, DISTRICT – JALPAIGURI, WEST BENGAL - 735210 PH :7477785203 9932049347 9932049382

7478004430. DIAMOND HARBOUR

2638. ONE AUTO PVT. LTD. (YE01-YE-01), VILLAGE— CHEWRA, OPPOSITE—K.E. CARMEL SCHOOL, P.O.—SARISHA HAT, PS.—DIAMOND HARBOUR, DISTRICT—24 PARGANAS (S), WEST BENGAL. -743368 PH: 8584862243.

DURGAPUR

2639. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-44-01), PLOT NO-743, MAUZA FRIDPUR, BURDWAN, DURGAPUR - 713213 PH :9647444888 8927895511.

FALAKATA

2640. PODDAR CAR WORLD PVT. LTD. (CSR1-CSR-01), DAKSHIN PARANGAPAR, KHATIAN NO. 1671/ JL. NO. 60, DAG NO. 652/1159, P.S. – FALAKATA, DISTT ALIPURDWAR - 735211 PH: 8945533002.

GAZOLE

2641. JK WHEELS (SKZ1-SKZ-01), MOUZA-BAJEGAIRAL, RANIGANJ, PURBAPARA, KAMALDANGA, P.S. GAZOLE, DIST-MALDA, PIN -732138 - 732138 PH :9734963360.

GHATAL

2642. BHANDARI AUTOMOBILES PVT LTD (AAD1-AAD-01), VILL. NIMTOLA, P.O. & P.S. DASPUR, GHATAL, WEST MIDNAPORE, WEST BENGAL - 721211 PH: 9933055539.

GOPIBALLAVPUR

2643. BHANDARI AUTOMOBILES PVT LTD (BPQ1-BPQ-01), JL NO. 1103, KHATIAN NO. 1103, PLOT NO. 438, VILLAGE + P.O. + P.S. – GOPIBALLYPUR, MOUZA – GOPIBALLYPUR, WEST MIDNAPUR, WEST BENGAL. - 721506 PH. 9933055539, 8170018577.

GUMA (ASHOKNAGAR)

2644. STARBURST MOTORS PVT LTD (BXJ1-CLB-03), JESSORE ROAD, MANIKNAGAR, KHOSDELPUR MORE, P.S. – ASHOKNAGAR, NORTH 24 PARGANAS, WEST BENGAL. - 743222 PH :8697731763, 8336933447.

HALDIA

2645. BHANDARI AUTOMOBILES PVT LTD (G701-SE-04), BALGHASIPUR, BHABANIPUR, PURBA MEDIANPUR, HALDIA - 721657 PH:8016082344, 9233502421.

HOWRAH

2646. BHANDARI AUTOMOBILES PVT LTD (X701-X7-01), BANKRA THANA,DOMJUR,HOWRAH. - 711403 PH:9674735304.

2647. PREMIER CARWORLD PVT. LTD. (0611-X7-02). MOUZA – PRASASTHA, P.S. – DOMJUR, UNDER MOHIARY 2 NO. GRAM PANCHAYT. ANKURHATI, HOWRAH, WEST BENGAL. -711302 PH :8420122402.

JALPAIGURI

2648. PODDAR CAR WORLD PVT. LTD. (XY01-XY-01), COLLEGE PARA, SIRISHTALA, NEAR ASSAM MORE, JALPAIGURI, WEST BENGAL. - 735101 PH :8945533002.

JAYGAON

2649. SEVOKE MOTORS PVT. LTD. (CHS1-CHS-01), HOUSE NO.43, WARD NO.11/22, N.S ROAD DARAGAON, P.S. -JAYGAON, DISTT. ALIPURDUAR, WEST BENGAL - 736182 PH :9433825851.

JHARGRAM

2650. BHANDARI AUTOMOBILES PVT LTD (BUG1-BUG-01), DAC NO.383, KHATAN NO. J1396, WARD NO.11, RAJBATI CAMPUS, JHARGRAM, WEST BENCAL - 721507 PH.8016087297, 9933055539.

KADAMBAGACHI

2651. STARBURST MOTORS PVT LTD (BXJ1-CTE-04), MOUZA - PURBA ICHAPUR, J L NO. 111, RESU NO. 131, DAG NO. 385, KHATIAN NO. L R 754, KADAMBAGACHI, P.S. - BARASAT, DIST.-NORTH 24 PARGANAS, WEST BENGAL. - 700125 PH: 3336933410.

KALIMPONG

2652. BEEKAY AUTO (BWF1-BWF-01), 10TH MILE, GUMBA HATTA, PO&PS -KALIMPONG, DIST -KALIMPONG, WB. - 734301 PH:9932049347.

KALNA

2653. BEEKAY AUTO PVT LTD (WZ01-WZ-01), KALNA ROAD, NEAR KALNA SUB DIVISIONAL HOSPITAL, KALNA, PO+PS: KALNA, DISTT. BURDWAN, (W.B.) - 713409 PH:9932251483.

KALYANI

2654. STARBURST MOTORS PVT LTD (IJ01-IJ-01), KALYANI INDUSTRIAL GROWTH CENTRE, PHASE-III, A-S (OPP. U1 C UDYOG, NEAR: J1 S COLLEGE), KALYANI. - 741234 PH:8584040215. 8336933447.

KESHPUR

2655. BHANDARI AUTOMOBILES PVT LTD (CCM1+CCM-01), JL NO. 338, KHATIAN NO. 786/2, PLOT NO. 1749, MOUZA – KESHPUR, VILLAGE + P.O. + P.S. – KESHPUR, WEST MIDNAPUR, WEST BENGAL. - 721150 PH :721150. 8170014289.

KHARAGPUR

2656. BHANDARI AUTOMOBILES PYT LTD (G701-G7-01), BHANDARI BUILDING, JHAPATAPUR, KHARAGPUR, WEST BENGAL -721301 PH:755537.

KHATRA

2657. BHANDARI AUTOMOBILES PVT LTD (BGZ1-BGZ-01), VILLAGE - SENAPATI, P.O. & P.S. - KHATRA, MOUZA-SENAPATI, J. NO. 189, KHATRAN NO.659, PLOT NO.33/34, DISTT. BANKURA, WEST BENGAL. - 722140 PH. 9933055539.

KOLKATA

2658. MACHINO TECHNO SALES LTD. (0601-06-02), 48 A, TARATALA ROAD, KOLKATA - 700066 PH:9073330177.

2659. DEWAR'S GARAGE (0605-06-01), (PROP. DELTA INTERNATIONAL LTD.), 14 BRITISH INDIAN STREET, CALCUTTA - 700069 PH:8584015205.

2660. MACHINO TECHNO SALES LTD. (0601-06-01), 21/1 DARGA ROAD, (PARK CIRCUS), CALCUTTA - 700017

PH:9073330178.

2661. PREMIER CARWORLD PVT. LTD. (0611-06-01), AGARPARA JUTE MILL, 28-B.T.ROAD, P.O.: -KAMARHATI, DISTT.-KOLKATA - 700058 PH:8697730344.

2662. BHANDARI AUTOMOBILES PYL LTD (0609-06-01), BUDGE BUDGE TRUNK ROAD, NEW GOPALPUR, SARKARPOOL, MAHESHTALA, DISTT. SOUTH 24 PARGANAS, WEST BENGAL - 700143 PH :9674476000

2663. BHANDARI AUTOMOBILES PVT LTD (0609-06-02), 37, GULAM JILANI KHAN ROAD, KOLKATA. - 700039 PH :9903850402

2664. SANEI MOTORS PVT. LTD. (0612-06-01), 16/2 CANAL EAST ROAD, NEAR MANIKTALA POLICE STATION, KOLKATA - 700067 PH: 8584050184.

- 2665. ONE AUTO PVT. LTD. (0614-06-02), 62 EAST TOPSIA ROAD, P.S. TILJALA, ARUPOTA, KOLKATA, WEST BENGAL - 700105 PH: 8584878802
- 2666. ONE AUTO PVT. LTD. (0614-06-01), JI. NO.3, MOUZA-JAGADIPOTA, P.S:SONARPUR, KHEYADAHA NO.2, GRAM PANCHAYAT, DISTT. SOUTH 24 PARGANAS. - 700099 PH :8584870725
- 2667. DEWAR'S GARAGE (0605-06-03), P-27/2, TARATALA ROAD, KOLKATA 700088
- 2668. SANEI MOTORS PVT LTD (0612-06-02), 235, HATIYARA ROAD, SITALATALA, BAGUIATI, KOLKATA, WEST BENGAL - 700059 PH: 8584050184
- 2669. OSL MOTOCORP PVT LTD (0616-06-01), 49 DEBENDRA CHANDRA DEY ROAD, LANE BESIDE SILVER SPRINIG CLUB, E.M. BYE-PASS, KOLKATA - 700015 PH : 8336996355 8697982283.
- 2670. JYOTE MOTORS (0624-06-01), NAZIRABAD MAIN ROAD, NAZIRABAD, ANANDAPUR, NEAR BISHNU BIJOLI GARDEN, KOLKATA, PIN-700150, WEST BENGAL - 700150 PH :8334930830

KOLKATTA

2871. BHANDARI AUTOMOBILES (0619-6-C1), PLOT NO. IID/15, ACTION AREA 2D, NEW TOWN, P.S. RAJARHAT, KOLKATA, WEST BENGAL PIN-700156 - 700156 PH :6291042160.

KOTULPUR

2672. BHANDARI AUTOMOBILES PVT LTD
(BIP1-BIP-01), KHATIAN NO.644, PLOT NO.373,
JL NO. 101, VILLAGE - MULDARA, P.S. + P.S. KOTULPUR, DISTT.-BANKURA, WEST BENGAL. 722141
PH. 39933055539.

KRISHNANAGAR

2673. BHANDARI AUTOMOBILES PVT LTD (X701-GS-02), PLOT NO.-1874, MOUZA-GOBINDSARAK, J.K. NO. 94, PS-KOTWAL, OLD WARD NO. 20, LAL MOHAN GHOSH ROAD, KRISHNANAGAR - 742011 PH :9051999742.

MADHYAMGRAM

2674. STARBURST MOTORS PVT LTD (BXJ1-BXJ-01), 9/1, HEMANTA BOSE SARANI, BASUNAGAR, NEAR DEAF & DUMB SCHOOL, UDAYRAJPUR, MADHYAMGRAM - 700129 PH: 9836075989, 8336933447.

MALBAZAR

2875. BEEKAY AUTO PVT LTD (BWG1-BWG-01), CALTEX MORE, VILLAGE + P.S. – MALBAZAR AND DISTRICT – JALPAIGURI. - 735221 PH :9932049347 9932049382 7478004430 7477785203.

MALDA

2676. J K WHEELS PVT. LTD. (L801-L8-01), GABGACHHI, N.H. 34, MALDA, - 732103 PH:9851520855, 9735003949.

MATHABHANGA

2677. BEEKAY AUTO PVT LTD (BQF1-BQF-01), SITAKULCHI ROAD, WARD N.9. MATHABHANGA, DISTRICT – COOCHBEHAR. -736146 PH.7477785202 9932049347 9932049382 7478004430

MOHANPUR

2678. BHANDARI AUTOMOBILES PVT LTD (CIV1-CIV-01), VILLAGE-NAYAGAON, P.O. -PAROI, P.S.-MOHANPUR, MOUZA - NAYAGAON, JL NO.395, KHATIAN NO.1751, PLOT NO.895, DISTT.-PASCHIM MIDNAPUR, W.BENGAL. -721436 PH :9933055539.

NAIHATI

2679. PREMIER CARWORLD PVT. LTD. (YDD1-YD-01), P.O. BHATPARA, GRAM-MUKTARPUR, P.S. -JAGATDAL, DIST-24 PGS (N), NAIHATI (WB) -743123 PH. 801700824.

NAKASHIPARA

2880. BHANDARI AUTOMOBILES PVT LTD (BM.1-BM.2-01), L P. DAG NO. 7271, UNDER L R KHATIAN NO. 6734, MOUZA - DEBAGRAM, J L NO. 60, POLICE STATION - KALIGANJ, BLOCK -KALIGANJ, NAKASHIPARA, DIST.-NADIA, WEST BENGAL. - 741138 PH. 9163314418.

NAXALBARI

PANCHLA

NAAALDANI
2881. BEEKAY AUTO PVT LTD (CSJ1-CSJ-01), MOUZA
- GENI, KHATIAN NO. 275,
PARGANA-HATIGHISHA, P.S. NAXALBARI,
DISTT. DARI,EELING, WEST BENGAL - 734429
PH. 9932049347
9932049382
7478004430
9663370099

2682. BHANDARI AUTOMOBILES PVT. LTD. (BPI1-BPI-01), L.R DAG NO 3274, UNDER L.R KHATIAN NO 3044, MOUZA-MALLICKBAGAN, JL NO-7, POLICE STATION – PANCHLA, DIST-HOWRAH - 711310 PH :9073664926.

PANDUA

2683. BHANDARI AUTOMOBILES PVT LTD (BOS1-BOS-01), GT ROAD, PANDUA, NEAR KAKOLI CINEMA HALL, OPP. POWER HOUSE, HOOGLY, WEST BENGAL. - 712149 PH :9073912566

PANSKURA

2684. BHANDARI AUTOMOBILES PVT LTD (BPS1-BPS-01), MOUZA – PASCHIM NEKRA, JL NO.98, LR NO.1154, LR NO.1156, PANSKURA, WEST BENGAL - 721139 PH: 9933055539.

PURULIA

2685. SWG- (A UNIT OFSAI NATH AUTO LINKS PVT. LTD) (4402-6W-02), PO. LAKDA, VILLAGE-DADKA , ON RANCHI ROAD, PURULIA - 723149 PH -964744488 8827895511.

RAGHUNATHPUR

2686. BEEKAY AUTO PVT LTD (CKZT-CKZ-01), MOUZA – BUNDLA, J.L. NO. 197, PLOT NO. 2656, KHATIAN NO. LR 207, P.O. – RAGHUNATHPUR, P.S. – RAGHUNATHPUR, DISTRICT – PURULIA. - 723133 PH 19932049425.

RAIGANJ

2887. J K WHEELS PVT. LTD. (BN02-8N-01), JL NO. 150, KHATIAN NO. 168/3 & 168/4, PLOT NO. 4158, P.S. – RAIGANJ, MUNICIPALITY – RAIGANJ, WARD NO. 11, HOLDING NO. 577/N, MOUZA – RAIGANJ, DISTRICT – UTTAR DINAJPUR, - 733134 PH 9735008842.

RAJARHAT - KOLKATA

9932049435

2688. STARBURST MOTORS PVT LTD (BXJ1-06-05), R. S & L.R. DAG NO. 3434, MOUZA-GOPALPUR, JL NO. -02, RS NO. -140, LR KHATIAN NO. -5638, NEW TOWN, RAJARHAT - 700136 PH -9681080301

RANAGHAT

2689. STARBURST MOTORS PVT LTD (BBW1-BBW-01), THANA: GANGNAPUR, ADSR OFFICE, 151 NO.MOUZA PATULI, PLOT NO.309, RANAGHAT, DISTT: NADIA - 741256 PH:8148821191. 884040215.

RUPNARAYANPUR

2690. BEEKAY AUTO PVT LTD (BWS1-BWS-01), P.S. – SALANOUR, UNDER MOUZA – JEMARI, JL. NO. 32, PLOT NO. 343-344, KHAITAN NO. 933, RUPNARAYANPUR, PASCHIM BARDHAMAN DISTRICT, WEST BENGAL. - 713335 PH. 3932049425, 9932049435.

SABANG

2691. BHANDARI AUTOMOBILES PVT LTD (CCL1-CCL-01), VILLAGE - PAIKAN DAKSHINBARH, P.O. - DHANSWARPUR & P.S. -PINGLA, DIST.-PASCHIM MIDNAPORE, SABANG - 721 166, WEST BENGAL. - 721166 PH :993055539.

SEORI

2692. BEEKAY AUTO PVT LTD (F601-KC-02), RAMBADANPUR, NEAR SP MORE, DIST-BIRBHUM, SEORI - 731101 PH:9932049425, 9932049406.

SHYAMPUR

2693. SANEI MOTORS PVT LTD (CAW1-CAW-01), VILLAGE + P.O. – GOBINDAPUR, P.S. – SHYAMPUR, DISTRICT – HOWRAH, WEST BENGAL. - 711314 PH:8584050184.

SILIGURI

2694. BEEKAY AUTO PVT LTD (4301-43-01), NH-31, P.O. MATIGARA, SILIGURI. - 734428 PH :9932049347 9932049382 7478004430

2695. BEEKAY AUTO PVT LTD (4301-43-04), AMAI DIGHI, PHOOL BARI,STATE HIGHWAY -12, SILIGURI - 734001 PH :9932049347

9932049380.

2696. SEVOKE MOTORS PVT. LTD. (4302-43-01), 233, SEVOKE ROAD, 2ND MILE, SILIGURI - 734001 PH:9706010366.

2697. PODDAR CAR WORLD PVT LTD (XY01-43-02), VILL. EAST DHANTALLA, FULBARI II G.P. P. O SATELLITE TOWNSHIP, DIST- JALPAIGURI -734015 PH :8425533002

SONADA

2698. SEVOK (SDX1-SDX-01), RATO MATEY DARA, NEAR PETROL PUMP, P.O. SONADA, WEST BENGAL PIN - 734209 - 734209 PH :9800069144.

SONAMUKHI

2699. BHANDARI AUTOMOBILES PVT LTD (CAU1-CAU-01), J L NO. 77, KHATIAN NO. 360, PLOT NO. 114/287, SONAMUKHI BISHNUPUR ROAD, VILLAGE - CHURAMANIPUR, P.O. & P.S. -SONAMUKHI, WEST BENGAL. - 722207 PH: 9933055539.

SREERAMPORE (SREERAMPUR)

2700. BHANDARI AUTOMOBILES PYT LTD (BBT1-BBT-01), BANGIHATI (MADPUR) DELHI ROAD, SREERAMPUR, DISTT: HOOGHLY, WB -712203 PH :66137505, 66137585, 9674741544.

TAMLUK

2701. BHANDARI AUTOMOBILES PVT LTD (OL01-OL-01), MOUZA PADUMBASAN, WARD NO 10, JL NO:144, DISTT: EAST MIDNAPUR, WEST BENGAL - 721636 PH. 9933055539.

TARAKESHWAR

2702. SANEI MOTORS PVT. LTD. (YH01-YH-01), MOUZA BAIDYAPUR, UNDER BALIGORI(1), GRAM PANCHAYET, TARAKESHWAR, DISTT. HOOGLY, WEST BENGAL. - 712410 PH:8584050184.

UDAYNARAYANPUR

2703. BHANDARI AUTOMOBILES PVT LTD (BOO1-BOO-01), VILLAGE-JANGALPARA BELGRAM, PS- UDAYNARAYANPUR, DIST-HOWRAH, WEST BENGAL. - 711226 PH :9073664902.

ULUBERIA

2704. BHANDARI AUTOMOBILES PVT LTD (2401-24-01), HOLDING 1242A, BANITABLA, P.O+P.S: ULUBERIA, NH-6, DISTT: HOWRAH, WEST BENGAL - 711316 PH :9052901888.

ANDHRA PRADESH

CUDDAPPAH

1.## SIVAJI MOTORS (3275), BESIDES PADMASHALI KALYANA MANDAPAM, MADRAS ROAD, KADAPA-516002, ANDHRA PRADESH,

PH:516002-9849113189. SREE VENKATESWARA AUTO. (1030),

SANKARA PURAM, CUDDAPAH (A.P)., , PH:516002-9704209620.

GUNTAKAL

S. MAHABOOB AUTOMOBILES (4075), ALUR ROAD, GUNTAKAL-515802, , PH:515802-9440208312.

GUNTUR

4.## S. S. MOTORS (4946), OPP. JKC COLLEGE, JKC COLLEGE ROAD, GUNTUR-522006, ANDHRA PRADESH, PH :522006-9848936363.

KAKINADA

5.## SATISH AUTO CARE (5038), BEHIND KALPANA THEATRE, BEACH ROAD KAKINADA, DISTRICT EAST GODAVARI, ANDHRA PRADESH, PH: 533005-9848313599.

S.## SRI SHIRDI SAI TECHNOCRAFTS (1459), FLAT NO 36/2, I.D.A., RAMANAYYAPETA, BESIDE MAHINDRA SHOW ROOM, OPP: BHAVANI CASTING ROAD, KAKINADA-533005

PH:533005-9848633336.

KAVALI

7.## KAMAL MOTORS (3842), 10-15-43/J3A OPP LIC, TANK RAOD, KAVALI, PH :524201-9440928888.

KURNOOL

8.## SRINIWAS AUTO GARAGE (5170), KALLUR ROAD, KURNOOL, DISTRICT - KURNOOL, ANDHRA PRADESH, PH :518002-9440244660.

MACHILIPATNAM

9.## SRI MARUTI MECHANICAL WORKS (4172), D.NO 4-121, PLOT NO 26,27, , POTEPALLI INDUSTRIAL PARK, MACHLIPATNAM-521002, PH :521002-9440538012.

MANDAPETA

10.## MODERN MARUTI CARE (4866), D.NO. 4-1-59/2, MAIN ROAD, MANDAPETA-533309, DISTRICT-EAST GODAVARI, ANDHRA PRADESH, PH: 533309-9133198494.

MATHURAWADA

11.## ANY TIME SERVICE CENTRE (4860), BESIDE ELECTRICAL SUBSATION, MADHURAWADA - 530041, DISTRICT VISAKHAPATNAM, ANDHRA PRADESH, PH : 530041-8977799888.

NAGARI

2.## PUJITHA SERVICE CENTER (5872), TIRUPATI ROAD, NAGARI-517583, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH :517583-9966106128.

NANDYAL

3.## MARUTI MOTORS (2635), PLOT NO 428, NH-18 , NEAR RAILWAY GATE , NANDYAL-518501,

PH:518501-9440554617.

NELLORE

14.## MARUTI AUTO SERVICE STN. (2620), 16/796 SANKARA AGRAHARAM, NELLORE-524 001 (A.P), ,

PH :524001-98858 81905.
MARUTI MOTORS (176), 16-3-995, MINI BYPASS ROAD,, RAMALINGAPURAM, NELLORE-524 003,(A.P.), PH :524003-98440278243.

PATTIKONDA

16.## ROYAL MOTORS (5776), ADONI ARTS & SCIENCE, COLLEGE ROAD ADONI, PATTIKONDA-518302, DISTRICT-KURNOOL, ANDHRA PRADESH, PH. 518302-9866362847.

PRODDATTUR

17.## SRI RAM MOTORS (3642), 189 INDUSTRIAL AREA, NEAR SRI LAKSMI NAGAR, MYDUKUR ROAD, PRODDATUR (A.P.), PH :516360-9666890525.

RAJAHMUNDRY

18.## MARUTHI MOTORS (1257), D.NO 88-30-04, OPP I.T.C. GADALAMMA NAGAR, NH-16, RAJAMAHENDRAVARAM -533107, PH -533107-9848253434

SRIKALAHASTI

SUNDEEP CARS (5972), 16/769,SRI RAM NAGAR COLONY, SRIKALAHASTI-517640, DISTRICT-CHITTOOR, ANDHRA PRADESH, PH:517640-9848294869.

TENALI

20.## HIMAJA MARUTI SERVICE STATION (2828), LECTURER'S COLONY, GIRIJA HOSPITAL ROAD, GANGANAMMAPET, TENALI-522 201 GUNTUR DIST. (A.P.), PH :522201-9849715727.

C-Category Mass: Free & paid Service & Minor repairs

21.## RAHUL MOTORS (5157), D.NO, 18-3-4BITRA
SRI RAMULU STREET, BEHIND TELEPHONE
EXCHANGE SALIPET, TENALI, ANDHRA
PRADESH,
PH :522201-9490187453.

VISAKHAPATNAM

22.## SIRI AUTOMOBILES (5232), PLOT O 94/A IDA E BLOCK, AUTO NAGAR GAJUWAKA, VISHAKHAPATNAM, ANDHRA PRADESH, PH:530012-9963296667.

23.## SRINIVASA AUTO GARAGE (5440), OPP.
KANTI ROAD,, NEAR RAYS PETROL PUMP VISHAKHAPATNAM, DISTRICT VISHAKHAPATNAM, ANDHRA PRADESH,
PH:530031-9912688943.

24.** VISAG AUTO SCANS (461), 49-52-1/4/2, OPP HNR VIHAR APPARTMENTS, SANTHIPURAM, SANKARMATAM ROAD, VISAKHAPATNAM-530016, PH :530016-9246625885.

VIZIANAGARAM

VIKRAMA AUTOMOBILES (4621), 17-13-4 TEMPLE STREET, VIZAINAGARAM - 531 202 (A.P.), PH :535003-9440192224

ARUNACHAL PRADESH

ALONG

26.## BANNU MOTORS (1744), SIYOM MARKET, ALONG, WEST SIANG DISTT., (ARUNACHAL PRADESH), PH .791001-9436056096/8258834061.

BOMDILA

7.## GURU MOTORS (3921), BIRPUR, RUPA, ARUNACHAL PRADESH 790003, PH :790003-7640898278.

NIRJULI

SANGO SERVICE CENTRE (5742), NH-52,NIRJULI - 791110, DISTRICT-PAPUMPARE, ARUNACHAL PRADESH, PH:791110-9436052480/8974454448.

TAWANG

29.## TAWANG MARUTI SERVICING STATION (4255), OLD BAZAR LINE, P.O. & P.S., TAWANG, ARUNACHAL PRADESH, PH. 790104-9402493456.

ZIRO

30.## HILLS AUTO AGENCY (3922), POLICE RESERVE PETROL PUMP ROAD, HAPOLI BAZAR P.O. ZIRO, DISTT. LOWER SUBANSIRI, ARUNACHAL PRADESH - 791 120, PH : 791120-9436047232.

ASSAM

BADARPUR

31.## MARUTI CAR PLAZA (3635), NEAR INDUSTRIAL AREA, S.T. ROAD, BADARPUR, DISTT. KARIMGANJ (ASSAM) PIN-788 806, PH:788806-9854970591.

BISHAWANATH CHARIALI

32.* BINA AUTOMATION (3677), , P.O.
BISHAWANATH CHARIALI, DISTT.
SONITPUR, ASSAM-784 176,
PH:784176-9957309744.

33.## DISHANG DONE (1058), 52 N.H., BISHWANATH CHARIALI-784176, DISTT. SONITPUR, ASSAM, PH :784176-9854004161.

34.## BINA AUTOMATION ()PH :-.

BOKAJAN

35.## SREE GANESH MOTORS (6040), SUKHANJAN SUPER MARKET,P.O:BOKAJAN(C.F.), DISTRICT KARBI ANGLONG , ASSAM , PH:782480-9435167138.

BOKAKHAT

36.## GOENKA AUTOMOBILES (2878), P.O. BOKAKHAT, DISTT. GOLAGHAT, ASSAM-785 612, PH:785612-9854048910.

DHALIGAON

ADHIKARI MOTOR WORKS (4049), P.O. DHALIGAON, DIST-BONGAIGAON, ASSAM-783385, PH:783385-9435020938.

DHEMAJI

8.## NARAH AUTOMOBILES (3852), C/O BLUE HILL COUNTER, P.O. DHEMAJI, DISTT. DHEMAJI, PIN-787 057 (ASSAM), PH.787057-9954390916.

DHUBRI

 BRAHMAPUTRA MOTOR SERVICING STATION (3127), G.T.B ROAD, DHUBRI-783 301, (ASSAM), PH :783324-8876798739/9101176148

DIBRUGARH

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 31.05.2023)

40.* GEE DEE AUTO SERVICE (953), JHALUKPARA, DIBRUGARH-786 001, ASSAM, PH:786001-9435131119.

MEHBOOR AUTOMOBILES & TYRE SERVICES (1760), CHOWKIDINGHEE, NEAR STATE TRANSPORT, DIBRUGARH-3. PH:786005-9854432207

DIGBOI

GAURI AUTOMOBILES (3760), MULIABARI, DIGBOI 786 171, , PH:786171-9435137556.

DOOM DOOMA

S K AUTO CARE (3962), UCHAMATI, NATIONAL HIGHWAY, DOOM DUMA, ASSAM 786151

PH:786151-9435135876.

GOAL PARA

44.## BHARAT ENGINEERING WORKS (969), PO -BALDMARI, AGIA ROAD, GOALPARA (ASSAM)-783 102. PH:783102-9864767777

GOLAGHAT

KAKOTI MOTOR WORKS (1074), NEW AMOLAPATTY RANGPUR P.O. GOLAGHAT-785 621, DISTT, GOLAGHAT (ASSAM). PH:785621-9435053663.

GOSSAIGAON

46 ## NARZARY AUTOMOBILES (4544), NH-31C, HABRUBII GOSSAIGAON DIST KOKRAJHAR, ASSAM-783360. PH:783360-9435109765.

GUWAHATI

MONO MOTOR WORKS (966), BAMUNI MAIDAN, GUWAHATI-781 021. . PH:781021-9864186600

HAILAKANDI

RONOK AUTOMOBILES (5978), LALA ROAD NEAR CIVIL HOSPITAL HAILAKANDI-788151, DISTRICT-HAILAKANDI, ASSAM.

:788151-8723032380/9707428563/9401960215.

HOJAI

49 ## PRAMAN MOTORS (5730), WARD NO. 12, HOLDING NO. 14. COLLEGE ROAD, HOJAI, ASSAM-782435, PH:782435-9954369700

JONAI

50.## BOROOAH MOTORS (4545), NH-515, MURKONG SLEEK, DIST, DHEMAJI, .IONAI-787060, ASSAM. PH:787060-9864590237.

KARIMGANJ

51.## S D AUTOMOBILE (4931), SILCHAR ROAD, KARIMGAN.I - 788710 PH:788710-8135002919/9435074975.

LUMDING

BEDI MOTORS (5827), MAIN ROAD, NORTH LUMDING.LUMDING-782447. DISTRICT -NAGAON, (ASSAM), PH:782447-9957333991

MANGAI DAI

PRIYAM AUTOMOBILES (2424), NH 52 COLLEGE ROAD, MANGALDOI, ASSAM, PIN-784 125 PH:784125-9401148730/9854209905.

MARGHERITA

VIRDI MOTOR WORKS (955), MISSION ROAD, P.O. MARGHERITA-786 181, DIST. TINSUKIA. (ASSAM). PH:786181-8011164932

MARIANI

55.## VASKAR AUTOMOBILES (5237), NEAR NST TINALI, P.O. :MARIANI, DISTRICT - JORHAT, ASSAM PH:785634-9508486813

MORANHAT

CHINAKI SERVICE STATION (2973), (MARUTI AUTHORISED SERVICE STATION), NATUN NAGAR A.T. ROAD, MORANHAT-785 670. (ASSAM), PH:785670-9401512821

MORIGAON

57.## PRAGATI MOTORS (5273), MORIGAON TOWN, WARD NO.1, BHATBOR-, DOLON PATH, P.O.: MORIGAON, DISTRICT -MORIGAON ASSAM PH:782105-9435064356.

NAGAON

58 ## DAS MARUTI MOTOR WORKS (3734), NAGAON -782001, , , (ASSAM), PH:782002-9435360246.

NALBARI

B.R.K. AUTOMOBILES ENGINEERING WORKS (2838), HAJO ROAD, NALBARI-781 335, (ASSAM), PH:781335-9954895264

NAMRUP

60.## RAJ ENTERPRISES (3849), NAMRUP INDUSTRIAL ENTERPRISES, SONARI TINIALI, PARBATPUR, NAMRUP-786 623 (ASSAM). PH:786623-9854135646.

NORTH LAKHIMPUR

GREEN LAND MARUTI WORKS (2974), NEAR GURUDWARA, NH 52, NORTH LAKHIMPUR-787 001, (ASSAM), PH:787031-9435085310.

PATHSALA

62 ## USHA AUTOMOBILES (4240), N.H. 31, PATHSALA-781325, DISTRICT-BARPETA, ASSAM PH:781325-9401310431

SILAPATHAR

BORLUIT MOTOR (5743), KHANAMUKH, P.O/P.S -SILAPATHAR, DIST-DHEMAJI, ASSAM

PIN-787059.

PH:787059-9954635182

SILCHAR

CARDROME (1559), 2ND LINK ROAD JUNCTION, SONAL ROAD (M.H.C. ROAD). SILCHAR-788 006, (ASSAM). PH:788006-9435071212.

TEZPUR

POOJA MOTOR WORKS (4373), N.T. ROAD. MURATETLI, TEZPUR-784001, ASSAM, PH:784001-9954707812.

TINSUKIA

AUTO MAKERS (934), MAKUM ROAD. UDYOG NAGAR, TINSUKIA -786 146 (ASSAM) PH:786146-9435035341.

TITABAR

SHANKAR AUTO WORKS (5174), C/O:SHIV SHAKTI AUTO WORKS.BALAJI, MARKET TITABAR CHARIALI TITABAR, DISTRICT -JORHAT, ASSAM. PH:785630-9435772479/9435051539

UDALGURI

68.## RENU MOTORS (4543), WARD NO. 2, U.T. ROAD, UDALGURI TOWN, UDAI GURI-784509 ASSAM PH:784509-9854348875.

BIHAR

ARRAH

69.## ANJALI ENTERPRISES (5533), ARRAH -PATNA MAIN BYPASS ROAD, NH-30. AHIRPURWA, OPPOSITE SURYA MANDIR, ARRAH, BIHAR -802232 PH:802232-9304910843.

AURANGABAD (BIHAR)

K R N AUTOMOBILE (2242), NEW G.T. ROAD, (NH-2), AURANGABAD-824 101, (BIHAR), PH:824101-9304930657.

BEGUSARAI

K.B. MOTORS (4768), NH-31, SINGHAUL. POKHAR, BEGUSARAI-851134, BIHAR,

:851134-7870041951/8271507870/9835214115 72.* NATIONAL AUTO WORKS (1536),

INDUSTRIAL AREA BARAUNI. BEGUSARAI-851 122. PH:851122-9973381733

BHAGALPUR

RUPRA AUTOMOBILES (1577), EAST OF AIRPORT, BHAGAI PUR-813 210, P.O. BAHADURPUR (BIHAR). PH:813210-9334385521.

BIHAR SHARIF

SARVADAY ENGG. & AUTO SER (1549). INDUSTRIAL ESTATE, RAMCHANDRAPUR. BIHARSHARIFF (NALANDA), PH:803101-9334672919

CHAPRA

PRASAD AUTOMOBILES (1974), BHAGWAN BAZAR, CHAPRA-841 301, (BIHAR), PH:841301-9431216362/8092627210.

DARBHANGA

SINGH MARUTI CARE (2277). RAJKUMARGANJ, P.O. LALBAGH. DARBHANGA-846 004 (BIHAR) PH:846004-9431293796.

GAYA

AUTO CARE (3027), DURGA BARI, HARIDAS CHATTERJEE LANE, NEAR SAINT PAUL SCHOOL, GAYA-823 001 (BIHAR). PH:823001-9102060955

HAJIPUR

78 ## ALFA AUTO (5454), PASWAN CHOWK, NH-13, HAJIPUR, DISTRICT - VAISHALI, BIHAR - 844101. PH:844101-9431327965/8092258357.

HI-TECH AUTOMOBILE (3123), GANDHI SETU PATH, N.H.-19, HAJIPUR, VAISHALI (BIHAR),

PH:844101-9835044502.

KAHALGAON

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

80.## MAHA GAURI ENTERPRISES (5822), NTPC ROAD GANGANAGAR C.HOWRATHIYASTHAN, KAHALGAON-813203, DISTRICT-BHAGAL PUR, BIHAR, PH :813203-9431463558.

MADHEPURA

81.## KRISHNA AUTOMOBILES (2639), SINGHSWAR ROAD, PATHRAHA, MADHEPURA-852 213, (BIHAR), PH :852213-9430583338.

MADHUBANI

82.## VIDYAPATI AUTOMOBILE (4234), BHAUARA, GANGASAGAR, MADHUBANI, BIHAR -847212,

PH:847212-9471648158/9304399511.

MUNGER

83.## SUN BEAM ENGG WORKS (1533), 150 BETWAN BAZAR, NEAR KHANKAH, P.O.& DISTT. MUNGER, BIHAR - 811201, PH :811201-9931962944

MUZAFFARPUR

84.** DYNAMIC MARUTI SERVICE CENTRE (1163), HARI SHARAN MARG, AMGOLA, POST OFF RAMNA, MUZAFFARPUR-842 002, PH

:842002-9431013057/9335003526/9386334595.

PERFECT MOTORS (3465), NEAR CHANDNI CHAUK, JHITKAIYA, POST: MIT PS: BRAHAMPURA, MUZAFFARPUR-842 003 (BIHAR), PH :842003-9835007407.

PATNA

86.** CAR SCANNER (1552), OPP. BATA, KANKAR BAGH COLONY, PATNA-800 020, PH :800020-9431016342.

87.** GOOD WRENCH SERVICES (3384), NH 30, BETWEEN BHARAT PETROLEUM & HP PETROL PUMPS, . 1 KM WEST OF "0" MILE, ASHOCHAK, NANDLAL CHAPRA, PATNA - 800007, PH :800007-7277772777.

88.## MARUTI MAINTAINER (4842), PLOT NO 73, MAIN ROAD, KANKARBAGH. NEAR RAJENDRA NAGAR OVERBRIDGE, PATNA, BIHAR-800020, PH:800020-7903741541.

89.* MOHINI AUTOMOBILES (1049), BEHIND RESERVE BANK OF INDIA, EXHIBITION ROAD, PATNA-800 001, PH :800001-9431094340/8987379073 90.** TIRUPATI AUTO (1956), ASHIANA MORE, BAILEY ROAD OPPOSITE UNION BANK, RAJABAZAR, PATNA-14, PH :800014-9835050292/8539077831.

PURNEA

91.## AUTO INDIA (3026), SRI DHAM MANDIR, PURNEA CITY, PURNEA 854302, PH :854301-9470204501.

SASARAM

92.## TRIPTY CAR SERVICE CENTRE (5535), NEAR RELIANCE PETROL PUMP, G.T. ROAD.NH-2, SASARAM-821115, DISTRICT-SASARAM, BIHAR, PH: 821115-9934792421.

SITAMARHI

 SITAMARHI AUTO CARE (6050), INDUSTRIAL AREA,RAJOPATTI, PO.SITAMARHI-843302, DISTRICT-SITAMARHI, BIHAR, PH:843302-9430012437.

CHANDIGARH

CHANDIGARH

94.** CAR CLINIC (179), PLOT NO-81, INDUSTRIAL AREA, PHASE-II, CHANDIGARH, PH:160002-9417216782

95.## HI-TEK MOTORZ (4743), PLOT NO. 658, INDUSTRIAL AREA, PHASE-1, CHANDIGARH, PH :160002-9872567868.

96.## RATTAN MOTORS (1155), SECTOR 23-C, CHANDIGARH-160 023, , PH:160023-9814008335.

CHHATTISGARH

AMBIKAPUR

97.## MARUTI AUTO CARE (4839), KHARSIA NAKA, AMBIKAPUR -497001, DISTRICT-SURGUJA, CHATTISGARH, PH: 497001-9425256087.

JAGDALPUR

98.## VISHWAKARMA AUTOMOBILES (4467), RAJMAHAL PARISAR, BAHAMBERS OF COMMERCE ROAD, JAGDALPUR, CHHATTISGARH, PH: 494001-9753300033.

JAMNIPALI

99.## AUTO CARE (3823), 203, J P COMPLEX SADA COLONY, JAMNIPALI-495 450, TEH. KATHGHORA DIST. KORBA (CHATTISGARH), PH: 495450-7587399102.

KORBA

100.## AUTO SELF SERVICE (8940), RAILWAY STATION CANAL ROAD, NEAR SUNALIYA RAILWAY CROSSING, MURARKA GALI, KORBA, CHATTISGARH 495678, PH :495678-9229495000.

MANENDRAGARH

101.## SHARMA AUTO CENTRE (5354), MAIN ROAD - MANENDRAGARH, DISTRICT - KOREA , PIN - 497442, CHHATISGARH, PH :497442-7771011802.

RAIPUR

102.## SHIVAM CAR SERVICES (4774), BILASPUR ROAD, KHAMTARAI, RAIPUR-492006, CHATTISGARH, PH -492006-9826192574

DELHI

DELHI

103.* AAPKA KARKHANA (MOTORS) PVT. LTD. (869), 62/I POSANGIPUR MAIN MARKET, A-3 BLOCK JANAKPURI, NEW DELHI-58, PH:110058-9811034869.

104.## ANAND MOTORS (4471), B-27, G.T. KARNAL ROAD, INDUSTRIAL AREA, NEW DEI HI-110033

PH:110033-9582379699.
A-ONE AUTOMOBILES (3362), 487/35
NATIONAL MARKET, PEERAGARHI,
DELHI-110 087.

PH :110087-9810257472

ASHA AUTOMOBILES (850), A-2 CHOTTEY
LAL PARK, NAJAFGARH ROAD, OPP.KIRTI
NGR.P.O, NEW DELHI-15,
PH :110015-9814847898

107.## AUTO ENGRS.SERVICE STN. (8023), OPP.MODEL TOWN, DERAWAL NAGAR, DFI HI-9

PH:110009-9811137929.
AUTO POINT SERVICE (1267), 70B RATTAN

108.* AUTO POINT SERVICE (1267), 70B RATTAN PARK, OPP. RAMESH NAGAR, NEW DELHI-110 015, DL-1410015, DDED022220

PH:110015-9958062220.

109.## AUTOTECH ENGINEERS (4551), PLOT NO. 20-24, MATIYALA VILLAGE, SECTOR-3, NEAR DPS DWARKA, NEW DELHI-110075, PH :110075-9811608008.

110.## BASANT MOTORS (8003), 78 TOLSTOY LANE, BEHIND SCINDIA HOUSE, NEW DELHI-110 001, PH :110001-9811522266.

111.## BHAGIRATHI MOTORS (4737), PLOT NO. 153/543, POOTH KHURD, DELHI-110039, PH :110039-9810804556.

112.## BHASIN SERVICE STATION (830).
DR.K.S.KRISHNAN ROAD, NEAR PUSA
GATE, NEW DELHI-110 012.,
PH. 110012-9971977992.

113.** BRIGHT MOTORS (P) LTD. (885), C-263
PEERAGARHI, OUTER RING ROAD, DELHI 110 087,

PH:110087-9810203018.

4.* DRIVE WELL SERVICE STN. (866), 1/486.G.C.S. COMPLEX MAIN G.T. ROAD , DILSHAD GARDEN, NEW DELHI-110095 , DELHI , PH :110095-9811020603.

115.## ENGINEERS SERVICE STATION (834), SHRI AUROBINDO MARG, (SAFDARJANG AIRPORT), NEW DELHI-110 003, PH :110003-9654262692.

116.## EXCEL AUTOMOBILES (3342), PLOT NO. 78, BAGDOLA VILLAGE, SECTOR 8, DWARKA, NEW DELHI-110 077, PH :110077-7011765194.

17.* EXCLUSIVE AUTOMOBILES PVT. LTD. (3546), 98 MANGOLPUR KALAN, SECTOR-2 NEAR JAIPUR GOLDEN HOSPITAL, ROHINI, DELHI-110 085, PH.:110085-9910782127.

118.## GLOBE SERVICE STATION (3631), 18TH KM MATHURA ROAD, BADARPUR, NEW DELHI-110 044, PH :110044-9818630354.

119.## HUNDRED PERCENT FILLING & SERVICE STATION (4939), LSC, SECTOR-9, OPP. NHAI, DWARKA, NEW DELHI-110075, PH:110075-9910586999

120.## IMAGE (2561), IOC PUMP, NEAR SAMACHAR APT. OPP. KIRTI APT., MAYUR VIHAR PHASE-I EXT., DELHI-110 091, PH:110091-9312082213.

P.1.** R S AUTOMOBILES (273), 111/9 KISHANGARH, OPP. CNG PUMP NEAR SPYM INSTITUTE, ARUNA ASAF ALI ROAD, VASANT KUNJ, NEW DELHI – 110070, PH :110070-9540944099

122.** KUMAR AUTOMOBILES (855), B-281 OKHLA INDUSTRIAL AREA, PHASE-I, NEW DELHI-110 020,

PH:110020-9810001625.

123.** NAVEEN AUTOMOBILES (4934), 37, PATPARGANJ INDUSTRIAL AREA, NEW DELHI-110092, PH: 110092-9911278537.

124.## NORTHERN SERVICE STATION (337), SARAI

24.## NORTHERN SERVICE STATION (337), SARAI BASTI, ROAD NO.40, OPP. SHASTRI NAGAR, DELHI-35, PH:110035-9213710643.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 31.05.2023)

125.** P R G MOTORS (365), A-99.103CH.TEKCHAND MARKET, GANESH NAGAR - TILAK NAGAR, DELHI-110 018, DELHI, PH :110018-9711196811.

126.## QUTAB SERVICE STATION (8078), MEHRAULI ROAD, NEW DELHI-110 017, , PH :110017-9811021862.

127.** RAJINDRA SERVICES P.LTD. (826), B-55 G.T.KARNAL ROAD, INDUSTRIAL AREA, DELHI-110 033., PH :110033-9899580820.

128.## ROHAN SERVICES (5444), PLOT

NO:125.VILLAGE POCHANPUR, SECTOR - 23 DWARKA, DISTRICT - DELHI (WEST), DELHI, PH:110075-9911180827.

129.* SATYA SERVICE STATION PVT. LTD. (3625), L-BLOCK HARI NAGAR, JAIL ROAD, NEW DELHI-64, PH:110064-9873461414.

130.** SEVEN HILLS AUTO.(P)LTD. (848), D-20/1
OKHLA INDUSTRIAL AREA, PHASE II, NEW
DEI HI-110 020

PH:110020-9811037954.

SHALIMAR AUTOMOBILES PVT. LTD (871),
C-91/9 WAZIRPUR INDUSTRIAL AREA,
ASHOK VIHAR CROSSING. DELHI-110052.

PH:110052-9811171489.

132.## SHIKHAR AUTOMOBILES (5546), A-2/1CHOTTEY LAL PARK, SHIVAJI MARG, OPP KIRTI NAGAR, METRO PILLAR NO.341, NEW DELHI-110015, DISTRICT -DELHI, DELHI,

PH :110015-9810047047.

133.## SINTEX SERVICE STATION (777),
883,RITHALA INDUSTRIAL AREA,, FIRNI
NALA ROAD,, DELHI - 85, DELHI,
PH :110085-9868030802.

134.## SRI BALAJI AUTOMOBILE (8038), KHASRA NO.33, 132-12 MAIN BAWANA ROAD, SAMEYJPUR (NEAR DELHI COLLEGE OF ENGG.), DELHI, PH :110085-9811039601.

135.## SRI SAI AUTO ENGINEERS (8074), 487/59 PEERA GARHI, INDUSTRIAL AREA, DELHI, PH :110087-9650531612.

136.## WIG AUTOMOBILES (8012), D-3 S.M.A CO-OP. INDL. ESTATE, (OPP. JAHANGIR PURI CHOWK), G.T. KARNAL ROAD, DELHI-110 033,

PH:110033-9811297607.

137.## YASHWANT PLACE SER.STN. (8022),
AFRICA AVENUE, (OPP.CHANAKYA
CINEMA), NEW DELHI-21,
PH:110021-9868255788.

GOA

BICHOLIM

138.## SHREE GURUKRUPA AUTOWORLD (1249), PLOT NO.76, , BICHOLIM, GOA-403 529, PH :403529-9422057272.

CURCHOREM

139.## VIPUL AUTOMOBILES (5376), PLOT NO.7.8.9.KAKODA INSUSTRIAL ESTATE, KAKODA CURCHOREM, DISTRICT - SOUTH GOA, GOA, PH:403706-9422018746.

KUNDAIM

40.* VIKAS ENGINEERING WORKS (4953), BHOMA, KUNDAIM, GOA-403107, PH:403107-9823780335.

MAPUSA

141.## SARDESAI AUTOMOBILES (2176), 194, GAUNSAWADA, , NEAR MILAGRES CHURCH, MAPUSA, GOA-403 507, PH :403507-9764448741.

PONDA

142.* DHAVLIKAR AUTOMOBILES (2041), NO.5 TIP TOP MANSION IV, INDIRA NAGAR, DHAVALI, PONDA, GOA-403 401, PH: 403401-9890669879.

VERNA

143.* LUBRICARE SERVICES (261), 7-D GOULLOY, NH.17 NUVEM, SALCETE, GOA-403 601, PH:403601-9822124376.

GUJARAT

AHMEDABAD

144.* AUTOWAY (125), MANGALYA COMPLEX, NEAR ANJALI CINEMA CROSS ROAD, BATTHA, AHMEDABAD, PH :380007-9825016888

145.## DAHISON MOTORS (143), NEAR MANAV MANDIR, DRIVE IN ROAD, AHMEDABAD-380 052,

PH:380052-9898096242.

146.## MEGHDOOT MOTORS (3437), MASONIC LODGE COMPOUND, SHAHIBAUG ROAD, AHMEDABAD-4,

PH :380004-9825972345.
POKAR AUTO REPAIRERS (2479), NEAR UNION CO. BANK, SAIJPUR BOGHA, NARODA ROAD, AHMEDABAD-382 345, PH :382345-9428608515.

48.* RAJAN MOTORS (2873), C/0 M/S. SUPER SERVICE STATION, 79/80 JAGABHAI PARK, RAM BAUG MANINAGAR, AHMEDABAD-380 008.

PH:380008-9825972345.

149.** SPEED AUTO CARE PVT. LTD (5524), NH-8.VIRAT NAGAR AHMEDABAD, DISTRICT - AHMEDABAD, GUJARAT, PH:380023-9979992779.

AMRELI

 CAR CARE CENTRE (2734), PATEL GARAGE, CHAKRAGADH ROAD, AMRELI-365 601, (GUJARAT), PH :365601-9825422922.

151.* KHODIAR MOTORS (3029), GAVADKA ROAD, AMRELI-365 601, (GUJARAT), PH:365601-9825672657.

ANAND

52.* PATEL TRACTOR COMPANY (2221), (SERVICE DIVISION), BEHIND SUNIL CHAMBERS, STATION ROAD, ANAND-388 001,

PH :38801-9925534494.

SHAKTI MOTORS (2226), OPP. J.K. PARK,
NATIONAL HIGHWAY NO.8, P.O.
VAGHASHI-388 320, TA: ANAND DISTT.
KHEDA,
PH :388320-9825792999.

ANJAR

154.## CAR AGE (5542), PLOT NO.11, MAHATMA NAGAR-1, ANJAR , GADHPADAR ROAD, NR.MAHAKALESHWAR, MAHADEV MANDIR, ANJAR , GUJARAT, PH:370110-9427216886.

BARDOLI

155.** POOJA MOTORS (361), NEAR GIDC, SURAT ROAD, BARDOLI-394 601, (GUJARAT), PH :394601-9825762621.

BHARUCH

56.* NEW MARUTI MOTORS (5156), 9/16 AKASH GANGA.B/H CNG PUMP, OLD NH -8.BHOLAV , DISTRICT - BHARUCH, GUJARAT, PH :392001-9898611424.

BHAVNAGAR

157.## VIKRAM MOTOR GARAGE (127), TAKHTESHWAR PLOT, NEAR CHANDRA BHUVAN, BHAVNAGAR - 364 002., PH :364002-9427145452.

BHUJ

 ASHA MOTORS (3629), LAL TEKRI, HOSPITAL ROAD, BHUJ-370 001, (GUJARAT), PH:370001-9727499383.

BILIMORA

159.## PATEL AUTOMOBILES (4030), DANDEKAR COMPOUND, GANDEVI ROAD, BILIMORA, PH:396321-9824123875.

BORSAD

CROSSING, BHARAN ROAD, BORSAD, DISTT. ANAND, PH:388540-9825021960.

SUMAN MOTORS (3863), NEAR NISHRAYA

CHAND KHEDA

160.##

161.* BALVINDER AUTOMOBILES (2528), PLOT NO.2022, NATIONAL HIGHWAY NO. 8, CHAND KHEDA, DISTT. GANDHI NAGAR-382 424 (GUJARAT), PH :382424-9924016000.

CHIKHLI (GUJ.)

162.## INAL MOTORS (3929), POST MAJIGAM, CHIKLI BILIMORA ROAD, DISTT NAVSARI, PH :396521-9099033773.

163.## SHREE AMBICA MOTORS (2663), KUNDI FATAK, NEAR ADARSH NURSERY, N.H.8, CHIKHLI DISTT. VALSAD (GUJARAT)-396 001, PH: 396001-9825131520.

DAHOD

CAR SEVA (2438), SAINT STEPHEN SCHOOL ROAD, GODHRA ROAD,, DAHOD. PIN-389151, PH :389151-9426469122.

DAMAN

165.## CAR ZONE (4358), SURVEY NO. 70/3, VARKUND, OPP VEERA DA DHABA, VAPI DAMAN ROAD, DAMAN-396210, PH :396210-9824184449.

166.## TOP GEAR (5469), DAMAN-KUNTA ROAD.KUNTA DAMAN-396210, DISTRICT -UNION TERRITORY, GUJARAT, PH :396210-9825631264.

DEESA

167.## VAKHARIA MOTORS (3970), G L PADIAR COMPLEX, PALANPUR PATHAN HIGHWAY, OPP. RAJMANDIR TALKIES, DEESA, PH. 385535-9377728841.

DHARI

168.## GURUKRUPA MOTORS (5876), NR. NARMADESHWAR MAHADEV TEMPLE, DHARI,AMRELI ROAD,DHARI-365640, DISTRICT-AMRELI, GUJARAT, PH: 365640-9825374658.

DHORAJI

169.## UNIVERSE AUTO (5837), SARDAR CHOWK,DHORAJI-360410, DISTRICT-RAJKOT, GUJARAT, PH :360410-9727714643.

GANDHI NAGAR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs # D-Category D-Category D-Category Mass : Free & paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Paid Service & Minor repairs # D-Category Mass : Free & Minor repairs # D-Category Mass : Fr

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

- 170.* LABH MOTORS (4527), PLOT NO B 206+207 ,, GIDC, SECTOR -25,, GANDHINAGAR GUJARAT, PH :382024-9825020030
- 171.* RIDDHI MARUTI(A DIVISION OF SHREE ARBODA PVT. LTD (2151), E-19/10 G.I.D.C. SECTOR 26, NEAR K-7, GANDHINAGAR-382 044,
- PH :382044-9825041331.

 SHITAL MOTORS P.LTD. (134), 304 G.I.D.C., SECTOR-28, GANDHINAGAR 382 028 (GUJARAT)., PH :382028-9924127065.

HALOL

173.## MAA MOTORS (4767), GODHRA ROAD, NEAR TELEPHONE EXCHANGE, HALOL, GUJARAT, PH :389350-9898610212.

HIMMATNAGAR

174.## MEHTA SERVICE STATION (135), NEAR SHANTI GARDEN, RESTAURANT, DIWALI BAUG MOTIPURA, N.H.B. HIMMATNAGAR GUJARAT-383 001, PH :383001-9426555664.

IDAR

175.## SUN MOTORS (5175), IDAR-HIMMATNAGAR HIGHWAY ROAD, AT.KRUSHNAGAR.PO NETRAMLI., TA.IDER DISTRICT SABARKANTA, GUJARAT, PH :383430-9228286788

JAMKHAMBHALIA

176.## SHRI HARI OM MOTORS (4539), JADESWAR ROAD CHAR RASTA, OPP. KRISHNA WAY BRIDGE, JAM KHAMBHALIA-361305, GUJARAT, PH :361305-9426955344

JAMNAGAR

177.* LANDMARK AUTOMOBILES (1973), PLOT NO-4/2, JAMNAGAR- KALVAD ROAD, MAHAPRABHUJI BETHAR ROAD, OPP SUBHASH BRIDGE, JAMNAGAR-361 006, (GUJARAT), PH :361008-7600000733.

JETPUR

178.## GIRIRAJ MOTORS (3971), JUNAGADH HIGHWAY, NEAR JALARAM TEMPLE, JETPUR, PH :360370-9727154392.

JUNAGADH

179.## MARUTI MOTORS (266), G.I.D.C. - I, RAJKOT HIGHWAY, DOLATPARA, JUNAGADH(GUJARAT), PH :362201-909984988.

KALOL

180.## SUNRISE AUTO CENTRE (146), OPP. IFFCO, AHMEDABAD-MEHSANA ROAD, SAIJ KALOL, (NORTH GUJARAT)-382 721, PH :382721-9879542207.

KAMREJ

81.* PATEL MOTOR GARAGE (2764), PLOT NO 1,2,3, NAVAGAM,, NR. MANISHA HOTEL, OPP. DADABHAGWAN TEMPLE, NAVAGAM, KAMREJ,, DIST: SURAT-394185, PH:394185-9825127413.

KAPADVANJ

182.## DISHA MOTORS (5960), MAHAMADPURA,KAPADVANJ-NADIAD ROAD, KAPADVANJ-387620, DISTRICT-KHEDA, GUJARAT, PH:387620-9825641244.

KESHOD

183.## PRASAD MOTORS (3969), VERAVAL HIGHWAY, KESHOD, , PH :362220-9825024488.

LIMDI

184.## PARTH AUTOMOBILES (4171), OPP.SWAMINARAYAN TEMPLE, NH NO-8A, LIMBDI DIST, SURENDERNAGAR, PIN-363421, PH:363421-9426714510.

LUNAWADA

185.## N.J. MOTORS (4370), MODASSA ROAD, NR. SAIFEE HOSPITAL, LUNAWADA, DIST: PANCHMAHAL (GUJARAT), PH :389230-9924252700.

MEHSANA

- 86.* SANSKAR MOTORS (5468), PALAVASANA -BECHARAJI ROAD, , NR ONGC FIRE STATION ,MEHSANA-384002 , DISTRICT-MEHSANA, GUJARAT, PH :384002-9825106359.
- 187.** SHUBH AUTO SERVICES (3367), NEAR AGRO PETROL PUMP, OLD RTO, RAMOSNA JAKAT NAKA, MEHSANA (GUJARAT), PH :384001-9825322460

MORBI

188.## ARUN MOTORS (2071), SANALA BYE PASS, NEAR G.P. GINING MILLS, MORBI -363641, GUJARAT, PH :363641-9825222825.

NADIAD

189.## SHIVAM MOTORS (4430), OPP RASHAM RESTAURANT, DABHAM CROSSING, N.H 8, NADIAD, GUJARAT, PH :387320-9825021960.

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

NAKHATRANA

190.## ASHA MOTORS (4340), NANA ANGLADESH, NAKHATRANA HIGHWAY ROAD, NAKHATRANA, KUTCH, PH :370615-9825225088.

PETLAD

191.## SIDDHI MOTORS (4166), OPP. GEB, NEAR RAILWAY CROSSING, NADIAD-KHAMBHAT HIGHWAY, PETLAD, ANAND, PIN-388450, PH :388450-7359465067.

RAJKOT

192.** KHODIYAR MOTORS (356), DHEBAR ROAD (SOUTH), ATIKA INDUSTRIAL ESTATE, RAJKOT-360 001, PH :360001-9426202885.

193.* UNIVERSE AUTO (5544), C/O DELHI GUJARAT TRANSPORT,NR. NAVAGAM, OCTROI POINT,AHMEDABAD HIGHWAY, RAJKOT-380002, DISTIRCT - RAJKOT, GUJARAT.

PH:380002-9879616643

RAJPIPLA

194.## R. N. MOTORS (5255), 22-GIDC NEAR PETROL PUMP, RAJPIPLA, DISTRICT -NARMADA, GUJARAT, PH: 393145-9925325300.

SAVARKUNDLA

195.## SHYAM MOTORS (8925), OPP. ESSAR PETROL PUMP, AMRELI ROAD, SAVARKUNDLA-364515, DISTRICT-AMRELI, GUJARAT, PH: 364515-9427742134.

SIDDHPUR

196.## GOOD LUCK MOTORS (5341), 2.UMIYA COMPLEX .NEAR GURUKUL , HIGH SCHOOL SIDDHPUR , DISTRICT - PATAN, GUJARAT, PH :384151-9898428989.

SIHOR

197.## MOMAI MOTORS (6032), NR. RAJ MOMAI PETROLIUM, BHAVNAGAR-RAJKOT HIGHWAY,SIHOR-384240, DISTRICT-BHAVNAGAR, GUJARAT, PH:364240-9510201800.

SURAT

198.## EMPEROR CAR TECH (1748), F.PLOT NO.124 NEAR RELIANCE COMPLEX, BESIDE SHEETAL MARBLE, SURAT-DUMAS ROAD PIPLOD, SURAT-395 007, PH :395007-9825033396.

- 99.* J.K.MOTORS (5158), LUHAR MOHALLA .POSTT PALGAM, DISTRICT - SURAT, SURAT -394510, GUJARAT, PH :394510-990920902
- 200.* NILESH MOTORS (5347), AMBER SHOPPING CENTRE. OPP. SADHNA CHAMBERS, VARACHHA ROAD, DISTRICT - SURAT, GUJARAT,
- PH :395004-9377762660.
 201.** PATEL MOTORS (3060), 64 BAJRANG
 NAGAR, NEAR OCTROI CHECK POST, NANA
 VARCHA, SURAT-395 006,
 PH :395006-990149498.

SURENDERANAGAR

202.## ADIT MOTORS (1247), 504/B PHASE-III, G.I.D.C. WADHWAN CITY, SURENDRANAGAR-363 035, PH :363035-9879114222.

TALALA

RUBY MOTORS (5942), TALALA ROAD, RAMRECHI(GIR), DIST - GIR, SOMNATH -362150, , PH:362150-9824061044.

UMBERGAON

204.## KARAN AUTOMOBILES (2571), OPP, DAMRU WADI, UMBERGAON SANJAN ROAD, UMBERGAON DIST. VALSAD, GUJARAT-396 170, PH :396170.9824336583

UNJHA

205.## AMBIKA MOTORS (3932), SADGURU COMPLEX, AHMEDABAD PALAM PUR HIGHWAY ROAD, UNJHA, MEHSANA-384170, PH:384170-9824517382.

VADALI

206.## VRAJ MOTORS (4560), UMIYA PARK, HIGHWAY ROAD, VADALI TA, VADALI, SABARKANTA (GUJARAT), PH :383235-9427364109.

VADGAM

207.## CHAUDHARY & CHAUDHARY MOTORS (5651), OPP. RELIANCE PETROL PUMP, PALAMPUR ROAD - VADGAM, DISTRICT -BANASKANTHA, GUJARAT, PH:385410-9664590698.

VADODARA

08.** CAR CARE (2229), NEAR GANDHI OIL MILL, GORWA INDUSTRIAL ESTATE, BARODA-390 016, PH :390016-9825044610

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 31.05.2023)

- 209.* CAR CLINIC (4640), PLOT NO. B-7 (PART), ANUR ESTATE, NEAR DABHOI ROAD, JAKATNAKA, VADODARA (GUJARAT), PH :390004-9925003558.
- 210.## DREAM MACHINES (2933), 19 MULJINAGAR COLONY, OPP. GHELANI PETROL PUMP, NIZAMPURA, VADODARA-390 002, PH :390005-7575809940.
- 211.* GENERAL MOTOR REPAIRING WORKS (2529), NEAR LOK SATTA PRESS, NAGARWADA, VADODARA-390 001, PH :390001-9825026106.
- 212.** HONEST AUTO STRUCTURE WORKS (279), 9, VINODBAUG BEHIND HOTEL SANMAN, JETPUR ROAD, VADODARA, PIN: 390005, PH: 390002-98/24014046
- 213.## MAYUR SERVICE STATION (2224), NEAR POLICE STATION, PRATAPNAGAR ROAD, BARODA-390 004, PH :390001-9879453031.

VALIA

214.## HARI OM AUTO CARE (5750), NEAR MAZDA HOTEL - VALIA, ANKALESHWAR ROAD-VALIA, DISTRICT-BHARUCH, GUJRAT, PH :393135-9427336094.

VALSAD

HONEST AUTO GARAGE (2220), SUGHAR FALIA, BEHIND MOTA GHANCHIWAD, VALSAD-396 001 (GUJARAT), PH :396001-9426110767.

VANTHLI

216.* INFINITY MOTORS (5963), RAVI RATAN' VADLA FATAK , OPP.HP PETROL PUMP ,POST VADLA,TAL VANTHLI-362205, DISTRICT-JUNAGADH, GUJARAT, PH: 362001-9898990120.

VIRAMGAM

217.## KRISHNA MOTOR GARAGE (4038), OUTSIDE BHARWADI GATE, NEAR BHARAT PETROL PUMP, VIRAMGAM, PH :382150-9426415274.

VYARA

218.## PARTH MOTORS (8928), D-1.CITY LIGHT TOWER KAKRAPAR, BYPASS ROAD-VYARA, DISTRICT-SURAT, GUJARAT, PH :394650-9898292020.

HARYANA

AMBALA

219.## BASSAN MOTORS (4964), 99 TH MALL, AMBALA CATT - 133001, HARYANA, PH :133001-9466000000.

- 220.** GURU NANAK MOTORS (2036), POLICE LINES CHOWK, AMBALA CITY, ,
- PH :134003-8708357725.
 HIRA MOTORS (2740), 207 MILE STONE,
 VASANT VIHAR GT ROAD, N.H.-1, AMBALA
 CITY
 - PH :134002-9255285212.

 RAVI MOTORS (1957), 125 STAFF ROAD, HOTEL SAVOY, AMBALA CANTT-126 102, PH :133001-9315110209.

BADHARA

223.* S.S MOTORS (5735), NEAR REST HOUSE, BADHARA-123308, DISTRICT-BHIWANI, HARYANA, PH:127308-9255141288.

BAHADURGARH

224.## GL AUTOMOBILES (5263), MAIN ROHTAK ROAD, SANKHOL OPP CH. DEVI LAL PARK, DISTRICT - BAHADURGARH, HARYANA, PH :124507-9416303473.

BARARA

225.## LUXMI AUTOZONE (5334), VPO BARARA , DISTRICT - AMBALA, HARYANA, PH :133201-8222024046.

BARWALA (HARYANA)

226.** FAQIR CHAND QUALITY FUELS (5435), KILLA NO.20L H.S. NH-65., CHANDIGARH ROAD -BARWALA, DISTRICT - HISAR, HARYANA, PH :125121-9215027000.

BHIWANI

227.## VEER MOTOR WORKSHOP (1850), 24 NEW MOTOR MARKET, BHIWANI, (HARYANA)., PH :127021-9416057857.

BHUNA

8.* MITTAL AUTOMOBILES (5748), NEAR BUS STAND, JAKHAL ROAD - BHUNA, PIN-125111, DISTRICT-FATEHABAD, HARYANA, PH:125111-9813207221.

FARIDABAD

- 229.## BALAJI SERVICE STATION (4956), SECTOR
 23-24, MAIN ROAD, NEAR BALAJI DHARM
 KATA, FARIDABAD-121004, HARYANA,
 PH :121001-98187004220129-4100265.
- 230.** INSUH AUTO (377), 13/3 MAIN MATHURA ROAD, (ADJOINING FRICK INDIA), FARIDABAD-121 003, PH
 - :121003-0129-2272587/0129-2272484/9810135 516.
- 231.## KHURANA AUTOMOBILES (2863), 3C/60 B.P. (OPPOSITE ESI HOSPITAL), N.I.T., FARIDABAD.

PH:121001-9891984841/9810474117.

- ** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs
- ## C-Category Mass : Free & paid Service & Minor repairs

- 232.** PERFECT AUTOZONE (P). LTD. (5667), PLOT NO 9, ADJACENT TO UNION BANK OF INDIA, ANKHIR, OPP SEC 21-D, MAIN BADHKAL ROAD, DISTT FARIDABAD, HARYANA 121001.
- PH: 121001-9953417558/9871466789.
 233.## SARASWATI AUTOMOBILES (4465), 44 B.P.
 NEELAM BATA ROAD, N.I.T, FARIDABAD,
 PH
 :121001-0129-4029665/0129-2429665/9811446

686. FARRUKHNAGAR

234.** M R MOTORS (5946), GURGAON-JHAJJAR ROAD, OPP. ANAAZ MANDI, FARRUKHNACSAR-123506, DISTRICT-GURGAON, HARYANA, PH:122506-9810831200.

FATEHABAD (HARYANA)

- 235.## DHINGRA AUTOMOBILES (1856), G.T. ROAD, FATEHABAD, (HARYANA), PH :125050-9896012906.
- 236.## INDORA MARUTI SERVICE STATION (3064), OPPOSITE M M COLLEGE, SIRSA ROAD, FATEHABAD, 125050, PH 125050-9254080200

GANAUR

237.## SITA AUTOMOBILES (4260), 347, WARD NO.
10, BST ROAD, GANAUR, DISTT- SONEPAT,
PH:131101-9992022047.

GANGWA

238.** PANCHMUKHI AUTOMOBILES (5968), HISSAR RAJGARH ROAD,, GANGWA-125001, DISTRICT-HISSAR, HARYANA, PH: 125001-9728100029.

GOHANA

239.## KRISHNA MOTORS (4132), ROHTAK ROAD, GOHANA, , PH :131301-9017062999.

GURGAON

- 240.## A & A ENTERPRISES (4639), 396, PHASE-IV, UDYOG VIHAR, GURGAON (HARYANA), PH :122015-8851819511.
- 241.## GANGA MOTORS (363), SHIVPURI, GURGAON-122 001, , PH :122001-0124-2314940/0124-2322084/9810430
- 6028.

 KUMAR AUTOMOBILES (4848),
 BEHRAAMPUR ROAD , NEAR NH-8,
 GURGAON -122001, HARYANA,
 - :122002-9873431696/0124-2215696/987344880

- 243.## MANISH AUTOMOBILES (4777), GHATA ROAD, WAZIRABAD, NEAR SECTOR-56, GURGAON-122001, HARYANA,
- :122001-9873243858/9899561595/9899475288.
 QUTAB AUTOMOBILES (3668), KHEWAT/
 KHATA NO 714/809, VILLAGE JHARSA,
 UNITECH CYBER PARK ROAD, SECTOR 39,
 GURGAON, HARYANA 122001,
 PH
 - :122001-0124-2385333/0124-92267334//981168 7333.
- 245## RAJASTHAN AUTO WORKS (4760), LT. ATUL KARATIA MARG, NEAR PETROL PUMP, AKASHI FILLING STATION, AMAN PURA, SECTOR-5 ROAD, GURGAON-122001 (HARYANA),
- PH:122001-8368972946)9910070220.
 246.## SG MOTORS (6756), PLOT NO.494, SECTOR 37, PACE CITY II, VIUDYOG VIHAR VI GURGAON, DISTRICT-GURGAON, HARYANA, PH:122001-9711770092.
- 247.** SEVEN HILLS AUTOMOBILES PVT LTD (6038), VIJAY VIHAR MAIN SILOKHRA ROAD, SEC-30, GURGAON- 122002 , HARYANA .
- PH:122001-9810602354.
 248.## SOMESH AUTOMOBILES (455), PLOT NO 249/2/8, BLOCK A, ROAD NO A-56, DLF PHASE 1, GURGAON 122002, PH:122002-9717070830.
- 249.## SRI PARKASH AUTOMOBILES (5862), BAJGHERA ROAD,NEAR PARKASH PURI ASHRAM, NEW PALAM VIHAR,GURGAON-122001, DISTRICT-GURGAON, HARYANA,
- PH :122001-9899157729/9810070098.

 TOP GEAR AUTOMOTIVE ENGINEERS (4464), MAIN JHARSA ROAD, GURGAON, (HARYANA),
 - :122001-0124-4039011/9810304011/989143940

HANSI

251.** VIKAS AUTOMOBILES (4744), SHANTI NIKETAN, OPP. JIND BYE PASS, G.T. ROAD, HANSI, DISTRICT-HISSAR (HARYANA), PH: 125033-9466248037.

HISSAR

252.* PALCO MOTOR GARAGE (4739), 96 AUTO MARKET, HISSAR-125001, HARYANA, PH:125001-9729601111

- * B-Category Mass : Free & paid Service & Major repairs
- # D-Category Mass : Free Service & Minor repairs

253.* SAI AUTOMOBILES (5267), TOSHAM ROAD, NEAR AAKASH INSTITUTE, SECTOR-13, HISSAR, HARYANA, PH:125001-7988238034.

254.** SALASAR AUTO (4735), OPP. VIDYUT NAGAR GATE NO. 2, DELHI ROAD, HISSAR-125001, HARYANA, PH.:125001-9355486716.

HODAL

255.## VED MOTORS (2247), HIGHWAY ROAD, NEAR RAILWAY STATION CHOWK, HODAL-121 106, (FARIDABAD), PH :121106-7988978936.

INDRI

256.## ASHOKA MOTOR (6041), OPP. PARTAP FILLING STATION,LADWA ROAD, TEHSIL-INDRI,DISTRICT-KARNAL, HARYANA, PH :132041-8813000316.

ISMAILABAD

257.* VINAYAK MOTORS (6052), OPP. MAHARAJA PALACE , AMBALA HISSAR ROAD ISMAILBAD-136129 , HARYANA, PH :136129-9034820190.

ISRANA

258.## SHIV DARSHAN AUTOMOBILES (6051), ISRANA PANIPAT ROAD, NR. NC COLLEGE,ISRANA-132103, DISTRICT-PANIPAT , HARYANA, PH : 132107-9911366230.

JHAJJAR

259.## VASUNDHRA MOTORS (1467), REWARI ROAD, JHAJJAR-124 103, (HARYANA), PH :124103-9812012180.

JIND

260.## MOHIT MOTORS (1574), SAFIDON GATE, JIND-126 102, , PH :126102-9355129844.

KAITHAL

261.## HIND AUTOMOBILES (1858), AMBALA ROAD, KAITHAL, , PH :136027-7015806781

KANINA

262.## SHREE KRISHNA MOTORS (5953), BHOOP SINGH MARKET,NEAR PETROL PUMP, MAHINDERGARH ROAD, KANINA-123027, DISTRICT-MAHINDERGARH, HARYANA, PH :123027-9467641678.

KARNAL

263.** RUBY MOTORS (4734), 28/3 HSIDC, NEAR NAMASTEY CHOWK INDUSTRIAL AREA, KARNAL-132001, HARYANA, PH :132001-9896345633.

KHARKHODA

264.* PRANAV MOTORS (5771), SAMPLA ROAD,KHARKAUDA-131402, DISTRICT-SONEPAT, HARYANA, PH :131402-9896145161.

KUNDLI

265.## SHIV SHAKTI AUTOMOBILES (4628), SECTOR 53, HSIIDC, JANTI ROAD, NEAR K.H.I COLD STORAGE, KUNDLI, SONEPAT, HARYANA - 131028, PH:131001-9811047480.

KURUKSHETRA

266.## KARTAR MOTORS (1645), RED ROAD, KURUKSHETRA-132 118, , PH :136118-9896245900.

7.** KARTAR MOTORS (5349), PLOT O 65-66, SECTOR -2, HUDA INDUSTRIAL, AREA KURUKSHETRA,

PH:136118-9896245900.

SAINI MOTORS (2131), G.T. ROAD, UMRI CHOWK, KURUKSHETRA, (HARYANA), PH:136118-9896183931

LOHARU

269.## BHAWNA MOTORS (6028), BHIWANI ROAD, LOHARU-127201, DISTRICT-BHIWANI HARYANA, PH :127201-8901276555.

MAHENDERGARH

270.## SHREE SHYAM MOTORS (5843), NEAR I.O.C PETROL PUMP, MAHENDERGARH-123029, DISTRICT-MAHENDERGARH, (HARYANA), PH: 123028-8199982018/9050994709.

MANDI ADAMPUR

271.## MITTAL AUTO AGENCIES (2966), 113-15 AUTO MARKET, MANDI ADAMPUR, (HARYANA), PH :125052-9729173300.

MANESAR

272.## MAITRI SERVICE STATION (2378), N.H.8, DELHI-JAIPUR ROAD, MANESAR (GURGAON), PH :122001-9818001128

NILOKHERI

273.## SURENDERA MOTORS (5049), NEW NEHSIL ROAD.NILOKHERI, DISTRICT KARNAL, NILOKHERI-132117, HARYANA, PH. 132117-9812510190.

PALWAL

274.** D.K. & R.K. MOTORS (1159), NEAR BUS STAND, , NH-2 PALWAL, PALWAL, PH :121102-9416066647/9050460231. 275.* SHEELA MOTORS (5141), OPP MUNICIPAL COUNCIL OFFICE, OLD G T ROAD, DISTRICT - FARIDABAD, HARYANA, PH :121102-9416066251/01275-401501.

PANCHKULA

276.** PANCHKULA AUTO SERVICES (1949), PLOT NO.300, PHASE-II INDUSTRIAL AREA, PANCHKULA-134 109, (HARYANA), PH.:134109-9316132257.

PANIPAT

277.** PREM MOTORS (2266), PLOT NO.134, SECTOR 25 INDUSTRIAL AREA, PANIPAT, PH:132103-9896306380.

PATALIDI

278.** SHUBHAM AUTOMOBILES (4641), REWARI ROAD, PATAUDI, DISTT. GURGAON, PH::122413-0124-2672942/9812665240.

PEHOWA

9.* AMAR AUTOMOBILES (2270), OPP. DAV COLLEGE, AMBALA ROAD, PEHOWA DISTT. KURUKSHETRA, (HARYANA), PH:136128-9896002974.

RADAUR

280.## SHRI SHIVAM AUTOMOBILES (5852), S.K. ROAD,OPP. ESSAR PETROL PUMP, RADAUR-135133, DISTRICT-YAMUNANAGAR, HARYANA, PH :135133-9034384003.

RANIA

281.## SINGLA MOTORS (3779), NEAR BUS STAND, RANIA-125 076, DISTT. SIRSA (HARYANA), PH:125076-9416011238.

REWARI

282.## GAUTAM MOTORS (1837), NARNAUL ROAD, REWARI -123401 (HARYANA)., , PH :123401-9416064894.

283.## PULYANI MOTORS (4663), BEHIND KAMLA PALACE, CIRCULAR ROAD, REWARI-123401, HARYANA, PH

> :123401-9416064738/01274-252238/01274-257 938/9955963168

284.* SHIVAM SERVICES (1466), OPP. CENTRAL SCHOOL, GARHI BOLNI ROAD, REWARI-123 401

PH:123401-01274-254825/9416288341.

SADHAURA

285.## SHREE GANESH MOTORS (5959), NEAR INDIAN OIL PETROL PUMP, KALA AMB ROAD, SADHAURA-133204, DISTRICT-YAMUNANAGAR, HARYANA,

PH:133204-9813376260.

SHAHABAD

286.** MAHALAXMI MOTORS (354), LADWA ROAD, SHAHABAD MARKANDA-136 135, (HARYANA), PH:136135-9812036433.

SIWANI

287.## GANESH AUTOMOBILES (5931), NEAR RELIANCE PETROL PUMP, HISAR ROAD, SIWANI, DISTRICT-BHIWANI, HARYANA - 127046, PH: 127046-8607113000.

SOHNA

88.** SHRI SHYAM MOTORS (8930), OPP.RAGHUNANDAN PETROL PUMP, NEAR GD GOENKA INTERNATIONAL SCHOOL, SOHNA-122103, HARYANA, PH.:122103-9582350079.

SONIPAT

289.## NEW HIGHWAY MOTORS (8923), MAIN DELHI ROAD, SONEPAT, HARYANA, PH:131001-9416672009.

TAURU

290.## R M MOTORS (5842), WADE NO:4BEHIND WINE SHOP MAIN REWARI SOHNA ROAD, TAURU-122105, DISTRICT-MEWAT, HARYANA, PH:122105-9812378663.

TOSHAM

291.## MOHINI AUTOMOBILES (6026), OPP.NEW ANAJ MANDI , NEAR MINI BANK, TOSHAM-127040 , DISTRICT-BHWANI, HARYANA, PH :127040-9215959995/9992251000.

UKLANA

292.* SHREE GANESH MOTORS (5747), PLOT NO#29,UKLANA MANDI, DISTRICT-HISSAR, PIN-125113, HARYANA, PH :125713-98123091531.

HIMACHAL PRADESH

ALAMPUR

293.## SUBH AUTOMOBILES (5964), SH-39,ALAMPUR-176110, DISTRICT-KANGRA, HIMACHAL PRADESH, PH :176082-9816675551.

AMR

.## SHUBHAM MOTORS (5933), NEAR PINDI ASHRAM,HAMIRPUR ROAD, AMB-177203, DISTRICT-UNA, HIMACHAL PRADESH, PH:177203-9418114176.

ANNI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

Maruti Authorized Service Station (AS ON 31.05.2023)

295.## SARAJ AUTO WORLD (6044), VERMA BUILDING.NR. NAGAN HARIPUR TEHSIL.ANNI-172026 . DISTRICT-KULLU . HIMACHAL PRADESH, PH:172026-9129065065/9817120002

BADDI

296.** LAJ MOTORS (5541), 436.MAUJA SURAJ.MAJRA LABANA, BADDI, DISTRICT -SOLAN, HIMACHAL PRADESH, PH:173205-9816039189.

BANGANA

297.## TRISHLA AUTOMOBILES (5869), VILLAGE BPO & TEHSIL BANGANA, BANGANA-174307, DISTRICT-UNA, HIMACHAL PRADESH. PH:174307-9817645350

BANOI

298.## BABA SERVICE STATION (4634), VILL BANOI. TEH SHAHPUR P.O., BANOI, DIST KANGRA (HIMACHAL PRADESH). PH:176209-9418051290.

BARMANA

299.## AVER AUTO (5955), VILLAGE LAGAT, TEHSIL SADAR, PO BARMANA-174013, HIMACHAL PRADESH. PH:174013-9418064130.

BHAMBLA

DHIMAN MOTORS (3837), PLOT NO. 42,, 300 * INDUSTRIAL AREA, BHAMBLA, JAHU, DISTT MANDI. PH:175004-9816227437.

301.## HANDA MOTORS (4262), HANDA COMPLEX. NEAR AIRPORT, BHUNTAR, KULLU (H.P), PH:175125-9816007003.

BILASPUR (H.P)

302.## BHASKAR AUTO SPARE & SERVICE (1730), 8-B ROURA SECTOR II. (NEAR DURGA MANDIR), BILASPUR-174 001 (H.P.). PH:174001-9816436001.

AUTOZONE (5247), PATHANKOT RAOD .PAREL, SULTANPUR - CHAMBA, DISTRICT - CHAMBA . HIMACHAL PRADESH. PH:176310-9418214848.

304.## KAILASH SERVICE STATIION (3527), AMRIT NIWAS MOHALLA, BONGUTA, CHAMBA TOWN, DISTT.CHAMBA, PH:176310-9896679445

DARLAGHAT

305.## CHANDEL SERVICE STATION (5233), DARLAGHAT . DISTRICT-SOLAN, HIMACHAL PRADESH. PH:171102-9816039865.

DHARAMSHALA

306.## EAGLE MOTOR SERVICE STN. (6426), SHAM NAGAR, DHARAMSALA-176215 (HIMACHAL PRD.).

PH:176215-8219915841 307.## HIM AUTO STATION (8932), VPO DARI, DHARAMSHALA, (H.P.). PH:176057-9418029655

308.## SHIV SHAKTI CAR CARE (1277), NEAR RAINBOW SCHOOL, DARI ROAD. DHARAMSHALA-176 057, PH:176057-9318752074.

GHUMARWIN

309.## BHASKAR AUTO SPARES & SERVICES (5147), VILLAGE KULARU, GHUMARWIN, DISTRICT - BILASPUR, HIMACHAL PRADESH, PH:174021-9816090504

GUMMA

310.## CHAUHAN ENTERPRISES (5660), VILLAGE GUMMA, TEHSIL KOTKHAI, GUMMA, DISTRICT - SHIMLA, HIMACHAL PRADESH. PH:171202-9218690917.

JAWALA JI

311.## SRI PARBHAT MOTORS (5036), VPO & TEHSIL, JAWALI-(BHANEI), DISTRICT -KANGRA, (HIMACHAL PRADESH), PH:176023-9805511205.

JAWALAMUKHI

312.## LAKSHMI AUTO SPARES & SERVICE CENTRE (4630), NEAR GANJU BAGH, DEHRA ROAD, JWALAMUKHI, TEH. DEHRA, DIST. KANGRA (HIMACHAL PRADESH). PH:176031-9418091048.

KARSOG

313.## DEEPAK AUTOMOBILES (4057), MR. DEEPAK SHARMA, C/O SHARMA GENERAL STORE, KARSOG, MAIN BAZAR, DIST MANDI HIMACHAI PRADESH PH:175011-9817063007/9816260061.

KAZA

314.## SPITI MOTORS (6033), VILL, & PO.KAZA-172114. DISTRICT-LAHAUL & SPITI. HIMACHAL PRADESH, PH:172114-9418758974

KEYLONG

315.## YOLAX MOTORS (3830), KEYLONG, DISTT. LAHALII & SPITI PH:175133-7651031580.

KULLU

316.## PURI BROTHER'S (4242), I.O.C DEALER. DHALPUR, KULU, H.P. PH:175101-9418395358.

KUMARHATTI

SOLAN AUTOMOBILES PVT. LTD. (6420), DAGHOTA(SOLAN), P.O.KUMAR HATTI-173 229 (H.P)... PH:173229-9816030330.

KUMARSAIN

318.## RED LINE (5965), VILL, KEPU.PO KIRTI SAINZ, TEHSIL, KUMARSAIN-172030, DISTRICT-SHIMLA, HIMACHAL PRADESH. PH:172030-9816027007.

MANDI

319.** BHAGWATI AUTOMOBILES (269), PLOT NO. 13 INDUSTRIAL AREA PHASE 3 SAULI KHAD MANDI (H.P.) PH:175001-9418461897.

MARANDA

320.## MODERN SERVICE CENTRE (1175), PUSHP COMPLEX, MARANDA-176 102, (H.P.). PH:176102-7018243011.

MEHATPUR

321.## BUDHA AUTO HOUSE (6422), MAIN BAZAR. UNA. MEHATPUR-174315 (H.P). PH:174315-9815971708.

MUBARAKPUR

322.## SHIV SHAKTI AUTOMOBILES (1732), HOSHIARPUR ROAD, MUBARKPUR, DISTT. UNA. (H.P.). PH:177202-9418328361

NADAUN

CAR CARE ENGINEERS (4423). HOSHIARPUR ROAD, MANPUL, NADAUN DISTT, HAMIRPUR, HP. PH:177033-9857799080.

NAHAN

324.## AGGARWAL MOTORS (3334), GUNNU GHAT, NEAR TELECOM COLONY, NAHAN-173 001. PH:173001-9418023558.

NALAGARH

325.## KRISHNA MOTOR (5275), PEERTHAN, PO NALAGARH, DISTRICT - SOLAN, HIMACHAL PRADESH. PH:174101-9418094064

* B-Category Mass : Free & paid Service & Major repairs

PALAMPUR

326.** SANGRAI AUTO SERVICE (6430), OPP. SITLA MATA MANDIR, PALAMPUR-176 061, DISTT. KANGRA (H.P.). PH:176061-9418085915

327.## SANTOSHI AUTOMOBILES (4776), VILLAGE & P.O. BHAWARNA, TEHSIL, PALAMPUR. DISTRICT- KANGRA (HIMACHAL PRADESH). PH:176083-9418184367.

PAONTA SAHIB

328.## SUMEET MOTORS (1441), SHAMSHERPUR, PAONTA SAHIB-173 025. (H.P.). PH:173025-9418018329.

PAPROLA

329.## ABROL AUTOMOBILES (3470), VPO PAPROLA TEHSII BALINATH DISTT KANGRA HIMACHAI PRADESH -176115. PH:176115-9418066917.

PARWANOO

330.## DIVYA SALES (6428), DIVYA BHAWAN VILL. KAMLI, SECTOR-1, PARWANOO. PH:173220-9816032002

PATLI KUHAL

JAMDAGNI MOTORS (760), VILLAGE PATLI KAUHAL P.O.KATRAIN DISTT KULLU (H.P.). PH:175129-9816040247.

RAJGARH (H.P)

332.## RAJGARD AUTOMOBILES (5458), PO RAJGARH TEH RAJGARH DISTRICT -SIRMOUR. HIMACHAL PRADESH. PH:173101-9418021344.

RAMPUR BUSHAHR

HIGHWAY SERVICE STATION (2649), CHUHA BAG, RAMPUR BUSHAHR, (H.P.) - 172001, PH:172001-9805831627.

KRISHNA AUTOMOBILE (4438), VILL CHUHA BAG RAMPUR BUSHAHR-172001 PH:172001-9418036091.

RECONG PEO

335.## KRISH AUTO (4134), RECONG PEO, TEHSIL KALPA, DISTT KINNAUR, HIMACHAL PRADESH - 172707 PH:172707-9816579999

ROHRU

336.## KAMTA SERVICE STATION (2338), ROHRU, DISTT. SHIMLA (H.P.). PH:171207-9418040106.

SALASHI

337.## THAKUR AUTOMOBILES (3838), JALANDHAR MANALI NATIONAL HIGHWAY (NH70), NEAR DAV SCHOOL, VILLAGE SALASHI, DISTT HAMIRPUR. PH:177001-9418490904.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

[#] D-Category Mass : Free Service & Minor repairs

SARKAGHAT

338.## SHAKUNTLA MOTORS (5755), MANDI ROAD-SARKAGHAT, DISTRICT-MANDI, PIN-175024, HIMACHAL PRADESH, PH: 175024-9817818822.

SHIMLA

339.** GURRAJ AUTO SERVICE (757), NEAR CPRI ROAD, BEMLOI, SHIMLA-171 001, PH :171001-9816233030.

340.** MOTO WORLD (6433), NAVBAHAR, SHIMLA-171 002, , PH :171002-9459050769.

SOLAN

341.## SOLAN SERVICE CENTRE (764), BYE PASS, NEAR PWD OFFICE, SOLAN-173 212, PH :173212-9816222640.

SUBATHU

342.## SHYAM AUTOMOBILES (4588), NEAR SHANTI FILLING STATION, V.P.O RADYANA, SUBATHU, DIST SOLAN (HIMACHAL PRADESH), PH :173206-9418061757.

SUNDERNAGAR

343.** V.M. SERVICE STATION (3777), CHAMUKHA, P O HARABAGH, NH-21, SUNDER NAGAR-174 402 (H.P.), PH :175019-9418064130.

THEOG

344.## JOSHI MOTORS (2778), SHALLI BAZAR, THEOG, DIST. SHIMLA, (H.P.), PH:171201-9459100051.

UNA (H.P)

345.## RUDRA MOTORS (3925), NEAR OLD HOSPITAL CHOWK, NH-22, UNA - 174303 (H.P.),

PH :174303-9816590199.

346.## TRINITY AUTO FAST ENGINEERS (1755),
JALGRAN TABBA, NANGAL ROAD, UNA,
HIMACHAL PRADESH - 174303,
PH :174303-9816628020.

JAMMU AND KASHMIR

AWANTIPORA

347.## KESAR AUTOMOBILES (5938), KHAR ,MORH,NATIONAL HIGHWAY 1A, AWANTIPORA-192122, DISTRICT-PULWAMA, JAMMU & KASHMIR, PH:192122-7780873161.

BARAMULA

348.* MARUTI MASTERS (4369), KANISPORA, BARAMULA, KASHMIR, PH :193101-9906864748

CHADOORA

349.* VEHICLE MASTERS (4661), MAIN ROAD, CHADOORA-190001, DIST. BUDGAM, JAMMU & KASHMIR, PH: 190001-9419441217.

JAMMU

350.* CARE POINT AUTOMOBILES (4652), OPP BSF CAMPUS ROAD, AKHNOOR ROAD, JAMMU-180002,

PH:180002-9419283151.
351.** CHECK N CARE AUTOMOBILE CENTRE (1773), OPP. GURUDWARA SRI SINGH SABHA, NARWAL BYE PASS ROAD, JAMMU, PH:180001-9419190796.

352.** KWIK FIT (2343), AMBPHALLA, B.C. ROAD, JAMMU-180 001, PH :180001-9419104400.

353.** MOBEL GARAGES (441), NARWAL CHOWK, TRANSPORT NAGAR, JAMMU-180 006, PH :180006-9796800000.

354.## NATIONAL MOTORS (5074), OPP APNA VIHAR.B.P. PETROL PUMP , NH-1A.KUNJWANI JAMMU, DISTRICT -JAMMU, JAMMU & KASHMIR, PH: 180010-9419322222

KARGIL

355.* ZOZILA ENGG. WORKS (374), KARGIL, LADAKH-194 105, PH :194015-9419176212.

KATHUA

356.* KATHUA MOTORS (3323), HATLI MORE, KATHUA-184 102, (J&K), PH :184102-9419150694.

KATRA

357.## VIDYA AUTOMOBILES (1165), JAMMUR ROAD, KATRA JAMMU ROAD, KATRA, (J&K), PH :182320-9596676576.

KISHTWAR

358.## MINTOO MOTORS (4133), NEAR H.H.P.C SCHOOL, KISHTWAR, DISTT DODA (J & K), PH :182204-9622055250.

MATTAN

359.## DANISH AUTOMOBILES (5478), PAHAL GAM ROAD, STATE HIGHWAY - MATTAN, DISTRICT - ANANTNAG, JAMMU & KASHMIR, PH :192125-9419041724.

PHINTER

360.## BADYAL AUTOMOBILES (4149), C/O BADYAL AUTOMOBILE, PHINTER, TEH BILLAWAR, DISTT KATHUA PHINTER (J & K), PH :184203-9419691916.

PULWAMA

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass: Free & paid Service & Minor repairs

361.** KASHMIR AUTOMOBILES (5352), NEAR FRUIT MANDI, PRICHOO PULWAMA, KASHMIR, PH :192301-9622742291.

RAJOURI

362.## MILLENNIUM MOTORADES (2937), ALPHA GATE, T.C.P., RAJOURI-185 132, (J&K), PH:185132-7006122022.

REASI

363.## U LIKE CAR CLINIC (4771), GITA NAGAR, REASI JYOTIPURAM ROAD, REASI, DISTRICT-UDHAMPUR (JAMMU & KASHMIR), PH :182311-7006083550.

SAMBHA

364.## DHANSAR CAR CLINIC (5146), NATIONAL HIGHWAY , SUPWAL SAMBHA , DISTRICT -JAMMU, J&K, PH :184120-9419393949.

SOPORE

365.## HASSAN MOTORS (2434), BPC DEALER, SOPORE, KASHMIR, PH :193201-9906506786.

SRINAGAR

366.* A.B. MOTORS (5072), BEHIND NEW SECRETARIAT ROAD, SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH 190009-9419007966

367.** ADAM'S AUTOAIDES (6766), SIDCO INDUSTRIAL EXTATE, SHALTENG, SRINAGAR-, DISTRICT-SRINAGAR, JAMMU & KASHMIR, PH :191202-9906580089.

68.* HASEEN MOTORS (5249), BY-PASS BRIDGE BAGH MEHTAB, SRINAGAR, JAMMU & KASHMIR.

PH:190019-9419006847.

369.## NEW NATIONAL AUTOMOBILES (5073), RAM BAGH-AIRPORT ROAD SRINAGAR, DISTRICT - SRINAGAR, JAMMU & KASHMIR, PH :190009-9419013778.

370.* SRINAGAR AUTOMOBILES (4925), M.A. LINK ROAD, NEAR TRANSPORT YARD BRIDGE, CHINARBAGH, SRINAGAR-190001 (JAMMU & KASHMIR).

SURNKOTE

371.## A.S. AUTOMOBILES (5976), IQBAL NAGAR, SURANKOTE, DISTRICT-POONCH, JAMMU & KASHMIR , PH :185121-9469014765.

PH:190001-9419001793.

VIJAYPUR

372.## BANSI LAL MARUTI SERVICE STATION (4748), SWANKHA MORH, NATIONAL HIGHWAY, VIJAYPUR-180001, DISTRICT-SAMBA (JAMMU & KASHMIR), PH: 180001-9419106798.

JHARKHAND

BOKARO

373.## UUEA AUTOMOBILES (4845), S-21 CITY CENTRE, BOKARO STEEL CITY, BOKARO-827004, JHARKHAND, PH :827004-9431127441.

DEOGHAR

374.* GARGEE AUTOMOBILE (2276), OPP. D.C. RESIDENCE, CIRCULAR ROAD, BARMASIA, DEOGHAR-814 112 (BIHAR), PH :814112-9940580983.

DHANBAD

375.## MAZUMDAR CAR SCAN (5135), BHUFORCE
.K G ASHRAM ROAD , SARAIDELA - 828301,
DISTRICT - DHANBAD, JHARKHAND,
PH :828301-9835361472.

376.## PRIYA AUTO (4868), OPPOSITE MINNING SCHOOL, SINDRI ROAD, BHAGA, DHANBAD-828301, JHARKHAND, PH :828301-9431124817.

HAZARIBAGH

377.## ALOK MOTORS (379), NEAR INDRAPURI CHAWK, HAZARIBAG-825 301, (BIHAR), PH :825301-9431140740.

378.## SRI RAM MARUTI SERVICE STATION (3663), DEVI DAYAL LANE, HAZARIBAG-825 301, (JHARKHAND),

PH:825301-9431384877.

JAMSHEDPUR

'9.** CAR CURE (1261), C/O MODERN AUTO STORES, KALIMATI ROAD, SAKCHI, JAMSHEDPUR-1, PH:831001-9234608016.

380.## MAHESHWARI BROS. (5124), NATIONAL HIGHWAY 33, BALIGUMA MANGO, P.O. -M.G.M. MEDICAL COLLEGE, JAMSHEDPUR-831 018, PH: 831018-9031144444.

KHUNTI

381.## MOD MOBILES (5579), MAIN ROAD,RANCHI ROAD - KHUNTI, DISTRICT - KHUNTI, PIN -835210, JHARKHAND, PH :835210-9304468855.

MAITHON

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

382.## MAITHON SERVICING CENTRE (5838), MAITHON ROAD.NEAR VMC COLONY, SANJAY CHOWK, PO CHIRKUNDA-MAITHON, DISTRICT-DHANBAD, (JHARKHAND), PH:828203-7209423707.

PAKUR

383.## SPEED WHEEL SERVICE CENTRE (4976), MAIN ROAD, PAKUR - 816107, , PH :816107-9434101917.

RAMGARI

384.## RAHIL MOTORS (5054), C/O NIYAMAT MISTRI, DUSHAD MOHLA, DISTRICT RAMGARH CANTT., PH:829122-9771577422.

385.## SAINI MOTORS (5126), NEAR VISWAKARMA MANDIR, MAIN ROAD, RAMGARH CANTT 829 122, DISTT. HAZARIBAG, PH: 829122-9835141302.

RANCHI

386.## BHARAT MOTORS (5970), SHIV JEE CHOWK, HARMU ROAD, RANCHI-834001, DISTRICT-RANCHI, JHARKHAND - 834001, PH :834001-9608502258.

387.** MARUTI AUTOMOBILES (5127), HOTEL AKASHWANI MANSION, RATU ROAD, RANCHI-834 001,

PH :834001-9835156186.

388.## MARUTI CLINIC (2548), LAL KOTHI, OLD HAZARIBAGH ROAD, KANTA TOLI, RANCHI-1 (RIHAR)

PH :834009-9431109214.

389.## MOTOR KRAFT (4769), H.B. ROAD, DIPA TOLI, RANCHI-834009, JHARKHAND, PH :834009-9431152162.

SIDRAUL

390.## KRITIVASA AUTOMOBILES (4424), RANCHI TATA HIGHWAY, SIDRAUL, P.S NAMKOM, PH:834010-9661144866.

KARNATAKA

ATHANI

391.## CHOUGULE MOTORS (3874), MIRAJ ROAD, ATHANI, , , PH :587314-9448436776.

BAGALKOT

392.## NARA AUTOMOBILES (4357), TP NO. 158 A/2, WARD NO. 10, SHABADI COMPOUND EXTN, BAGALKOT-587101, PH -587101.0880875595

BAILHONGAL

393.## MAHANTH MOTORS (5763), RTO ROAD BAILHONGAL, TALUK-591102, DISTRICT-BELGAUM, KARNATAKA, PH :591102-9535653166.

BALEHONNUR

394.## SRI ANNAPOORNA MOTORS (5253), MALLE GOWDA COMPLEX.JAYAPURA, ROAD BALEHONNUR ROAD, DISTRICT -CHIKAMAGALUR, KARNATAKA, PH: 577204-9448000131.

BANGALORE

395.## ADARSHA AUTOMOBILES (4553), # 974
VARATHUR MAIN ROAD, NEAR
PURVANKARA APARTMENTS, AFTER
MARATHAHALLI, RAILWAY BRIDGE,
BANGAL ORE-560037,
PH :560037-9880 195465.

396.** ANEKAR MOTORS (227), 230 MAGADI ROAD, BANGALORE-560 023, (KARNATAKA)., PH :560 023-9845889911.

197.* ASHWA CARS (2827), #14, 1ST MAIN, 6TH CROSS, SANJEEVNI NAGAR, MOODAPALYA, BANGALORE 560072.

PH :560072-9341228231.

BENAKA MOTORS (3237), NO 158/2

VIBHUTIPURA, VIGNAN NAGAR BEHIND

B.E.M.L., NEAR RENUKA SWIMMING POOL,

BANGALORE-560 017,

PH :560 017-9845212416.
399.## CHANDANA MOTORS (4872), NO. 9
UNIVERSITY ROAD, GNANABHARTHI
(POST), MARIYAAPPANA PALYA,
BANGALORE-560056 (KARNATAKA),
PH :560056-9880659864.

400.* GIRIMAJI ENTERPRISES (258), NO.2 27TH CROSS, K R ROAD, B S K II STAGE, BANGALORE-560 070, PH :560 070-9844004403.

401.** GREEN CARS PVT. LTD. (2154), NO.12/6 80 FEET ROAD, 6TH BLOCK KORAMANGALA, BANGALORE-560 095,

PH: 560 095-9845020796.
402.* KESHKAMAL MOTORS (2075), NO.943 21ST MAIN, BANASHANKARI ZND STAGE, (NEAR KIMS MEDICAL COLLEGE), BANGALORE-560 070

PH :560 070-9448071067.

LE MANS MOTORS (3460), NEAR AYYAPPA TEMPLE, S.M. ROAD, T. DASARAHALLY, BANGALORE-560 057.

PH: 560 057-9845145001.
404.* MAYUR ENTERPRISE'S (249), NEXT TO PIA
BHAVAN KIADB MAIN ROAD, PEENYA 1ST
STAGE, BANGALORE-58,
PH: 560058-9845122156.

405.* NEXUS (1153), 2ND MAIN KHB COLONY, GANDHI NAGAR, YELAHANKA, BANGALORE-560 064, PH :560 064-9844013436

106.** NEXUS (2768), #275/301, 80 FEET ROAD, OPP. M.S. RAMAIAH HOSPITAL (BEL ROAD), RMV 2ND STAGE, BANGALORE-560 094, PH:550 094-9844013436.

107.** PACE AUTOMOBILES (1057), 6TH MAIN HMT LAYOUT, R.T. NAGAR, BANGALORE-560 032, PH:560 032-9845004710.

408.## PUSHPAK MOTORS (4642), 105/1 2ND MAIN NANJAPPA LAYOUT, VIDYARANYAPURA MAIN ROAD, (OPP KRUTHIKA HOSPITAL), BANGLAORE-560097, PH :560097-9845087442

409.## RAJ (2829), NO.10 MAGADI MAIN ROAD, OPP. UNANI MEDICINE INSTITUTE, KOTIGEPALYA, BANGALORE-560 091, PH :560 091-9663555677.

410.** SMART CARS (3571), 3RD CROSS NEAR J.B.
TILES, KAGGADASA PURA MAIN ROAD, C.V.
RAMAN NAGAR, BANGALORE-560 093,
PH :560 093-9663324361.

411.## SOLOTECH MOTORS (2760), SURVEY NO. 82/2, D'SOUZA NAGAR, HOSAKEREHALLI-BANGALURU, DISTRICT-BANGALURU 560085, KARNATAKA.

PH :560085-984507260377259589375.
SOLOTECH SERVICE CENTRE (5245), 50 FEET MAIN ROAD .AVALAHALLI, MUNESHWARA BLOCK , DISTRICT - BANGALORE, KARNATAKA, PH :560010-9845772634.

413.* SPEED MOTORS (1750), 17/1
SUBRAMANYAPURA MAIN ROAD,
KADIRENAHALLI, PADMANABHA NAGAR,
BANGALORE-560 070,

PH. 560 070-9845153102.
1414.## TEAM TECH AUTOMOBILES (5662),
78/1.SULEKUNDE. NEAR MUTHANALLUR
CROSS., SARJAPURA MAIN ROAD,
BANGALORE. -562125,
PH. 562125-963816111.

115.** TRINITY CAR CARE PVT. LTD (5851), SURVEY NO 52/1,SRI GANDHADAKAVAL VILLAGE,

NAGARBHAVI,BANGALORE-560091, DISTRICT-BANGALORE, KARNATAKA, PH:560091-9880793980.

416.** TRINITY MOTORS (4638), NO. 36, 4TH STAGE, W.C. ROAD, BASAVESHWARANAGAR, BANGALORE-560079, PH:560079-9845539474.

417.** U.M. CARS PVT. LTD. (2847), KARNATAKA GOLF ASSOCIATION ROAD, KODIHALLI, OFF. AIR PORT ROAD, BANGALORE-560 008,

PH:560 008-9845165365.

*V ISWAS CAR SERVICES PVT. LTD. (3238),
NO 2. (OUT NO OF SY NO 100/2) OFF
SERVICE ROAD, KALYAN NAGAR ROAD,
CHELEKREE, BANASWADI POST
BANGALORE-560043,
PH:560043-9591313379.

BELGAUM

 BHARAT AUTO SCAN (350), 892/1 PB ROAD, BELGAUM-590 016, , PH:590 016-9448120495.

BIJAPUR

420.## BAGALI MOTORS (5159), SHIKARKHANA ROAD, BIJAPUR - 586104, DISTRICT -BIJAPUR, KARNATAKA, PH :586104-9448100444.

CHIKBALLAPUR

421.## SUKOVE ENTERPRISES (3426), B.B. ROAD N.H.7, CHIKBALLAPUR-562 101, (KARNATAKA), PH :562 101-9880607034.

CHIKMAGALUR

422.## AAMANTHRANA MOTORS (4346), K.M. ROAD, CHIKMAGALUR, PH:577101-9945462658.
423.## FORMULA MOTORS (338), K.M. ROAD, CHIKMAGALUR-577 101,

PH:577 101-9448743284.

CHIKODI

424.## OM MOTORS (4445), 1751, ANKALI ROAD, NEAR B K COLLEGE, CHIKODI-591201, KARNATAKA, PH :591201-8861555999.

CHINTAMANI

425.## TIPPU AUTO GARAGE (5770), MG ROAD, NEAR BAGEPALLI CROSS, CHINTAMANI-563125, DISTRICT-KALOR, KARNATAKA, PH: 563125-9036698340.

CHITRADURGA

426.## PRINCIPAL (255), J.M.I.T, N.H.4, P.B. NO.73, CHITRADURGA-577 502, PH:577 502-9731330300.

DAVANGERE

427.## HEGDE AUTO CENTRE (172), NO 2007/37, NEAR BIET, SHAMANUR ROAD, DAVANGERE, KARNATAKA-577004, PH :577004-8494853646.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

428.## SREE MALLIKARJUNA MOTOR (229), NO 68, RMC ROAD, NEAR KSRTC BUS STAND, DAVANGERE, KARNATAKA - 577003, PH :577 003-9880701015.

DEVANAHALLI

429.## SAHARA AUTOMOBILES (4731), OPP. A . RTO OFFICE, NH-7, B.B. ROAD, DEVANAHALLI-562110, KARNATAKA, PH :562110-9448662364.

DHARWAD

430.** MYSORE GARAGE (2468), BELGAUM ROAD, DHARWAD-580 001, (KARNATAKA), PH :580 001-9844133273.

DODDABALLAPUR

431.## PRESTIGE MOTORS (4875), NEAR RAILWAY STATION KHASBHAG, DODDABALLAPUR, , PH:560026-9900274594.

GADAG

432.## MODERN MOTORS (8939), HUBLI ROAD, GADAG-582 103, (KARNATAKA), PH :582 103-9448746579.

GULBARGA

433.## DELLIX AUTO SERVICE (5840), SURVEY NO 77/8, VILLAGE KUSNOOR, NEAR -, UNIVERSITY, SEDAM ROAD, GULBARGA-585104, DISTRICT-GULBARGA, (KARNATAKA), PH: 585104-9242991292

HOSPET

434.## SUPREME AUTO SERVICE (2569), NEAR RTO OFFICE, HARIHAR ROAD, HOSPET-583 203, (KARNATAKA), PH :583 203-9845307361.

HUBLI

435.## SHRI BASAVA MOTORS (4968), OPP SANA COLLEGE,APMC PB ROAD, BHIRIDEVARKOPPA,HUBLI-580025, , PH :580025-9980025644.

KADUR

436.## SRI SAI MARUTHI SERVICE STATION (5725), ULUKINAKALLU, NH 206, KADUR, , PH :583201-9916947196.

KARKALA

437.## KARKALA MOTORS (3549), TELLAR ROAD, KARKALA-574 104, (KARNATAKA), PH :574 104-9845356244.

KOLAR

438.## SHIVA SERVICE POINT (2472), M.B. ROAD, KOLAR-563 101, (KARNATAKA), PH :563 101-9448228604.

KOLLEGAL

439.## FIX PLUS AUTO CARE CENTRE (4249), C-8, IND. ESTATE, MAHADESHWARA COLLEGE ROAD, KOLLEGAL-571440, PH :571440-9448807237.

KOPPA

440.## AUTO TECH (3448), MAIN ROAD, UPPERPET, KOPPA-577 126, (CHIKMAGALUR DIST.), PH:577 126-9448156950.

KUMTA

441.## SOLOTECH (4547), NEAR MARUTI TEMPLE, HANDIGON, KUMTA- 581343, PH :581343-9448149607.

KUNDAPUR

142.* PRAKASH AUTO SERVICE (4522), NEAR: K.E.B., VODERHOBLI, KUNDAPURA-576 201, PH :576 201-9341035642.

MANIPAL

443.## MANIPAL MARUTI AUTO WORKS (4578), MANIPAL ALEVOOR ROAD, NEAR R.C. CHURCH, OPP. SIGMA BAZAR, MANIPAL (UDUPI DIST), PH:591102-9448108318.

MUDHOL

444.## OM MOTORS (5857), OPP TALUKA OFFICE, LOKAPUR ROAD,MUDHOL-587313, DISTRICT-BAGALKOT, KARNATAKA, PH :587313-9663830660.

MUDIGERE

445.## BADRIYA CAR SERVICE POINT (5364), K.M. ROAD, MUDIGERE, DISTRICT-CHIKAMANGALORE, PIN - 577132, (KARNATAKA), PH:577132-9448007094.

MYSORE

446.** CAR CLINIC (346), 1959/A, BOGADI RING ROAD, NEAR GLN CONVENTION HALL, BOGADI, MYSORE, PH: 585106-9342184831.

NELAMANGALA

447.## GOUTHAM MOTORS (4332), PATEL CHANNAPPA EXTN, NELAMANGALA-562123, KARNATAKA, PH:562123-9880251546.

RABAKAVI BANAHATTI

448.## SANGAMA MOTORS (5726), BESIDE CMC, RAMPUR MAIN ROAD, RABAKAVI-587314, DISTRICT-BAGALKOT, KARNATAKA, PH :587314-9480035617.

RAICHUR

449.## HEERA MOTORS (3730), OPP. MOTI MASJID, SHIVJI OIL MILL COMPOUND, TIPU SULTAN ROAD, RAICHUR-584 101 (KARNATAKA), PH :584 101-9845156322.

RANEBENNUR

450.## KIZEN MOTORS (4568), P.B. ROAD, OPP. A.P.M.C MARKET, RANEBENNUR-581115, PH:581115-9900922022.

SAGAR (KARNATAKA)

451.## ADITYA AUTOMOBILES (2077), JOG ROAD, SAGAR-577 401, (KARNATAKA), PH :577 401-9448024395

452.## MALLIKA AUTO CENTRE (2133), MALLIK COMPLEX, B.H. ROAD, SAGAR-577 401, PH :577 401-9448139605.

SHIMOGA

453.## NEPTUNE AUTO WORKS (5271), PLOT -5 AUTO COMPLEX , SAGAR ROAD - SHIMOGA , DISTRICT - SHIMOGA , KARNATAKA, PH :577204-9448319758

454.* SHIMOGA AUTO ENGG WORKS (246), GARDEN AREA, SHIMOGA-577 201, KARNATAKA, PH :577 201-7899114872.

SIDDAPUR

455.## MARUTI AUTO WORKS (5335), SORAB ROAD.SIDDAPUR (U.K)-581355, DISTRICT -UTTAR KANAND, PIN-581355, KARNATAKA, PH: 581355-9448525801.

SIRSI

456.* ARUNDHATI MOTORS (1258), HUBLI ROAD, SIRSI-581 402, (UTTAR KARNATAKA), PH:581 402-9845098822

SRINGERI

457.## SHUBHASHREE MOTORS (5434), AGUMBLE ROAD ,SRINGERI , DISTRICT -CHIKAMAGALUR , SRINGERI - 577139, KARNATAKA, PH :577139:9448170400.

TIRTHALLI

458.## SUMUKA AUTOMOBILES (5133), AP ROAD.CEEBENE KERI, DISTRICT-SIMGA, SHIMGA-577414, KARNATAKA, PH:577414-9686944949.

TUMKUR

459.## APOORVA CAR CARE CENTRE (5327), B.N.P. COMPOUND .BEHIND KRISHNA THEATRE, M.G. ROAD - TUMKUR, DISTRICT - TUMKUR, KARNATAKA, PH :571440-9901515516.

UDUPI

460.* ST. JUDE AUTOMOBILE ENGG. WORKS (4521), B.D.MARG, AMBALAPADI, UDIPI-576 103, PH:576 103-9844991241.

UPPINANGADI

461.## RATNA ENTERPRISES (5447), BUILDING NO 5/514 KUKKAJE, SUBRAMNYA ROAD, UPPINANGADI, PH :587313-9972995341

KERALA

ADIMALY

462.## PLATHOTTAM AUTOMOBILES (3864), NH-49, OPPOSITE TO MINI INDUSTRIAL ESTATE, ADIMALI-685561, PH :685561-9447023073.

ADOOR

463.## AUTO CLUB (2132), NEAR H.P. PUMP, VADAKKADATHUKAVU P.O, ADOOR, PATHNAMTHITTA DISTT, PH: 691523-9447440184

ALAPPUZA

464.## ESSAR MOTORS (4959), KALARKODE, NEAR CHINMAYA SCHOOL, NH-47, ALAPPUZHA-688003, KERALA, PH :688003-9249938474.

ALUVA

465.## AUTO TEAM (2630), A/189 A, PARUR JUNCTION, ALUVA, (KERALA), PH :683108-9947333760.

AMBALLUR

466.## LAKSHMI DEVI AUTO GARAGE (4137), AMBALLUR, P.O. PUDUKAD, TRICHUR, KERALA, PH :680301-9847903949.

ANCHAL

467.## NAMI-TAJ (2534), NEAR ST. GEORGE CENTRAL SCHOOL, R.O. JUNCTION, ANCHAL, KERALA -691 306., PH :691306-9447453745.

ANJUMOORTHY

468.## SAFA AUTO CARE (3847), N H ROAD, MANGALAM PALAM, ANJUMOORTHY POST, VADAKKENCHERY, PALAKKAD DISTT, KERALA, PH :678682-9447303347.

ATTINGAL

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

469.## OM SHAKTI AUTOMOBILES (4466), KIZHUVILAM P.O., MAMOM, ATTINGAL, KERALA-695104, PH :695104-9744658681

AYOOR

470.* MAKKATTU AUTO CLINIC (5051), AYOOR-ANCHAL ROAD PANACHAILA, AYOOR -691306, DISTRICT - KOLLAM, KERALA, PH :691306-9847288624.

CALICUT

471.## MALABAR MOTORS (4655), EAST NADAKKAVU, P.O. ERANIPALAM, CALICUT-673006, KERALA, PH:673006-9846089190.

472.## MARUTI SCAN (1675), BYE PASS JUNCTION, MEENCHANDA, CALICUT-673 018, PH :673018-9847130508.

CHALAKUDY

473.## STAR MARUTI GARAGE (5367), NH47 BYE PASS, NEAR CRESCENT PUBLIC SCHOOL, .CHALAKKUDY, DISTRICT - THRISSUR, PH :680307-9946009375

474.* VIJAY AUTO SERVICE (1626), POTTA, CHALAKUDY-680 307, , PH:680307-9995074628.

CHANGANACHERRY

475.* PALATHRA MOTORS & SERVICE CENTRE (1072), VADAKKEKARA, VEROOR P.O., CHANGANACHERRY-686 104, PH :686104-9447195154.

476.## SAAFAA AUTOMOBILES (1148), PALATHARA CHIRA, BY PASS ROAD, CHANGANACHERRY, KOTTAYAM-686104, , PH :686104-9447042517.

CHENGANNUR

477.* NEW TECH AUTOMOBILES (1978), INDUSTRIAL ESTATE, MUNDANCAVU, CHENGANNUR-689 121, KERALA, PH :689121-9388915757

CHERTHALA

478.* POZHICKAL CAR WORLD (3037), NEAR BOYS HIGH SCHOOL, CHERTHALA, ALAPPUZHA DIST., KERALA-688 524, PH:688524-9947474752.

ETTUMANOOR

479.## ROHIT MOTORS (4636), THELLAKOM P.O., M.C. ROAD, ETTUMANOOR, KERALA, PH :686630-9447079010.

KAI ANJOOR

480.## AGT MOTORS (5937), KIP JUNCTION, KALANJOOR-689694, DISTRICT-PATHANAMTHITTA, KERALA, PH :689698-9744409444

KALLAMBALAM

481.## PRAKASH AUTO ENGINEERS (5548), VADASSERIKONAM P.O. KALLAMBALAM, VARKALL, KALLAMBALAM-695143, DISTRICT-TRIVANDRUM, KERALA, PH:695143-9847159618.

KALLUMUTTY

482.## MARUTI CARE (4179), KALLUMUTTY, IRITTY P.O., KANNUR, KERALA - 670703, PH:670703-9946703070.

KALPETTA

483.## VARCO MOTORS (4724), 18/226-1, NEAR VELLARAMKUNNU, NH 212, KALPETTA -673121, PH :673121-9961569898.

KANJIRAPPALLY

484.## MACK ENTERPRISES (2729), T.B.ROAD, KANJRAPALLY, , PH :686507-9447093739.

KANNUR

485.## AREN MOTORS (5139), CHAKKARAKAL.P.O. MUZHAPPALA, DISTRICT - KANNUR, KERALA, PH :670613-9446771237

86.** PIONEER AUTO & ENGG WORKS (4722), KANNOTHUMCHAL ROAD, KANNUR - 2, (KERALA), PH :670005-9447798255.

KARIMANOOR

487.## MACS AUTOMOBILES (5745), SILVER SQUARE ,KARIMANNOOR,THODUPUZHA, DISTRICT-IDUKKI, KERALA, PH :685581-9633275410.

KASARGOD

488.## CARS CARE (4579), ANANDPUR, VIDYANAGAR P.O., KASARAGOD, KERALA-671123, PH :671123-9847251115

KATTAKADA

489.## CITY ENGINEERS (4947), MARUTI SERVICE CENTRE, NEYYATTINKARA ROAD, KATTAKADA-695572, DISTRICT-TRIVANDRUM (KERALA), PH :895572-9447206257 490.## MADATHIL MOTORS (5456), MADATHIL HOUSE, CHOONDUPALAKA, KATTAKADA P.O. - TRIVANDRUM, DISTRICT - TRIVANDRUM, (KERALA), PH :695543-945192389.

KATTAPPANA

491.## UNITED SERVICE CENTER (4433), EDASSERT JUNCTION, KATTAPPANA-685508, KERALA, PH :685508-9961432941.

KAYAMKULAM

492.## PERFECT MOTORS (4948), MARUTI SERVICE CENTRE, NH-47, CHEPPAD, KAYANKULAM-690507, DISTRICT-ALAPPUZHA (KERALA), PH: 690507-9447048338.

KONNI

493.## GLOBAL MOTORS (2836), VAKAYAR P.O., KONNI-689 698, (KERALA), PH :689698-9446222944.

494.## MUTTATH AUTOMOBILES (5525), AROORPALAM,KONNI-689691, DISTRICT -PATHANANTHITTA, KERALA, PH :689691-9447431751.

KOOTHATTUKULAM

495.## EXTRA CARE SERVICES (3232), DEVA MATHA JUNCTION, M.C. ROAD, KOOTHATTUKULAM-686 662, ERNAKULAM DIST. (KERALA), PH:689121-9544552080.

KOTHAMANGALAM

496.## EXCEL MARUTI SERVICE (4342), BYE-PASS ROAD, KOTHAMANGALAM, ERNAKULAM-686691, PH :686691-8848605865.

497.## MAJESTIC MOTORS (1253), NEAR THANKALAM BYE-PASS ROAD, KOTHAMANGALAM-686 691, KERALA, PH -686691-9946427528

KUNDARA

498.## SPARK SERVICE (5772), ELAMPALLOOR,P.O. KUNDARA-691501, DISTRICT-KOLLAM, (KERALA), PH :691501-9809608020.

KUTHUPARAMBA

499.## KRISHNA MOTORS (3435), KUTTIKKUNNU, NEAR 66 KV SUB STATION, KUTHUPARAMBA-670 643, KANNUR DIST. (KERALA), PH:670643-9497296380.

MANANTHAVADY

500.## AUTO CARE (2541), (SHEEJA AUTO ENGG. WORKS), THALASSERY ROAD, MANANTHAVADY-670 645, WAYANAD (DIST.), PH :670645-9447040068.

MANJERI

501.## MARUTI AUTO HOUSE (4726), CHERANI, KARUVAMBARAM PO, MANJERI, KERALA. PIN 676123, PH :676123-9447129289.

MANNAR

502.## MOHANS AUTOMOBILES (5457), MOHANS AUTOMOBILES & ENGINEERS , KUTTEMPEROOR P.O. MANNAR, DISTRICT -ALAPPUZHA , (KERALA), PH:689622-9447877377.

MANNUTHY

03.** TOP CLEAN SERVICES (2834), 13/450 MANNUTHI BYE PASS, P.O. OLLUKKARA, THRISSUR, (KERALA), PH :680651-8592947776, 9846037818.

MEENANGADI

504.## MOTOR TECH (2440), EAST MEENANGADI, KRISHNAGIRI P.O., WAYANAD-673 591, (KERALA), PH :673591-9539195850.

MOOCHIKKAL

505.## CHELADAN'S MARUTI ENGINEERS (4659), THANUR ROAD, MOOCHIKKAL-676307, MEENADATHUR, TIRUR, MALAPURAM DIST (KERALA), PH: 576307-9895443563.

MUNNAR

506.## PLATHOTTAM AUTOMOBILES (4447), COLONY ROAD, IKKA NAGAR, MUNNAR, IDUKKI, KERALA - 685612, PH :685612-9447023073.

MUVATTUPUZHA

07.** JAWAN AUTOMOBILES (2730), MADAVOOR POST, MUVATTUPUZHA-686 669, , PH :686669-8943345500

NEYYANTTINKARA

508.## XANON ENGINEERS (4635), RAVELI TOLL JUNCTION, NEYYATTINKARA, TRIVANDRUM-695121, PH:695121-9447014813.

NILAMBUR

509.## CONFIDENCE MOTORS (5140), PALUNDA.CHUNGATHARA, NILAMBUR-679334, DISTRICT -MALLAPURAM, KERALA, PH:679334-8075272281.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

NILAMEL

510.## LIBRA (3431), M.C. ROAD, NILAMEL-691 535, KOLLAM DIST., (KERALA), PH:691535-9895629768.

OCHIRA

511.* MANGALATH AUTOMOBILES (3836), NH 47 VALIYAKULANGARA, OCHIRA P O, KOLLAM DIST, KERALA-690526, PH :690526-9847258696.

OLLUR

512.## TOPCLEAN SERVICES (4468), 10/153, CHRISTOPHER NAGAR, P.O OLLUR, TRICHUR (KERALA), PH :680306-9846037818.

PALAKKAD

513.## CAR CRAFT (2139), 5/682 (1), MANALI, PALAKAD-678 001, (KERALA), PH:678001-9349607619.

PANDALAM

514.* AISHWARYA AUTOMOBILES (2067), NEAR K.S.R.T.C. BUS STOP, PANDALAM-689 501, , PH :689501-9847049140.

PARIPALLY

515.## ALLIANCE MARUTI SERVICES (3243), NH-47, PARIPPALLY-691 574, KOLLAM DIST. (KERALA), PH:691574-9349926440.

PATHANAPURAM

516.## MANNIL AUTOMOBILES (4150), NEAR PANCHAYAT OFFICE, PATHANAPURAM, KERALA-689695, PH :689695-9447258496.

PATHNAMTHITTA

517.** C.J. MARUTI CARE CENTRE (1255), VARIYAPURAM, ELANTHOOR EAST P.O., PATHANAMTHITTA-689 643, (KERALA), PH :689643-9446913874.

PERAVOOR

518.## CAR CARE AUTOMOBILES (4422), KODENCHAL, PERAVOOR, NIDUMPOYIL P.O., KANNUR- 670650, PH :670650-9946444691.

PERUMBAYOOR

519.## MILLENNIUM MOTORS (4873), OLD VALLAM ROAD, KADUVAL, PERUMBAVOOR-683542, DISTRICT-ERNAKULAM (KERALA), PH :683542-9446661111.

QUILANDY

520.## HITECH MARUTI (3025), MAIN ROAD, KOYILANDY, PIN-673 305, CALICUT DISTT., PH:673305-9447457996.

RANNY

521.## DEEPA AUTOMOBILES (5177), DEEPA AUTOMOBILES.PAZHAVANGADI, P.O. RANNY.689673, DISTRICT-PATHANAMTHITTA, KERALA, PH:689673-9447216725

SASTHAMANGALAM

522.## MARSHAL AUTOMOBILES (4035), SWATI NAGAR, TC 10/147, PIPPIN MOODU, SASTHA MANGALAM, PEROORKADA, TRIVANDRUM 695005, PH: 695005-9447461101

SULTAN BATHERY

523.## AUTOMEK (4725), BEENCHI P.O., SULTAN BATTERY-673 592, ,

PH :673592-9249999515.

NEW INDIAN MARUTI SERVICE CENTRE (4577), 147789A, 147789A1, KUPPADI, MYSORE ROAD, SULTHAN BATHERY, WAYANAD -673592.
PH :673592-8281682822.

525.## TEE PEE MOTORS (4773), 9/668-B OOTY ROAD, NEAR BLOCK OFFICE, SULTAN BATHERY, WAYANAD (KERALA), PH:673592-8547201421.

TALIPARAMBA

526.## YESKAY (3368), KAKATHODE, TALIPAPARAMBA - 670141, KANNUR DISTT (KERALA), PH :670141-9744076850.

THALASSERY

527.## SAFE HANDS (3038), ERANHOLI, CHUNGAM, THALASSERY -670 107, (KERALA), PH :670107-9744322317.

THALAYOLAPARAMBU

528.* MYALIPARAMPIL MOTORS (3233), SILON JUNCTION, NEAR THALAYOLARAMBU, POOZHIKOL P O 686604, PH :686604-9447562050.

THAMARASSERY

529.## MALABAR MOTORS (4645), WARD NO. 12, BLDG NO. 121, WAYANAD ROAD, KARADY, THAMARASSERY, CALICUT, PH :673573-9349114119.

THIRUVALLA

530.## MARUTI AUTO SPOT (1628), AYROOKUZHIYIL HOLDINGS, OPPOSITE PUSHPAGIRI MEDICITY, PERUMTHURUTHY, THIRUVALLA, KERALA -689107, PH :689107-9447860777.

THIRUVANANTHAPURAM

531.## EMINENT MARUTI SERVICE (2360), T.C. 610 M.C. ROAD, MANNANTHALA, TRIVANDRUM-695 015, PH :695015-9447713639.

532.## HITECH INDUSTRIES (1951), NEAR ULLOOR BRIDGE, PATTOM P.O., THIRUVANANTHAPURAM-695 004, (KERALA), PH: 695004-9447732057.

533.## MUKUNDANS (3434), POONTHY ROAD, PADMAVILASAM, KUMARAPURAM., THIRUVANANTHAPURAM-695 011, PH :695011-9349882788.

534.* PROFESSIONAL MOTORS (1256), NEAR ELECTRICITY BOARD, PEROORKADA, TRIVANDRUM-695 005, PH :695005-9947175650

35.## SREEKARIYAM AUTOMOBILES (353), SREEKARIYAM P.O., THIRUVANANTHAPURAM-695 017, , PH :695017-9447050313.

THODUPUZHA

536.## UNIVERSAL MARUTI (2563), VENGALLOOR P.O., THODUPUZHA, (KERALA), PH:685585-9447023024.

TRIVANDRUM

i7.* KICHU MOTORS (5453), TC.49/962 ,SREEMOOLAM NAGAR CHIRAMUKKU , MANACAUR (PO) TRIVANDRUM, DISTRICT -TRIVANDRUM, KERALA, PH :695572-9847023025.

VADANAPPALLY

538.## MONARCH MARUTI CARE CENTRE (4079), NEAR NORTH JUMA MASJID, GANESHA MANGALAM, P O VADANAPALLY, TRICHUR DIST (KERALA), PH:680614-9847792698.

VADAVATHOOR

539.## CCARS (5754), VADAVATHOOR PO-KOTTAYAM, DISTRICT-KOTTAYAM, PIN-686503, KERALA, PH :685503-9447208558.

VARKALA

540.* S.S. MOTORS (2979), NEAR POLICE STATION, VARKALA-695 141, TRIVANDRUM DISTT., PH :695141-9446104991.

VATAKARA

541.## RANI AUTOMOBILES & ENGINEERING WORKS (1674), 10/496, NADAPURAM ROAD, MADAPPALLI COLLEGE POST, VATAKARA, KOZHIKODE - 673102., PH :673102-9400513139.

LAKSHADWEEP

LAKSHADWEEP

542.## POPULAR REPAIR & SERVICE CENTRE (2944), SECRETARIAT ROAD, KAVARATTI, LAKSHADWEEP-682 555, PH :682555-9448463737.

MADHYA PRADESH

BALAGHAT

543.## GULAB AUTOMOBILES (1553), GUJARI CHOWK, BALAGHAT-481 001, MADHYA PRADESH, PH :481001-9425402926

544.## SAURAV MOTORS (4069), DEENHI ROAD, GARRA INDUSTRIAL AREA, BALAGHAT, MADHYA PRADESH, PH :481001-9300963731.

BARWANI

545.## SPEED AUTOMOBILES (5260), KHANDWA BARODA ROAD, NR. BALAJI TOLL KANTA, BARWANI-451552, DISTRICT-BARWANI, MADHYA PRADESH, PH :451552-9926146073.

BETUL

546.## ADITYA MOTORS (1263), NAGPUR BHOPAL ROAD, SADAR, BETUL-461 001, MADHYA PRADESH, PH :460001-9425381581.

BHIND

547.## MAA PITAMBARA MOTORS (5241), OPP RAJENDERA CONVENT SCHOOL , LAKSHAR ROAD - BHIND , MADHYA PRADESH, PH :477001-9826240582.

BHOPAL

548.## SHRI KRISHAN CAR CARE (1679),
POLYTECHNIC ROAD, NEAR PETROL PUMP,
BHOPAL, (M.P.),
PH:462002-9424454030.

549.## SHUBHAM AUTOMOBILES (5052), PLOT NO. 1 & 2, TIRANGA ROAD, SHAHPURA, BHOPAL, MADHYA PRADESH -462039, PH :462039-9425009869.

50.* TAURUS AUTOMOBILES (3372), ALAKNANDA COMPLEX, OPP.VIJAY STAMBH PRESS COMPLEX, M.P. NAGAR ZONE-I, BHOPAL (M.P.), PH :462011-9303131403.

RA.

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

551.** VIDHYA AUTOMOBILES (320), PLOT NO. 235, ZONE II,

B, PH:462011-9826053198.

BIAORA

552.## GURUKRUPA MOTORS (5670), OPP PRABHAT BREAD INDUSTRY, AB ROAD-BIOARA, DISTRICT - BIOARA, MADHYA PRADESH, PH:465674-9425038727.

BURHANPUR

553.** SWADESHI MOTORS (4229), NEAR GANPATI MANDIR, GANPATI NAKA, BURHANPUR, MADHYA PRADESH, PH: 450331-9826337438.

DABRA

554.## MODI MOTORS (3857), BALLA KA DERA, JHANSI ROAD, DABRA, GWALIOR, PH :475110-8770360194.

DAMOH

555.## MARUTI PRIME (1156), BUS STAND, STATION ROAD, DAMOH-470 661, PH :470 661-8319706998.

DATIA

556.## HIND MOTORS (4470), NH-75, JHANSI BYPASS ROAD, NEAR S.R.I COLLEGE, KALAMPURAM TIRHA, DATIA, MADHYA PRADESH - 475661, PH :475661-9406969206.

DEWAS

557.## AZAD MOTORS (4534), 10, JAWAHAR NAGAR COMPLEX AB ROAD DEWAS(MP)404051, PH :455001-9827533591.

DHAR

558.## JIYO MOTORS (5031), OPP DAK BANGLA.INDORE ROAD DHAR., DISTRICT -DHAR, DHAR - 454001, MADHYA PRADESH, PH :454001-9893633559.

GWALIOR

559.## CLASSIC MOTORS & SERVICE STATION (5242). CHAUHAN PIAO.M.G. ROAD, THATIPUR MORAR, GWALIOR, MADHYA PRADESH, PH 474011-9329603001.

MARUTI ENTERPRISES (3021), KHERAPATI ROAD, GWALIOR-474 002, (M.P.)

PH:474002-9425116466

HARDA

561.## MANOJ UDYOG & SERVICE CENTER (4145), 87-88, INDUSTRIAL AREA, CHHIPANER ROAD, HARDA, M.P. PH :461331-9826227245.

INDORE

562.## BADSHAH MOTORS (5027), 150/2,NOORANI NAGAR,NEAR JAIMAL SINGH PETROL PUMP, DHAR ROAD,INDORE-452008, DISTRICT-INDORE, MADHYA PRADESH, PH:452008-9826098427.

63.** BOMBAY MOTORS (1655), 10 Y.N. ROAD, INDORE-452 003, (M.P.), PH:452003-7314222786.

564.## JYOTI RAGHUNATH MOTORS (5149), 3/3 RAMBAGH, BEHIND PETROL PUMP, INDORE -452001, MADHYA PRADESH, PH :452001-9425353568.

ITARSI

565.* PITAMBARA MOTORS (5041), NH-69.BETUL ROAD.NEAR PLYBOARD, FACTORY ITARSI DISTRICT - ITARSI, MADHYA PRADESH, PH. :461111-9406525060.

UNITY ENTERPRISES (3270), PLOT NO.97, INDUSTRIAL AREA, KHEDA, ITARSI-461 111 (M.P.), PH :461 111-8120025666.

JABALPUR

567.## SUPER MARUTI SERVICE (4952), 375-A PREM NAGAR, OPP. GURUDWARA, JABALPUR-482001, MADHYA PRADESH, PH. 482001-7999993375.

568.## YASH VEHICLES CARE (2169), 1664, WRIGHT TOWN, OPP. TELEGRAPH GATE NO. 2 JABALPUR (M.P), PH :482002-9893237505.

JAWAD

569.## SHARMA MOTORS (5764), IN FRONT OF PAWAN MILL, STATION ROAD, JAWAD-458330, DISTRICT-NEEMUCH, MADHYA PRADESH, PH :458330-9425441270.

KATNI

570.## KATNI MOTORS (4949), C/O MAHURANIPUR UNION, TRANSPORT CORPORATION, NH-7, PANNA MORH, KATNI-483501 (MADHYA PRADESH), PH :483501-9425162660.

KHANDWA

571.## M.K.AUTOMOBILES (5326), SANTOSH NAGAR, OPP. JHEELODHYAN, INDORE ROAD, KHANDWA - 450 001, PH :450001-9425085666.

KUKSHI

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass: Free & paid Service & Minor repairs

572.## DILIP MARUTI SERVICE CENTER (4649), OPP. GAYATRI SAROVAR, KUKSHI, DISTT DHAR, PH:454331-9340709923.

MANDSAUR

573.## DEV MOTORS (4562), SITAMAU FATAK, MANDSAUR-458001, MADHYA PRADESH, PH :458001-9826751534.

574.* JANGID MOTORS (2735), NAYAPURA ROAD, NEAR R.K. HOSPITAL, MANDSAUR-458 001, (M.P.),

PH:458001-9827266583.

MHOW

575.* HIGHWAY MOTORS (4144), A.B. ROAD, DONGRAGAON, MHOW-453441, INDORE M.P., PH :453441-9826035653.

MORENA

576.## SHYAM MARUTI SERVICE STATION (8935), SHYAM BIHAR COLONY, A.B. ROAD, MORENA-476 001, MADHYA PRADESH, PH: 476 001-7999624671

NAGDA

577.## MARUTI NANDAN (3939), 15 VERDHAMAN NAGAR, MEHATWASA, BIRLAGRAM, NAGDA, DISTT UJJAIN, PH:456335-9910074658.

SAGAR (M.P)

578.## SHREE SAGAR MOTORS (4955), NEAR GURUDWARA, JHANSI BHOPAL ROAD, BHAGWANGANJ, SAGAR-470002, MADHYA PRADESH.

SARNI

579.## JHANVI SERVICE STATION (3738), MAIN ROAD, BAGDONA, SARNI-460 449, DISTT. BETUL (M.P.), PH :460449-9425382313.

PH:470002-9826070549.

SATNA

580.* KAPOOR SERVICING CENTRE (1162), 90 PREM NAGAR, SATNA-485 001, (M.P.), PH :470661-9827095182.

SEONI

581.## HIGHWAY MOTORS (2262), NEAR MOTEL CENTER POINT, SEONI-JABALPUR HIGHWAY, SEONI, (M.P.), PH :480882-9424928978.

SHAHDOL

582.## PACE CRAFTERS (2145), NEAR VIRAT TEMPLE, BANGANGA TIRAHA, REWA ROAD, SHAHDOL, (M.P.), PH :484001-9424701495.

- * B-Category Mass : Free & paid Service & Major repairs
- # D-Category Mass : Free Service & Minor repairs

SHAJAPUR

583.## SHRIYA MOTORS (2568), 174 A.B. ROAD, SHAHJAPUR-456 001, (M.P.), MADHYA PRADESH, PH :456 001-9826783993.

SHEOPUR

584.## GOYAL AUTO (5446), NEAR NABBAN MARKET, BARODA ROAD, SHEOPUR, DISTRICT - SHEOPUR, MADHYA PRADESH, PH :476337-9826240944.

SHIVPURI

15.* KARUN MOTORS (4273), NEAR ARUN DHARAMKANTA, GUNA NAKA, A.B. ROAD, SHIVPURI, PH:473551-9425728285.

SIDHI

86.## KHARE MOTORS (4068), NH-75, SINGRAULI ROAD, SIDHI, MADHYA PRADESH, PH:486661-9425823952.

TIKAMGARH

87.* ASHENDRA AUTOMOBILES (2636), 350 OPP. JAWAHAR NAVODAYA VIDYALAYA, KUNDESHWAR, TIKAMGARH-472 001, MADHYA PRADESH, PH. 472001-900129909.

UJJAIN

588.## SUGANDHI BROTHERS (324), DEWAS ROAD, UJJAIN (M.P), , MADHYA PRADESH, PH :456010-9406822255.

589.## ZALANI AUTO SERVICE (1554), A 15/9, MAHAKAL VANIJYA KENDRA,, NANAKHEDA, UJJAIN 456010, PH :456010-9713884177.

VIDISHA

590.## SAMAY MOTORS (5179), NEAR SC/S SHED , PITALMIR CHOURAHA, SAGAR ROAD NH-86, VIDISHA-464002, PH :464002-9425392521.

WAIDHAN

1.## ANANT MOTORS (5732), NEAR ESSAR TOWNSHIP, BILAUNJI ,WAIDHAN, DISTRICT-SINGRAULI, PIN-486886, MADHYA PRADESH, PH :486886-9425823952.

MAHARASHTRA

AKLUJ

592.## SONAJ AUTOMOTIVES PVT. LTD. (2665), SHANKARRAO MOHITE PATIL, CO-OP INDUSTRIAL ESTATE, PLOT NO.36 P.O. BOX NO.-11, AKLUJ -413 101 (MAHARASHTRA). PH:413101-9657713360.

AKOLA

593.## AUTOLAND (5936), RAM NAGAR, TOSHNIWAL LAYOUT, AKOLA-444005, DISTRICT-AKOLA, MAHARASHTRA. PH:444005-9422164050.

AKOLE

594.## SAMARTH CAR CARE (5555), MAHALAXMI COLONY K.G. ROAD-AKOLE, DISTRICT -AHMEDNAGAR, PIN-422601, MAHARASHTRA. PH:422601-9881759099

AMALNER

595.## LUCKY AUTO CARES (5853), R.K. COMPLEX R.K. NAGAR DHULF ROAD. AMALNER-425401, DISTRICT-JALGAON, MAHARASHTRA. PH:425401-9422789764.

AMBERNATH

J.S. AUTOMOBILES (4567), B-31/3, MIDC. KALYAN AMBERNATH ROAD, AMBERNATH-421501 MAHARASHTRA PH:421501-9370116436.

AURANGABAD

CAR CARE (5173), #85.SERVICE INDUSTRIAL SECTOR, TOWN CENTRE, CIDCO. DISTRICT-AURANGABAD, MAHARASHTRA, PH:431006-9158000029.

MARUTI AUTOMOBILES (3441), CHETAN TRADE CENTRE, JALNA ROAD, OPP. SFS SCHOOL, AURANGABAD - 431001. PH:431101-9767301999.

BADLAPUR

599.## OMKAR AUTO SERVICES (3376), OMKAR BUNGLOW, GOLE WADI, KULGAON STN., BADLAPUR DIST. THANE, PH:421503-9326080457.

BARSHI

600.## OM SERVICE CENTRE (5359), KURWEDI ROAD - BARSI, DISTRICT - SOLAPUR , PIN -413401. (MAHARASHTRA). PH:413401-9850437003.

BFFD

601.## NEW AGWAN SERVICES (2235), 850 SHYOG NAGAR, JALNA ROAD, BEED-431 122, PH:431122-9822217321.

BOISAR

602.## SIFAR CAR CARE (4055), PLOT NO. 15 AT-KURGAON, P O KUNDAN, BOISAR TARAPUR ROAD, TAL PALGHAR, DISTT THANE, PH:401506-9765509990

CHANDRAPUR (MAHARASHTRA)

603 ## SHEIKH AUTOMOBII ES (5379), APPOSITE GOVT, ITI, CIVIL LINES, CHANDRAPUR, DISTRICT - CHANDRAPUR, MAHARASHTRA, PH:442401-9422171896.

CHIPLUN

604.## MANORKAR AUTOMOBILES (270), NEAR RAII WAY STATION, BOMBAY-GOA HIGHWAY, WALOPE CHIPLUN-415 605. DISTT. RATNAGIRI PH:415605-9421239999

MAYUR MOTORS (168), SITA APARTMENTS. NEAR BAHADUR SHEIKH NAKA, CHIPLUN DISTT. RATNAGIRI, MAHARASHTRA, PH:415605-9422431112.

DAPOLI

606 * ROYAL AUTO SERVICE STATION (3444). DAPOLI-MANDANGAD ROAD. MAUJE-DAPOLL TAL- DAPOLL DIST. RATNAGIRI-415 712 (MAHARASHTRA). PH:415712-8888101776.

DEOPUR

AGRO ENGINEERING SERVICES (2244). DIVERSION ROAD, DEOPUR, DHULE-424 005, PH:424005-9823059471.

DOMBIVLI

608.## MEGA SERVICES (2573), A-173,PHASE-1,, NEW KALYAN BYPASS ROAD , OPPOSITE ADARSH PARK.MIDC. DOMBIVLI (E)-421203. PH:421203-8424070777.

GADACHIROLI

609.## VENUS AUTOMOTIVE (4170), PLOT # 2, NR GOVERNMENT ITI COLLEGE, ADJ TO CHANDRAPUR GADACHIROLI HIGHWAY. GADACHIROLI, MAHARASHTRA-442605. PH:442605-9689228222

ICHALKARANJI

610.## SAI AUTO LEADS (3821), 7/597 SANGLI VES, ICHAI KARANJI-416 115 DIST, KOI HAPUR. PH:416115-0230-2426089.

ISLAMPUR

C-Category Mass: Free & paid Service & Minor repairs

611.## VIJAY MOTORS (5134), PETH ISLAMPUR ROAD . NEAR PETH NAKA -ISLAMPUR. DISTRICT - SANGLI, MAHARASHTRA, PH:415409-9860446084

JALGAON

SHREE MOTORS (3040), 362 SHIVAJI NAGAR, JALGAON-425 001, , PH:425001-9823150704.

KALWA

SHREE SIDDHI MOTORS (5668), NEXT TO LILAVATI CO-OP SOCIETY DATTAWADA. KALWA KHAREGAON ROAD-KALWA(W) -400605, DISTRICT - THANE, (MAHARASHTRA). PH:400605-9769775444.

KALWAN

614 ## KRISHNA AUTOMOTIVE (4037), GANESH NAGAR, AT POST & TALUKA, KALWAN, DIST NASHIK-423501 PH:423501-8087988735.

KANKAVLI

SAPALE AUTO SERVICE PRIVATE LIMITED (1975), MUMBAI GOA ROAD, N.H.17, KALMATH, KANKAVLI DISTT. SINDHUDURG-416 602, PH:416602-9422434701.

KATOL

616.## BALAJI SERVICE STATION (5962), PLOT NO. XI.MIDC.SAWARGAON ROAD.DONGARGAON-. KATOL, NAGPUR-441302, DISTRICT-NAGPUR, MAHARASHTRA,

PH:441302-9763867144.

KHAMGAON

617.## JAIDEEP MOTORS (4779), NEAR RELIANCE PETROL PUMP, NANDURA ROAD. KHAMGAON-444303, DISTRICT-BULDHANA (MAHARASHTRA) PH -444303-9850352826

KHED

618.## BHARAT AGENCIES (4548), NEAR KAMAKSHI PETROL PUMP, AT POST KALBANI, TALUKA KHED, DISTRICT RATNAGIRI, 415621, PH:415621-9049024781.

KOI HAPLIR

VAKRATUNDA MOTORS (3142), OPP MAHAVIR COLLEGE, NAGALA PARK, KOLHAPUR, PH:416003-9822611559.

KOPARGAON

SAI MOTORS (4449), NAGAR MANMAD HIGHWAY, NEAR HOTEL ASHOKA, KOPARGAON, DIST, AHMEDNAGAR (MAHARASHTRA). PH:423601-9850684384.

LONAVALA

621.## APPOLO MOTOR REPAIRING WORKS (2543), MUMBAI-PUNE ROAD, LONAVALA, MAHARASHTRA-410 401. PH:415409-9370721905.

MAHAD

622 ## SHREE AUTO (2572), NAGAI WADI PHATA BOMBAY-GOA HIGHWAY, AT & TALUKA -MAHAD, DISTT. RAIGAD, MAHARASHTRA-402 301. PH:402301-9422495799.

MALEGAON

623 ## MALEGAON AUTO CENTRE (3721), NEAR MOTI BAUG NAKA, MALEGAON-423 203. . PH:423203-9371376911.

MANGAON

624.## KRUPA SERVICES (574), KRUPA SERVICES. AT: NANORE, POST: MANGAON, DISTT-RAIGAD-402 104. PH:402104-9422375444

MIRAJ

ASHOK AUTOMOBILES (5672), C.S. NO:70-C.CHH - SHIVAJI ROAD, MIRAJ. DISTRICT - SANGLI, MAHARASHTRA. PH:416410-0233-2375961.

MUMBAI

ALLIED AUTO AGENCIES (2666), 86/20 DR. AMBEDKAR ROAD, KHAR, MUMBAI-400 052. PH:400052-9768257450.

ASHA AUTO SERVICE (570), I.O.C. DEALER, L.B.SHASTRI MARG, KURLA, MUMBAI-400 PH:400070-9833728833.

AUTO CRAFT (4759), PLOT NO. 1-B, NEXT TO DAMJI SHAMJI IND ESTATE, LBS MARG. VIKHROLL(W), MUMBAI-400083. PH:400083-9820022227.

AMAR AUTOMOBILES (526), KING'S CIRCLE. MATUNGA, MUMBAI-400 019 (MHRS).. PH:400019-9869473310.

630.## BANAI AUTO CARE (6053), OPP. MAROL POLICE CAMP, NEXT TO AAREY CHECK POST, MAROL MAROSHI ROAD. MUMBAI-400 059. PH:400059-9819844333.

CARKRAFT AUTOMOBILE SERVICES PVT. LTD. (4654), ABC GODOWN, MINERVA INDUSTRIAL ESTATE, OFF P.K. ROAD, NEAR SAI DHAM MANDHIR, MULUND (W), MUMBAI, PH:400080-9820296924

CHAMUNDA MOTORS (P) LTD. (520), RAM BAUG NEAR SUNDAR DHAM, OFF S.V.ROAD, BORIVILI (W), MUMBAI-400 092. PH:400092-9820063626.

[#] D-Category Mass : Free Service & Minor repairs

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs * B-Category Mass : Free & paid Service & Major repairs

633.##	CHEMBUR MOTORS (2526), 31/A ANAND				
	NAGAR, OFF SION TROMBAY ROAD, SINDHI				
	SOCIETY CHEMBUR, MUMBAI-400 071,				
	PH -400071-0820475704				

634.## CHHAGAN MITHA (5230), CORNER OF WARDEN ROAD & PEDDAR ROAD, POST BOX NO. 6521, MUMBAI -400026, MAHARASHTRA,

PH: 400026-9820861441.
HIND AUTOMOBILES (550), 29 SEWREE
WADALA ROAD, KING'S CIRCLE, MUMBAI 400 019 (MHRS).,
PH: 400019-9833876440.

636.## LAXMI AUTO WORKS (2542), PLOT NO.1041, SAYANI ROAD, PRABHADEVI, MUMBAI-400 025, PH :400025-9820303646.

37.** ORIX AUTO INFRASTRUCTURE SERVICES LTD (1971), 94 MAROL INDUSTRIAL ESTATE, ANDHERI KURLA ROAD, ANDHERI (EAST), MUMBAI-400 059, PH :400059-9820409079.

638.** POWAI AUTO WORKS (1660), OPP. PANCH KUTIR BUS STOP, 19 ADI SANKARACHARYA MARG, POWAI, MUMBAI-400 076, PH :400076-9820635317.

639.** POWAI AUTO WORKS (4966), GALI NO 14/15/16, BUILDING NO1, C WING, KAILASH INDUSTRIAL COMPLX, PARKSITE VIDHROLI

PH :400079-9820635317.
640.## PRINCE SERVICE CENTRE LLP (8931), 34
GAMDEVI ROAD, SANGHANI ESTATE,
GHATKOPAR (WEST), MUMBAI-400 086,
PH :400086-986034445.

641.** RAVI AUTOMOBILE SERVICES (553), GHATKOPAR-MAHUL ROAD, TILAK NAGAR, CHAMBUR, MUMBAI-400 089, PH :400089-657442190.

642.** SHAH CAR CARE (5436), SADANWADILAKE ROAD.OFF LBS MARG, NEAR KRISHNA TALKIES, DISTRICT - MUMBAI (MAHARASHTRA), PH :400078-9820068380.

643.** SHAMAL MOTORS (1154), VAITY WADI, BHANDUP-SONAPUR ROAD, BHANDUP (WEST), MUMBAI-400 078, PH :400078-9773911111.

> ST.FRANCIS AUTOMOBILES (5154), MOUNT POINSUR BORIVALI (WEST), MUMBAI -400103, DISTRICT - MUMBAI, MAHARASHTRA, PH:400103-9892876396.

645.* SUPER AUTO SERVICE PVT. LTD. (2430), DESAI WADI JAYWANT SAWANT ROAD, NEAR HAPPY HOME SOCIETY, DAHISAR (W), MUMBAI-400 068, PH: 400068-9867253000.

646.## SURAJ SANGHI SERVICE STATION (438), DR. ANNIE BESANT ROAD, WORLI, MUMBAI-400 018, PH :400018-9821115492.

MURBAD

647.## JAYDEEP AUTOMOBILES (5676), MURBAD KALYAN HIGHWAY(NH-222),NEAR NAVOURGA HOTEL, AT-PO-TAL:MURBAD-421401, DISTRICT-THANE, MAHARASHTRA, PH :415621-9423370219.

NAGPUR

48.* AMIT SERVICE STATION (4158), NEAR NAGAPUR HIGHWAY BRIDGE, NAGAR-MANMAD HIGHWAY, NAGAPUR DIST-AHMADNAGAR, MAHARASHTRA, PH:414111-0241-2778336.

649.* BALAJI MOTORS (3078), PLOT NO.18/27, NEAR NAKA NO.-1, KORADI ROAD, NAGPUR-20,

PH:440020-9960634068.
HASAN GARAGE (2021), MOHAN NAGAR,
NAGPUR - 440 001 (MHRS).,
PH:440001-0712-2533805.

651.## M S SERVICES (5339), 14 HILL ROAD, GANDHI NAGAR - NAGPUR, DISTRICT -NAGPUR, MAHARASHTRA, PH: 440010-9373422822.

652.## R. K. MOTORS (3023), 69 A V A LAYOUT, LAKADGANJ, NAGPUR-440 008, PH :440008-9422113088.

553.* SAGAR AUTOMOBILES (2667), MARUTI AUTHORISED SERVICE STATION, PLOT NO.3. NEAR PETROL PUMP, WARDHA ROAD UJJWAL NAGAR, NAGPUR-440 025, PH:440025-9960695823.

654.** SAGAR AUTOMOBILES (4971), WARDHA ROAD,, CHINCHBHAWAN, NAGPUR – 441108.

PH :441108-9422145365.
SHREEJEE SERVICES (2027), CHANDAK KOTHI, SUBASH ROAD, NAGPUR-440 018, PH :440018-9766699321.

NANDED

656.## MARUTI CARES AND COLOURS (5778), LABH NAGAR,BACK SIDE OF SURABH HOTEL, NANDED-431605, DISTRICT-NANDED, MAHARASHTRA, PH: 431605-9225751444.

NANDURBAR

** A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

C-Category Mass : Free & paid Service & Minor repairs

657.* MAULEE MOTORS (4736), SURVEY NO. 130/2, PLOT NO. 43, ADARSHA NAGAR, NIZAR ROAD, NANDURBAR-425412, MAHARASHTRA, PH: 425412-9822377931.

NASHIK

658.## HITECH AUTO SERVICES (4451), SURVEY NO 89/2, PLOT 1 & 2, OPP MOTIWALA MEDICAL COLLEGE, GANGAPUR SHIWAR,, NASHIK.

PH:422007-9225142471.

659.## RACCA SERVICE (3720), RACCA ESTATE, OLD GANGAPUR NAKA, HANUMAN WADI LINK ROAD, PANCHVATI, NASHIK - 422003, PH :422003-9096846468.

660.## SAI AUTOMOBILES (3722), SAPAT COMPLEX, OPP. PRESS HOSPITAL, NASIK ROAD-422 101, PH :422101-9822027931.

NAVI MUMBAI

61.* BOSS (265), AT/P.O. - TURBHE, SECTOR-22, VASHI, NAVI MUMBAI-400 705, PH:400705-9167766474.

662.## C G MOTORS (4138), PAPR-73, TTC INDUSTRIAL AREA, RABALE, OPP RABALE RAILWAY STATION, THANE-BELAPUR ROAD, MAHARASHTRA,

PH :400701-9920205756.

CHETAN MOTORS (3143), PLOT NO.45/B SECTOR 19/A, OPP. GATE NO.2 DANA BAZAR, BEHIND SHAMIR VITHAL CO-OP BANK VASHI, NAVI MUMBAI-400 705, PH :400705-9892057288.

NIGDI

664.## SHALU AGENCY (2872), 516/27 PRADHIKARAN, NIGADI, PUNE-411 044, PH :411014-020-27656354,27652631.

NIPHAD

665.## SHRI SAI SERVICE STATION (4452), NIPHAD AURANGABAD ROAD, NIPHAD, NASIK, MAHARASHTRA, PH :422303-9823679999.

PACHORA

666.## POOJA MARUTI SERVICE CENTRE (5564), PLOT NO 75,PREM NAGAR ,KRISHNA PURI SHEVAR, PACHORA, DISTRICT - JALGAON , MAHARASHTRA, PH :424201-9890320803.

PALGHAR

667.## SIDDHI MOTORS (5553), THEMBHEDE ROAD, GANESH KUND, PALGHAR, DISTRICT - THANE, MAHARASHTRA, PH: 401404-9890609107.

PANVEL

668.## GANGAL MOTORS (2934), PLOT NO.:125-127,SECTOR-1S,ROAD NO-5, BEHIND CIDCO GODOWN-NEW PANVEL, DISTRICT - RAIGAD, (MAHARASHTRA), PH: 410206-9320226072.

69.** IDEAL AUTOMOBILES (2279), IDEAL HOUSE, PLOT NO-83, PANVEL INDUSTRIAL CO OP ESTATE LTD., PANVEL, DISTRICT -RAIGAD, (MAHARASHTRA), PH:410206-996902650.

PARBHANI

670.## SAI SERVICING CENTRE (5252), P7/5 MIDC, PARBHANI-431 401, MAHARASHTRA, PH :431401-9404504111.

PASHAN

71.* MARUTI CAR SANJIVANI (5278), SURVEY NO 5/2.SUTARWADI. SUSROAD.PASHAN, DISTRICT - PUNE, PUNE - 411021, MAHARASHTRA, PH. 411021-9960733360

PATHARDI

672.## SAGAR MOTORS (5979), OPP. TEHSIL KACHERI,NAGAR ROAD, TALUKA,PATHARDI-414102, DISTRICT-AHMEDNAGAR, MAHARASHTRA, PH :414102-8822197969.

PEN

673.## NAVNATH AUTO (5677), OPPOSITE RAMWADI,S.T. STAND, NATIONAL HIGHWAY-17,TAL PEN-402107, DISTRICT-RAIGAD, MAHARASHTRA, PH :402107-9834279228.

PHALTAN

674.## VORA AUTOMOTIVE (2436), SHINGNAPUR ROAD, KOLKI, PHALTAN-415523, PH :415523-7709436262.

PIMPALGAON

675.## ASHWAMEDHA AUTO (2435),
"ASHWAMEDH", MUMBAI-AGRA HIGHWAY,
PIMPLEGAON (B), DISTT. NASHIK,
PH. :422209-9766600064.

PUNE

676.## APPU AUTOMOBILE (5029), MARUTI
AUTHORISED REPAIR STATION ,#81.SR NO
164.TALAWAD ROAD , KANBAY
ROAD TRIVENI NAGAR , AHARASHTRA,
PH :411062-9371017595.
677.* APPU SERVICE STATION (4927), BG/SEI

677.* APPU SERVICE STATION (4927), BG/SEI 11/10, NEAR TELEPHONE EXCHANGE, MIDC, BHOSARI, PUNE-411026 (MAHARASHTRA), PH:411026-020-27123838.

D-Category Mass : Free Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

- 678.* ATHARVA CAR SERVICES (5161), 5, BHUSARI COLONY, PAUD ROAD, KOTHRUD, PUNE-411038, MAHARASHTRA, PH:411038-9665024803
- 679.* MANAS AUTOMOTIVE (5443), SURVEY NO 2/4 PARRANKUTI.LANE NO.1., KARVE NAGAR - PUNE, DISTRICT - PUNE, MAHARASHITRA,
- PH :411052-9822043007.

 680.* MARUTI (CARE POINT (3337), S. NO
 273/5,BANER ROAD,OPP. VARSHA PARK,
 BANER,PUNE-411045, MAHARASHTRA,
 PH :411045-7290016518.
- 681.** SAINATH AUTOMOBILES INDUSTRIES (1569), SURVEY NO.36 PLOT NO.1, VADGAON KHURD SINHAGAD ROAD, NEAR GREEN FIELD HOTEL, PUNE-411 041, PH:411041-982214282.
- 682.* SANTOOR CAR CARE (2053), ASHOK PLAZA, 32/2 WADGAON SHERI NEAR WEIKFIELD, PUNE NAGAR ROAD, PUNE-411 014, PH: 411014-020-26632000, 9579415112.

RAHURI

883.* ANAND MOTORS (4152), IN FRONT OF ASHWINI HOTEL, NAGAR MANMA ROAD, A/P RAHURI DIST- AHMADNAGAR, MAHARASHTRA, PH. 413705-7350008501.

RAVER

684.## RUCHI MOTORS (2631), MARUTI AUTHORISED SERVICE STATION, RAVER-425 508, DISTT. JALGAON, (MAHARASHTRA), PH: 425508-8805373406.

ROHA

685.* AMIT MOTORS (4972), NANA SHANKAR SHETH ROAD, NEAR GOVT REST HOUSE, DISTRICT - RAIGAD, ROHA - 402109, MAHARASHTRA, PH. 402109-9028376141.

SAKURI

686.## SHREE SAI SERVICE CENTRE (5344), NAGAR-MANMAD ROAD .GODAVARI, HOTEL JEWEL .PO:SAKURI, TAL:RAHATA, DISTRICT - AHMEDNAGAR , MAHARASHTRA, PH :423107-9970741777.

SANGAMNER

687.* SAI MOTORS (2840), NEAR GULEWADI PHATA, PUNE NASIK ROAD, SANGAMNER DIST. AHMEDNAGAR, PIN-422 608 (MHRS.), PH 422608-9860027513

SANGLI

688.** ASHOK AUTOMOBILES (3723), 595/B, M.G.ROAD, SANGLI-416 416, PH :416416-0233-2221001.

689.* AWATI MOTORS (4772), PADMAVATI COLONY, NEMINATH NAGAR VISHRAMBHAG, SANGLI-416415, MAHARASTRA, PH. 416415-9422407284.

690.## BALAJI AUTO SERVICE (1564), PLOT NO.43, GOLDEN PARK , BYPASS ROAD, SANGLI-416416 , DISTRICT-SANGLI , MAHARASHTRA, PH. 416416-9822106126.

SATANA

691.## PATHAK MOTORS (5037), YASHWANT NAGAR,TAHARABAD ROAD,, SATANA -411014, DISTRICT - NASIK, (MAHARASTRA), PH :411014-9890216257.

SATARA

692.## SIDDHI AUTOMOBILES (5464), 294/A.DEGAON PATA - SATARA, RAHAMTPUR ROAD HIDC SATARA, DISTRICT - SATARA, (MAHARASTRA), PH :415002-9422403178.

SAWANTWADI

 VENKATESHA AUTO CARE (1659), PLOT NO.21 MUMBAI GOA HIGHWAY, KOLGAON-BHOM, SAWANTWADI-416 510, DIST. SINDHUGARH, MAHARASHTRA, PH:416510-9423304639.

SHAHADA

694.## MATOSHREE AUTOMOBILES (2870), NO.558 SHAHADA, DHONDAICHA ROAD, TAL. SHAHADA, NANDURBAR DISTT., (MAHARASHTRA), PH :425409-9421726230.

SHIRDI

695.## SHREE GANESH AUTO CARE (4268), POST SAKURI, TALUKA RAHATA, AHMEDNAGAR-423107, PH :423107-02423-242652.

SHRIRAMPUR

696.* G.K. MOTORS (2871), K.V. ROAD, SHRIRAMPUR, DISTT. AHMEDNAGAR, PIN-413 709., PH :413709-9822094098.

SOLAPUR

 BALAJI MOTORS (1930), 8536 B/1 MURARJI PETH, OPP. OLD PUNE NAKA OFFICE, SOLAPUR-413 002, PH :413008-9765111110.

THANE

698.* PATRICIA AUTOMOBILES (529), ALIGHT CHAMBER, ADJACENT GOLDEN DYES, OLD AGRA ROAD, HARDAS NAGAR, GOKUL NAGAR, THANE, WEST - 400601, PH :400601-9987175866.

99.* SEAN MOTORS (5377), SATPALA NAKA, ARNALA-VASAI ROAD, NEXT TO ZEAL RESTAURANT, VIRAR (W) PIN 401301, PH: 401301-9324003123.

700.** STERLING MOTOR GARAGE (555), OPP. RAVI STEEL INDUSTRIES, 2ND POKHRAN ROAD, THANE-400 601, PH:400601-9820252926.

701.** THANAWALA MOTOR AGENCY (3724), DHIRAJ BAUG, L.B.S. MARG, NAUPAD, NEAR HARINIWAS CIRCLE, THANE-400 602, PH :400602-9820106904.

702.* TOP GEAR AUTOMOBILES (4840), SAI NAGAR, GHODBUNDER ROAD, KASARVADAVALI, THANE (W), PH:400615-9833795855.

ULHASNAGAR

703.* CHIMAN AUTOMOBILES (3845), NEAR KAJAL PETROL PUMP, BALANI COMPOUND, VITHALWADI STATION ROAD, ULHASNAGAR 421003,

PH:421003-9850223422.

MODERN CAR CARE (3260), 171/2.RRV
INDUSTRIAL AREA, BEHIND SAI BABA
MANDIR,SHANTINAGAR, ULHASNAGAR-421
003, MAHARASHTRA,
PH:421003-9819774588.

URAN

705.## SAI AUTOMOBILES (5665), STATE HIGHWAY NO.56, NEAR JASAI NAKA, JASAI VILLAGE, URAN.-410206, DISTRICT - RAIGAD, MAHARASHTRA, PH:410206-9821806806.

VADA

706.## SAI MOTORS & SERVICE CENTRE (5675), VARALA, OPP. LAKE CITY, MANOR ROAD, WADA, PH:421303-9226338578.

VITA

707.## SONA AUTOMOTIVE (5671), MAYANI ROAD, NEAR PRUTHVIRAJ HOTEL, OPP. LAKADE PETROL PUMP, DISTT VITA- 415311, PH: 415311-9890223938.

WAI

ADITYA AUTO SERVICE (4271), WAI SATARA ROAD, WAI-412803, SATARA DIST., PH:412803-9423862119.

WANI

709.## SHEIKH AUTOMOBILES ()PH :-.

WARDHA

710.## BHARAT MOTOR (1631), NAGPUR ROAD, NALWADI, WARDHA, MAHARASHTRA, PH :442001-9881588388.

WARORA

711.## ROHIT AUTOMOTIVE (5873),
NAGPUR,CHANDRAPUR ROAD,VINAYAK-,
LAYOUT,TILAK WARD,WARORA-442907,
DISTRICT-CHANDRAPUR, MAHARASHTRA,
PH.:442907-9172060099.

YAVATMAL

712.## M.S. MOTORS (460), AMRAVATI ROAD HIGHWAY, LOHARA, YAVATMAL-445 001, PH :445001-9822222579.

713.## RAMESH MOTORS (2024), GARDEN ROAD, YAVATMAL, MAHARASHTRA-445 001, PH :445001-9422865222.

YEOLA

714.## BIJASANI AUTOMOTIVE (3041), NAGAR-MANMAD ROAD, YEOLA, DIST. NASIK (MAHARASHTRA), PH :423401-9423185025.

MANIPUR

IMPHAL

715.## BORDIN MARUTI GARAGE (4879), SANGAIPROU AIRPORT ROAD, IMPHAL WEST, MANIPUR - 795001,, PH : 795001-9436023659/7005264886.

SENAPATI

716.## KOMUO MARUTI WORKS (4644), NH-2, MAO TAPHOU, SENAPATI HQ, SENAPATI DISTRICT, MANIPUR - 795106, PH :795106-8794109474.

MEGHALAYA

TURA

717.## MULTI MOBILE PRECISION (3222), AGLANGGRE, PO ARAIMILE, NEW TURA, MEGHALAYA, 794101, PH:794101-8974057627.

MIZORAM

CHAMPAI

718.## IRDIV- TC AUTO WORKS (5744), SVENTH DAY TLANG,ZOTLANG ROAD, NEW CHAMPHAI-CHAMPHAI, DISTRICT-CHAMPHAI, MIZORAM, PH: 796321-9862405715.

LUNGLEI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

719.## LAWMA ENGINEERING WORKS (3125), , A O C SQUARE, LUNGLEI, MIZORAM-796 701, PH :796701-9436147141.

NAGALAND

DIMAPUR

720.** ERJO MOTORS (4871), EAST BLOCK, BURMA CAMP, NEAR BIBLE HOUSE, DIMAPUR, NAGALAND - 797112., PH :797112-9436004350.

ODISHA

ANGUL

721.## ZEET AUTOMOBILES (1573), NALCO NAGAR, KANDASAR, ANGUL - 759 145, ORISSA, PH :759145-9437021285

BALANGIR

722.## ASHIRWAD AUTOMOBILE WORKS (3177), DAMJI GARAGE, THIKADARPARA, , , BALANGIR-767 001, PH :767001-9437223452.

BALASORE

723.## AUTO CARE (432), AT-BAMPADA, PO-CHHANPUR, CITY - BALESHWAR (BALASORE), ODISHA - 756056, PH :756056-9437051944.

724.* TEKNO INDIA (3666), D-2/9 INDUSTRIAL AREA, O.T. ROAD, BALASORE-756 003, (ORISSA), PH: 756001-9861034990.

BARBIL

725.## INDU MOTORS (3241), IN FRONT OF UTKAL AUTOMOBILES, JODA-BARBIL HIGHWAY, BARBIL-758 035, (ORISSA), PH :758035-9437718008.

BHUBANESWAR

726.## INDO JAPAN SERVICE (4936), PLOT NO. 18, 19, 30 & 31, BHAGABANPUR INDUSTRIAL ESTATE, PO: PATRAPADA, BHUBANESHWAR-752019, ORISSA, PH: 752019-9861095444.

CUTTACK

727.* AUTO MATES (426), 3B/1325, SECTOR-11, CDA, CUTTACK, PH :753014-9437020646.

728.* DURGA SERVICE CENTRE (427), NEAR PALAMANDAP, BADAMBADI, PO - ARUNODAY MARKET, DISTT - CUTTACK, PIN-753012, PH -753012, PG-3682935762

DHENKANAL

729.## ANAND AUTOMOBILES (5449), ANAND NAGAR,IN FRONT OF TARINI MANDIR , DISTRICT - DHENKANAL , PIN - 759001 , (ORISSA), PH :759001-9437414972.

JHARSUGUDA

730.## AUTO MECHANIKA (2638), S.H.-10 BEHERAMAL, JHARSUGUDA-768 203, ORISSA, PH:768203-9040380001.

PURI

731.## URMILA MOTORS (5040), HERA GOHIRI SAHI CHOWK, PURI -1, DISTRICT - PURI, (ORISSA), PH -752001-7008651960

SAMBALPUR

732.## ANITA AUTO CARE (4834), SALIA BAGICHA, LIONS CLUB ROAD, KUMBHARPARA, SAMBALPUR-768001 (ORISSA), PH :768001-9861248403.

SEMILIGUDA

733.## ASHUTOSH MOTORS (5035), MAIN ROAD. NH-43, NALCO CHOWK, SEMILIGUDA, DISTRICT-KORAPUT, (ORISSA), PH: 764036-9437405417.

PONDICHERRY

KARAIKAL

734.## MARUTI TECH (2669),
NO.1,AKKARAIVATTAM,NAGAORE MAIN
ROAD , OPP TO ONGC,KARAIKAL-609604,
DISTRICT-KARAIKAL, PONDICHERRY,
PH :609604-7373788705.

PUDUCHERRY

 A.P.P. MARUTI MOTORS (2670), PLOT NO.6 GUNDU SALAI ROAD, NATESAN NAGAR, NEAR 100 FEET ROAD, PONDICHERRY-605 005,

PH:605009-7094449900.

MARUTH MISSION (5067), 60 RAGAVENDIRA
NAGAR KAMARAJ SALAI,
THATTANCHAVADY PONDICHERRY,
TINDIWANAM ROAD PONDICHERRY-9,
PONDICHERRY.

PH:605009-9786589000.
S D K MOTORS (471), PLOT NO.12, 100 FEET ROAD, OZHANDAI KEERAPALAYAM MUDALIARPET, PONDICHERRY-605 004, PH:605004-9843045689.

PUNJAB

AHMEDGARH

738.## GAHIR AUTOMOBILES (2877), LUDHIANA MALER KOTLA ROAD, VILL. GOPALPUR CITY, AHMEDGARH, (PUNJAB), PH :148021-9417553627.

AJNALI

739.## VISHWAKARMA MOTORS (5666), NEAR VIMAL DHARAMKANTA - AJNALI, DISTRICT -FATEHGARH SAHIB, PUNJAB, PH :147301-9814528084.

AMLOH

740.## BINDRA MOTORS (5844), NEAR DESH BHAGAT COLLEGE SONTI, AMLOH, DISTRICT-FATEH GARH SAHIB, PUNJAB, PH:147203-98148 82000.

AMRITSAR

741.** HANSON AUTOMOBILES (1722), MAQBOOL PURA, G.T. ROAD, AMRITSAR, PH :143001-9815167669

742.** JACKSON LUBRICANTS (364), 16 COURT ROAD, NEAR RAVI GAS AGENCY, AMRITSAR-143 001, PH :143001-9814299944

43.** KAPOOR'S KAR KARE (737), I/S MAHA LAKSHMI, CALICO PRINTING MILLS, OLD JAIL ROAD, AMRITSAR(PUNJAB)., PH:143001-9814213113.

744.* SAGGU SERVICE STATION (733), HIDE MARKET, AMRITSAR-143 001 (PUNJAB)., , PH:143001-8968497779.

BANUR

745.## AMRIK SERVICE STATION (2433), PATIALA ROAD, BANUR, DISTT. MOHALI(PUNJAB), PH:140601-9815591325.

BARNALA

746.## GAURAV MOTORS (4962), DHANAULA ROAD, BARNALA - 148101, DISTRICT SANGRUR, PUNJAB, PH :148101-9317512916.

747.* PUNJAB MOTOR GARAGE (6222), DHANAULA ROAD, BARNALA (PUNJAB), , PH :148101-9317512360.

BHADSON

748.## FRIENDS MOTORS (2233), NABHA ROAD, BHADSON-147 202, DISTT. PATIALA, (PUNJAB), PH:147202-9815700778.

BHATINDA

749.## KRISHNA AUTOS (4571), 40FT ROAD NAMDEV MARG NEAR INDRANI HOSPITAL ,BATHINDA (PUNJAB) 151001, PH:151001-9888671810. 750.** MODERN MOTORS (6234), OPP. T.V.
TOWER, MANSA ROAD, BHATINDA,
PH :151001-9814177075.

751.## SUPER AUTOMOBILES (6232), TINKONI, GONIANA ROAD, BHATINDA, PH:151001-9814036163.

BUDHLADHA

752.## JINDAL AUTOMOBILES (2147), NEAR P.S.E.B., BHIKHI ROAD, BUDHLADA-151 502, DISTT. MANSA, PH :151502-9815516964.

DERABASSI

753.## BINDAL AUTOMOBILES (1248), CHANDIGARH AMBALA ROAD, PARAS RAM MARKET, DERA BASSI-140 507, PH :140507-9914449711.

DHURI

754.## SHIV MOTORS (1962), NEAR SDM OFFICE, SANGRUR ROAD, DHURI-148 024, PH :148024-9872851068.

DINANAGAR

755.## D.S. MARUTI SERVICE STATION (3333), G.T. ROAD, DINA NAGAR, DIST. GURDASPUR-143 531, (PUNJAB), PH :143531-9814873101.

DIRBA

756.## PENTAGON MECHANICAL WORKS (2564), JIND-SANGRUR ROAD, DIRBA, DISTT. SANGRUR, (PUNJAB), PH: :148035-9876543400.

DORAHA

57.* FATEH MOTORS (2048), G.T. ROAD, DORAHA, (LUDHIANA), PH:141421-9814031784.

FAZILKA

758.## BAHL MOTORS (6229), ABOHAR ROAD, FAZILKA-152 123, , PH :152123-9815700550.

FIROZPUR

759.## SUTLEJ AUTOMOBILES (3568), G.T. ROAD, FEROZEPUR CANTT., PIN-152 001 (PUNJAB), PH:152001-9417009985.

GIDDARBAHA

760.* JIWAN CAR CENTRE (3442), BHATINDA ABOHAR, NATIONAL HIGHWAY, GIDDERBAHA-152 101, DIST. MUKETSAR (PUNJAB), PH.:152101-9779600086.

GOINDWAL SAHIB

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

761.## DASS MOTORS (8941), KAPURTHALA CHOWK, GOINDWAL SAHIB, DISTT. AMRITSAR-143 429, (PUNJAB), PH :143429-9914699121.

GURDASPUR

762.* VIJAY SERVICE STATION (749), NEAR RAILWAY CROSSING, PATHANKOT ROAD, GURDASPUR, (PUNJAB), PH :143521-9814437637.

HOSHIARPUR

763.## JOGINDER MOTORS (2268), BYE PASS TANDA ROAD, HOSHIARPUR-146 001, , PH :146001-9803227000.

JAGRAON

764.## DHALIWAL AUTOMOBILES (2035), NEAR AJANTA PETROL PUMP, G.T. ROAD, JAGRAON DISTT. LUDHIANA, (PUNJAB), PH :142026-9814318600.

JALANDHAR

765.## CITY POINT SERVICE STATION (4528), AVTAR NAGAR ROAD, BEHIND T.V. CENTRE, OPP HOTEL REGENT PARK, JALANDAHR, PH: 144003-9779613576

766.** KAAR KARES (725), G.T.ROAD, JALANDHAR, 144 001 (PUNJAB)., PH :144001-9569295585.

767.* KAPOOR MOTOR GARAGE (1649), OPP. SPORTS COLLEGE, KAPURTHALA ROAD, JALANDHAR CITY, PH:144623-9815040411.

768.* PUNJAB MOTOR GARAGE (1575), HMV CHOWK, NEW GRAIN MARKET ROAD, JALANDHAR CITY-144 008, PH :144008-9814675433.

KAPURTHALA

769.## T.S. WALIA MOTORS (267), MANSOORWAL, JALLANDHAR ROAD, KAPURTHALA, PH :144601-9357211525.

KURALI

770.## VISHWAKARMA MOTORS (3335), CHANDICARH ROPAR ROAD, KURALI, DISTRICT SAS NAGAR (MOHALI), PUNJAB -140103, PH: 140103-9814273873.

LAIRU

771.## VIKAS MOTORS (2777), IOC PETROL PUMP, AMBALA CHANDIGARH ROAD, LALRU DISTT. PATIALA, PUNJAB, PH :140501-9888191444.

LUDHIANA

772.** PUNJAB AUTO CENTRE (6221), OPP
TELEPHONE EXCHANGE, BHARAT NAGAR
CHOWK, LUDHIANA-141 001,
PH :141001-9855117003

773.* REEHAL AUTOMOBILE SERVICES (1176), OPP. JAMALPUR POWER HOUSE, CHANDIGARH ROAD, LUDHIANA-141 010, PH:141015-9357110000.

774.## SATNAM MOTOR WORKSHOP (4533), OPP MILK PLANT, FIROZPUR ROAD, LUDHIANA, PH:141003-9855228591.

775.## STAR AUTOS (4650), JALANDHAR BY PASS, G.T. ROAD, LUDHIANA, PH :141012-9216844220.

776.## VISHAL AUTOMOBILES (1262), G.T. ROAD, DHOLEWAL, LUDHIANA-141 003, PH :141003-9815206060.

MANDI GOBINDGARH

777.## NATIONAL MOTORS (1070), G.T. ROAD, NEAR P & S BANK, MANDI GOBINDGARH-147 301, PH :147301-9317862000

MANSA (PUNJAB)

778.## LOVEKESH ENTERPRISES (2162), NEAR N.M. COLLEGE, MANSA-151 505, (PUNJAB), PH :151505-9216524143.

MOGA

779.* GURU NANAK MOTOR REP.WORK (732), G.T.ROAD, MOGA-142 001 (PUNJAB)., , PH :142001-9914121387.

MOHALI

780.** BENZ AUTO SCAN (5734), E-153, PHASE 7, INDUSTRIAL AREA -MOHALI, DISTRICT-MOHALI, PUNJAB, PH :160055-9876101806.

781.** MOHALI MOTORS (756), C-55 INDUSTRIAL AREA, PHASE-VI, S.A.S. NAGAR, MOHALI-160 055,

PH :160055-9781815959.

SETHI MOTORS (4742), PLOT NO. E-159, INDUSTRIAL AREA, PHASE-7, MOHALI, PUNJAB,

PH :160055-9814307002.

UNIPOINT (5043), PLOT NO,593.,
INDUSTRIAL AREA PHASE-IX.MOHALI.,
DISTRICT - MOHALI, (PUNJAB),
PH :160062-7814402838.

MORINDA

784.## SONY MOTOR PALACE (1077), SIRHIND ROAD, MORINDA-140 101, , PH :140101-9815612477

MUKERIAN

785.* MARSHAL SALES CORPORATION (5251), NEAR RADHA SOAMI SATSANG, PATHANKOT ROAD, MUKERIAN - 144211, DISTRICT HOSHIARPUR, PUNJAB, PH :144211-8238355926.

786.## NEW MODERN AUTOMOBILES (4437), G.T. ROAD, MUKERIAN, PUNJAB, PH:144211-9463292013.

MUKTSAR

787.## MALWA MARUTI CENTRE (4764), OPP GOVT COLLEGE KOTKAPURA ROAD, MUKTSAR, PUNJAB, PH :152026-9814622081.

NAKODAR

788.## MEHTA MOTORS (3531), KHADDAR BHANDAR ROAD, NAKODAR-144040, PH :144040-9815600082.

PATIALA

789.** PARAS MOTORS (4778), PLOT NO. 25-A, NEAR HOTEL FLYOVER FACTORY AREA, PATIALA-147001, PUNJAB, PH :147001-9814089861

790.## RAJINDRA MOTORS (8924), C-177, INDUSTRIAL FOCAL POINT, PATIALA, PUNJAB, PH:147003-9316200335.

PATTI

791.## ANU AUTOMOBILE (2747), AMRITSAR ROAD, NEAR RADHA SWAMI SATSANG, PATTI DISTT. AMRITSAR, (PUNJAB), PH:143416-8575210003.

PHAGWARA

792.## SWAMI MOTORS (3774), (PAMMI W/SHOP), OPP. B.N. DUGGAL PETROL PUMP, G.T. ROAD, PHAGWARA DIST. KAPURTHALA, PH.:144401-9815107989.

OADIAN

793.## HI-TECH AUTOMOBILES (4945), VILL NATHPUR BATALA ROAD, QADIAN-143516, DISTRICT-GURDASPUR, PUNJAB, PH :143516-9877510294.

RAIKOT

794.## RANA SUPREME MOTOR GARAGE (9732), NEAR GURUDWARA TAHLIANA SAHIB, BARNALA BYE PASS ROAD, RAIKOT, DISTT. LUDHIANA (PUNJAB), PH : 141109-98142685791.

RAJPURA

795.## NOOR MOTORS (3045), PATIALA ROAD, RAJPURA-140 401, (PUNJAB), PH :140401-9814507867.

RAMPURAPHUL

796.## BALAJI AUTOMOBILES (4443), BARNALA ROAD, RAMPURA PHUL-151103, DISTT BHATINDA, PUNJAB, PH :151103-9417172671

797.## VIRDI MOTOR GARAGE (3046), BARNALA ROAD, RAMPURAPHUL-151 103, DISTT. BATHINDA, (PUNJAB), PH:151103-9872874175.

SAMANA

CITY MOTORS (1867), P.B.NO.11, MAIN ROAD, SAMANA-147 101, DISTT. PATIALA (PUNJAB), PH :147101-9814221981.

SANGRUR

799.** RAKESH MARUTI SERVICE (6325), JIND -DELHI ROAD, NEAR E.S.I. DISPENSARY, SANGRUR-148 001, PH :148001-9815103944

800.## SANGRUR MARUTI CENTRE (1632), PATIALA ROAD, OPP. MILITARY CAMPUS, SANGRUR-148 001, (PUNJAB), PH:148001-9417510111.

SIRHIND

801.## BADRI DHAM CAR SERVICE (1062), G.T.
ROAD, SIRHIND-140 406,
PH :140406-81467 11946.

802.## MALHOTRA MOTORS (4657), OPP. INCOME

TAX OFFICE, SIRHIND, DISTT FATEHGARH SAHIB, PUNJAB, PH :140406-9815844008.

SULTANPUR LODHI

803.## HANDA MOTORS (2776), TALWANDI ROAD, SULTANPUR LODHI, DISTT. KAPURTHALA, (PUNJAB), PH:144626-9815623392.

SUNAM

804.## SUNAM AUTOMOBILES (3924), PATIALA ROAD, NEAR OCTROI POST, SUNAM, DISTT. SANGRUR, PH:148028-9417076315.

TANDA

805.## MALWA AUTO CARE CENTRE (2073), G.T. ROAD BY-PASS, TANDA, DISTT. HOSHIARPUR, (PUNJAB), PH:144204-9814392103.

ZIRA

806.## NEW AUTOMOBILES (5477), NEAR BYE PASS, FEROZPUR ROAD, ZIRA, TEHSIL ZIRA, DIST. FEROZPUR, PUNJAB - 142047., PH :142047-9463240231.

RAJASTHAN

ABU ROAD

ADO NOAL

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

807.## UNIQUE MOTORS (4923), MOUNT ROAD, AKRABHATTA, ABU ROAD-307 510, (RAJASTHAN). PH:307510-9929177781.

AJMER

808.## ASHOK AUTOMOBILES (1121), BYEPASS ROAD, PARVATPURA, IND.AREA, AJMER (RAJASTHAN). PH

:305002-0145-2695233/0145-2695076/9829087

ALWAR

809.## POOJA MOTORS (5439), POOJA MOTORS.NEAR AMARNATH PETROL PUMP, DELHI ROAD, MUNGSKA - ALWAR, DISTRICT - ALWAR , RAJASTHAN,

:301001-9414640279/0144-2700921/0144-2371

810.## VERTEX AUTOMOBILES PVT. LTD. (1944). CHANDUKA BHAWAN, SWARG ROAD, ALWAR-301 001, :301001-0144-2335733/0144-2342117/9828233

200

BARMER

VEW SERVICE (1238), S-181 & 182, RIICO, BARMER-344 001, (RAJASTHAN), PH:344001-9460158584/02982-223329.

BASSI

812.## VARDHANI MOTORS (5358), NEAR NALAYA BASSI, DISTRICT - JAIPUR , RAJASTHAN, PH:303301-9950107203.

BEHROR

813.## K.L. INTERNATIONAL AUTOMOBILES (1763). DELHI JAIPUR HIGHWAY, VILLAGE DHAMI, P.O. KANKARDOPA, TEHSIL BEHROR DIST. ALWAR (RAJASTHAN). PH:301701-01492-221396/9414014603.

BHARATPUR

814.** CLASSIC MOTORS (2348), DEEG ROAD. KUMHER GATE, BHARATPUR-321 001, (RAJASTHAN). PH:321001-9414026545.

BHILWARA

815.## NATIONAL SERVICE CENTER (4761). SANGANER COLONY, KOTA ROAD. BHILWARA-311001, RAJASTHAN, PH:311001-9829120285.

QUICK SERVICES (3473), SABUN MARG, PURAN DAS JI KI BAGICHEE, BHILWARA-311

PH:311001-01482-223456/9414144046.

BHINIMAL

817.## GURJAR MOTORS (5567), RAMSIN ROAD, OPP PRADEEP PETROL PUMP, BHINMAL, DISTRICT - JALOR, RAJASTHAN, PH:343029-9414374962.

BHIWADI

818 ## WHEEL-O-CITY (4246), F-7D (A) PHASE-1. NEAR RIICO CHOWK, BHIWADI, RAJASTHAN,

:301019-01493-225555/01493-290962/9887099

BIKANER

819.## GENERAL AUTOMOBILES (1123), RANI BAZAR, RAIWAY CROSSING, BIKANER (RAJASTHAN), PH

> :334001-0151-2200338/0151-2549072/9413389 VISHI MOTORS (5559), PLOT NO 55(A) .I.A.

RANI BAZAR-BIKANER, DISTRICT -BIKANER RAJASTHAN PH:334001-98290-27128

BUNDI

821.## SHRI JI MOTORS (2174), OPP, KUMBHA STADIUM, KHOJA GATE, BUNDI, (RAJASTHAN), PH:323001-9990270676

CHOMU

822.## SHREE LAXMI MOTORS (3072), MORIJA ROAD, CHOMU, JAIPUR-303702. (RAJASTHAN). PH:303702-9828160281

CHURU

823.* ABS MOTORS (2978), JAIPUR ROAD, CHURU-331 001, (RAJASTHAN), :331001-01562-252333/01562-257333/9667672

DAUSA

824.## BALAJI MOTORS (4564), NEW MANDI ROAD. NEAR TRANSFORMER, DAUSA-303303. PH:303303-9414273443/9828169601.

DHAULPUR

NARAYAN MOTORS (3345), G.T. ROAD, DHOLPUR, (RAJASTHAN),

PH:328001-05642240011/9414027335. 826 ## NARSING SERVICE CENTRE (3074) NEAR JAGDISH TALKIES, BARI ROAD. DHOLPUR-328 001, (RAJASTHAN), PH:328001-9414026820.

DIDWANA

827.## SANTOSH AUTOMOBILES (5450), SANTOSH ATUOMOBILES .KUCHAMAN ROAD DIDWANA . DISTRICT - NAGAUR . (RAJASTHAN) PH:341303-9828833363.

DUDU

828.## NEETA AUTOMOBILE (4855), C/O NEW JAIN GUEST HOUSE, NH-8, JAIPUR AJMER ROAD. DUDU, RAJASTHAN, PH:303008-9667031098.

JAIPUR

829.## A 1 MOTORS (4856), D-28 MALVIYA NAGAR., INDUSTRIAL AREA JAIPUR., DISTRICT -JAIPUR . RAJASTHAN. PH:302017-9414047628

AMGI AUTOMOBILES (1938), AIRPORT CIRCLE, KOTA ROAD, JAIPUR-302 011. PH:302011-9828012009.

831.## AUTONITY JAIPUR (4852), GOPALPURA BYPASS, DELHI KISHANGARH, HIGHWAY JAIPUR, DISTRICT - JAIPUR - 302019, RAJASTHAN,

PH:302019-9784377503. AUTONITY VKIA (8927), PLOT NO.6, GIRDHAR COLONY, SIKAR ROAD. JAIPUR-302 013.

:302013-0141-2232790/0141-3293308/9314505

833.## J.K. AUTOMOBILES (2058), 38 SUSHILPURA, AJMER ROAD, JAIPUR-302 007, PH:302007-7976448538/0141-2810500.

JAI SHRI RAM AUTO SERVICE CENTRE (1140). OPP. SHYAM NAGAR TURN, MAIN AJMER ROAD, SODALA JAIPUR. RAJASTHAN,

:302019-0141-2221241/9829853330/958746444

835.## KATARIA MOTORS (2577), 9-A NEMINAGAR VISTAR . AMRAPALI MARG. VAISHALI NAGAR, JAIPUR -302021.

:302021-9672444000/9414468024/0141-235213

836 ## KRISHNA AUTOMOBILES (5363), B-27 SUNDAR NAGAR .MANSAROVAR . JAIPUR. DISTRICT - JAIPUR, RAJASTHAN, PH:302020-9829968075

837.## LAXMI MOTORS (2576), OPP METRO PILLAR NO 34, GANGA JAMUNA CROSSING, NIRMAN NAGAR, JAIPUR, RAJASTHAN -302019

PH:302019-9351551181.

838.* M. R. MOTORS (8933), PLOT NO. 120-121 & 125-126, VANE VIHAR, 200FT BYE PASS. JHOTWARA, JAIPUR (RAJASTHAN). PH:302012-9314881528/0141-2340196. RIGHTWAYS CO. (1131), KISHANPOLE BAZAR, JAIPUR. .

:302002-0141-2372436/0141-4022436/9799220

SAISHA MOTORS (1764), MAIN SHIPRA PATH, OPP, SECTOR 93, AGARWAL FARM, MANSAROVAR, JAIPUR-302 020. PH:302020-0141-2399196/9414454820. SERVICE CENTRE (1139), OPP. TOURIST

HOTEL, M.I. ROAD, JAIPUR-1. PH:302001-9351551181.

SHARP MOTORS (2032), J-3 HIMMAT NAGAR, MAIN TONK ROAD, GOPAL PURA CIRCLE, JAIPUR-302 004,

:302004-0141-2705493/0141-2211386/9314877 843.## SUPREME MOTORS (1130), A-25 ASSAM

MANSION, TRANSPORT NAGAR, JAIPUR-302 PH:302003-7737279332.

844.## TOSHNIWAL AUTOMOBILES (3475), 131 SHRI GOPAL NGAR, GOPALPURA BYEPASS, JAIPUR. (RAJASTHAN). PH:302015-9887553836.

JAISALMER

845.## R.R. AUTOMOBILES (1473), OPP, GEETA ASHRAM, JAISALMER-345 001. (RAJASTHAN). PH:345001-8619638276.

JHUNJHUNU

846 ## VISHWAKARMA AUTOMOBILES (3071), HPC DEALER, RANI SATHI ROAD. JHUNJHUNU-333 001. (RAJASTHAN). PH:333001-9461058839.

JHUNJHUNUN

847.## DADHIMATI MOTORS (1648), OPPOSITE RSEB OFFICE, BAGAR ROAD, JHUNJHUNU, (RAJASTHAN). PH:333001-9587007122.

JODHPUR

848.## DEORA MOTORS (5353), UPPER UNDER BRIDGE .PAOTA 'C' ROAD, JODHPUR, DISTRICT - JODHPUR, RAJASTHAN, PH:342006-9829026069.

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

849.* P.D. MOTORS (3340), NATIONAL HIGHWAY NO. 62, NEW PALI ROAD, NEAR JHALAMAND CIRLCE, JODHPUR, RAJASTHAN - 342005., PH

:342005-0291-2724485/0291-2722495/9928974

KALWAR

850.## ROLANIYA MOTORS (5554), KALWAR MAIN TIRHIA, NEAR KHARBAS, NEAR PETROL PUMP, JHOTWARA ROAD, DISTRICT -KALWAR, RAJASTHAN, PH:303706-9983111634.

KISHANGARH

851.## RADHA SWAMI AUTOMOBILES (440), NEAR AJMER ROAD - BUS STAND

> , KISHANGARH., DISTRICT AJMER, RAJASTHAN , PH:305801-9252059798.

KOTA

852.## FRIENDS AUTOMOBILES (3679), KOTA BUNDI ROAD, NH 12, OPP. HOTEL MENAL RESIDENCY, KOTA, PH :323021-9829529479.

KOTPUTLI

853.## VIKAS MARUTI SERVICE CENTRE (4970), NH-8, NEAR MEENA GAS AGENCY GODOWN, KOTPUTLI - 303108, RAJASTHAN, PH :303108-9929383045.

KUCHAMAN

854.## DALUKA AUTO SALES (4565), NEARBY SHARDA PALACE HOTEL., KUCHAMAN BYE PASS, KUCHAMAN CITY, 341508, PH :341508-9414433240.

MAKRANA

855.## GEHLOT MOTORS (454), OPPOSITE TO G.S.S, MANGLANA ROAD, MAKRANA, RAJASTHAN, PH :341505-9829024687.

MERTA

856.## DELUX CAR SERVICE CENTRE (3856), KUCHERY ROAD, MERTA CITY, DISTT. NAGAUR, PH :341510-9414004543.

NAGAUR

857.* CLASSIC AUTOMOBILES (1179), DIDWANA ROAD, (DELHI GATE), NAGAUR-341 001, (RAJASTHAN), PH :341001-9672501234.

NEWAI

858.## HEENA MOTORS (5568), NEWAI BYEPASS ,NEAR JHILAY MOAD, NEWAI, DISTRICT -TONK, RAJASTHAN, PH :304021-9414228066.

PILANI

859.## MARUTI CARE CENTRE (3073), RAJGARH ROAD, SHANTI NAGAR, PILANI DISTT. JHUNJHUNU, RAJASTHAN-333 031, PH :333031-01596-297021.

PILANI (JHUNJHUNU DIST)

860.## MARUTI CARE CENTRE (3073)PH :-.

PINDWARA

861.## RUNEJA MOTORS (5758), NH 14,0PP PATNAIK MIDWAYA , PINDWARA-307022, DISTRICT-SIROHI, RAJASTHAN, PH :307022-9610451492.

RAJSAMAND

862.## VIPUL AUTOMOBILES (2170), NH -8, BHAGWANDA, , BEHIND GOVT. PRIMARY SCHOOL, , RAJSAMAND, RAJASTHAN, PH :313333-02952-294420, 9929177781.

RAWATBHATA

863.## APNA MARUTI GARAGE (5940), OPP. RAM TEKRI MANDIR,PRATAP MARKET, MAIN ROAD,RAWATBHATA-323305, DISTRICT-CHITTORGARH, RAJASTHAN, PH:323305-9413504447/9413356634.

SIKAR

RAJ AUTOMOBILES (5534), SUSHIL TRADING CO. STATION ROAD, SIKAR, DISTRICT - SIKAR, RAJASTHAN, PH :332001-01572-240721/01572-240722/9414039 783

SRI MADHOPUR

865.## BHARAT MOTORS (5757), WARD NO 4,BYE PASS ROAD, SRI MADHOPUR-332715, DISTRICT- TONK, (RAJASTHAN), PH :332715-9251377020.

SRIGANGANAGAR

866.## ROHIT UDYOG (1132), 75 K-BLOCK, SRIGANGANAGAR,, PH :335001-9414093565/0154-2474823.

SUJANGARH

867.## SHRI CHARBHUJA MARUTI (4924), LANDU ROAD, SUJANGARH, DISTRICT-CHURU, RAJASTHAN, PH :331507-9828118827.

SURATGARH

868.## ROHIN SERVICE STATION (2646), N.H.15 BIKANER ROAD, OPP. G.S.S. POWER HOUSE, SURATGARH-335 804, (RAJASTHAN), PH :335804-01509-222514/9413377914.

TIJARA

869.## M D MOTORS (5875), ALWAR ROAD,NEAR BOLLYWOOD FARM, TIJARA-, DISTRICT-ALWAR, RAJASTHAN, PH :301411-9351607080.

TONK

870.## SUMIT MARUTI (4566), G 1 – 103, RIICO INDUSTRIAL AREA, JAIPUR ROAD, TONK-304001, RAJASTHAN, PH :304001-9214494900

UDAIPUR (RAJASTHAN)

871.** ALOK AUTOMOBILES PVT. LTD. (1977), B.N.
COLLEGE PREMISES, OPP. DALAL PETROL
PUMP, SEVASHRAM ROAD, UDAIPUR,
PH. 313001-9414166305.
872.** SHREE SAI CAR CARE (2376), PUNJAWATI,

872.** SHREE SAI CAR CARE (2376), PUNJAWA PULLA, UDAIPUR-313 001, PH:313001-0294-3299901/9414166770.

TAMIL NADU

AMBUR

873.## MARUTHI MOTORS (2864), 10-C M.C. ROAD, AMBUR-635 802, (TAMIL NADU), PH:635802-04174-244880/9443637645.

ARAVAKURICHI

874.## GOWRI MARUTI (5570), OPPOSITE IOCL PETROL PUMP,NH-7, ARAVAKURICHI, DISTRICT - KARUR, TAMILNADU, PH :639201-9994818043.

ARCOT

875.## HARI AGENCIES (468), #27, ANNA SALAI, ARCOT , TAMIL NADU -632503, PH :632503-4172-234050/9442225070.

ATTUR

876.## GANESAA MOTORS (4538), 1/1-D ARANGA BALA NAGAR, SALEM CUDDLORE MAIN ROAD, NARASINGARAM, ATTUR-636108 (TAMIL NADU), PH :636108-9443273866.

AVINASHI

877.## K.P.K AUTOMOTIVE (5547), SF NO.460/2,TIRUPPUR MAIN ROAD, AVINASHILINGAMALAYAM,AVINASHI-641654, DISTRICT-COIMBATORE, TAMILNADU, PH :641654-9443301732.

BHAVANI

878.## CAR ZONE AUTO SERVICE (5332), METTUR MAIN ROAD , NATARAJAPURAM BHAVANI, DISTRICT - ERODE , TAMILNADU, PH :638301-9842085670.

CHENGLEPUT

879.## AMMA AUTOMOBILES (2941), 57-A/1 THIRUKAZHUKUNDRAM ROAD, CHENGALPATTU-603 002, (T.N.), PH :603002-44-27421059/8012518012/7373038042

CHENNAI

880.## ABIRAMI MOTORS (5131), 6.ANNA NEDUMATHAI, CHOOLABEDU, CHENNAI-600094, TAMILNADU, PH :600094-9840017558.

881.## AUTO TECH (3445), NO.6 G.S.T. ROAD, KAMATCHI COLONY, SANATORIM, CHENNAI-600 040, PH :600047-9941019455.

32.* EASVARI MOTORS PRIVATE LIMITED (1431), W-110 ANNA NAGAR, CHENNAI-600 040, , PH:600010-9840855655.

883.## KARS KARE SERVICE CENTRE (2579), 648
T.H. ROAD, TONDIARPET, CHENNAI-600 081,
PH:600081-9841097259.

384.** MARUTI NEEDS (2531), NO.2 PARK ROAD, PADI, CHENNAI-600 050, PH:600050-9940099500.

85.** NSK MARUTI (4975), 2/247, AST COAST ROAD, NLANKARAI, CHNNAI-600041, TAMIL NADU,

PH :800115-9841047232.

866.* O.M.S. MOTORS (P) LTD. (2140), NO.27
VELACHERRY MAIN ROAD, RAM NAGAR
NORTH, MADIPAKKAM, CHENNAI-600 091
(TAMIL NADU),
PH :600091-9444081390.

187.* P.A. SERVICE STATION (2346), NO. 1 GOVINDARAJ ALUMEL AMMAL NAGAR, NEAR 100 FEET RODD, AGRAHARAM, KORATTUR, CHENNAI-600 076, PH :600076-9840378025.

888.** SWAMY AUTOMOBILES (456), 23 CASA MAJOR ROAD, EGMORE, CHENNAI-600 008, PH:600008-9840891916.

889.* VAISHALI MOTORS (4529), 4/577 RAJIV STREET, OLD MAHABALIPURAM ROAD, KOTTIVAKAM, CHENNAI-600041, PH :600041-9840138888.

890.* WHEELS AUTO (469), 40 KASTURIBA NAGAR, 1ST CROSS ROAD, ADYAR, CHENNAI-600 020, PH :600020-9840138888.

CHIDAMBARAM

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

891.## HI-TECH MARUTI (3231), NO.45,SITHIVEL NAGAR, SALIYANTHOPPU, BYE PASS ROAD,CHIDAMBARAM-608001, DISTRICT-CUDDALORE, TAMILNADU, PH: 608001-9585533671.

COIMBATORE

892.## GURU AUTO GARAGE (4965), 2/98, IRUGUR ROAD, NEAR BSNL OFFICE, CHINNAMPALAYAM, COMBATOR-600014, TAMIL NADU, PH :641062-9843256247.

893.## LOTIOS AUTOMOBILES (4758), 1647-A AVINASHI ROAD, HOPE COLLEGE, PEELAMEDU, COIMBATORE-641004 (TAMILNADU), PH :641004-9842265133.

394.* SOUTH INDIA MOTORS (MARUTI) (4752), 9A/3 AVINASHI ROAD, NEAR KMCH POLICE CHECK POST, CIVIL AERODROME POST, SITRA, COIMBATORE-641014 (TAMIL NADU), PH: 641014-9843027601.

COONOOR

895.## SHANTHI AUTO CARE (6054), FIGURE OF 8 ROAD, COONOOR-643101, NILGRIS, (TAMIL NADU), PH :643101-9443273888.

CUDDALORE

896.## SUNTAR AUTOS (2134), KTR BUILDINGS, CHIDAMBARAM ROAD, CUDDALORE-607 002, PH :607002-9842345690.

CUMBUM

897.## SRI BALAJI MOTOR WORKS (3139), 221-A 1/3 THENI ROAD, NEAR REGULATED MARKET, UTHAMAPURAM, CUMBUM-625 516, PH :625516-9994169309.

DINDIGUL

898.* MAGNUM MOTORS (1241), MEENACHINAICKEN PATTY, NH-7 BYE-PASS ROAD, DINDIGUL-624 002, (TAMIL NADU), PH: 624002-9842231340.

ERODE

899.** SRI KRISHNA AUTOMOBILE ENTERPRISES (2320), 560 CAUVERY ROAD, ERODE - 638003, ,

PH: 638003-9842721805.

O.** SRI SAKTHI CARE (8937), 13, NGGO COLONY MAIN STREET, ERODE, TAMILNADU, 638009, PH: 695011-9597726311.

GADALUR

901.## GREENWAY MARUTI SERVICE CENTER (5471), KALAMPUZHA,D.O. NO 12/59-3, GUDALUR, DISTRICT - NILGIRLS, TAMILNADU, PH :643212-9443603815.

GOBICHETTIPALAYAM

902.## HI-TEC AUTO GARAGE (2426), 426,ASIRIYAR NAGAR, KULLAMPALAYAM POST, ERODE MAIN ROAD, GOBICHETTYPALAYAM-638 476, PH: 638476-9842447725.

HOSUR

903.## AUTO SCAN (2070), 58-B BANGALORE ROAD, HOSUR-635 109, (TAMIL NADU), PH :635109-8122904091.

904.** BALAJI MOTORS (5136), PLOT NO.11 MARUTHI NAGAR, NEAR T.V.S. AGENCIES(T V S SHOWROOM), KRISHNAGARI MAIN ROAD-HOSUR, TAMILINADU, PH :635109-9842755402.

905.## SRI VINAYAKA MOTORS (3848), 5/2C/1 (OPP TAMIL NADU HOTEL), BYE PASS ROAD, HOSUR, PH :635109-9443245096.

KALPAKKAM

906.## MARUTI MOTORS (4253), SURVEY 309/5-A, PUDUPATTINAM VILLAGE PANCHAYAT, THIRUKALUKUNDRAM TALUKA, KANCHEEPURAM, KALPAKKAM-603102, PH :603102-9443366535.

KANCHEEPURAM

907.* SVS MARUTI SERVICE CENTRE (5466), NO1 MILITARY ROAD, SEVILIMEDU, OPP BRINDAVANAM NAGAR, KANCHIPURAM, TAMILNADU 631501, PH:631501-994332290 / 9043032290

KANGAYAM

908.## SRI ARUN CAR CARE (3949), COIMBATORE ROAD, NEAR IBP PETROL BUNK, KANGAYAM - 638701, PH :638701-9443329526.

KARAIKUDI

909.## SURABI MOTORS (2340), NO.11 TRICHY MAIN ROAD, (NEAR RAILWAY CROSS), SRIRAM NAGAR, KOTAIYUR, KARAIKUDI-630 001, PH :630106-9443351484.

KARUMATHAMPATTY

910.## SIVAN MOTORS (3832), OPP IBP NH47, NEAR KONGU VELLALAR SCHOOL, KARUMATHAMATTY, PH :641659-9842231819.

KARUR

911.** SRI SAKTHI AUTO CARE (2532), 3/291 COVAI ROAD, VADIVEL NAGAR L.N.S. POST, KARUR-639 002, (TAMIL NADU), PH :638009-9842426585.

KOVILPATTI

912.## CLASSIC AUTOMOBILES (6037), 3/531 – B, TIRUNELVELI TO MADURAI BYPASS ROAD, NH-7, INAM MANIYACHI, KOVILPATTI, TAMIL NADU– 628502., PH:628502-9442552000.

KRISHNAGIRI

913.## THIRUTHANIGAI MOTORS (2427), SALEM-CHENNAI BYE PASS ROAD, KRISHNAGIRI-635 001, (TAMILNADU), PH:635001-9842129890.

KUMBAKONAM

914.## SRI SAKTHI MOTORS (4330), #7/228, PULIYAMPETTTAI, MAYILADUTHURAI MAIN ROAD, KUMBAKONAM, TAMILNADU -612103, PH :612103-9443131513.

MADURAI

915.## FRIENDLY MOTORS (3141), 32 PALAM STATION ROAD, NEAR LIC BUS STOP, SELLUR, MADURAI-625 002, PH: 625002-9842714047.

916.## SHALOM MOTORS (4629), THENI MAIN ROAD, ACHAMPATHU, NEAR BHARAT PETROLEUM, MADURAI-625019, PH:625019-8754033244.

MADURANTHAKAM

917.## MARUTHI MOTORS (6036), NO.33,G.S.T. ROAD,KARUNGUZHI, MADURANTHAKAM-603303, DISTRICT-KANCHIPURAM, TAMILNADU, PH :603303-9443354073

MAYILADUTHURAI

918.## R.M.S. MARUTI AUTO (2237), 53/54 MAHADHANA STREET, MAYILADUTHURAI-609 001, (TAMIL NADU), PH :609001.9842922885

NAGAPATTINAM

919.* MARUTI-TECH (1671), PUTHUR ROUNDANA E C R ROAD, NAGAPATTINAM, , PH:611001-9842653718.

NAGERCOIL

.* SRI GANAPATHI MOTORS (1629), NO.12 JAWAHAR STREET, R.V. PURAM, NAGERCOIL-629 001, PH :629001-9345322333.

NAMAKKAL

921.## ARUNA MOTORS (1461), MARUTI SERVICE CENTRE, OPP. N.S.R. BUILDING, SALEM MAIN ROAD, NAMAKKAL-637 001, PH :637001-9842775761.

PALLADAM

922.## CHENDU MOTORS (4333), KALIVELAMPATTI PIRIVU, TRICHY ROAD, PALLADAM-641662, COIMBATORE DIST, PH:641662-9842225058.

PALLAVARAM

 VBK MOTORS (4463), OLD NO. 99, NEW NO. 91, G.S.T ROAD, ALVITONE ESTATE, (BEHIND LAKSHMI THEATRE), PALLAVARAM, CHENNAI-600043, PH: 600043-9841425030.

PARAMAKUDI

924.## SIVA AUTOMOBILES (4542), NEAR SRIKUMARA SUBRAMANIYA SWAMY TEMPLE, OPP FIRE STATION, MADURAI RAMESWARAM ROAD, PARAMAKUDI-623707 RAMNAD DIST, PH 4623707-9388405305

PARAMATHIVELUR

925.## RADHA CAR CARE (5828), NO 96/1, BYE PASS ROAD, VETTUKATTU PUDAR, PIRIVUR ROAD, PARAMATHIVELUR-638182, DISTRICT-NAMAKKAL, TAMILNADU, PH 638182-860890140

PERUNDURAI

926.## PRIYAM AUTOMOBILES (3036), 139 KOVAI MAIN ROAD, PERUNDURAI-638 052, (TAMIL NADU), PH :638052-909509999 - 9842701371.

POLACHI

77.* J D & COMPANY (6055), COIMBATORE ROAD, POLLACHI-642 002, , PH :642002-9443565785.

RAJAPALYAM

928.## RAJA MOTORS (4128), 52/ A, SRI
JANAKIRAM MILLS ROAD, SRIVILLIPUTTUR
MAIN ROAD, RAJAPALAYAM,
VIRUDHUNAGAR- 620117,
PH :826117-7094597178.

RASIPURAM

929.## ROYAL AUTO CARS (4052), 5/120 NH-7, SALEM MAIN ROAD, NEAR TSTC DEPOT, MUTHUKALIPATTI POST, RASIPURAM TALUK, NAMAKKAL DISTRICT-637408, PH:637401-9443230339.

RED HILLS

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

930.## UNIQUE CAR CARE (5888), NO.54, FIRST STREET, MANIKANDAPURAM, MTH HIGH ROAD, THIRUMULLAIVOYAL, CHENNAI, TAMILNADU - 600062; PH: 800062-9500056658/9841059295.

SALEM

931.## MEENATCHI AUTO (2940), 57
KALARAMPATTY MAIN ROAD, (NEAR DEVI
THEATRE), SALEM-638 015, (T.N.),
PH. 638015-9443201001/ 9976601001.

332.** NATSUN MOTORS (6029), NO.220,BANGALORE BYE PASS ROAD (NH-7), KODALAMPATY, SALEM-636010, DISTRICT-SALEM, TAMILNADU, PH:636005-9842704499.

SANKAGIRI

933.## TECH ZONE AUTO SERVICE (2640), 10/78 BHAVANI MAIN ROAD, (NEAR ERODE PIRIVU), SANKAGIRI SALEM DISTT., PIN-637 303,

PH:637303-9942444753/9842651158.

SANKARANKOIL

934.## RAJA MOTORS (4555), RALAPALAYAM ROAD, OPPOSITE TO LIC BUILDING, SANKARANKOIL-627756, PH :627756-9994409363.

TENKASI

935.## CARE ZONE (3766), 5/164(1) KUTHUKKAL VALASAI, MADURAI ROAD, TENKASI-627 811, (TAMIL NADU), PH :627811-9842133134.

THANJAVUR

936.## R K P MOTORS (5238), 121/7.THANJAVUR KUMBAKONAM, HIGHWAY PALLIAGRAHARAM, THANJAVUR, TAMILNADU, PH:613003-9751125555 / 9563525555.

THENI

937.## SATHURAGIRI MOTOR WORKS (1650), 3-1-31 TO 36, CUMBUM ROAD, THENI-625 531, (TAMIL NADU), PH :625531-9047033678.

TIRUNEI VELI

938.## FRIENDS INDIA AUTO CLINIC (5030), NO.16 D.BYE PASS ROAD, VANNARAPETAI, TIRUNELVELI 627003, TAMILNADU, PH: 627003-9786606111.

TIRUPUR

939.** LAKSHMI MOTORZ (2461), 4/146 PALLADAM ROAD, OPP. LAKSHMI KALYANA MANDAPAM, TIRUPUR-641 604, (T.N.), PH :641605-9842377959.

TRICHY

940.* VYTHES MOBILE PARK (443), 8/6 TANJORE ROAD, THIRUCHIRAPALLI-620 008, , PH :620008-6383353727.

UDAMALAPET

941.* S.R.K. MOTORS (1456), C-109 GANDHI NAGAR, UDAMALAPET-642 154, COIMBATORE (DT.), (TAMIL NADU), PH :642126-9843011520.

VELLORE

 MARUTI AUTO SERVICE (2844), 106 (OLD NO.: 78), KATPADI ROAD, GANDHI NAGAR, VELLORE-632 006 (T.N.), PH:632006-9843093422.

VILLUPURAM

943.## RAGAVENDRA MOTORS (2361), 2/3 MADRAS TRUNK ROAD, VILLUPURAM-605 602, (TAMIL NADU),

PH:605602-9244555860.

VRIDDHACHALAM

944.## VISHWA MARUTI CARE CENTER (8934), NO412.PERIYAR NAGAR (NEAR FIRE SERVICE S, STATION)VRIDDHACHALAM-606001 , DISTRICT - CUDDALORE , (TAMILNADU), PH :60001-9842246092.

TELANGANA

ADILABAD

945.## MAHA LAXMI AUTOMOTIVES (2240), NH# 7 OPP. H.P. PETROL BUNK, TIRUPALLY, ADILABAD-504 001, (A.P.), PH :504 001-9000345313.

BHADRACHALAM

946.## SRI VENKATARAMANA AUTO CARE (2831).
MARUTI SERVICE STATION, OPP. COLLEGE
GROUNDS, GOLLAGATTA ROAD,
BHADRACHALAM-507 111 (A.P.),
PH :507111-9290792269.

GAJWEL

947.## VIJAY MOTORS (4864), HYDERAAD ROAD, STATE HIGH WAY FROM HYDERABAD, TO KARIMNAGAR, PREGHAPUR - GAJWL, ANDHRA PRADESH, PH :502278-9849883655.

HYDERABAD

948.## ARYAN MOTORS (3264), D.NO.17-1-382/K/5 & 6, CHAMPAPET SAIDABAD, SAGAR ROAD, HYDERABAD, PH: 500059-9246155464.

949.## COSMO AUTO CLINIC PVT. LTD. (1045), PLOT NO 1, RD NO 5, CHANDRAPURI COLONY, LB NAGAR, HYDERABAD - 500074, PH:500074-9246272733/9849015667.

950.## PISTONS & SPANNERS (2766), 2-3-37 MAHARANA PRATAP FUNCTION HALL, AMBERPET, HYDERABAD-500 013, PH :500 013-9990649504.

951.## SERWELL AUTOMOBILES (5234), PLOT NO 202.203.ADITYA NAGAR. OPP, JNTU .KUKA TPALLY.HYDERABAD, ANDHRA PRADESH, PH :500085-9490105147.

JAGTIAL

952.## PARAMESHWARA MOTORS (3851), OPP P R
OFFICE, DHAROOR CAMP, JAGTIAL 505327,
DT. KARIMNAGAR (A.P.),
PH: 505455-9912664659.

KARIMNAGAR

953.## MYTRI MOTORS (5152), 8-6 188.KOTHI RAMPUR, KARIMNAGAR, DISTRICT -KARIMNAGAR , ANDHRA PRADESH, PH :505001-9441475357.

54.** PUSHPAK MOTORS (1032), KOTHI RAMPUR, HYDERABAD ROAD, KARIMNAGAR - 505 001 (A.P), PH :505001-9849489431.

KHAMMAM

955.## EXCEL AUTO CARE (1043), RAPARTHI NAGAR, BYPASS ROAD, KHAMMAM -507001, ,

PH:507001-9848156363.

KODAD

956.## SAI KAKATIYA SERVICE STATION (4664), SURYAPETA ROAD, OPPOSITE LORRY ASSOCIATION BUILDING, KODAD-508206, DISTRICT-NALGONDA (ANDHRA PRADESH), PH :508206-984057813.

MAHABUB NAGAR

957.## SRI AYYAPPA MARUTI CLINIC (3941), OPP HOSPITAL, HYDERABAD ROAD, YEMUGONDA, MAHABUB NAGAR (ANDHRA PRADESH), PH :509002-9440569259.

MANCHERIAL

958.## PARVATI MOTORS (4129), 4-53 BPL ROAD, MANCHERIAL, DISTRICT ADILABAD, ANDHRA PRADESH, PH :504208-9885554888.

MIRYALGUDA

959.## GANESH MOTORS (4536), D.NO. 6-366, P.V. COMPLEX, NALGONDA ROAD, MIRYALGUDA, NALGONDA DISTT (ANDHRA PRADESH), PH :508207-9393900666.

NALGONDA

960.## SRIRAM AUTHORISED SERVICE STATION (4627), HYDERABAD ROAD, OPP. SUB STATION, NALGONDA, ANDHRA PRADESH, PH. 508001-9848378133.

NIZAMABAD

961.## PRIYA SERVICING (1771), C/O TIRUMALA CHITRA MANDIR, HOUSE NO 1-9-833, PHULANG ROAD, NIZAMABAD-503 003 (A.P.), PH: 503 003-9948034523.

RAMAGUNDAM

962.## ALI AUTOMOBILES (2849), NEAR TV RELAY STATION, NTPC JYOTHINAGAR, RAMAGUNDAM-505 215, DISTT. KARIMNAGAR (AP), PH:505208-9848219102.

SECUNDERABAD

963.## ANNAPURNA MOTORS (2947), # 6-3-23/5
JAYANAGAR COLONY, NEAR MEKALMANDI,
NEW BHOIGUDA, SECUNDERABAD-500 080,
PH :500 080-9849061136.

SIRSILLA

964.## SATHVIKA MOTORS (5649), KARIMNAGAR ROAD,OPP HP PETROL PUMP, SIRSILLA-505301, DISTRICT - KARIMNAGAR, ANDHRA PRADESH, PH :505301-940284726.

SURYAPET

965.## SAI GLOBAL AUTO SERVICES (4550), OPP. AYYAPPA SWAMY TEMPLE, BY PASS ROAD, NH-9, SURYAPET-508213, ANDHRA PRADESH, PH :508213-9848076108.

WANAPARTHY

966.## SMC MOTORS (5658), K.K.T.
ROAD,BASAVANNA GADDA, WANAPARTHY,
DISTRICT -MAHABUBNAGAR, ANDHRA
PRADESH,
PH :509103-9440142927.

PH .509103-944014.

WARANGAL

967.## VAISHNAVI AUTOMOBILES (470), OPP. NEW SCIENCE DEGREE COLLEGE, HUNTER ROAD, HANAMKONDA, WARANGAL-506 001, PH:506 001-9849002528.

TRIPURA

AMBASSA

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

968.## CHAKRABORTY MECHANICAL WORKSHOP (5351), NH-44.NEAR ZILLA PARISWAD OFFICE , AMBASSA, DISTRICT - DHALAI, TRIPURA, PH : 799289-9436136054.

DHARMANAGAR

969.## RAJ AUTOMOBILES (2868), STATION ROAD, RAJABARI, DIHARMANAGAR, TRIPURA (NORTH)-799 253, PH: 799253-9436477578.

UDAIPUR

970.## SUR UDYOG (3963), TOWN FULKUMARI NO. 1, BRAMHABARI, P O UDAIPUR COURT, UDAYPUR, TRIPURA SOUTH, PH: 799120-9862276650.

UTTAR PRADESH

AGRA

971.## GAYATRI MOTORS (4730), 101-102,SHASHI NAGAR,CHANDRAKALA-, COMPLEX.SIKANDRA BODLA ROAD, AGRA -282008, (UTTAR PRADESH), PH :282007-8077786331.

ALIGARH

972.## KAPIL AUTOMOBILES (1344), OLD KHURJA BUS STAND, G.T.ROAD, ALIGARH(U.P.), PH :202002-9837007636.

973.## KAR SCAN CENTRE (449), RAMGHAT ROAD, KWARSI, ALIGARH-202 002, PH :202002-8937000111.

ALLAHABAD

974.## ANSHUMAN AUTOMOBILES (4933), 353, NAINI BAZAR NAINI, DISTRICT ALLAHABAD, ALLAHABAD-211008, UTTAR PRADESH, PH :211008-9335138119.

975.** KAY CEE AUTOMOBILES (2155), 72/60 L.B. SHASTRI MARG, ALLAHABAD, , PH :211001-9415317225.

976.## TRIBENI MOTORS (2539), 23 KANPUR ROAD, ALLAHABAD-211 001, (U.P.), PH :211001-9415324244.

ALMORA

977.## AROMA AUTOMOBILES (3149), THE MALL, ALMORA, (UTTARANCHAL), PH :263601-9412093410.

AMROHA

978.## SUNNY MOTORS (2165), BIJNORE ROAD, J.P. NAGAR, AMROHA-244 221, (U.P.), PH :244221-9412248884.

AURAIYA

979.** SINGH AUTOMOBILES (5248), KANPUR ROAD AURAIYA , DISTRICT - AURAIYA , PIN - 206122, UTTAR PRADSH, PH :206122-9808403258.

BABUGARH

80.* GURUNANAK AUTOMOBILES (5977), NH- 9, VILL SIMROLI , BABUGARH CANTT. , DISTRICT- HAPUR, UTTAR PRADESH, PH :245102-8941838183/9411490827.

BAGHPAT

981.## KAUSHIK MOTORS (4473), PLOT NO 525, DELHI SAHARANPUR ROAD, PALI, BAGHPAT, UTTAR PRADESH 250609, PH :250609-9837800582.

BALRAMPUR

982.## D M AUTOMOBILES (3933), NEAR BCM, POST SIRSIYA, GONDA ROAD, BALRAMPUR 271201, PH:271201-9415071840.

BANDA

983.## CHAUDHARY TRACTORS (2249), STATION ROAD, BANDA-210 001, (U.P.), PH :210001-9415143033.

BARAUT

984.## HIGH TECH ENGINEERS (4821), 216/5 SAHARANPUR ROAD, BARAUT, , PH:250611-9837168887.

985.## SIGNET AUTOMOBILES (4441), NEAR INDUSTRIAL POLICE CHOWKI, DELHI ROAD, BARAUT-250611, DISTT BAGHPAT (U.P), PH :250611-8279527633 9917668255.

BAREILLY

986.## S P MOTORS (5746), 383,SURKHA CHAWNI,NAINITAL ROAD, BAREILLY-243001, DISTRICT-BAREILY, UTTAR PRADESH, PH :243001-9568033111.

BIJNOR

987.## SARDAR MOTORS (4671), DELHI HIGHWAY ROAD, 4TH KM MILE STONE, BIJNOR -246701, UTTAR PRADESH, PH :246701-9837265076

BULANDSHAHR

988.## DELHI AUTO ENGRS (1351), PLOT NO-106, NEAR TAFE TRACTOR AGENCY, NEAR CHANDPUR VILLAGE, DELHI ALIGARH BYPASS ROAD, BULANDSHAHR (UP) 203001. PH :203001-8700630277/8700982878.

CHANDPUR

989.## BHARTI AUTOMOBILES (1777), DHANORA ROAD, CHANDPUR, DISTT. BIJNOR, (U.P.), PH :246725-9837380551.

CHITRAKOOT

90.* SHYAM MOTORS (4367), BUS STAND, KARWI, CHITRAKOOT-210205, PH :210205-9415143900.

DADRI

991.## NATIONAL MOTOR AGENCY (5143), NOIDA ROAD, DADRI -203207, DISTRICT -GAUTAMBUDH NAGAR, UTTAR PRADESH, PH :203207-9818486888/0120-2667033/987394403

DANKAUR

992.## YASH MOTORS (5934), SIKANDRABAD ROAD,NEAR KISAN INTER COLLEGE, DANKAUR-203201, DISTRICT- GAUTAM BUDH NAGAR, UTTAR PRADESH, PH :203201-9410491590.

DEOBAND

993.## PRACHI MOTORS (3361), ADJACENT TO CIVIL COURTS, G.T. ROAD, DEOBAND, DISTT. SAHARANPUR (U.P.), PH :247554-7017803402.

DEORIA

994.** CLASSIC MOTORS (2971), D-13/14 INDUSTRIAL ESTATE, OPPOSITE RTO OFFICE, GORAKHPUR ROAD, DEORIA-274 001 (U.P.), PH. 274001-9415313939.

DHAMPUR

995.## AUTAR AUTOMOBILES (4846), NOORPUR ROAD, DHAMPUR-246761, DISTRICT-BIJNOR, UTTAR PRADESH, PH:246761-7017211986.

FAIZABAD

996.## S K MOTORS (4672), CHANDPUR HARBANS ALLAHABAD ROAD, NH-96, FAIZABAD-224001, UTTAR PRADESH, PH :224001-9307088750.

FARUKHABAD

997.## APOORVA MOTORS (4675), SATAPUR MAINDIR ROAD, FARRUKHABAD, DISTRICT FARRUKHABAD, UTTAR PRADESH, PH :209625-9044498958.

998.## SANDEEP MOTORS (4161), THANDI SADAK, OPP. JITENDRA GAS GODOWN, FARUKHABAD, UTTAR PRADESH, PH:209625-9838840322.

FATEHPUR SIKRI

999.## LAXMI MOTORS (5943), FATEHPUR SIKRI ROAD,KHEDA KORAI, FATEHPUR SIKRI-283110, DISTRICT-AGRA, UTTAR PRADESH, PH.283110-9837749949.

FIROZABAD

1000.** AMAN MOTORS (4366), OPP CAR CARE (INDIA), BYE PASS ROAD, FIROZABAD, UTTAR PRADESH, PH:283203-9837500220.

1001.## GOVIND AUTOMOBILES (1739), NH-2, INFRONT OF SUB POWER STATION, MODHA, ASFABAD CHAURAHA, FIROZABAD, UTTAR PRADESH, 283203, PH :283203-9837169332.

GANGOH

1002.## SHRI KRISHNA MOORS (5939), BYE PASS ROAD RAM GARH,GANGOH-247341, DISTRICT-SAHARANPUR, UTTAR PRADESH, PH :247341-9997102785.

GHAZIABAD

1003.* CHAWLA AUTOMOBILES (2643), 67 AMBEDKAR ROAD, OPP. NEHRU YUVA KENDRA, GHAZIABAD, PH :201001-9811720929.

004.* D.N. AUTOLAND (272), E-4 MEERUT ROAD, INDUSTRIAL AREA, (NEAR OLD MEERUT CHUNGI), GHAZIABAD., PH:201003-9810001121/9811001121.

1005.** KRISHNA AUTOMOBILES (5356), 101.LAL KUAN .SHIV MANDIR , BULANDSHAHAR ROAD , DISTRICT - GHAZIABAD, UTTAR PRADESH,

PH :201009-9810311475/9999506820.

1006.## S P MOTORS (4973), HAPUR BYPASS ROAD, MEHRAULI, GHAZIABAD,

:201001-9350936262/0120-2824443/921026490

07.* SHIVA MOTORS (3343), 17TH KM STONE, 118-119 SHIVPURI, SECTOR-9 VIJAY NAGAR BYEPASS NH-24, GHAZIABAD-201 009 (U.P.), PH

:201009-2744400/3232590/9891464349/987300

GONDA

1008.** AMAN MOTORS (3858), USAYANI CHAURAHA, RAJA KA TAAL, BYE PASS ROAD, FEROZABAD, UTTAR PRADESH, PH :271001-9415120101.

1009.* PANKAJ AUTOMOBILES (1370), C/O NEW DELHI MOTOR WORKS, BARAICH ROAD, GONDA,

PH:271801-9415664930.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

GREATER NOIDA

1010.## JAISWAL MOTORS (5078), PLOT NO. 31, SECTOR MUP-II.GREATER NOIDA, DISTRICT - GAUTAM BUDH NAGAR, UTTARPRADESH, PH :201308-9810062269/6485444/9212142269.

1011.## KUMAR MOTORS (8926), M-8, SITE-5, UPSIDC, KASNA INDUSTRIAL AREA, GREATER NOIDA, DISTRICT-GOUTAM BUDH NAGAR, UTTAR PRADESH, PH

> :201312-9911498777/0120-2341088/981149833 3.

HAPUR

1012.* SRASTHI MOTORS (3076), NEAR HDFC BANK, DELHI ROAD, HAPUR, (U.P.) -245 101, PH :245101-9412221608/9557307976.

HARDOI

1013.## M. MOTORS & SERVICE CENTRE (3371), CHAND BEHTA, LUCKNOW ROAD, HARDOI-241 001, (U.P.), PH :241001-9415175610

1014.** TAYAL AUTOMOTIVES (4265), SOHRA KOTHI, BAWAN CHUNGI, HARDOI-241001, PH :241001-9415149951.

HATHRA:

1015.## RADHEY RADHEY AUTOMOBILES (4344), NEAR BUS STAND, AGRA ROAD, HATHRAS-204101, PH :204101-9897069159.

JAGDISHPUR

1016.## SUPER AUTOMOBILES (3564), JAFARGANJ P.O., INDUSTRIAL AREA, JAGDISHPUR, DISTT. SULTANPUR-227 817 (U.P.), PH :227817-9415177882.

JAUNPUR

1017.## SADGURU MOTORS (5071), FAIZBAGH (NEAR TOM OFFICE), UMARPUR.JAUNPUR, JAUNPUR-222142, UTTAR PRADESH, PH :222142-8318984440.

JHANSI

1018.## A.B. MOTORS (8938), 4 KHATTERYANA, JHANSI, , PH :284001-9415059820.

KANNAUJ

1019.## SARALA AUTO CARE (5854), G.T.
ROAD.KANNAUJ, DISTRICT-KANNAUJ,
UTTAR PRADESH,
PH :209725-9918692324.

KANPUR

1020.* AJAY MOTOR WORKS PVT. LTD. (3134), 117/N/81 KAKADEVO, KANPUR, , PH :208025-9919828000.

1021.** AUTO GARAGE (4266), P-22-A, PRATAP GANJ, FACTORY AREA, OPP GANDA NALA, KANPUR-208012,

PH :208012-9415126189. 1022.** CHANDRA MOTORS (4458), 621/3 W-2 JUHI, BEHIND SACHAN GUEST HOUSE, KANPUR, PH :208027-9839928280.

1023.** EXCELLENT MOTORS (2968), 123/793 FAZALGANJ, KANPUR-208 012, , PH :208012-9336119874.

1024.## KANPUR AUTO CENTRE (2823), 14/142, CHUNNIGANJ, KANPUR, PH :208001-9415045438

025.** SUJIPA MOTORS (4337), 127/465, U-BLOCK, NIRALA NAGAR, KANPUR, PH :208014-9415050146.

KHALILABAD

1026.## RATAN MOTORS (6945), RAILWAY STATION ROAD - KHALILABAD, DISTRICT - SANT KABIR NAGAR, PIN-272175, UTTAR PRADESH, PH :272175-9621294899.

KHATAULI

1027.## EAGLE MOTORS (5142), OPPOSITE EW ROADWAYS, G.T. ROAD. NH -58.KHATAULI, DISTRICT - MUZAFFARNAGAR, UTTAR PRADESH, PH :251201-9997039786.

KHEKRA

1028.** KAILASAH MOTORS (5767), OPP TEHSIL ,DELHI BAGHPAT ROAD, KHEKRA-201101, DISTRICT-BAGHPAT, UTTAR PRADESH, PH :250101-9760027001.

KOSIKALAN

1029.** ADITYA MOTORS (1940), IOC PUMP, NATIONAL HIGHWAY, KOSIKALAN, (U.P.), PH :281403-9837050778.

LAKHIMPUR KHERI

1030.** AJMANI TRACTORS (4143), NIGHASAN ROAD, LAKHIMPUR KHERI, UTTER PRADESH, PH :262701-9918802167.

LAMBHUA BAZAR

1031.## VIKRAM MOTORS (3729), LAMBHUA BAZAR, SULTANPUR (DIST.), UTTAR PRADESH-222 302.

PH:222302-9450215996

LONI

1032.## SAMBHAV AUTOMOBILES (5168), 31 RURAL INDUSTRIAL ESTATE , ARYA NAGAR INDUSTRIAL AREA, MAIN DELHI SHAHRANPUR HIGHWAY, UTTAR PRADESH, PH :201102-9311690878/9212128889.

LUCKNOW

1033.** B.K. MOTORS (2537), KALYANPUR, RING ROAD, OPP. CARRIER CONVENT BOARD, LUCKNOW-226 015,

PH :226015-9335908130.

BALAJI MOTORS (1336), 1 NEWAL KISHORE ROAD, LUCKNOW-226 001.(U.P), ,
PH :226001-9336253838.

1035.## GALAXY MOTORS (5274), KASHANA SITAPUR ROAD,NEAR SHIA, P G COLLGEG-LUCKNOW, DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226021-9305567878.

1036.** GUD'S CAR CARE (2538), MAIN ROAD, NISHATGANJ, LUCKNOW-226 006, PH:226006-9415024495.

1037.** KALYAN MOTORS (1161), GOVT. POLYTECHNIC CROSSING, FAIZABAD ROAD, GOMTI NAGAR, LUCKNOW, PH :226010-9936942527.

1038.** KAPOOR MOTORS (1751), PLOT NO.380, NEAR GUNGA BAHARA SCHOOL, TILAK NAGAR, UTTAR PRADESH, PH :206122-9795457050.

1039.** KAPOOR MOTORS (5044), 555/GA/50,BARA BIRWA, KANPUR ROAD-, ALAMBAGH LUCKNOW., DISTRICT - LUCKNOW, (UTTAR PRADESH), PH :226005-9795457050.

1040.* KRISHNA MOTORS (5026), BALAGANJ HARDOI ROAD, CHOWK LUCKNOW, DISTRICT LUCKNOW, UTTAR PRADESH, PH :226020-983917777.

1041.** MVV MOTORS (5531), A1/14,VIJAY KHAND, GOMTI NAGAR, LUCKNOW-226010, DISTRICT - LUCKNOW, UTTAR PRADESH, PH :226010-9792877779.

1042.** RELIANCE MOTORS CARE (1236), 7-B/1 PRIME PALACE, FAIZABAD ROAD, INDIRA NAGAR, LUCKNOW-226 016, PH :226016-9918100051.

043.* S.K. MOTORS (2449), 8/881 VIKAS NAGAR, PICNIC SPOT ROAD, KHURAM NAGAR, LUCKNOW-226 013, PH :226013-9415005564.

044.* THE GARAGE (5479), BEHIND NEW HANUMAN MANDIR, MADIR PARK MAHANAGAR - LUCKNOW , DISTRICT -LUCKNOW, UTTAR PRADESH, PH:226006-9236711634. 1045.* V.S. MOTORS (4745), RAMADHIN SINGH INTER COLLEGE CAMPUS, BABU GANJ, LUCKNOW-226007, UTTAR PRADESH, PH :226007-9984749000.

MAHOBA

1046.## ROYAL SERVICE STATION (2238), HAMIRPUR CHUNGHI, KANPUR ROAD, MAHOBA, (U.P.), PH :210427-9450269053.

MAINPURI

1047.## JATIN MOTORS (5540), GANESH MILL COLONY.RADHA RAMAN ROAD, MAINPURI-205001, DISTRICT-MAINPURI, UTTAR PRADESH, PH:205001-8193825000.

MARIAHU

1048.## BABU MOTORS (5740), MACHALISHAHAR ROAD.NEAR POST OFFICE, MARIAHU-222161, DISTRICT - JAUNPUR, UTTAR PRADESH, PH :222161-9919263663.

MATHURA

1049.## GIRIRAJ CAR CARE (5624), BIMAL ENGG COMPLEX, BAD, MATHURA-281 006, PH:281006-9837071321.

1050.** NAND SERVICE STATION (3578), GOPAL PURA VILLAGE, REFINDERY TOWNSHIP, NH-2, MATHURA, PH :281001-9997982828.

1051.## SHREE GOPAL AUTOMOBILES (5664), DELHI BYE PASS ROAD,NEAR GOKUL RESTAURANT, MATHURA - 281001, DISTRICT - MATHURA, UTTAR PRADESH, PH :281001-9412726760.

1052.* SIYA RAM MOTORS (1666), JAYSINGHPURA, NEAR BIRLA MANDIR, MATHURA-281 003, (U.P.), PH :281003-9897053962.

MEERUT

1053.** EXPERT CAR SCANNER (1174), 83 HILL STREET (KATH-KA-PUL), BEHIND ABU LANE, MEERUT CANTT., (U.P.), PH :250001-8057301301.

1054.## KRISHNA AUTOMOBILES (5573), PLOT NO D-10,SHRADHA PURI,, KANKARKHERA -MERUT, DISTRICT - MEERUTI, UTTAR PRADESH, PH :250001-9927241738.

1055.## SARAN AUTOMOBILES LTD. (1078), DELHI ROAD, RITHANI, MEERUT, PH :250001-6395883392 8977524402

MIRZAPUR

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass : Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1056.## PRABHAT MOTORS (4131), NH-7 REWA ROAD, CHANDAIPUR LAKHAMPUR, MIRZAPUR, U P,

PH :231309-9838940382.

MOHANLAL GANJ

1057.** GURU TEG BAHADUR AUTO ENTERPRISES (4072), 4 SENANI VIHAR, RAI BAREILLY ROAD, MOHANLAL GANJ, LUCKNOW U P, PH :226027-9415229172.

MORADABAD

1058.## ASHISH AUTOMOBILES (1477), KANTH ROAD, MORADABAD-244 001, , PH :244001-9837055258.

NA.IIRARAD

1059.## SETHI MOTORS (4557), CIO SETHI BOARD INDUSTRIES LIMITED, OPP. HINDUSTAN COCO-COLA BOTTLING PLANT, NAGINA ROAD, NAJIBABAD-246763, DISTT. BIJNOR (UTTAR PRADESH), PH: 246732-9837590800.

NOIDA

1060.## AUTOPOINT (2263), G-6,SECTOR 11,NOIDA, PH :201301-8800337770.

1061.## RAHUL MOTORS (4662), A-59 SECTOR-80, PHASE-II, NOIDA-201303, UTTAR PRADESH, PH

:201305-9810572900/9312271259/0120-396313

1062.** RAJESH & ANIL MOTOR CO (5330), B-110. SECTOR 2. NOIDA, DISTRICT - GAUTAM BUDH NAGAR , UTTAR PRADESH, PH

> :201301-9818578786/0120-4211266/0120-2539 555.

1063.* SKUNIVERSE AUTOMOBILE PRIVATE LIMITED (8922), C-2 SECTOR 63, NOIDA -201301, PH :201301-9219694600/9690581570.

OBRA

1064.## APPRECIATE SERVICES (4678), BY PASS ROAD, ROBERTS GANJ, DISTRICT -SONEBHADRA, UTTAR PRADESH, PH :231219-8765833557.

PILIBHIT

1065.* UNIVERSAL MARUTI SERVICE STATION (4365), BYE PASS ROAD, PILIBHIT, UTTAR PRADESH, PH. :243006-9412313499.

PILKHUWA

1066.* SHREE BANKEY BIHARI MOTORS (6025), NH-24,DELHI-GARH ROAD,PILKHUWA-245307,

DISTRICT-GHAZIABAD, UTTAR PRADESH, PH:245304-9045548101.

PRATAPGARH (U.P)

1067.** SHREE MOTORS (4146), ALLAHABAD FAIZABAD ROAD, NH-96, CHILBILA RANJEETPUR, PRATAPGARH (UTTAR PRADESH), PH :230001-9415229257.

RAI-BARELI

1068.** STANDARD GARAGE (4429), MANIKA CENEMA ROAD, NEAR INSPECTION HOUSE, RAE BAREILLY, PH :229206-9415190703.

RAMNAGAR

1069.## MAHI AUTOMOBILES (5532), SHANKARPUR RAMNAGAR, DISTRICT - NAINITAL, UTTRAKHAND, PH :244715-8192000724

RAMPIIR

1070.## FIZZA MOTORS (2241), NEAR AMBEDKAR PARK, CIVIL LINES, RAMPUR (U.P.), PIN-244 901, PH :244901-9897879711.

RATH

1071.## MARUTI POINT (4228), ROOP NAGAR, BUDHOLIYANA, NEAR BUS STAND, ORAI ROAD, RATH, DIST. HAMIRPUR (U.P), PH :210431-9415331735.

RENUKUT

1072.## AMBIKA MOTORS (1050), PATEL NAGAR, MURDHAWA, RENUKUT-231 217, SONBHADRA (U.P.), PH :231217-9415251724.

ROBERTSGANJ

1073.* KAMAKHYA AUTOMOBILES (4163), PIPRI ROAD, ROBERTSGANJ, SONEBHADRA (U.P), PH:231216-9918301052.

SADABAD

1074.## ASHU SERVICE CENTRE (5849), AGRA BYE PASS ROAD, SADABAD-281306, DISTRICT-HATHRAS, UTTAR PRADESH, PH :281306-9058832658.

SAHARANPUR

1075.## GANESH CAR SERVICES (1871), OPP. REMOUNT DEPOT GATE, DEHRADUN ROAD, SAHARANPUR-247 001, PH :247001-9358306804.

SAHIBABAD

1076.## MEHAR AUTOMOBILES (3576), 116/1 NEAR GDA MARKET, G.T. ROAD, KATORI MILL MOHAN NAGAR, GHAZIABAD-201 007, PH :201007-9711201557/9871832662.
1077.** MOTOR MAGIG AUTO ZONE (4462), 4/29-A

077.** MOTOR MAGIC AUTO ZONE (4462), 4/29-A SITE-IV, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD,

:201005-9810936357/9717194917/7838615331/9717800022.

1078.## PANDIT AUTOMOBILES (4647), 3/1/1, SITE-IV, INDUSTRIAL AREA, SAHIBABAD, OPP. KAUSHAMBI, GHAZIABAD (UTTAR PRADESH,

> :201010-0120-2776808/0120-4114808/9810771 045/9810639100.

1079.## POOJA MOTORS (3562), TEELA MORE, SHAHBAJPUR, LONI, DISTT. GHAZIABAD (U.P.), PH

:201102-9810986463/9810986463/9891155954.

SANDILA

1080.## SUBHAM SERVICE CENTRE (4042), NEAR NEHA KOTHI ROAD, SANDILA, HARDOI, PH :241204-9506181818.

SHAHJAHANPUR

PH

1081.## SUPER AUTO (3135), OLD DIST. HOSPITAL ROAD, SHAHJAHANPUR (U.P.), PIN-242 001, PH :242001-9415035644.

SHAMLI

1082.## ROYAL MOTORS (5277), PANIPAT KARANA ROAD, SHAMLI, SHAMLI-247776, UTTAR PRADESH, PH :247776-9927272766.

SHIKOHABAD

1083.## KUMAR MOTORS (5575), SUBHASH TIRAHA ,AGRA GATE - SIKOHABAD, DISTRICT -FEROZABAD, UTTAR PRADESH, PH :283203-9411937033.

SIDDHARTH NAGAR

1084.## MARUTI CARE CENTRE (2736), OPP. SIDDHARTH SCHOOL, AZAD NAGAR, SIDDHARTH NAGAR-272 207, (U.P.), PH :272207-9935642651.

SIKANDRABAD

1085.## NALIN AUTO (8921), G.T. ROAD, SIKANDRABAD, DISTT. BULANDSHAHAR, (U.P.), PH :203205-05735-222802/9412227155/976113393

SIRSAGANJ

1086.## SATGURU MOTORS (3739), BYE PASS KAURARA ROAD, SIRSAGANJ DISTT. FIROZABAD, ETAWAH-AGRA ROAD, SIRSAGANJ (U.P.), PH :281431-9412316660.

SONEBHADRA

1087.## OUDH SERVICE STATION (2925), SHAKTI NAGAR, SONEBHADRA-231 222, , PH :231222-7408434860.

SULTANPUR

1088.## HINDUSTAN AUTO GARAGE (1360), BARHANYA BEER RD., (ADJ.BUS STAND), SULTANPUR-228 001 (U.P.), PH :228001-9984154002.

VARANASI

1089.** MISHRA ENGINEERS (4957), S-4/68, NAI BASTI, PAHARIA, VARANASI-221002, UTTAR PRADESH, PH:221002-9415301483.

UTTARAKHAND

BAZPUR

1090.## TARAI AUTOMOBILE ENGG WORKS (4459), GURUTEG BAHADUR ROAD, U.S. NAGAR, BAZPUR-262401, UTTARANCHAL, PH :263401-9837506765.

BHAGESWAR

1091.## SHREE ISHT DEV AUTOMOBILES (4570), GARUR ROAD, MOTA SIMAL, DIST. BAGESHWAR, UTTARANCHAL, PH:262642-9997895347.

DEHRADUN

1092.## ASHIRWAD MOTORS (5144), CANAL ROAD, NEAR BALLUPUR CHOWK, DEHRADUN-248001, UTTARANCHAL, PH:248001-9219594748.

1093.## HANS LAKHERA MOTORS (5032), JOGI WALA RING ROAD, NATHAPUR APPARTMNT, NAR NEHRU GRAM POST OFFC, MASSOORI BYEPASS, DEHRADUN, PH :248001-9897456677.

1094.## KRIPALESHWARI MOTORS (4475), HARIDWAR ROAD, NEAR LIC BUILDING, DEHRADUN-248001, UTTARANCHAL, PH:248001-9412963384.

1095.* SHREE RAM AUTOMOBILES (5066), NEAR TEHSIL, CHAKROTA ROAD, VIKAS NAGAR-DEHRADUN, UTTARANCHAL, PH. :248198-9897731200.

HALDWANI

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1096.## EXCEL MOTORS & ENGG. WORKS (3827), RAMPUR ROAD, NEAR STM FOREST HOSPITAL, HALDWANI, NAINITAL, PH :263139-9837191688

1097.* HARYAL SERVICE STATION (5340), BAREILY ROAD, GUAJALI - TALLI, HALDWANI, DISTRICT - NAINITAL, UTTARAKHAND, PH. 263139-9997200227.

HARIDWAR

1098.## PREET MOTORS (5561), SHRI NATH NAGAR, RAILWAY ROAD, JAWAL PUR - HARDWAR, DISTRICT - HARDWAR, UTTARANCHAL, PH :249408-9012010497.

KANKHAI

1099.## HIGHWAY MOTORS (4261), NEAR SINGH DWAR CHOWK, ROORKEE-HARDWAR BY PASS ROAD, POST OFFICE, GURUKUL KANGRI, KANKHAL, DISTT HARDWAR, PH :249408-9412072889.

KASHIPUR

1100.## OM MOTORS (4329), OPPOSITE SWAGAT MANDAP, BAZPUR ROAD, KASHIPUR DIST., U.S. NAGAR (UTTARANCHAL), PH :244713-9927500007.

1101.## KRISHNA AUTOMOBILES (4824), MORADABAD ROAD, KASHIPUR, , PH :244713-9870998368.

KICHH/

1102.## SHREE SHYAM JI AUTO SERVICE CENTRE (5648), BAREILY ROAD,KICHHA, PIN-263148, DISTRICT-UDHAM SINGH NAGAR, UTTRAKHAND, PH :263148-9837033377.

KOTDWAR

1103.## BHATT MOTORS (1775), NAJIBABAD ROAD, KOTDWARA, (GARHWAL), UTTARANCHAL, PH :246149-9917005404.

LAKSAR

1104.## SHIV AUTOMOBILES (5560), 110/1/3 BALAWALI ROAD - LAKSAR, DISTRICT -HARIDWAR, PIN - 247663, UTTARANCHAL, PH :247663-9719054422.

LOHRIASAL MALLA

1105.## ANJINI SERVICE CENTRE (5552), NEAR BLOCK OFFICE, KALADHUNGI ROAD, LOHRIASAL MALLA, CITY - HALDWANI, UTTARAKHAND - 263139., PH :263139-9837098699.

NEW TEHRI

1106.## BHAGWATI SERVICE CENTER (4472), SECTOR-8E/537, NEAR STADIUM, BARURI, NEW TEHRI, GARWAL (UTTRANCHAL), PH :249001-7895219517.

PAURI

1107.## KRISHNA MOTORS (5957), SHRINAGAR ROAD,NEAR KARGIL SHAHEED PETROL, PUMP,PAURI-246001, DISTRICT-PAURI GARHWAL, UTTRANCHAL, PH :246001-9412030074.

PITHORAGARH

1108.## CAR CARE CENTER (4371), CANT ROAD, PITHORAGARH, UTTARANCHAL, PH:262501-9756204288.

1109.## MAHAKALI MOTORS (4142), DHARCHULA ROAD, RAI BRIDGE, PITHORAGARH, UTTARANCHAL, PH :262501-9897922203 9634713124.

RANIKHET

1110.## LATIF MOTOR WORKS (3269), SADAR BAZAR, GANDHI CHOWK, RANIKHET, (UTTARANCHAL), PH :263845-9761250801.

RISHIKESH

1111.## GARHWAL GASOLINE STATION (3639), , H.P. PETROL PUMP, LAXMAN JHULA ROAD, RISHIKESH-249 201, PH :249137-9837377767.

1112.* RAKESH AUTOMOBILE ENGINEERS (1464), OPP. BHARAT MANDIR INTER COLLEGE, HARDWAR ROAD, RISHIKESH-249 201, PH: 249137-9412051655.

ROORKEE

1113.## DUM DUM ENGG. WORKS (1343), GROUND FLOOR, A TO Z TOWER, NEAR SOLANI BRIDGE, HARIDWAR ROAD, ROORKEE, PH :247664-8449155002.

1114.## ROORKEE AUTO SCANNERS (2675), 786 WEST AMBER TALAB, RAM NAGAR CHOWK, ROORKEE-247 667, PH :247664-7017003404.

RUDRAPRAYAG

1115.## RAJESHWARI AUTOMOBILES (5669), BADRINATH ROAD,GHOLTIR, RUDRAPRAYAG, DISTRICT -RUDRAPRAYAG, UTTARANCHAL, PH:246171-9997217788.

RUDRAPUR

1116.** BALAJI SERVICE CENTRE (1335), HALDWANI ROAD, RUDRAPUR(NAINITAL), (U.P)., PH :263153-9837021941. 1117.** CORUS MOTORS (5059), D1 D2.20/1.NANITAL ROAD, DISTRICT - U.S. NAGAR , UTTARAKHAND, PH :263153-9927500007.

SIMLI

1118.## PINDER AUTOMOBILES (5527), PLOT # C6-C9, INDUSTRIAL AREA, NEAR KARNAPRAYAG - SIMLI, UTTARANCHAL, PH :246449-9412977249.

SITARGANJ

1119.## SHRI RAM MOTORS (5833), AGARWAL BHAWAN,BYE PASS ROAD, SITARGANJ-242605, DISTRICT-UDHAM SINGH NAGAR, UTTARANCHAL, PH :262405-8859485786

VIKASNAGAR

1120.## SOUMYA MOTORS (4272), CHAKRATA ROAD, BEHIND STATE BANK OF INDIA, VIKASNAGAR, DISTT. DEHRADUN (U.A), PH:248198-9412382490.

WEST BENGAL

ALIPURDUAR

1121.## PRADDYOUT AUTOMOBILE WORK (653), PURAN BAZAR, P.O.ALIPURDUAR, JALPAIGURI, WEST BENGAL, PH:736121-9832487473.

ARAMBAGH

1122.## MARUTI ZONE (3748), PARUL, ARAMBAGH, HOOGHLY, WEST BENGAL, PH :712413-9434345047.

ASANSOL

1123.## AGARWALLA AUTO SERVICE (3122), 181 BURNPUR ROAD, P.O. BURNPUR, DT. BURDWAN-713 325, (WEST BENGAL), PH:713325-9832179346.

1124.** WEST END MOTORS (1665), KALYANPUR SATELITE TOWNSHIP PROJECT, KANYAPUR LINK ROAD, PALASHDIAH MORE, PO-KANYAPUR, PIN-713341, ASANSOL, WESTBENGAL, PH:713341-8798107541.

BAHRAMPUR

1125.* MARUTI CARE (3674), NH-34 UTTARPARA MORE, P.O. RADHARGHAT, BERHAMPORE, MURSHIDABAD -742 187 (WEST BENGAL), PH:742187-9434394040.

1126.## NARAYAN BUS SERVICE (656), 17 RABINDRA THAKUR ROAD, P.O.BAHARAMPUR (WEST BENGAL), PH:742101-9732628065.

BALURGHAT

1127.## GHOSH AUTOMOBILES (2644), NARAYANPUR, BALURGHAT, DAKSHIN DINAJPUR-733 101, PH :733101-9434963493.

BANDEL

1128.## CAR HOSPITAL (3675), 2 NO. NETAJI PARK, G.T. ROAD, (OPP. MILITARY COLONY), BANDEL (WEST BENGAL), PH:712102-9038021085.

BARRACKPORE

1129.## SAMANTA AUTOMOBILES (268), CHIRIMORE, BARRACKPORE-743 101, NORTH -24 PARGANAS, WEST BENGAL, PH -743101-9831054432

BIRPARA

1130.## PRATAP ENGINEERING WORKS (8942), NH-31, DEMDIMA, PO-BIRPARA, PIN -735204, DISTRICT JALPAIGURI, WEST BENGAL, PH :735204-9832429319.

BOLPUR

1131.## BASUNDHARA AUTOMOBILES (4241), GOAL PARA, BOLPUR SURI ROAD, BOLPUR, PH:731235-9832132851.

CHINSURAH

1132.## UNIVERSAL AUTO REMEDY (648), C/O MR.BN CHATTERJEE, BHAGABOTI DANGA KHADINA MORE, PO CHINSURAH, HOOGHLY-712102, PH.712102-9830056592.

COOCH BEHAR

1133.## PROVA AUTOMOBILES (8936), CHAKCHAKA CHECK POST, NH-31, COOCH BEHAR-736 101, (WEST BENGAL), PH -736101-9434174309

DINHATA

1134.## DINHATA AUTOMOBILES (5739), BALRAMPUR ROAD PO/PS:DINHATA, DISTRICT-COOCHBEHAR, PIN-736135, WEST BENGAL, PH: 736135-9434256518.

DURGAPUR

1135.## THE QUICKEST (2879), BANS KOPA, (NEAR PARADISE INN), G.T. ROAD, DURGAPUR-713 212, PH :713212-9832165126.

FARAKKA

1136.** SPEED WHEEL SERVICE CENTRE (1056), TTS HCC COLONY, FARAKKA, P.O. NABARUN, DISTT. MURSHIDABAD (W.B.), PH:742236-9434101917.

HALDIA

^{**} A-Category Mass: Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

^{*} B-Category Mass : Free & paid Service & Major repairs

[#] D-Category Mass : Free Service & Minor repairs

1137.** S.D. REPAIRING CENTRE (2168), I.O.C. GATE NO.1, P.O. HALDIA OIL REFINERY. HALDIA-721 606, DISTT, MIDNAPORE (W.B.), PH:721606-9434021405.

HOWRAH

1138.## GREWAL AUTO SERVICE (1570), 97/1 FORESHORE ROAD, SHIBPUR, HOWRAH-711 102. PH:711102-9831017806.

JAIGAON

1139.** SHAKTI TRADING CO. (770), M.G. ROAD, JAIGAON-736 182, , PH:736182-7760808990.

JAI PAIGURI

1140.## AUTOSTEL (646), SAKOAJHORA, P.O. GAIRKATA-735 212, DIST.JALPAIGURI, (W.B.). PH:735212-9934111868

1141.** S.S. AUTOMOBILES (3664), ASSAM MORE, JALPAIGURI, WEST BENGAL-735 101. PH:735101-9434340252

KALYANI

1142.## GOPAL AUTO SERVICE CENTRE (3373), B.K. EXPRESSWAY, BUDHHA PARK KALYANI-741 235, NADIA (WEST BENGAL). PH:741235-9831319161.

1143.## KRISHNA ENGINEERING WORKS (5270), PLOT NO.199, KANTABELE.O.N.G.C ROAD, KALYANI EXPRESS ROAD, PO: GHORAGACHHA, PS - KALYANI, WEST BENGAL. PH:741245-7439007218.

KOLKATA

1144.** ADAMS MOTOR WORKS (465), 61 A SHAKESPEARE SARANI, CALCUTTA-700 PH:700017-9830703287.

1145.## AUTO SCAN (2272), 100/1 B.T. ROAD. CALCUTTA-700 090 PH:700090-9231622309.

1146.** AUTOKRAFT (620), F 1/G-3, RIC IND.ESTATE UPEN BANERJEE ROAD, PARNASREE, CALCUTTA - 700060 (W.B). PH:700060-9830053331.

1147.* BHAWANIPUR AUTO CENTRE (628), 49 S.P.MUKHERJEE ROAD, CALCUTTA - 700 026 (W.B), . PH:700026-9831783130.

1148.## CAMAC (621), 2/E CAMAC STREET, CALCUTTA-700016(W.B). . PH:700016-9831493716

1149.## CLASSIC ENGINEERING WORKS (3171), C/O CLASSIC ENGINEERING WORKS, 620 D H ROAD BEHALA INDUSTRIAL ESTATE, PLOT NO.G-1. KOI KATA-700 034 PH:700034-9903390559.

DELUXE SERVICE STATION (672), P-256 257 CIT ROAD, CAI CUTTA-700 010 PH:700010-9836490083.

1151.** DIAL AUTOMOBILES PVT.LTD. (643), 162 A PARY MOHAN RAY ROAD, CALCUTTA-700027(W.B), .

PH:700027-9830552191. 1152.## FORTUNE AUTO CARE (3167), 16 G/6 KHANPUR ROAD, KOLKATA-700 047, (W.B.), PH:700047-9831754527.

1153.## INTERNATIONAL AUTO WORKS (2648), 48-C SOUTH TANGRA ROAD, KOLKATA-700 046. . PH:700046-9163703015

MARUTI LINK (1633), CK-12 SECTOR 2, SALT LAKE, CALCUTTA-700 091. PH:700091-9831180421.

MOTORKRAFT (635), P-149 REMOUNT ROAD, CALCUTTA-700 027.(W.B). . PH:700027-033-24493849.

NORTH POINT MOTORS PVT. LTD. (344), DUTTO BAGAN - 3D/1 BUS TERMINUS, 64/2B BELGACHIA ROAD, CALCUTTA-700 037. PH:700037-9830220069

1157.* PRINCE MOTOR WORKSHOP (2845), TM -2/8 TEGHARIA, P.O. HATIARA. CALCUTTA-700 059, PH:700059-9875625595.

1158.** R.S. SERVICE CENTRE (1948), 1/2 MAHENDRE ROY LANE, CALCUTTA-700 046,

PH:700046-9831170273.

RAJ AUTO SERVICE (5338), 35.CANAL EAST ROAD, KOLKATA, PIN - 700011, WEST BENGAL. PH:700011-9831103901

1160.## ROYAL CALCUTTA AUTOMOBILES (4651), 68 BROAD STREET, KOLKATA-700019, . PH:700019-8777762005.

1161.## RUSSA ROAD SERVICE STATION (622), 30 SP MUKERJEE RROAD, CALCUTTA - 700025 (W.B)

PH:700025-9748757842.

1162.## SONA AUTO UDYOG (3144), 1404 PURBACHAL MAIN ROAD, OPP. KALIKAPUR MARKET, KOLKATA-700 099. PH:700099-9804608684

1163.## TECHNO AUTO WORKS (4669), 619, RAJA RAM MOHAN ROY ROAD, BIREN ROY ROAD EAST, BEHALA, KOLKATA-700008. PH:700008-9830111258

1164.## ULTRA CRAFT (4643), 103/1B, RAJA DINENDRA STREET, KOLKATA-700006. WEST BENGAL.

1165.## YOUNG AUTOMOBILES (637), 50/2 HAZARA ROAD, CALCUTTA-700 019.(W.B), . PH:700019-9830778611.

1166.## ZENITH AUTO (5529), BOHLA NATH SARANI.CHINAR PARK, RAJARHAT. KOLKATA-700157, DISTRICT - KOLKATA, WEST BENGAL. PH:700157-9830643781.

1167.## ZOVAN AUTOMOBILES PVT. LTD (5578), 42/A1B,RAJA SANTOSH ROAD, KOLKATA, DISTRICT - KOLKATA, WEST BENGAL. PH:700027-9831082193

KRISHNANAGAR

1168.## HIGHWAY SERVICE CENTRE (4455), ASHA DEEP, N,H-34, KRISHNANAGAR, NADIA-741101, WEST BENGAL. PH:741101-9434165494.

1169 ## TARA MA AUTOMOBII FS (1947). AUROBINDRA SARANI (NEAR KRISHNANAGAR WOMEN'S COLLEGE). KRISHNANAGAR, NADIA, , WEST BENGAL 7411011 PH:741101-8001100930.

MADHYAMGRAM

1170.## BEHAL'S AUTOMOBILE (4653), DOLTALA. GANGANAGAR, MADHYAMGRAM, KOLKATA-700129 (WEST BENGAL), PH:700129-9831094430.

1171.* PAUL AUTOMOBILES (671), JESSORE ROAD, MADHYAMGRAM, DOHARIYA PO GANGANAGAR, DISTT 24 PGNS NORTH. PH:700132-9830239001.

MALDA

1172.## ABHISEK AUTO CENTRE (1976), N.H.34. NEAR ST. XAVIER SCHOOL, P.O. MOKDUMPUR, DISTT. MALDA-732 101 (W.B.). PH:732101-9434065360.

MIDNAPORE

1173.## CHATTERJEE AUTOMOBILE (4960). INDUSTRIAL GROWTH AREA, KHASJANGAL (NEAR KERANICHOTI), MIDNAPORE-721101, DISTRICT-PACHIM MIDNAPORE. PH:721101-9434043558.

NARENDRAPUR

1174.## A.M. AUTOMOBILES (3175), KAMALGAZI, NARENDURPUR, KOLKATA-700 103, (WEST BENGAL). PH:700103-8335860051.

PURULIA

* B-Category Mass : Free & paid Service & Major repairs

D-Category Mass : Free Service & Minor repairs

RAGHUNATHGANJ

1175.## BANERJEE AUTO SERVICE (640),

1176.## AUTO WHEEL (4427), NH 34, UMARPUR, PO GHORSALA, DO MURSHIDABAD, WEST BENGAL, PIN 742235. PH:742235-9434101917.

RUPNARAYANPUR

1177.## L K MOTORS PVT LTD, (3477), NH 2 BYPASS. POINT (CHOWRANGI), RUPNARAYANPUR (CHALBALPUR), BURDWAN-713 343, PH:713343-9091392314.

SILIGURI

1178.## BHAWANI MOTOR GARAGE (4844), BIDYASAGAR PALLY, NEAR RISHI BHAWAN, BURDWAN ROAD, SILIGURI-734405, WEST BENGAL, PH:734405-9641162127.

1179.## MUM AUTO WORKS (4835), NEAR DELHI PUBLIC SCHOOL PANCHANAL (DAGAPUR). SILIGURI, WEST BENGAL-734003. PH:734003-9832068537.

SODEPUR

1180.** CAR CARE (8929), B.T. ROAD, SODEPUR, P.O.: SUKCHAR, 24 PARGANAS (NORTH), PH:700115-9674907411.

SRIRAMPUR

1181.* MARUTI AUTO CENTRE (2167), 85/18 G.T. ROAD (WEST), PO : MULLIKPARA, SRIRAMPUR, HOOGLY-712 203 (W.B.). PH:712203-9830191251.

SURI

1182.## PANCHANATH AUTOMOBILES (4456). BROJARGRAM BARABAGAN, BAKRESWAR PATHARCHAPURI HIGHWAY MORE, SURI. WEST BENGAL-731101. PH:731101-9732026250.

ULUBERIA

1183.## APSARA SERVICE STATION (3374), NEAR BANITABI A CHECKPOST, ON NH-6. ULUBERIA-711 316. (W.B.). PH:711316-7797484735.

S.P.BANERJEE ANALBILA VILLA, RANCHI ROAD, PURULIA.(W.B), PH:723101-9434656942 PH:700006-9831313321.

^{**} A-Category Mass : Free & paid Service, Major repairs & Accidental repairs

^{##} C-Category Mass: Free & paid Service & Minor repairs

DELHI

DELHI

- MARUTI SALES & SERVICE(DELHI) (0810-08-01), C-119, INDUSTRIAL AREA PHASE-I, NARAINA, NEW DELHI - 110028 PH :45541113.
- J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (0883-08-01), F-39, OKHLA INDUSTRIAL AREA, PHASE-II, NEW DELHI -110020 PH :41612194, 40685500.

TAMIL NADU

CHENNAI

 J J IMPEX (DELHI) LTD(MARUTI SERVICE MASTERS) (1485-14-01), # 9, (SP),THIRU-VI-KA INDUSTRIAL ESTATE, GUINDY, CHENNAI -600032

PH :044-43563366, 43563367, 9176615000.

ARUNACHAL PRADESH

ITANAGAR

 HIBRO AUTOMOBILES (7581-75-01), D-SECTOR, DISTT: PAPUMPARE, ITANAGAR - 791111 PH:7005337938.

ASSAM

BARPETA

 ROY AUTO ENGINEERING WORKS (7Z81-7Z-01), POST OFFICE, BARPETA ROAD, MAIN ROAD, WARD NO.-4, ASSAM - 781315 PH 9954069396

DULIAJAN

 B.S. MOTORS (X881-X8-01), NO. 01, BORPOTHAR TINALI, DULIAJAN. - 786602 PH:9435719753.

BIHAR

PATNA

 CITY AUTO SERVICES (1582-15-01), 9/1, PATLIPUTRA INDUSTRIAL ESTATE, PATLIPUTRA , PATNA - 800013 PH 93341170708210810240

DELHI

DEI HI

 GALAXY AUTOMOBILES (0881-08-01), 8 INDUSTRIAL AREA, TILAK NAGAR, NEW DELHI, -110018
 PH 43276666

A MAUTOMOBILES (A UNIT OF BLUE BIRD ENTERPRISES) (0891-08-01), 189-91,
 LAWRANCE ROAD, DELHI - 110035
 PH :48280000

HARYANA

BALLABGARH

 ROYAL MOTORS (9R82-9R-01), 21/5, G.T. ROAD, BALLABHGARD, DISTT-FARIDABAD - 121004 PH :4271800; 9899232536;9212142536.

MURTHAL

PANCHKULA

 CARE TAKER (K381-K3-01), PLOT NO. 36, INDUSTRIAL AREA, PHASE-2, PANCHKULA -134113
 PH:9914115427.

PANIPAT

 VIJAY MOTORS (D381-D3-01), PLOT# 136, INDUSTRIAL AREA, PHASE-1 - 132103 PH :9896118618.

SAHA

 PUNJAB MOTOR & ENGG WORKS (1881-18-01), NH-73, SHAHZADPUR ROAD, SAHA, DISTT.-AMBALA - 133104 PH 9896666402

YAMUNANAGAR

 HIRA MOTOR GARAGE (D281-D2-01), PLOT NO 46, SHIVAJI PARK, OPPOSITE MADHU PALACE, YAMUNANAGAR, HARYANA - 135001 PH :895000069.

HIMACHAL PRADESH

JASSUR

 CLASSIC MOTOR GARAGE (8H81-8H-01), TEHSEEL NOOPUR, KANGRA, JASSUR, HIMACHAL PRADESH - 176201 PH: 9882217575 . 9459500613.

JAMMU AND KASHMIR

SRINAGAR

 RAHIM MOTORS (1281-12-01), SIDGO INDUSTRIAL AREA, RANGRETH, SRINAGAR -2441384 PH: 9906631702

JHARKHAND

RANCHI

 PODDAR MOTOR (P) LTD. (5181-51-01), 47, 48, KOKAR INDUSTRIAL AREA, RANCHI. - 834001 PH:2544661, 2542650.

KERALA

COCHIN

 AUTOTEAM SALES & SERVICES PVT.LTD (2781-27-01), PIPELINE ROAD, PADIVATTOM, COCHIN, ERNAKULAM, COCHIN - 682024 PH :9025730007.

PATHANAMTHITTA

 AGT MOTORS (W881-W8-01), AGT TOWERS, PUTHENPEEDI, OMALLUR, PATHANAMTHITTA -689640
 PH 9288117477.

MADHYA PRADESH

NEEMUCH

 AUTO SCAN (3T81-3T-01), MHOW ROAD, NEEMUCH, MADHYAPRADESH, - 458441 PH: 9425106588.

MAHARASHTRA

PUNE

 MARUTI CARE POINT (1981-19-02), 1711, RAHATANI, AUNDH-CHINCHWAD ROAD. OPP POMC TO PRABHAG KARYALAY, NEXT TO HP SUBHIKA PETROL PUMP, RAHATNI, PUNE, MAHARASHTRA - 411017 PH :968901459.

THANE

 THANAWALA MOTOR AGENCY (P) LTD (3981-39-01), B-31, OPPOSITE ITI,WAGLE ESTATE MAIN ROAD,WAGLE ESTATE,THANE -400007 PH 9833947772 9833947778.

ODISHA

KEONJHAR

21. KUMAR AUTOMOBILES (7U81-7U-01), DHRUPADA, KEONJHAR, ORISSA - 758001 PH 9437075366

PUNJAB

BATALA

 CITI AUTOMOBILES (V581-V5-01), NEAR GURUDWARA ACHAL SAHIB, PATHANKOT JALANDHAR ROAD, BATALA, - 143505 PH :9876024243 . 9876024254.

MOGA

 SM AUTO CARE CENTRE (H681-H6-01), OOP. ITI , G.T. ROAD, MOGA - 142001 PH: 06136-226807

RAJASTHAN

JAIPUR

 KATARIA AUTOZONE PVT.LTD (1181-11-01), 1-A ; NARAYANPURI,KATARIA KRISHI FARM,SIRSI ROAD,JAIPUR - 302034 PH:7427059388.

TELANGANA

HYDERABAD

 RETOUCH (1082-10-01), H.NO. 3-67/A, B, C, D,NEW NAGOLE COLONY,NAGOLE VILLAGE, HYDERABAD,NAGOLE, HYDERABAD - 500068 PH :9848062263.

UTTAR PRADESH

ALIGARH

 VINEET MOTORS (B681-B6-02), PLOT NO.D-138 &139, SECTOR-1, TALA NAGARI, RAMGHAT ROAD, ALIGARH - 202001
 PH :9917473052, 9582123586.

GHAZIABAD

 KAP AUTOMOBILES PVT. LTD. (5981-59-01), D-BLOCK SHASHTRI NAGAR, HAPUR ROAD, GHAZIABAD - 201002 PH:0120-4538200, 9717629599, 9810523345.

PH:9582945510.9999107841.

CHIRAG AUTOMOBILES (5983-59-01), PLOT NO.
 B1, SECTOR-B3, TRONICA CITY, GHAZIABAD 201102

LUCKNOW

 K M AUTOCRAFT (1381-13-01), 76/3, BARAURA, HUSSAIN BARI, HARDOI ROAD, LUCKNOW -226003
 PH :2473369.

MEERUT

 UNIQUE CAR SCANNERS (4881-48-01), PLOT NO:514/4, SURAJ KUND ROAD, MEERUT, -250001 PH:9837072642.

NOIDA

MOTORCRAFT INDIA PVT LTD (A181-A1-01), F-8
 \$ 9,SECTOR-8,NOIDA - 201301
 PH:08826172222 & 09971689689.

MOTORCRAFT INDIA PVT LTD (A181-A1-02),
 C-125,SECTOR-63,NOIDA, - 201301
 PH:09958732222 & 09910282222.

JKM MOTORS (A184-A1-01), A-25,SECTOR
 9,DISTT. GAUTAM BUDH NAGAR,NOIDA - 201301
 PH:0120-4052400, 9899424000.

 FAST TRACK AUTOCARE(INDIA) PVT. LTD. (A185-A1-01), A-13, SECTOR 63, NOIDA, G.B. NAGAR - 201301 PH :4581111: 4581131/9650631111.

SAHIBABAD

 FAST TRACK SERVICES (M981-M9-01), PLOT NO.40/18/2, 3 & 4, SITE 4, INDUSTRIAL AREA, SAHIBABAD, DISTT. GHAZIABAD (U.P.). - 201010 PH :9560868111.

UNNAO

 VISHAL WHEELERS PVT. LTD. (1382-KL-01), PLOT NO. 1164, KANPUR-LUCKNOW BYE PASS, UNNAO, UTTAR PRADESH, - 209801 PH :2830610 2831248

VARANASI

 PRATAP ENGINEERS (8481-84-01), S 2, 653/A-2, CLUB ROAD, VARANASI - 221002 PH:25100469, 9415203641.

WEST BENGAL

KOLKATA

 MANOCO SALES (P) LTD. (0681-06-01), 25/1, CHETLA CENTRAL ROAD, OPPOSITE CHETLA PARK, KOLKATA - 700027 PH:24568326, 24468568, 24568325.

BATTERY LABEL SYMBOL MEANINGS

&	No smoking, no naked flames, no sparks		Battery acid
	Shield eyes		Note operating instructions
	Keep away from children		Explosive gas

Prepared by

MARUTI SUZUKI INDIA LIMITED

Service Division May, 2023

Part No. 99011M80T00-74E Printed in India

For 24 X 7 assistance, contact Toll Free number 1800 102 6392[#] / 1800 200 6392[#] (NEXA)

/Sérvice/División /**MARUTI SUZUKI INDIA LIMITED** /Palam Gurgaon Road, Gurgaon - 122 015 (Haryana) /www.marutisuzuki.com