

- SRE Intake manifold injection (from the German Saugrohreinspritzung).
- MG5 5-speed manual gearbox.
- MG6 6-speed manual gearbox.
- TDI® Diesel engines with direct injection and turbocharging.
- TSI® Petrol engines with direct injection and charging.
- TWI Tread Wear Indicator.
- XDL Extension of the electronic differential lock.

A

- Abroad* (Using the vehicle in other countries and continents)
 - Extended trips with your vehicle* (Using the vehicle in other countries and continents)
 - Selling the vehicle* (Using the vehicle in other countries and continents)
- ABS* (Brake support systems)
- Accessing a service message* (Service interval display)
- Accessories* (Seat belts)
- ACCI* (Front view)
- Acoustic warnings* (Overview of the driver side)
- Active cylinder management (ACT)* (Displays)
 - Function* (An economic driving style)
 - Status display
 - Displays*
- Adaptive Cruise Control (ACC)* (Front view)
 - Displays
 - Adaptive Cruise Control (ACC)*
 - Displays, warning and indicator lamps*
 - Operating Adaptive Cruise Control (ACC)* (Adaptive Cruise Control (ACC))
 - Fault* (Adaptive Cruise Control (ACC))
 - Operating
 - Operating Adaptive Cruise Control (ACC)*
 - Special driving situations* (Operating Adaptive Cruise Control (ACC))
 - Radar sensor*
 - Special driving situations*
 - Switching off temporarily* (Switch off the Adaptive Cruise Control (ACC) temporarily in the following situations)
 - Warning and indicator lamps
 - Adaptive Cruise Control (ACC)*
 - Displays, warning and indicator lamps*
 - Operating Adaptive Cruise Control (ACC)* (Adaptive Cruise Control (ACC))
- Adjusting* (Correct sitting position)
 - Correct sitting position*
 - Headlight range* (Headlight range control, instrument and switch lighting)
 - Mechanical front seats* (Mechanical controls on the front seats)
 - Steering wheel* (Adjusting the steering wheel position)
- Adjusting* (Adjusting the head restraints)
- Aerial* (Radio reception and aerials)
- Air conditioning system* (Rear view)
 - Air conditioning system (manual)* (Controls for the air conditioning system)
 - Air recirculation mode
 - Air recirculation mode*
 - Controls for the air conditioning system*
 - Controls for the heating and fresh air system*
 - Information on the air conditioning system* (Controls for the air conditioning system)
 - Climatronic* (Controls for the air conditioning system)
 - Controls* (Controls for the air conditioning system)
 - Fault* (Information on the air conditioning system)
 - Information* (Information on the air conditioning system)
 - Settings* (Information on the air conditioning system)
 - Start/stop system* (Heating, ventilating, cooling)
 - Things to note* (Information on the air conditioning system)
 - Vents
 - Information on the air conditioning system*
 - Vents* (Information on the air conditioning system)
- Air conditioning system (manual)* (Rear view)

Air pressure (Tyre pressure)

Air recirculation mode (Controls for the air conditioning system)

Operation

Air recirculation mode

Controls for the air conditioning system

Controls for the heating and fresh air system

Information on the air conditioning system (Controls for the air conditioning system)

Switching off

Air recirculation mode

Controls for the air conditioning system

Controls for the heating and fresh air system

Information on the air conditioning system (Controls for the air conditioning system)

Switching off temporarily

Air recirculation mode

Controls for the air conditioning system

Controls for the heating and fresh air system

Information on the air conditioning system (Controls for the air conditioning system)

Airbag system (Overview of the driver side)

Cleaning the dash panel (Cleaning and caring for the dash panel, wooden trims and plastic parts)

Combined curtain and side airbags

Curtain airbags

Description (Description and function of the airbags)

Different front passenger front airbag systems (Types of front passenger front airbag system)

Faults (Repairs and faults in the airbag system)

Front airbags

Function (Description and function of the airbags)

Indicator lamp

Indicator lamps

Switching the front passenger front airbag on and off manually using the key-operated switch (Indicator lamps)

Locking the vehicle after deployment (Locking the vehicle after the airbag has been triggered)

Repairs (Repairs and faults in the airbag system)

Side airbags

Switching off the front passenger front airbag

Switching the front passenger front airbag on and off manually using the key-operated switch

Types of front passenger front airbag system

Switching off with the key switch

Switching the front passenger front airbag on and off manually using the key-operated switch

Types of front passenger front airbag system

Using child seats (Switching the front passenger front airbag on and off manually using the key-operated switch)

Vehicle care (Cleaning and caring for the dash panel, wooden trims and plastic parts)

Alarm button on the vehicle key (Vehicle key)

Alarm system (SAFELOCK mechanism)

Alcantara (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)

All-year tyres (Tyre lettering)

Alternator (Warning lamp)

Aluminium (Cleaning and caring for chrome and aluminium trim parts)

Anodised surfaces (Cleaning and caring for chrome and aluminium trim parts)

Anti-lock brake system (ABS) (Brake support systems)

Anti-theft alarm (SAFELOCK mechanism)

Anti-tow alarm

Anti-theft alarm

Frequently asked questions

Interior monitoring system and anti-tow alarm

SAFELOCK mechanism

Description

Anti-theft alarm

SAFELOCK mechanism

Interior monitoring system

[Anti-theft alarm](#)[Frequently asked questions](#)[Interior monitoring system and anti-tow alarm](#)[SAFELOCK mechanism](#)[Risk of false alarm \(Interior monitoring system and anti-tow alarm\)](#)

Trailer

[Hitching and connecting the trailer](#)[Anti-theft wheel bolts \(Side view\)](#)[Anti-tow alarm \(SAFELOCK mechanism\)](#)[Antifreeze \(Coolant specification\)](#)[Applications \(Applications \(\)\)](#)[Apps \(Applications \(\)\)](#)[Area monitoring system \(Front view\)](#)

City Emergency Brake function

[City Emergency Brake function](#)[Using the Cruise Control System \(CCS\)](#)

Displays

[Fault \(Area monitoring system \(Front Assist\)\)](#)[Operating \(Operating the area monitoring system \(Front Assist\)\)](#)[Radar sensor](#)

Switching off temporarily

[Operating the area monitoring system \(Front Assist\)](#)[Temporarily switch off the area monitoring system \(Front Assist\) in the following situations \(Operating the area monitoring system \(Front Assist\)\)](#)

System limits

[Armrest \(Centre armrest\)](#)[Ashtray \(Ashtray and cigarette lighter\)](#)[Assist systems \(Front view\)](#)

ACC

[Accessories, modifications, repairs and renewal of parts](#)[Adaptive Cruise Control \(ACC\)](#)[Area monitoring system \(Front Assist\)](#)[Assist systems menu](#)[Cruise Control System \(CCS\)](#)[Front view](#)[Overview of the driver side](#)[Vehicle settings menu](#)[Warning and indicator lamps \(Front view\)](#)

Adaptive Cruise Control (ACC)

[Accessories, modifications, repairs and renewal of parts](#)[Adaptive Cruise Control \(ACC\)](#)[Area monitoring system \(Front Assist\)](#)[Assist systems menu](#)[Cruise Control System \(CCS\)](#)[Front view](#)[Overview of the driver side](#)[Vehicle settings menu](#)[Warning and indicator lamps \(Front view\)](#)[Anti-lock brake system \(ABS\) \(Brake support systems\)](#)

Area monitoring system (Front Assist)

[Area monitoring system \(Front Assist\)](#)[Assist systems menu](#)[Front view](#)[Vehicle settings menu](#)[Warning and indicator lamps \(Front view\)](#)[Automatic Post-Collision Braking System \(Brake support systems\)](#)

Brake Assist system (BAS) (Brake support systems)**CCS**

Accessories, modifications, repairs and renewal of parts

Adaptive Cruise Control (ACC)

Area monitoring system (Front Assist)

Cruise Control System (CCS)

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

Cruise Control System (CCS)

Accessories, modifications, repairs and renewal of parts

Adaptive Cruise Control (ACC)

Area monitoring system (Front Assist)

Cruise Control System (CCS)

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

Driver Alert System

Driver Alert System (recommendation for rest breaks)

Vehicle settings menu

Electronic differential lock (EDL) (Brake support systems)**Electronic stabilisation control (ESC)**

Brake support systems

Switching TCS, TCS with ESC or ESC Sport on and off

Warning and indicator lamps

Hill Hold Assist**Parking aid**

Accessories, modifications, repairs and renewal of parts

Changing gear

Front view

ParkPilot

Rear view

Reversing camera (Rear View)

Upper section of the centre console

Vehicle settings menu (Front view)

ParkPilot

Accessories, modifications, repairs and renewal of parts

Changing gear

Front view

ParkPilot

Rear view

Reversing camera (Rear View)

Upper section of the centre console

Vehicle settings menu (Front view)

Recommendation for rest breaks

Driver Alert System (recommendation for rest breaks)

Vehicle settings menu

Reversing camera

ParkPilot

Rear view

Reversing camera (Rear View) (Rear view)

Sport Select chassis

suspension

Upper section of the centre console

Warning and indicator lamps (Upper section of the centre console)

Start/stop

Indicator lamps

Start/stop system (Indicator lamps)

Traction control system (TCS)

Brake support systems
Switching TCS, TCS with ESC or ESC Sport on and off
Warning and indicator lamps

Tyre monitoring system

Accessories, modifications, repairs and renewal of parts
After changing a wheel
Handling wheels and tyres
Hubcaps
New wheels and tyres
Overview of the front passenger side
Snow chains
Stowing items of luggage
Tyre monitoring system
Tyre pressure
Vehicle settings menu
Warning and indicator lamps
Wheels and tyres
Winter tyres (Overview of the front passenger side)

Tyre Pressure Loss Indicator

Indicator lamp
Tyre Pressure Loss Indicator (Indicator lamp)

Asymmetrical tyres (Tyre lettering)

Automatic belt retractor (Automatic belt retractor, belt tensioner, belt tension limiter)

Automatic car wash (Washing the vehicle)

Automatic gearbox (Overview of the driver side)

Changing gear (Automatic gearbox: selecting a gear)

Coasting (Driving with an automatic gearbox)

Driving

Driving with an automatic gearbox
Frequently asked questions (Driving with an automatic gearbox)

Dual clutch gearbox

Driving with an automatic gearbox
Frequently asked questions (Driving with an automatic gearbox)

Fault

DSG dual clutch gearbox
Fault in the automatic gearbox
Warning and indicator lamps

Kickdown function

Driving with an automatic gearbox
Frequently asked questions (Driving with an automatic gearbox)
Pulling away on inclines (Driving with an automatic gearbox)
Safety interlock for vehicle key (Ignition lock)
see also DSG dual clutch gearbox (DSG dual clutch gearbox)

see Automatic gearbox

Changing gear
Cruise Control System (CCS)
Displays
Engine management system and exhaust purification system
Information on changing bulbs
Instruments
Lifting the vehicle with the jack (type 1)
Lifting the vehicle with the jack (type 2)
Lower section of the centre console
Mirrors
Notes on towing
Overview of the driver side
Preparation

[Preparations for changing a wheel](#)
[Preparing the vehicle for working in the engine compartment](#)
[Starting and stopping the engine](#)
[Tow-starting and towing](#)
[Towing a trailer](#)
[Warning and indicator lamps](#)
[Warning and indicator lamps](#)
[Windscreen wipers and washer \(Overview of the driver side\)](#)

see Changing gear

[Changing gear](#)
[Cruise Control System \(CCS\)](#)
[Displays](#)
[Engine management system and exhaust purification system](#)
[Information on changing bulbs](#)
[Instruments](#)
[Lifting the vehicle with the jack \(type 1\)](#)
[Lifting the vehicle with the jack \(type 2\)](#)
[Lower section of the centre console](#)
[Mirrors](#)
[Notes on towing](#)
[Overview of the driver side](#)
[Preparation](#)
[Preparations for changing a wheel](#)
[Preparing the vehicle for working in the engine compartment](#)
[Starting and stopping the engine](#)
[Tow-starting and towing](#)
[Towing a trailer](#)
[Warning and indicator lamps](#)
[Warning and indicator lamps](#)
[Windscreen wipers and washer \(Overview of the driver side\)](#)

[Stopping on inclines \(Driving with an automatic gearbox\)](#)

[Tow-starting \(Notes on tow-starting\)](#)

Towing

[Fitting the front towing eye](#)
[Notes on towing](#)
[Rear towing eye \(Notes on towing\)](#)

[Unlocking the selector lever lock manually](#)

[Automatic headlight control \(Lights and vision – functions\)](#)

[Automatic Post-Collision Braking System \(Brake support systems\)](#)

[Automatic switch-off for electrical consumers \(Charging, replacing, disconnecting and connecting the vehicle battery\)](#)

[AUX-IN socket \(Lower section of the centre console\)](#)

[Auxiliary equipment or body parts \(Repairs and technical modifications\)](#)

[Axle weight rating \(Vehicle-specific weight ratings\)](#)

B

[Bag hook](#)

[Ball coupling \(Fitting the removable ball coupling\)](#)

Fitting

[Fitting the removable ball coupling](#)
[Notes on towing \(Fitting the removable ball coupling\)](#)

Mounting

[Fitting the removable ball coupling](#)
[Notes on towing \(Fitting the removable ball coupling\)](#)

Ready position

[Fitting the removable ball coupling](#)
[Notes on towing \(Fitting the removable ball coupling\)](#)

[Removing \(Removing the ball coupling\)](#)

[BAS \(Brake support systems\)](#)

[Battery \(Warning and indicator lamps\)](#)

Replacing in vehicle key

[Indicator lamp in the vehicle key](#)

[Replacing the battery](#)

[Vehicle key](#)

see [Vehicle battery](#)

[Accessories, modifications, repairs and renewal of parts](#)

[Engine management system and exhaust purification system](#)

[Frequently asked questions](#)

[How to start the engine using jump leads](#)

[Jump starting](#)

[Preparation for working in the engine compartment](#)

[Pull-away assist systems](#)

[Steering](#)

[Vehicle battery](#)

[Warning and indicator lamps](#)

[Belt height adjuster \(Seat belt routing\)](#)

[Belt tension limiter \(Automatic belt retractor, belt tensioner, belt tension limiter\)](#)

[Belt tensioner \(Automatic belt retractor, belt tensioner, belt tension limiter\)](#)

Disposal

[Automatic belt retractor, belt tensioner, belt tension limiter](#)

[Service and disposal of belt tensioners \(Automatic belt retractor, belt tensioner, belt tension limiter\)](#)

Service and disposal

[Automatic belt retractor, belt tensioner, belt tension limiter](#)

[Service and disposal of belt tensioners \(Automatic belt retractor, belt tensioner, belt tension limiter\)](#)

[Bench seat \(Folding the seat cushion and backrests on the rear bench seat forwards and backwards\)](#)

[Biodiesel \(Diesel\)](#)

[Bonnet \(Warning lamp\)](#)

[Opening and closing \(Opening and closing the bonnet\)](#)

Warning lamp

[Opening and closing the bonnet](#)

[Warning lamp](#)

[Boot lid \(Rear view\)](#)

[Bottle holder \(Drink holder\)](#)

[Brake Assist system \(BAS\) \(Brake support systems\)](#)

[Brake fluid \(Warning and indicator lamps\)](#)

[Brake servo \(Information on the brakes\)](#)

[Brake support systems](#)

[Brake system \(Brake support systems\)](#)

[Brakes \(Upper section of the centre console\)](#)

Brake fluid

[Brake fluid](#)

[Warning and indicator lamps](#)

Brake fluid level

[Brake fluid](#)

[Warning and indicator lamps](#)

Brake pads

[Information on the brakes](#)

[Running-in \(Information on the brakes\)](#)

[Brake servo \(Information on the brakes\)](#)

[Brake support systems](#)

[Changing the brake fluid \(Brake fluid\)](#)

[Emergency brake lights for hard braking \(Making you and your vehicle safe\)](#)

Fault

[Information on the brakes](#)

[Warning and indicator lamps](#)

Handbrake

*Handbrake**Warning and indicator lamps*

Running in brake pads

*Information on the brakes**Running-in* (Information on the brakes)

Warning and indicator lamps

*Handbrake**Warning and indicator lamps**Breakdown* (Making you and your vehicle safe)*Breakdown set* (Wheels and tyres)*Contents* (Contents of the breakdown set)*Inflating the tyre* (Sealing and inflating tyres)*More than one damaged tyre* (Breakdown set)*Preparation**Sealing the tyre* (Sealing and inflating tyres)

Test after driving for 10 minutes

*Sealing and inflating tyres**Test after driving for 10 minutes* (Sealing and inflating tyres)

When not to use

*Breakdown set**Preparation* (Breakdown set)*Bulb defect* (Front view)**C***Camera**Capacities* (Checking and refilling the windscreen washer fluid level)

Fuel tank

*Capacities**Indicator lamps and fuel gauge**Washer fluid reservoir* (Checking and refilling the windscreen washer fluid level)*Car telephone* (Retrofitting two-way radios)*Car-Net* (Car-Net services)*Activation* (Car-Net services)*Availability* (Car-Net services)*Exchanging your system* (Car-Net services)*Interferences* (Car-Net services)*Lending or selling the vehicle to others* (Car-Net services)*Registration* (Car-Net services)*Services* (Car-Net services)*Card holder* (Stowage compartment on the front passenger side)*Care* (Rear view)*Catalytic converter* (Indicator lamps)*Fault* (Indicator lamps)*Indicator lamp* (Indicator lamps)*CCS* (Overview of the driver side)*Central locking system* (Side view)

Anti-theft alarm

*Anti-theft alarm**SAFELOCK mechanism*

Central locking button

*Description of the central locking system**Locking and unlocking the vehicle from the inside**SAFELOCK mechanism* (Description of the central locking system)*Description* (Description of the central locking system)

Locking and unlocking from the inside

Description of the central locking system

Locking and unlocking the vehicle from the inside

SAFELOCK mechanism (Description of the central locking system)

Locking and unlocking from the outside

Description of the central locking system

Locking and unlocking the vehicle from the outside

SAFELOCK mechanism (Description of the central locking system)

SAFELOCK mechanism

Anti-theft alarm

Indicator lamp

Interior monitoring system and anti-tow alarm

Locking and unlocking the vehicle from the inside

Locking and unlocking the vehicle from the outside

SAFELOCK mechanism (Indicator lamp)

Single door opening (Description of the central locking system)

Centre armrest

Centre console (Upper section of the centre console)

Changing a wheel (Side view)

After changing a wheel

Lifting the vehicle

Changing a wheel

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2) (Lifting the vehicle with the jack (type 1))

More than one damaged tyre (Changing a wheel)

Preparation

Changing a wheel

Preparations for changing a wheel

Wheel bolts

Changing a wheel

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2)

Wheel bolts

Changing bulbs (Front view)

Checklist (Information on changing bulbs)

Front bumper (Changing bulbs in the front bumper)

Front headlights (LED) (Changing bulbs in the front headlights (LED))

Headlights

Changing bulbs in the front headlights (halogen H7)

Changing bulbs in the front headlights (LED)

Removing and installing the headlights

In front headlights (halogen H7) (Changing bulbs in the front headlights (halogen H7))

In front headlights (xenon) (Changing bulbs in the front headlights (xenon))

Indicator lamp

Number plate (Changing the bulb in the number plate light)

Preparation

Changing bulbs in the front bumper

Changing bulbs in the front headlights (halogen H7)

Changing bulbs in the front headlights (LED)

Changing bulbs in the front headlights (xenon)

Changing bulbs in the side turn signals

Changing the bulb in the number plate light

Changing the bulbs in the tail light cluster

Information on changing bulbs

Side marker lights (Changing bulbs in the side turn signals)

Tail light cluster (Changing the bulbs in the tail light cluster)

Changing gear (Overview of the driver side)

Automatic gearbox (Automatic gearbox: selecting a gear)

Gear-change indicator

Manual gearbox (Manual gearbox: selecting a gear)

Selecting a gear (automatic gearbox) (Automatic gearbox: selecting a gear)

Selecting a gear (manual gearbox) (Manual gearbox: selecting a gear)

Unlocking the selector lever lock manually

Warning and indicator lamps

With Tiptronic

Changing gear using Tiptronic

Driving with an automatic gearbox

Gear-change indicator (Changing gear using Tiptronic)

Chassis control (Upper section of the centre console)

Chassis number (Vehicle identification data)

Checking the oil level (Warning and indicator lamps)

Checklist (Preparing for a journey and driving safely)

Before working in the engine compartment (Preparing the vehicle for working in the engine compartment)

Breakdown (Making you and your vehicle safe)

Breakdown set (Preparation)

Changing bulbs (Information on changing bulbs)

Checking the engine oil level (Checking the engine oil level and refilling engine oil)

Checks when filling the tank

Driving abroad

Driving safely (Preparing for a journey and driving safely)

Emergency (Making you and your vehicle safe)

Lifting the vehicle with the jack

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2) (Lifting the vehicle with the jack (type 1))

Preparation for a journey (Preparing for a journey and driving safely)

Preparation for changing a wheel (Preparations for changing a wheel)

Refilling the engine oil (Checking the engine oil level and refilling engine oil)

Seat belts (Using seat belts)

Seat covers (Caring for seat covers)

Checks when filling the tank

Child seat (Preparing for a journey and driving safely)

Airbag sticker (Basic information on fitting and using child seats)

Approval categories (Types of child seat)

Securing systems

Securing with a lockable seat belt

Securing child seats with a seat belt

Securing systems

Securing with a seat belt

Securing child seats with a seat belt

Securing systems

Securing with ISOFIX

Securing a child seat with ISOFIX

Securing systems

Securing with the top tether upper strap

Securing child seats with the upper strap (top tether)

Securing systems

Standards (Types of child seat)

Switching off the front passenger front airbags (Switching the front passenger front airbag on and off manually using the key-operated switch)

Weight classes (Types of child seat)

Childproof lock

Chrome (Cleaning and caring for chrome and aluminium trim parts)

Cigarette lighter (Ashtray and cigarette lighter)

City Emergency Brake function (Using the Cruise Control System (CCS))

Cleaning (Rear view)

Climatronic (Rear view)

Clock (Instrument overview)

Closing (Overview of the driver door)

Doors

Central locking system

Displays

Doors

Manual opening and closing

Overview of the driver door

From the inside

Description of the central locking system

Locking and unlocking the vehicle from the inside

SAFELOCK mechanism (Description of the central locking system)

Panorama sliding/tilting glass roof (Opening and closing the electric panorama sliding/tilting glass roof)

Tailgate (Closing the tailgate)

Windows (Opening or closing the windows electrically)

Coasting (Driving with an automatic gearbox)

Coat hook (Other stowage areas)

Cockpit (Overview of the driver side)

Code number (Contents)

Coin holders (Stowage compartment on the front passenger side)

Combined curtain and side airbags

Comfort tyre pressure (Tyre pressure)

Coming Home function (and functions (orientation lighting))

Compass display (Displays)

Component protection

Consumables (Service fluids and consumables)

Consumer information (Side view)

Control units (Information stored in the control units)

Convenience functions (Information stored in the control units)

Convenience opening and closing (Opening or closing the windows electrically)

Electric windows

Electric windows – functions

Opening or closing the windows electrically

Roll-back function for the electric windows

Roll-back function of the electric panorama sliding/tilting glass roof (Opening or closing the windows electrically)

Panorama sliding/tilting glass roof (Electric panorama sliding/tilting glass roof – function)

Coolant (Warning and indicator lamps)

Checking the coolant level

Checking the coolant level and refilling coolant

Warning lamp and coolant temperature display

Filler opening

Checking the coolant level and refilling coolant

Warning lamp and coolant temperature display

G 12 plus-plus

Checking the coolant level and refilling coolant

Coolant specification

G 13

Checking the coolant level and refilling coolant

Coolant specification

Refilling

Checking the coolant level and refilling coolant

Warning lamp and coolant temperature display

Specification

Checking the coolant level and refilling coolant

Coolant specification

Temperature display (Warning lamp and coolant temperature display)

Warning and indicator lamps (Warning lamp and coolant temperature display)

Cooling the stowage compartment (Stowage compartment on the front passenger side)

Counter steering assistance (Information on steering)

Cruise Control System (Front view)

Display (Display and indicator lamps)

Indicator lamp (Display and indicator lamps)

see Adaptive Cruise Control (ACC)

Accessories, modifications, repairs and renewal of parts

Adaptive Cruise Control (ACC)

Area monitoring system (Front Assist)

Assist systems menu

Cruise Control System (CCS)

Front view

Overview of the driver side

Vehicle settings menu

Warning and indicator lamps (Front view)

Cruise Control System (CCS) (Overview of the driver side)

Curtain airbags

Cylinder deactivation (Displays)

D

Dash panel (Overview of the driver side)

Airbag system

Accessories, modifications, repairs and renewal of parts

Adjusting the seat position

Airbag system

Automatic belt retractor, belt tensioner, belt tension limiter

Basic information on fitting and using child seats

Cleaning and caring for the dash panel, wooden trims and plastic parts

Luggage compartment

Overview of the driver side

Overview of the front passenger side

Seat belts

Seat functions

Upper section of the centre console

Warning and indicator lamps (Overview of the driver side)

Cleaning (Cleaning and caring for the dash panel, wooden trims and plastic parts)

Data Link Connector (DLC) (Information stored in the control units)

Data recorders (Information stored in the control units)

Daytime headlights (Lights and vision – functions)

Daytime running lights (Lights and vision – functions)

De-icing door lock cylinders

Declaration of conformity

Decorative film (Cleaning and caring for the decorative film)

Diagnostic connection (Information stored in the control units)

Diesel (Indicator lamps and fuel gauge)

Biodiesel (Diesel)

Filling the tank (Filling the tank with petrol or diesel)

Filter preheater (Diesel)

Fuel gauge (Indicator lamps and fuel gauge)

Supplementary heater (Diesel)

Winter diesel

Diesel

Diesel particulate filter (Gear-change indicator)

Fault (Indicator lamps)

Gear-change indicator

Indicator lamp (Indicator lamps)

Regeneration (Diesel particulate filter)

- Things to note* (Diesel)
- Differential lock* (Brake support systems)
- Digital clock* (Instrument overview)
- Dimensions*
- Dipped beam headlights* (Indicator lamps)
- Display* (Instrument overview)
- Displays* (Instrument overview)
 - Adaptive Cruise Control (ACC)
 - Adaptive Cruise Control (ACC)*
 - Displays, warning and indicator lamps*
 - Operating Adaptive Cruise Control (ACC)* (Adaptive Cruise Control (ACC))
 - Area monitoring system* (Displays)
 - Cruise Control System* (Display and indicator lamps)
 - Engine code* (Displays)
 - Front Assist* (Displays)
 - Gear-change indicator* (Displays)
 - Mileage displays* (Displays)
 - Open doors, bonnet and tailgate* (Displays)
 - Outside temperature display* (Displays)
 - Selector lever positions* (Displays)
 - Service interval display
 - Displays*
 - Service interval display* (Displays)
 - Speed warning* (Displays)
 - Start/stop system* (Displays)
 - Time
 - Displays*
 - Instrument overview*
 - Warning and information messages* (Displays)
- Displays in the instrument cluster* (Overview of the menu structure)
- Disposal* (Automatic belt retractor, belt tensioner, belt tension limiter)
 - Airbag system* (Recycling and scrapping end-of-life vehicles)
- Belt tensioner
 - Automatic belt retractor, belt tensioner, belt tension limiter*
 - Service and disposal of belt tensioners* (Automatic belt retractor, belt tensioner, belt tension limiter)
 - End-of-life vehicle* (Recycling and scrapping end-of-life vehicles)
- Door release lever* (Side view)
- Doors* (Overview of the driver door)
 - Childproof lock*
 - Manual opening and closing
 - Locking and unlocking the driver door manually*
 - Locking the front passenger door and rear doors manually* (Locking and unlocking the driver door manually)
 - Warning lamp*
- Drawbar load* (Towing a trailer)
- Drawers*
- Drink holder* (Lower section of the centre console)
 - Front centre console* (Drink holders in the centre console)
 - Rear centre console* (Drink holders in the centre console)
- Driver Alert System* (Vehicle settings menu)
 - Fault* (Driver Alert System (recommendation for rest breaks))
 - Function* (Function and operation by the user)
 - Operation by the user* (Function and operation by the user)
 - Switching on and off* (Function and operation by the user)
- Driver assist systems* (Upper section of the centre console)
- Driver door* (Overview of the driver door)
 - Manual opening and closing
 - Locking and unlocking the driver door manually*

Locking the front passenger door and rear doors manually (Locking and unlocking the driver door manually)

Overview (Overview of the driver door)

Driving (Displays)

Before setting off

Airbag system

Driving tips

Data recording (Information stored in the control units)

Driving abroad

Driving abroad

Using the vehicle in other countries and continents (Driving abroad)

Driving economically

Displays

Driving tips

Driving with respect for the environment

Menu and system settings (SETUP)

Roof carrier

Technical data

Towing a trailer (Displays)

Driving tips

Airbag system

Driving tips

Driving with respect for the environment

Displays

Driving tips

Driving with respect for the environment

Menu and system settings (SETUP)

Roof carrier

Technical data

Towing a trailer (Displays)

Engine and transmission guard (Driving tips)

Fuel gauge (Indicator lamps and fuel gauge)

Fuel level too low (Indicator lamps and fuel gauge)

Parking on a downward incline (Parking)

Parking on an upward incline (Parking)

Preparing for a journey (Preparing for a journey and driving safely)

Pulling away on inclines (Driving with an automatic gearbox)

Stopping on inclines (Driving with an automatic gearbox)

Through salt water (Driving through water on roads)

Towing (Driving tips when towing)

Water on the roads (Driving through water on roads)

With a trailer (Towing a trailer)

With an automatic gearbox

Driving with an automatic gearbox

Frequently asked questions (Driving with an automatic gearbox)

Driving abroad

Checklist (Driving abroad)

Headlights (Masking or switching over headlights for driving abroad (travel mode))

Driving economically (Displays)

Driving safely (Preparing for a journey and driving safely)

Driving through salt water (Driving through water on roads)

Driving through water (Driving through water on roads)

Driving tips

Loaded vehicle

Driving tips

Tailgate

Tyre monitoring system

Wheels and tyres (Tailgate)

Spare wheel (Spare wheel or temporary spare wheel)

Temporary spare wheel (Spare wheel or temporary spare wheel)

Driving with respect for the environment (Displays)

DSG dual clutch gearbox (Driving with an automatic gearbox)

DSG dual clutch gearbox (DSG dual clutch gearbox)

Dual clutch gearbox (Warning and indicator lamps)

Dust filter (Heating, ventilating, cooling)

Dynamic headlight range control (Headlight range control, instrument and switch lighting)

E

E10 (Petrol)

EDL (Brake support systems)

Electric windows (Overview of the driver door)

Buttons (Opening or closing the windows electrically)

Convenience opening and closing

Electric windows – functions

Opening or closing the windows electrically

Roll-back function for the electric windows

Roll-back function of the electric panorama sliding/tilting glass roof (Opening or closing the windows electrically)

Fault (Electric windows – functions)

One-touch opening and closing (Electric windows – functions)

Opening or closing (Opening or closing the windows electrically)

Roll-back function (Roll-back function for the electric windows)

Electrical consumers (Socket)

Electrical equipment (Socket in the vehicle)

Electrolyte (Checking the electrolyte level of the vehicle battery)

Electronic differential lock (EDL) (Brake support systems)

Electronic immobilizer

Electronic stabilisation control (ESC) (Warning and indicator lamps)

Emergency (Upper section of the centre console)

Breakdown (Making you and your vehicle safe)

Checklist (Making you and your vehicle safe)

First aid kit (First aid kit and warning triangle)

Hazard warning lights (Making you and your vehicle safe)

Making you and your vehicle safe

Warning triangle (First aid kit and warning triangle)

Emergency brake (Making you and your vehicle safe)

Emergency brake lights (Making you and your vehicle safe)

Emergency breakaway cable (Technical requirements)

Engine (Starting the engine)

Noises (Starting the engine)

Not running smoothly (Fuel)

Running in (Running-in)

Engine and ignition (Overview of the driver side)

12-volt socket (Socket)

Glow (Stopping the engine)

Ignition lock

Immobilizer (Electronic immobilizer)

Indicator lamp (Warning and indicator lamps)

Non-authorised vehicle key (Ignition lock)

Preheating

Starting the engine

Warning and indicator lamps

Starting the engine

Starting the engine

Warning and indicator lamps

Stopping the engine

Engine and transmission guard (Driving tips)

Engine code (Vehicle identification data)

Engine compartment (Front view)

Cleaning (Cleaning the engine compartment)

Coolant

Accessories, modifications, repairs and renewal of parts

Checks when filling the tank

Coolant

Instrument overview

Preparation for working in the engine compartment

Technical data

Warning and indicator lamps

Engine oil

Accessories, modifications, repairs and renewal of parts

Catalytic converter

Checks when filling the tank

Diesel particulate filter

Driving abroad

Engine management system and exhaust purification system

Engine oil

Preparation for working in the engine compartment

Technical data

Warning and indicator lamps

Plenum chamber (Cleaning the engine compartment)

Preparation (Preparing the vehicle for working in the engine compartment)

Vehicle battery

Accessories, modifications, repairs and renewal of parts

Engine management system and exhaust purification system

Frequently asked questions

How to start the engine using jump leads

Jump starting

Preparation for working in the engine compartment

Pull-away assist systems

Steering

Vehicle battery

Warning and indicator lamps

Engine coolant (Warning and indicator lamps)

Engine data

Engine fault (Indicator lamps)

Engine hood (Opening and closing the bonnet)

Engine management system (Warning and indicator lamps)

Engine oil (Warning and indicator lamps)

Changing (Changing engine oil)

Checking the engine oil level

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Consumption (Engine oil consumption)

Dipstick

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Filler opening

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Refilling

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Specification (Engine oil specification)

Warning and indicator lamps

ESC (Warning and indicator lamps)

Electronic stabilisation control (ESC) (Brake support systems)

see Brake support systems

Brake support systems

Switching TCS, TCS with ESC or ESC Sport on and off

Warning and indicator lamps

see *Electronic Stabilisation Control (ESC)* (Brake support systems)

Switching on and off

Brake support systems

Switching TCS, TCS with ESC or ESC Sport on and off

Warning and indicator lamps

ESC Sport (Warning and indicator lamps)

Event data recorder (Information stored in the control units)

Event memory (Information stored in the control units)

Connector (Information stored in the control units)

Reading (Information stored in the control units)

Exhaust purification system (Warning and indicator lamps)

Exhaust purification system (Indicator lamps)

Exterior mirrors

Driving with a trailer (Technical requirements)

Fault (Exterior mirrors)

Folding in (Exterior mirrors)

Vehicle care

Cleaning windows and exterior mirrors

Washing the vehicle

Exterior views

External aerial (Retrofitting two-way radios)

F

Factory plate (Vehicle identification data)

FAQs (Frequently asked questions)

Fastening rings

Fault (Electric windows – functions)

Adaptive Cruise Control (ACC)

Air conditioning system (Information on the air conditioning system)

Area monitoring system (Area monitoring system (Front Assist))

Automatic gearbox

DSG dual clutch gearbox

Fault in the automatic gearbox

Warning and indicator lamps

Catalytic converter (Indicator lamps)

Component protection

Diesel particulate filter (Indicator lamps)

Driver Alert System (Driver Alert System (recommendation for rest breaks))

Dual clutch gearbox

DSG dual clutch gearbox

Fault in the automatic gearbox

Warning and indicator lamps

Electric exterior mirrors (Exterior mirrors)

Electric windows (Electric windows – functions)

Front Assist (Area monitoring system (Front Assist))

Panorama sliding/tilting glass roof (Electric panorama sliding/tilting glass roof)

ParkPilot

Radio reception

Radio reception and aerials

Socket

Rain/light sensor

Sport Select chassis

Function and operation

suspension

Towing bracket (Hitching and connecting the trailer)

Tyre monitoring system (Indicator lamp)

Fault finding (Frequently asked questions)

Fault memory (Information stored in the control units)

Filling the tank (Side view)

At the filling station

Checks when filling the tank

Diesel (Filling the tank with petrol or diesel)

Fuel gauge (Indicator lamps and fuel gauge)

Incorrect fuel (Filling the tank)

Indicator lamp (Indicator lamps and fuel gauge)

Petrol (Filling the tank with petrol or diesel)

Tank flap (Filling the tank with petrol or diesel)

Filter preheater (Diesel)

Fire extinguisher (Technical requirements)

First aid kit (First aid kit and warning triangle)

Fog lights (Indicator lamps)

Front fog lights

Indicator lamps

Switching lights on and off (Indicator lamps)

Rear fog lights

Indicator lamps

Switching lights on and off (Indicator lamps)

Foot mats (Pedals)

Frequently asked questions

Front airbags

Front Assist (Front view)

City Emergency Brake function

City Emergency Brake function

Using the Cruise Control System (CCS)

Displays

Fault (Area monitoring system (Front Assist))

Operating (Operating the area monitoring system (Front Assist))

Radar sensor

see Area monitoring system (Front Assist)

Area monitoring system (Front Assist)

Assist systems menu

Front view

Vehicle settings menu

Warning and indicator lamps (Front view)

Switching off temporarily

Operating the area monitoring system (Front Assist)

Temporarily switch off the area monitoring system (Front Assist) in the following situations (Operating the area monitoring system (Front Assist))

System limits

Front fog lights (Indicator lamps)

Front passenger front airbag (Overview of the driver side)

see Airbag system

Accessories, modifications, repairs and renewal of parts

Adjusting the seat position

Airbag system

Automatic belt retractor, belt tensioner, belt tension limiter

Basic information on fitting and using child seats

Luggage compartment
Overview of the driver side
Overview of the front passenger side
Seat belts
Seat functions
Upper section of the centre console
Warning and indicator lamps (Overview of the driver side)

Switching off with the key switch

Switching the front passenger front airbag on and off manually using the key-operated switch
Types of front passenger front airbag system

Frontal collisions and the laws of physics

Fuel (Technical data)

Diesel

Petrol

Fuel consumption (Displays)

Driving economically

Displays

Driving tips

Driving with respect for the environment

Menu and system settings (SETUP)

Roof carrier

Technical data

Towing a trailer (Displays)

What increases it? (Indicator lamps)

Fuel gauge (Indicator lamps and fuel gauge)

Indicator lamp (Indicator lamps and fuel gauge)

Petrol or diesel (Indicator lamps and fuel gauge)

Fuel level (Indicator lamps and fuel gauge)

Fuses (Overview of the driver side)

Changing (Changing a blown fuse)

Colour coding of fuses (Fuses in the vehicle)

Designs (Fuses in the vehicle)

Detecting a blown fuse (Changing a blown fuse)

Fuse box

Changing a blown fuse

Fuses in the vehicle

In the dash panel (Fuse table)

In the engine compartment (Fuse tables for fuses in the engine compartment)

Preparation for changing (Changing a blown fuse)

G

G 13 (Coolant specification)

Gas discharge bulbs (Switching lights on and off)

Gear-change indicator

Glasses compartment (Stowage compartment on the front passenger side)

Glove compartment (Interior and reading lights)

Lights (Interior and reading lights)

see Stowage areas (Stowage compartment on the front passenger side)

see Stowage areas on the front passenger side (Stowage compartment on the front passenger side)

Glow (Stopping the engine)

Gross combination weight rating (Maximum permitted gross combination weight)

G 12 plus (Coolant specification)

G 12 plus-plus (Coolant specification)

H

Handbrake (Warning and indicator lamps)

Hazard warning lights (Making you and your vehicle safe)

[Head restraints](#) (Adjusting the head restraints)
[Headlight flasher](#) (Indicator lamps)
[Headlight range control](#) (Overview of the driver side)
[Headlights](#) (Indicator lamps)
 [Cleaning system](#) (Windscreen wiper functions)
 [Driving abroad](#) (Masking or switching over headlights for driving abroad (travel mode))
 Removing and installing
 [Changing bulbs in the front headlights \(halogen H7\)](#)
 [Changing bulbs in the front headlights \(LED\)](#)
 [Removing and installing the headlights](#)
[Heated seats](#) (Seat heating)
[Heating and fresh air system](#) (Rear view)
 [Controls](#) (Controls for the heating and fresh air system)
 see Air conditioning system
 [Changing gear](#)
 [Heating, ventilating, cooling](#)
 [Overview of the driver side](#)
 [Overview of the front passenger side](#)
 [Rear view](#)
 [Upper section of the centre console](#)
 [Upper section of the centre console](#)
 [Windscreen wipers and washer](#) (Rear view)
[High-pressure cleaner](#) (Washing the vehicle with a high-pressure cleaner)
[High-visibility waistcoat](#) (Stowage compartment in the front passenger footwell)
[Hill Hold Assist](#)
[Horn](#) (Overview of the driver side)
[Hubcaps](#) (Side view)
 [Wheel bolt caps](#)
 [Wheel cover](#)

[Identification number](#) (Vehicle identification data)
[If and when](#) (Frequently asked questions)
[Ignition](#) (Overview of the driver side)
[Ignition key](#) (Vehicle key)
[Ignition lock](#)
 [Non-authorised vehicle key](#) (Ignition lock)
 [Withdrawal lock](#) (Ignition lock)
[Immobilizer](#) (Starting and stopping the engine)
[Indicator lamp](#) (Indicator lamp in the vehicle key)
 Airbag system
 [Indicator lamps](#)
 [Switching the front passenger front airbag on and off manually using the key-operated switch](#) (Indicator lamps)
[Catalytic converter](#) (Indicator lamps)
[Central locking system](#) (Indicator lamp)
[Changing bulbs](#) (Indicator lamp)
[Checking the oil level](#) (Warning and indicator lamps)
[Cruise Control System](#) (Display and indicator lamps)
[Depress brake](#) (Warning and indicator lamps)
[Diesel particulate filter](#) (Indicator lamps)
[Engine and ignition](#) (Warning and indicator lamps)
[Engine management system](#) (Indicator lamps)
[Engine oil sensor](#) (Warning and indicator lamps)
[Exhaust purification system](#) (Indicator lamps)
[Filling the tank](#) (Indicator lamps and fuel gauge)
[Fuel level](#) (Indicator lamps and fuel gauge)
[In the driver door](#) (Indicator lamp)

Lights (Indicator lamps)

Start/stop system (Indicator lamps)

Tyre monitoring system (Indicator lamp)

Vehicle key (Indicator lamp in the vehicle key)

Windscreen washer fluid level (Indicator lamp)

Information stored in the control units

Infotainment system (Displays)

Settings (SETUP)

and functions (orientation lighting)

City Emergency Brake function

Description of the central locking system

Displays

Driving data

Electric panorama sliding/tilting glass roof – function

Exterior mirrors

Function and operation by the user

Headlight range control, instrument and switch lighting

Lights and vision – functions

Locking and unlocking the vehicle from the inside

Locking and unlocking the vehicle from the outside

Masking or switching over headlights for driving abroad (travel mode)

Menu and system settings (SETUP)

Operating Adaptive Cruise Control (ACC)

Operating the area monitoring system (Front Assist)

Rain/light sensor

Selection menu

Service interval display

Turn signal and main beam lever

Vehicle identification data

Windscreen wiper lever

Winter tyres (Displays)

Vehicle settings

Menu and system settings (SETUP)

Vehicle settings menu (Menu and system settings (SETUP))

Infotainment system settings (Displays)

Inspection (Displays)

Instrument cluster (Overview of the driver side)

Display

Displays

Instrument overview

Service interval display

Service interval display (Instrument overview)

Displays (Overview of the menu structure)

Instruments

Displays

Instrument overview

Service interval display (Instrument overview)

Lighting (Headlight range control, instrument and switch lighting)

Menu structure (Overview of the menu structure)

Service interval display

Displays

Service interval display (Displays)

Symbols

Displays

Instruments

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

Using the selection menu

Driving data

Using the selection menu in the instrument cluster

Warning and indicator lamps

Displays

Instruments

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

Instruments (Instrument overview)

Interior lights (Interior and reading lights)

Interior mirror

Interior monitoring system (SAFELOCK mechanism)

ISOFIX (Preparing for a journey and driving safely)

J

Jump starting (Starting and stopping the engine)

How to (How to start the engine using jump leads)

Jump leads (How to start the engine using jump leads)

Positive terminal and earth connection jump lead connection points

How to start the engine using jump leads

Positive and earth jump lead connection points

K

Kerb weight (Vehicle-specific weight ratings)

Key (Vehicle key)

Key switch (Types of front passenger front airbag system)

Kickdown function (Driving with an automatic gearbox)

L

Lane change flash (Indicator lamps)

Leaving Home function (and functions (orientation lighting))

Lending the vehicle (Car-Net services)

Lifting platform (Vehicle lifting points)

Lifting the vehicle (Vehicle lifting points)

Checklist

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2) (Lifting the vehicle with the jack (type 1))

Jack

Changing a wheel

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2) (Lifting the vehicle with the jack (type 1))

Lifting platform

Vehicle lifting points

With the jack

Changing a wheel

Lifting the vehicle with the jack (type 1)

Lifting the vehicle with the jack (type 2) (Lifting the vehicle with the jack (type 1))

Lights (Front view)

AUTO (Lights and vision – functions)

Coming Home (and functions (orientation lighting))

Daytime headlights (Lights and vision – functions)

Daytime running lights

Headlight range control, instrument and switch lighting

Lights and vision – functions

Dipped beam headlights

Indicator lamps

Switching lights on and off (Indicator lamps)

Fog lights

Indicator lamps

Switching lights on and off (Indicator lamps)

Functions (Lights and vision – functions)

Gas discharge bulbs (Switching lights on and off)

Headlight range control (Headlight range control, instrument and switch lighting)

Indicator lamp (Indicator lamps)

Instrument cluster lighting (Headlight range control, instrument and switch lighting)

Instrument lighting (Headlight range control, instrument and switch lighting)

Interior lights (Interior and reading lights)

Leaving Home (and functions (orientation lighting))

Light switch

Indicator lamps

Switching lights on and off (Indicator lamps)

Main beam lever

and functions (orientation lighting)

Indicator lamps

Switching lights on and off

Turn signal and main beam lever (Indicator lamps)

Parking light

Lights and vision – functions

Switching lights on and off

Turn signal and main beam lever

Permanent parking light

Lights and vision – functions

Reading lights (Interior and reading lights)

Side lights

Indicator lamps

Lights and vision – functions

Switching lights on and off (Indicator lamps)

Signal tones

Indicator lamps

Switching lights on and off (Indicator lamps)

Static cornering light (Lights and vision – functions)

Switch lighting (Headlight range control, instrument and switch lighting)

Switching on and off

Indicator lamps

Switching lights on and off (Indicator lamps)

Turn signal lever

and functions (orientation lighting)

Indicator lamps

Switching lights on and off

Turn signal and main beam lever (Indicator lamps)

Xenon lamps (Switching lights on and off)

Loading (Tailgate)

Driving with an open tailgate

Fastening rings

General notes

Driving tips

Tailgate

Tyre monitoring system

Wheels and tyres (Tailgate)

Load carrier system (Loading the load carrier system)

Luggage compartment

Driving tips

First aid kit and warning triangle

- [Luggage compartment](#)
- [Other stowage areas](#)
- [Removing and fitting head restraints](#)
- [Seat functions](#)
- [Spare wheel or temporary spare wheel](#)
- [Stowage](#)
- [Stowing items of luggage](#)
- [Unlocking the tailgate manually](#) (Removing and fitting head restraints)
- Stowing items of luggage
 - [Driving a loaded vehicle](#)
 - [Stowing items of luggage](#)
- [Trailer](#) (Loading the trailer)
- [Lock button](#) (Warning and indicator lamps)
- [Locking](#) (Description of the central locking system)
 - [After the airbag has been triggered](#) (Locking the vehicle after the airbag has been triggered)
- From the outside
 - [Description of the central locking system](#)
 - [Locking and unlocking the vehicle from the outside](#)
 - [SAFELOCK mechanism](#) (Description of the central locking system)
- [Luggage carrier](#) (Side view)
- [Luggage compartment](#) (Removing and fitting head restraints)
 - Luggage compartment cover
 - [Luggage compartment cover](#)
 - [Variable luggage compartment floor](#) (Luggage compartment cover)
 - [Luggage compartment lights](#) (Interior and reading lights)
- see Luggage compartment
 - [Driving tips](#)
 - [First aid kit and warning triangle](#)
 - [Luggage compartment](#)
 - [Other stowage areas](#)
 - [Removing and fitting head restraints](#)
 - [Seat functions](#)
 - [Spare wheel or temporary spare wheel](#)
 - [Stowage](#)
 - [Stowing items of luggage](#)
 - [Unlocking the tailgate manually](#) (Removing and fitting head restraints)
 - [Variable luggage compartment floor](#)

M

- [Main beam](#) (Indicator lamps)
- [Main beam lever](#) (Indicator lamps)
- [Malfunction](#) (Starting and stopping the engine)
- [Manual gearbox](#) (Overview of the driver side)
 - see Changing gear
 - [Changing gear](#)
 - [Cruise Control System \(CCS\)](#)
 - [Displays](#)
 - [Engine management system and exhaust purification system](#)
 - [Information on changing bulbs](#)
 - [Instruments](#)
 - [Lifting the vehicle with the jack \(type 1\)](#)
 - [Lifting the vehicle with the jack \(type 2\)](#)
 - [Lower section of the centre console](#)
 - [Mirrors](#)
 - [Notes on towing](#)
 - [Overview of the driver side](#)
 - [Preparation](#)

Preparations for changing a wheel

Preparing the vehicle for working in the engine compartment

Starting and stopping the engine

Tow-starting and towing

Towing a trailer

Warning and indicator lamps

Warning and indicator lamps

Windscreen wipers and washer (Overview of the driver side)

Tow-starting (Notes on tow-starting)

Manual opening and closing (Side view)

Driver door

Locking and unlocking the driver door manually

Locking the front passenger door and rear doors manually (Locking and unlocking the driver door manually)

Front passenger door (Locking the front passenger door and rear doors manually)

Rear doors (Locking the front passenger door and rear doors manually)

Tailgate (Unlocking the tailgate manually)

Unlocking the selector lever lock manually

Maximum speed (Performance figures)

Mileage display (Instrument overview)

Mirrors (Side view)

Blind spot

Mirrors

Convenience function (Exterior mirrors)

Exterior mirrors

Folding in the mirrors (Exterior mirrors)

Interior mirror

Mobile ashtray (Ashtray in the drink holder)

Mobile online services

Mobile telephone (Using a mobile telephone in the vehicle without a connection to the external aerial)

Modifications (Repairs and technical modifications)

Modifications to the vehicle (Seat belts)

N

New engine (Running-in)

New tyres (New wheels and tyres)

Noises (Starting the engine)

Adaptive Cruise Control (ACC)

Brake support systems

Engine

Diesel

Starting the engine

Regeneration (Diesel particulate filter)

Tyres (Winter tyres)

Number of seats (Adjusting the seat position)

O

Octane number (Petrol)

Odometer (Instrument overview)

Oil (Warning and indicator lamps)

Oil dipstick (Warning and indicator lamps)

Old tyres (Handling wheels and tyres)

On-Board Diagnostic System (OBD) (Information stored in the control units)

One-touch opening and closing (Electric windows – functions)

Online services (Mobile online services)

Opening (Overview of the driver door)

Bonnet (Opening and closing the bonnet)

Doors

Central locking system

Displays

Doors

Manual opening and closing

Overview of the driver door

From the inside

Description of the central locking system

Locking and unlocking the vehicle from the inside

SAFELOCK mechanism (Description of the central locking system)

Panorama sliding/tilting glass roof (Opening and closing the electric panorama sliding/tilting glass roof)

Tailgate (Opening the tailgate)

Windows (Opening or closing the windows electrically)

Operation (Operating ParkPilot)

Outside temperature display (Displays)

Overview (Side view)

Driver door (Overview of the driver door)

Driver side (Overview of the driver side)

Front passenger side (Overview of the front passenger side)

Front view

Instruments

Displays

Instrument overview

Service interval display (Instrument overview)

Lower section of the centre console

Menu structure (Overview of the menu structure)

Rear view

Roof (Symbols in the roof)

Side view

Changing bulbs in the side turn signals

Side view

Turn signal and main beam lever

and functions (orientation lighting)

Indicator lamps

Switching lights on and off

Turn signal and main beam lever (Indicator lamps)

Upper section of the centre console

Warning and indicator lamps

Displays

Instruments

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

P

Paddles (Changing gear using Tiptronic)

Panic button (Vehicle key)

Panorama sliding/tilting glass roof (Symbols in the roof)

Convenience opening and closing (Electric panorama sliding/tilting glass roof – function)

Fault (Electric panorama sliding/tilting glass roof)

Opening and closing (Opening and closing the electric panorama sliding/tilting glass roof)

Roll-back function (Roll-back function of the electric panorama sliding/tilting glass roof)

Parking (Upper section of the centre console)

Parking aid (Front view)

Parking distance warning system (Front view)

Parking light (Turn signal and main beam lever)

Parking lights (Indicator lamps)

ParkPilot (Front view)

Fault (ParkPilot)

Operating (Operating ParkPilot)

ParkPilot menu

Operating ParkPilot

ParkPilot menu (Operating ParkPilot)

Signal tones and screen display (ParkPilot signal tones and displays)

Towing a trailer

Using a high-pressure cleaner

Cleaning and caring for the decorative film

Washing the vehicle with a high-pressure cleaner

Vehicle path display

Parts (Accessories and parts)

Pedals (Correct sitting position)

Pen holder (Stowage compartment on the front passenger side)

Performance figures

Permanent parking light (Lights and vision – functions)

Petrol (Indicator lamps and fuel gauge)

Additives (Petrol)

Filling the tank (Filling the tank with petrol or diesel)

Fuel (Petrol)

Fuel gauge (Indicator lamps and fuel gauge)

Types (Petrol)

Plates (Information stickers and plates)

Plenum chamber (Cleaning the engine compartment)

Polishing (Waxing and polishing the vehicle)

Pollen filter (Heating, ventilating, cooling)

Pollution filter (Heating, ventilating, cooling)

Preheating (Warning and indicator lamps)

Preparation (Preparing for a journey and driving safely)

Before every trip (Preparing for a journey and driving safely)

Breakdown set (Preparation)

Changing a wheel

Changing a wheel

Preparations for changing a wheel

Changing bulbs

Changing bulbs in the front bumper

Changing bulbs in the front headlights (halogen H7)

Changing bulbs in the front headlights (LED)

Changing bulbs in the front headlights (xenon)

Changing bulbs in the side turn signals

Changing the bulb in the number plate light

Changing the bulbs in the tail light cluster

Information on changing bulbs

Checking the coolant level

Checking the coolant level and refilling coolant

Warning lamp and coolant temperature display

Checking the engine oil level

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Refilling coolant

Checking the coolant level and refilling coolant

Warning lamp and coolant temperature display

Refilling engine oil

Checking the engine oil level and refilling engine oil

Warning and indicator lamps

Vehicle battery (Checking the electrolyte level of the vehicle battery)

Working in the engine compartment (Preparing the vehicle for working in the engine compartment)

Preparing for a journey (Preparing for a journey and driving safely)

Problem solving (Frequently asked questions)
Progressive steering (Information on steering)
Protection from the sun
Provision for mobile telephone (Displays)
Push-starting (Starting and stopping the engine)

R

Radar sensor
Radio reception (Socket)
 Aerial (Radio reception and aerials)
 Fault
 Radio reception and aerials
 Socket
Rain/light sensor
Reading lights (Interior and reading lights)
Rear backrests (Folding the seat cushion and backrests on the rear bench seat forwards and backwards)
Rear bench seat (Folding the seat cushion and backrests on the rear bench seat forwards and backwards)
Rear fog lights (Indicator lamps)
Rear shelf (Luggage compartment cover)
Rear View
Rear window heating (Controls for the air conditioning system)
Rear-view mirror (Interior mirror)
Recommendation for rest breaks (Vehicle settings menu)
 Function (Function and operation by the user)
 Operation by the user (Function and operation by the user)
 Switching on and off (Function and operation by the user)
Recording data during a journey (Information stored in the control units)
Recycling end-of-life vehicles (Recycling and scrapping end-of-life vehicles)
Refitting (Repairs and technical modifications)
Refuelling (Petrol)
Regeneration (Diesel particulate filter)
Remote control key (Vehicle key)
Removing ice (Cleaning windows and exterior mirrors)
Removing snow (Cleaning windows and exterior mirrors)
Removing wax (Cleaning windows and exterior mirrors)
Renewing parts (Seat belts)
Repairing stone chips (note) (Repairs and technical modifications)
Repairs (Seat belts)
 Airbag system (Repairs and faults in the airbag system)
 Lifting platform (Vehicle lifting points)
 Plates (Information stickers and plates)
 Stickers (Information stickers and plates)
 Windscreen (Repairs and technical modifications)
Replacement key (Vehicle key)
Replacement wheel (Spare wheel or temporary spare wheel)
 see Spare wheel
 Snow chains
 Spare wheel or temporary spare wheel
 see Temporary spare wheel
 Snow chains
 Spare wheel or temporary spare wheel
Reprogramming control units (Information stored in the control units)
Requirements (General information)
Retrofitting (Retrofitting two-way radios)
 Car telephone (Retrofitting two-way radios)
 Two-way radio (Retrofitting two-way radios)
Rev counter (Instrument overview)

[Reverse assistant](#) (Rear view)

[Reversing camera](#) (General information)

[Camera](#)

[Camera lens](#) (Camera)

[Cleaning](#) (Camera)

[General information](#)

[Operating](#) (Operating the reversing camera)

[Parking](#)

[Requirements](#) (General information)

[Settings](#) (General information)

[Switching on and off](#) (Operating the reversing camera)

[Reversing camera](#) (Rear view)

[Rims](#)

[Bolted-on rings](#) (Rims)

[Bolted-on trims](#) (Rims)

[Identification](#) (Rims)

[Roll-back function](#) (Roll-back function for the electric windows)

[Electric windows](#) (Roll-back function for the electric windows)

[Panorama sliding/tilting glass roof](#) (Roll-back function of the electric panorama sliding/tilting glass roof)

[Roof carrier](#) (Side view)

[Rubber seals](#) (Care of rubber seals)

[Running in](#) (Information on the brakes)

Brake pads

[Information on the brakes](#)

[Running-in](#) (Information on the brakes)

[Engine](#) (Running-in)

see Brakes

[Information on the brakes](#)

[Running-in](#) (Information on the brakes)

[The first kilometres](#) (Running-in)

[Tyres](#) (New wheels and tyres)

S

[SAFELOCK mechanism](#) (Indicator lamp)

[Safety equipment](#) (Description and function of the airbags)

[Scrapping](#) (Recycling and scrapping end-of-life vehicles)

[Seat belt protection](#)

[Seat belt routing](#)

[Seat belts](#) (Warning and indicator lamps)

[Automatic belt retractor](#) (Automatic belt retractor, belt tensioner, belt tension limiter)

Belt height adjuster

[Belt height adjuster](#)

[Seat belt routing](#)

[Belt tension limiter](#) (Automatic belt retractor, belt tensioner, belt tension limiter)

[Belt tensioner](#) (Automatic belt retractor, belt tensioner, belt tension limiter)

[Checklist](#) (Using seat belts)

[Cleaning](#) (Cleaning seat belts)

[Fastening](#) (Fastening and unfastening seat belts)

[Not fastened](#) (What happens to vehicle occupants who have not fastened their seat belts)

Seat belt routing

[Belt height adjuster](#)

[Seat belt routing](#)

[Twisted seat belt](#) (Using seat belts)

[Unfastening](#) (Fastening and unfastening seat belts)

[Using](#) (Using seat belts)

[Warning lamp](#)

[Seat covers](#) (Adjusting the seat position)

*Caring for seat covers**Checklist* (Caring for seat covers)*Cleaning Alcantara* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Cleaning and caring for natural leather* (Cleaning and caring for natural leather covers)*Cleaning cloth seat covers* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Cleaning fabric trim* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Leatherette* (Cleaning leatherette upholstery)*Seat functions* (Upper section of the centre console)*Seat heating**Seats* (Adjusting the seat position)

Adjusting the head restraints

*Adjusting the head restraints**Removing and fitting head restraints* (Adjusting the head restraints)*Adjusting the steering wheel position**Mechanical front seats* (Mechanical controls on the front seats)*Number of seats* (Adjusting the seat position)

Rear bench seat

*Folding the seat cushion and backrests on the rear bench seat forwards and backwards**Variable luggage compartment floor* (Folding the seat cushion and backrests on the rear bench seat forwards and backwards)*Removing and fitting head restraints**Seat heating**Selecting a gear* (Automatic gearbox: selecting a gear)*Selecting a gear* (Manual gearbox: selecting a gear)*Selector lever lock* (Warning and indicator lamps)*Selling the vehicle* (Car-Net services)*Car-Net* (Car-Net services)*In other countries/continents* (Using the vehicle in other countries and continents)*Service fluids* (Service fluids and consumables)*Service interval display* (Displays)

Inspection

*Displays**Service interval display* (Displays)

Oil change service

*Displays**Service interval display* (Displays)*Service position for the front windscreen wipers* (Windscreen wipers and washer)*Setting the time* (Vehicle settings menu)*Settings* (Instrument overview)*Air conditioning system* (Information on the air conditioning system)*Setting the time* (Vehicle settings menu)

Time

*Displays**Instrument overview**Settings (SETUP)* (Displays)

Infotainment system

*and functions (orientation lighting)**City Emergency Brake function**Description of the central locking system**Displays**Driving data**Electric panorama sliding/tilting glass roof – function**Exterior mirrors**Function and operation by the user**Headlight range control, instrument and switch lighting**Lights and vision – functions**Locking and unlocking the vehicle from the inside*

Locking and unlocking the vehicle from the outside
Masking or switching over headlights for driving abroad (travel mode)
Menu and system settings (SETUP)
Operating Adaptive Cruise Control (ACC)
Operating the area monitoring system (Front Assist)
Rain/light sensor
Selection menu
Service interval display
Turn signal and main beam lever
Vehicle identification data
Windscreen wiper lever
Winter tyres (Displays)

Menu and system settings

and functions (orientation lighting)
City Emergency Brake function
Description of the central locking system
Displays
Driving data
Electric panorama sliding/tilting glass roof – function
Exterior mirrors
Function and operation by the user
Headlight range control, instrument and switch lighting
Lights and vision – functions
Locking and unlocking the vehicle from the inside
Locking and unlocking the vehicle from the outside
Masking or switching over headlights for driving abroad (travel mode)
Menu and system settings (SETUP)
Operating Adaptive Cruise Control (ACC)
Operating the area monitoring system (Front Assist)
Rain/light sensor
Selection menu
Service interval display
Turn signal and main beam lever
Vehicle identification data
Windscreen wiper lever
Winter tyres (Displays)

Presets

and functions (orientation lighting)
City Emergency Brake function
Description of the central locking system
Displays
Driving data
Electric panorama sliding/tilting glass roof – function
Exterior mirrors
Function and operation by the user
Headlight range control, instrument and switch lighting
Lights and vision – functions
Locking and unlocking the vehicle from the inside
Locking and unlocking the vehicle from the outside
Masking or switching over headlights for driving abroad (travel mode)
Menu and system settings (SETUP)
Operating Adaptive Cruise Control (ACC)
Operating the area monitoring system (Front Assist)
Rain/light sensor
Selection menu
Service interval display
Turn signal and main beam lever

Vehicle identification data

Windscreen wiper lever

Winter tyres (Displays)

SETUP (Displays)

Side airbags

Side lights (Indicator lamps)

Signal tones (Indicator lamps)

Single door opening (Description of the central locking system)

Sitting (Overview of the driver side)

Sitting position (The dangers of assuming an incorrect sitting position)

Correct sitting position

Incorrect sitting position (The dangers of assuming an incorrect sitting position)

Snow chains (Spare wheel or temporary spare wheel)

Socket (Lower section of the centre console)

12-volt (Socket in the vehicle)

Trailer (Hitching and connecting the trailer)

Spanner symbol (Service interval display)

Spare fuel canister (Filling the tank)

Spare wheel (Spare wheel or temporary spare wheel)

Driving tips (Spare wheel or temporary spare wheel)

Removing (Spare wheel or temporary spare wheel)

Spares (Accessories and parts)

Speed index (Tyre lettering)

Speed warning (Driving data)

Sport Select chassis (Upper section of the centre console)

Fault

Function and operation

suspension

Function (Function and operation)

Operation (Function and operation)

Warning lamp (Display and warning lamp)

Start/stop system (Towing a trailer)

Air conditioning system (Heating, ventilating, cooling)

Indicator lamp (Indicator lamps)

When towing a trailer (Towing a trailer)

Starting the engine with jump leads (Starting and stopping the engine)

Static cornering light (Lights and vision – functions)

Static cornering light on both sides (Lights and vision – functions)

When reverse gear is engaged (Lights and vision – functions)

Static cornering light on both sides (Lights and vision – functions)

Status display for active cylinder management (ACT) (Displays)

Steering (Warning and indicator lamps)

Counter steering assistance (Information on steering)

Electromechanical (Information on steering)

Locking (Ignition lock)

Power steering (Information on steering)

Progressive steering (Information on steering)

Pulling to one side (Tyre damage)

Steering column lock (Information on steering)

Vibration (Tyre damage)

Warning and indicator lamps

Steering lock (Ignition lock)

Steering wheel (Adjusting the steering wheel position)

Adjusting (Adjusting the steering wheel position)

Paddles (Tiptronic)

Changing gear using Tiptronic

Driving with an automatic gearbox

Gear-change indicator (Changing gear using Tiptronic)

Stickers (Information stickers and plates)

Storing vehicle data (Information stored in the control units)

Stowage areas (Overview of the driver door)

Drawers

Front centre armrest (Stowage compartment in the front centre armrest)

Front centre console (Stowage compartments in the front centre console)

Front passenger side (Stowage compartment on the front passenger side)

Glove compartment (Stowage compartment on the front passenger side)

Handbrake lever (Stowage compartments in the front centre console)

High-visibility waistcoat (Stowage compartment in the front passenger footwell)

Other stowage areas

Telephone holder (Stowage compartments in the front centre console)

Vehicle wallet (Stowage compartment on the front passenger side)

Stowage compartment lights on the front passenger side (Interior and reading lights)

Stowing (Overview of the driver door)

Front doors (Stowage compartments in the front doors)

High-visibility waistcoat (Stowage compartments in the front doors)

see Stowage areas

Lower section of the centre console

Overview of the driver door

Overview of the front passenger side

Seat belts

Stowage areas

Upper section of the centre console (Overview of the driver door)

Stowage compartment lights (Interior and reading lights)

Stowing items of luggage

Sun visors

Supplementary heater (Diesel)

Supposed faults (Frequently asked questions)

Suspension (Upper section of the centre console)

Switch-off for electrical consumers (Charging, replacing, disconnecting and connecting the vehicle battery)

Symbols (Overview of the driver side)

T

Tailgate (Rear view)

Closing (Closing the tailgate)

Driving with an open tailgate

Locking (Closing the tailgate)

Locking and unlocking

Description of the central locking system

Locking and unlocking the vehicle from the outside

SAFELOCK mechanism (Description of the central locking system)

Manual opening and closing (Unlocking the tailgate manually)

Opening (Opening the tailgate)

Unlocking (Opening the tailgate)

Warning lamp

Tank cap (Filling the tank with petrol or diesel)

Diesel (Filling the tank with petrol or diesel)

Opening (Filling the tank with petrol or diesel)

Petrol (Filling the tank with petrol or diesel)

Tank flap (Filling the tank with petrol or diesel)

TCS (Warning and indicator lamps)

see Brake support systems

Brake support systems

Switching TCS, TCS with ESC or ESC Sport on and off

Warning and indicator lamps

Switching on and off

Brake support systems

Switching TCS, TCS with ESC or ESC Sport on and off

Warning and indicator lamps

Technical data

Axle weight rating (Vehicle-specific weight ratings)

Capacities

Capacities

Checking and refilling the windscreen washer fluid level

Indicator lamps and fuel gauge (Checking and refilling the windscreen washer fluid level)

Capacity (Engine data)

Dimensions

Drawbar load

Loading the trailer

Towing a trailer

Engine data

Engine oil specification

Factory plate (Vehicle identification data)

Gross combination weight rating (Maximum permitted gross combination weight)

Kerb weight (Vehicle-specific weight ratings)

Maximum speed (Performance figures)

Output (Engine data)

Performance figures

Roof load (Loading the load carrier system)

Trailer weight

Loading the trailer

Maximum permitted trailer weights (Loading the trailer)

Type plate (Vehicle identification data)

Tyre pressure

Spare wheel or temporary spare wheel

Tyre pressure

Vehicle data sticker (Vehicle identification data)

Vehicle weight rating (Vehicle-specific weight ratings)

Weights (Vehicle-specific weight ratings)

Technical modifications (Repairs and technical modifications)

Lifting platform (Vehicle lifting points)

Plates (Information stickers and plates)

Stickers (Information stickers and plates)

Telematics services (Car-Net services)**Telephone** (Displays)**Temperature display** (Displays)

Coolant (Warning lamp and coolant temperature display)

Outside temperature (Displays)

Temporary spare wheel (Spare wheel or temporary spare wheel)

Driving tips (Spare wheel or temporary spare wheel)

Snow chains

Things to note (Front view)

Automatic car wash (Washing the vehicle)

Component protection

Diesel particulate filter (Diesel)

Disconnecting the vehicle battery (Service interval display)

Engine juddering (Fuel)

Engine not running smoothly (Fuel)

Folding in the mirrors (Exterior mirrors)

High-pressure cleaner

Fitting the removable ball coupling

Washing the vehicle with a high-pressure cleaner (Fitting the removable ball coupling)

Long periods without use (Central locking system)

Parking

Braking, stopping and parking

Dimensions

Parking (Dimensions)

Push-starting (Starting and stopping the engine)

Radio reception (Radio reception and aerials)

Removing the vehicle key (Ignition lock)

Smoke

Diesel

Tow-starting

Notes on tow-starting

Starting and stopping the engine

Towing

Changing gear

Engine management system and exhaust purification system

Front view

How to start the engine using jump leads

Jump starting

Notes on towing

Positive and earth jump lead connection points

Rear view

Starting and stopping the engine

Steering

Tow-starting and towing (Front view)

Towing a trailer

Washing the vehicle

Water underneath the vehicle (Information on the air conditioning system)

Windscreen wipers (Windscreen wiper lever)

Think Blue. (Think Blue. Trainer.)

Think Blue. Trainer. (Think Blue. Trainer.)

Tightening torque (Wheel bolts)

TIN (Tyre lettering)

Tiptronic (Changing gear using Tiptronic)

Toolkit (Wheels and tyres)

Top tether (Preparing for a journey and driving safely)

Tow-starting (Front view)

Automatic gearbox (Notes on tow-starting)

Manual gearbox (Notes on tow-starting)

Things to note (Notes on tow-starting)

When not to tow-start (Notes on tow-starting)

Towing (Side view)

Another vehicle (Notes on towing)

Automatic gearbox

Fitting the front towing eye

Notes on towing

Rear towing eye (Notes on towing)

Driving tips (Driving tips when towing)

Fire extinguisher (Technical requirements)

Front towing eye (Fitting the front towing eye)

Manual gearbox

Fitting the front towing eye

Notes on towing

Rear towing eye (Notes on towing)

Rear towing eye

Technical requirements

Things to note

[Changing gear](#)
[Engine management system and exhaust purification system](#)
[Front view](#)
[How to start the engine using jump leads](#)
[Jump starting](#)
[Notes on towing](#)
[Positive and earth jump lead connection points](#)
[Rear view](#)
[Starting and stopping the engine](#)
[Steering](#)
[Tow-starting and towing \(Front view\)](#)

Tow bar

[Fitting the front towing eye](#)
[Notes on towing](#)
[Rear towing eye \(Notes on towing\)](#)

Tow rope

[Fitting the front towing eye](#)
[Notes on towing](#)
[Rear towing eye \(Notes on towing\)](#)

When not to tow

[Fitting the front towing eye](#)
[Notes on towing](#)
[Rear towing eye \(Notes on towing\)](#)

With a towing bracket

[Fitting the front towing eye](#)
[Notes on towing](#)
[Rear towing eye \(Notes on towing\)](#)
[Your own vehicle \(Notes on towing\)](#)

Towing a trailer

Towing bracket (Side view)

[Fault \(Hitching and connecting the trailer\)](#)

Fitting

[Fitting the removable ball coupling](#)
[Notes on towing \(Fitting the removable ball coupling\)](#)

[Removing \(Removing the ball coupling\)](#)

[Retrofitting \(Retrofitting a towing bracket\)](#)

see Trailer

[Accessories, modifications, repairs and renewal of parts](#)
[Anti-theft alarm](#)
[Braking, stopping and parking](#)
[Central locking system](#)
[Coolant](#)
[Driving a loaded vehicle](#)
[Driving tips](#)
[Luggage compartment](#)
[Rear towing eye](#)
[Rear view](#)
[Side view](#)
[Stowing items of luggage](#)
[Towing a trailer](#)
[Wheels and tyres \(Side view\)](#)

Traction (Tyre lettering)

Traction control system (TCS) (Warning and indicator lamps)

Trailer (Side view)

Anti-theft alarm

[Hitching and connecting the trailer](#)

Connecting

Hitching and connecting the trailer

Technical requirements

Drawbar load

Loading the trailer

Towing a trailer

Driving (Towing a trailer)

Emergency breakaway cable

Hitching and connecting the trailer

Technical requirements

Exterior mirrors (Technical requirements)

Fault (Hitching and connecting the trailer)

Fitting the ball coupling

Fitting the removable ball coupling

Notes on towing (Fitting the removable ball coupling)

Headlight adjustment (Towing a trailer)

Hitching

Hitching and connecting the trailer

Technical requirements

LED rear lights

Hitching and connecting the trailer

Technical requirements

Loading (Loading the trailer)

Rear lights

Hitching and connecting the trailer

Technical requirements

Removable ball coupling

Fitting the removable ball coupling

Notes on towing (Fitting the removable ball coupling)

Removing the ball coupling

Retrofitting a towing bracket

Socket (Hitching and connecting the trailer)

Towing

Accessories, modifications, repairs and renewal of parts

Anti-theft alarm

Braking, stopping and parking

Central locking system

Coolant

Driving a loaded vehicle

Driving tips

Luggage compartment

Rear towing eye

Rear view

Side view

Stowing items of luggage

Towing a trailer

Wheels and tyres (Side view)

Trailer weight

Loading the trailer

Maximum permitted trailer weights (Loading the trailer)

Trailer weight (Loading the trailer)

Loading the trailer

Maximum permitted

Loading the trailer

Maximum permitted trailer weights (Loading the trailer)

Transporting items (Side view)

Bag hook

Driving tips (Driving a loaded vehicle)

[Driving with an open tailgate](#)

[Fastening rings](#)

[Load carrier system](#) (Loading the load carrier system)

[Loading the trailer](#)

Roof carrier

[Accessories, modifications, repairs and renewal of parts](#)

[Driving a loaded vehicle](#)

[Driving tips](#)

[Electric panorama sliding/tilting glass roof](#)

[Roof carrier](#)

[Side view](#)

[Stowing items of luggage](#) (Side view)

Stowing items of luggage

[Driving a loaded vehicle](#)

[Stowing items of luggage](#)

Towing

[Accessories, modifications, repairs and renewal of parts](#)

[Anti-theft alarm](#)

[Braking, stopping and parking](#)

[Central locking system](#)

[Coolant](#)

[Driving a loaded vehicle](#)

[Driving tips](#)

[Luggage compartment](#)

[Rear towing eye](#)

[Rear view](#)

[Side view](#)

[Stowing items of luggage](#)

[Towing a trailer](#)

[Wheels and tyres](#) (Side view)

Trailer weight

[Loading the trailer](#)

[Maximum permitted trailer weights](#) (Loading the trailer)

[Travel mode](#) (Masking or switching over headlights for driving abroad (travel mode))

[Tread depth](#) (Tread depth and wear indicators)

[Tread wear](#) (Tyre lettering)

[Trip recorder](#) (Instrument overview)

[Troubleshooting](#) (Frequently asked questions)

[Turn signal lever](#) (Indicator lamps)

[Two-way radio](#) (Retrofitting two-way radios)

[Type plate](#) (Vehicle identification data)

[Tyre damage](#) (Handling wheels and tyres)

[Tyre load](#) (Tyre lettering)

[Tyre mobility set](#) (Wheels and tyres)

[Tyre monitoring system](#) (Overview of the front passenger side)

[Fault](#) (Indicator lamp)

[Indicator lamp](#)

[Tyre pressure](#)

Tyre Pressure Loss Indicator

[Indicator lamp](#)

[Tyre Pressure Loss Indicator](#) (Indicator lamp)

Tyre pressure

[Checking](#) (Tyre pressure)

[Comfort tyre pressure](#) (Tyre pressure)

[Spare wheel](#) (Tyre pressure)

[Temporary spare wheel](#) (Tyre pressure)

[Tyre Pressure Loss Indicator](#) (Indicator lamp)

Tyre repair kit (Wheels and tyres)

Tyre wear (Tyre damage)

Tyres (Menu and system settings (SETUP))

Sealing and inflating (Sealing and inflating tyres)

see *Wheels and tyres*

Brake support systems

Braking, stopping and parking

Breakdown set

Changing a wheel

Checks when filling the tank

Driving tips

Frequently asked questions

Indicator lamp

Loading the trailer

Luggage compartment

Menu and system settings (SETUP)

Preparing for a journey and driving safely

Pull-away assist systems

Roof carrier

Running-in

Stowage

Stowing items of luggage

Technical data

Test after driving for 10 minutes

Towing a trailer

Tyre monitoring system

Tyre Pressure Loss Indicator

Vehicle settings menu

Wheels and tyres (Menu and system settings (SETUP))

Tyres with directional tread pattern (Tyre lettering)

U

Underseal

Unlocking (Description of the central locking system)

USB socket (Stowage areas)

V

Valve caps (Tyre pressure)

Vanity mirrors (Sun visors)

Variable luggage compartment floor

Vehicle (Description of the central locking system)

Lending (Car-Net services)

Loading

Driving tips

Tailgate

Tyre monitoring system

Wheels and tyres (Tailgate)

Locking and unlocking from the inside

Description of the central locking system

Locking and unlocking the vehicle from the inside

SAFELOCK mechanism (Description of the central locking system)

Locking and unlocking from the outside

Description of the central locking system

Locking and unlocking the vehicle from the outside

SAFELOCK mechanism (Description of the central locking system)

Parking on a downward incline (Parking)

Recycling (Recycling and scrapping end-of-life vehicles)

[Safety in the event of a breakdown](#) (Making you and your vehicle safe)

[Selling](#) (Car-Net services)

[Stopping on an upward incline](#) (Parking)

[Vehicle battery](#) (Warning and indicator lamps)

[Automatic switch-off for electrical consumers](#) (Charging, replacing, disconnecting and connecting the vehicle battery)

[Charging](#) (Charging, replacing, disconnecting and connecting the vehicle battery)

[Checking the electrolyte level](#) (Checking the electrolyte level of the vehicle battery)

[Connecting](#) (Charging, replacing, disconnecting and connecting the vehicle battery)

Discharged

[Central locking system](#)

[Charging, replacing, disconnecting and connecting the vehicle battery](#)

[Ignition lock](#)

[Making you and your vehicle safe](#) (Central locking system)

[Disconnecting](#) (Charging, replacing, disconnecting and connecting the vehicle battery)

[Electrolyte](#) (Checking the electrolyte level of the vehicle battery)

[Jump starting](#) (How to start the engine using jump leads)

Location

[Accessories, modifications, repairs and renewal of parts](#)

[Engine management system and exhaust purification system](#)

[Frequently asked questions](#)

[How to start the engine using jump leads](#)

[Jump starting](#)

[Preparation for working in the engine compartment](#)

[Pull-away assist systems](#)

[Steering](#)

[Vehicle battery](#)

[Warning and indicator lamps](#)

Positive terminal and earth connection for jump leads

[How to start the engine using jump leads](#)

[Positive and earth jump lead connection points](#)

[Preparation](#) (Checking the electrolyte level of the vehicle battery)

[Replacing](#) (Charging, replacing, disconnecting and connecting the vehicle battery)

Symbols

[Accessories, modifications, repairs and renewal of parts](#)

[Engine management system and exhaust purification system](#)

[Frequently asked questions](#)

[How to start the engine using jump leads](#)

[Jump starting](#)

[Preparation for working in the engine compartment](#)

[Pull-away assist systems](#)

[Steering](#)

[Vehicle battery](#)

[Warning and indicator lamps](#)

[Warning lamp](#)

[Vehicle care](#) (Rear view)

[Airbag \(dash panel\)](#) (Cleaning and caring for the dash panel, wooden trims and plastic parts)

[Alcantara](#) (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)

[Aluminium trim parts](#) (Cleaning and caring for chrome and aluminium trim parts)

[Anodised surfaces](#) (Cleaning and caring for chrome and aluminium trim parts)

Automatic car wash

[Cleaning and caring for the decorative film](#)

[Washing the vehicle](#)

[Caring for seat covers](#)

[Changing windscreen wiper blades](#) (Cleaning and changing windscreen wiper blades)

[Chrome trim parts](#) (Cleaning and caring for chrome and aluminium trim parts)

[Cleaning seat belts](#)

[Cleaning stowage areas](#) (Cleaning stowage compartments, drink holders and ash trays)

*Cleaning wheels**Cleaning windscreen wiper blades* (Cleaning and changing windscreen wiper blades)*Cloth seat covers* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Dash panel* (Cleaning and caring for the dash panel, wooden trims and plastic parts)*De-icing door lock cylinders*

Electrically adjustable seats

*Cleaning and caring for natural leather covers**Cleaning cloth seat covers, fabric trim and Alcantara upholstery**Cleaning leatherette upholstery* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Engine compartment* (Cleaning the engine compartment)

Exterior

*Accessories, modifications, repairs and renewal of parts**Caring for and cleaning the vehicle exterior**Central locking system**Cleaning and caring for the interior**Electric windows**Heating, ventilating, cooling**Hubcaps**ParkPilot**Rear view**Tyre monitoring system**Wheels and tyres**Windscreen wipers and washer* (Rear view)

Exterior mirrors

*Cleaning windows and exterior mirrors**Washing the vehicle**Fabric trim* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)

High-pressure cleaner

*Cleaning and caring for the decorative film**Washing the vehicle with a high-pressure cleaner*

Interior

*Accessories, modifications, repairs and renewal of parts**Adjusting the seat position**Airbag system**Caring for and cleaning the vehicle exterior**Cleaning and caring for the interior**Drink holder**Seat belts**Stowage areas* (Adjusting the seat position)*Leatherette* (Cleaning leatherette upholstery)*Natural leather* (Cleaning and caring for natural leather covers)

Paintwork

*Cleaning and caring for the decorative film**Waxing and polishing the vehicle**Plastic parts* (Cleaning and caring for the dash panel, wooden trims and plastic parts)*Rubber seals* (Care of rubber seals)

Seat cushions with seat heating

*Cleaning and caring for natural leather covers**Cleaning cloth seat covers, fabric trim and Alcantara upholstery**Cleaning leatherette upholstery* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Seat cushions without seat heating* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Seats that are not electrically adjustable* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)

Seats with airbag components

*Cleaning and caring for natural leather covers**Cleaning cloth seat covers, fabric trim and Alcantara upholstery**Cleaning leatherette upholstery* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)*Seats with no airbag components* (Cleaning cloth seat covers, fabric trim and Alcantara upholstery)

Service position

Service position for the front windscreen wipers

Windscreen wipers and washer

Things to note

Washing the vehicle

Washing the vehicle with a high-pressure cleaner (Washing the vehicle)

Underseal

Washing by hand

Cleaning and caring for the decorative film

Washing the vehicle

Washing the vehicle

Cleaning and caring for the decorative film

Washing the vehicle

Window aerial (Radio reception and aerials)

Windows

Cleaning windows and exterior mirrors

Washing the vehicle

Wooden trim (Cleaning and caring for the dash panel, wooden trims and plastic parts)

Vehicle data sticker (Vehicle identification data)

Vehicle identification data

Vehicle identification number (Vehicle identification data)

Vehicle jack (Side view)

Vehicle key

Assigning (Vehicle key)

Indicator lamp (Indicator lamp in the vehicle key)

Panic button (Vehicle key)

Replacing the battery

Indicator lamp in the vehicle key

Replacing the battery

Vehicle key

Synchronising

Synchronising the vehicle key

Vehicle key

Vehicle key set

Vehicle overview (Side view)

Front view

Rear view

Side view

Changing bulbs in the side turn signals

Side view

Vehicle path display

Vehicle settings (Menu and system settings (SETUP))

Vehicle toolkit (Wheels and tyres)

Contents

Stowage

Vehicle wallet stowage (Stowage compartment on the front passenger side)

Vehicle wallet stowage compartment (Stowage compartment on the front passenger side)

Vehicle weight rating (Vehicle-specific weight ratings)

Vents (Information on the air conditioning system)

Volkswagen information system (Overview of the driver side)

Display (Overview of the menu structure)

Menu structure (Overview of the menu structure)

W

Warning and indicator lamps (Overview of the driver side)

Adaptive Cruise Control (ACC)

Adaptive Cruise Control (ACC)

Displays, warning and indicator lamps

Operating Adaptive Cruise Control (ACC) (Adaptive Cruise Control (ACC))

Brake system

Handbrake

Warning and indicator lamps

Changing gear (Warning and indicator lamps)

Coolant (Warning lamp and coolant temperature display)

Depress the brake

Handbrake

Warning and indicator lamps

ESC

Handbrake

Warning and indicator lamps

Overview

Displays

Instruments

Overview of the driver side

Warning and indicator lamps (Overview of the driver side)

Warning lamp

Alternator (Warning lamp)

Bonnet

Opening and closing the bonnet

Warning lamp

Depress brake

Displays

Warning and indicator lamps

Doors (Warning lamp)

Engine oil pressure (Warning and indicator lamps)

Seat belts (Warning lamp)

Sport Select chassis (Display and warning lamp)

Tailgate (Warning lamp)

Vehicle battery (Warning lamp)

Warning lamps (Adaptive Cruise Control (ACC))

Warning signals (Warning lamp)

Warning triangle (First aid kit and warning triangle)

Washing (Washing the vehicle)

Washing the vehicle (Rear view)

Folding in the mirrors (Exterior mirrors)

High-pressure cleaner

Cleaning and caring for the decorative film

Washing the vehicle with a high-pressure cleaner

Sensors (ParkPilot)

Things to note (Washing the vehicle)

Waxing (Waxing and polishing the vehicle)

Wear indicator (Tread depth and wear indicators)

Weights (Vehicle-specific weight ratings)

What happens to vehicle occupants who have not fastened their seat belts

Wheel bolts (Wheel bolt caps)

Caps (Wheel bolt caps)

Tightening torque.

After changing a wheel

Wheel bolts

Wheel lock (Wheel bolts)

Wheels and tyres (Side view)

All-year tyres

Tyre lettering

Winter tyres (Tyre lettering)

Asymmetrical tyres

Tyre lettering

Avoiding damage (Handling wheels and tyres)

Balancing (Tyre damage)

Changing a wheel

Changing a wheel

Hubcaps

In an emergency

Rims

Side view

Tyre damage

Vehicle lifting points

Vehicle toolkit

Wheel cover

Wheels and tyres (Side view)

Cleaning (Cleaning wheels)

Foreign bodies

Handling wheels and tyres

Tyre damage (Handling wheels and tyres)

Handling wheels and tyres

Identification

Handling wheels and tyres

Tyre lettering

Tyre pressure

Winter tyres (Handling wheels and tyres)

Incorrect wheel alignment (Tyre damage)

Low-profile tyres (Handling wheels and tyres)

More than one damaged tyre (Changing a wheel)

New tyres (New wheels and tyres)

Old tyres (Handling wheels and tyres)

Replacing tyres (New wheels and tyres)

Rims

Rotating wheels front to rear (Handling wheels and tyres)

Running in (New wheels and tyres)

Serial number (Tyre lettering)

Snow chains

Snow chains

Spare wheel or temporary spare wheel

Spare wheel

Snow chains

Spare wheel or temporary spare wheel

Speed index

Tyre lettering

Storing the removed wheel (Spare wheel or temporary spare wheel)

Storing tyres (Handling wheels and tyres)

Technical data

Handling wheels and tyres

Tyre lettering

Tyre pressure

Winter tyres (Handling wheels and tyres)

Temporary spare wheel

Snow chains

Spare wheel or temporary spare wheel

Tread depth (Tread depth and wear indicators)

Tyre damage

Handling wheels and tyres

Tyre damage (Handling wheels and tyres)

Tyre identification number (TIN) (Tyre lettering)

Tyre lettering

*Handling wheels and tyres**Tyre lettering**Tyre pressure**Winter tyres (Handling wheels and tyres)*

Tyre load

Tyre lettering

Tyre pressure

*Spare wheel or temporary spare wheel**Tyre pressure**Tyre wear (Tyre damage)*

Tyres with directional tread pattern

*Tyre lettering**Valve caps (Tyre pressure)**Wear indicator (Tread depth and wear indicators)**Wheel balancing (Tyre damage)*

Winter tyres

*Tyre lettering**Winter tyres (Tyre lettering)**With directional tread pattern (Handling wheels and tyres)**Window aerial (Radio reception and aerials)**Windows (Overview of the driver door)**Windscreen (Repairs and technical modifications)**Repairing (note) (Repairs and technical modifications)**Repairing stone chips (note) (Repairs and technical modifications)**Replacing (note) (Repairs and technical modifications)**Windscreen washer (Front view)**Windscreen washer fluid (Indicator lamp)*

Checking

*Checking and refilling the windscreen washer fluid level**Indicator lamp**Indicator lamp*

Refilling

*Checking and refilling the windscreen washer fluid level**Indicator lamp*

Windscreen wash

*Checking and refilling the windscreen washer fluid level**Windscreen wiper blades (Cleaning and changing windscreen wiper blades)**Changing (Cleaning and changing windscreen wiper blades)**Cleaning (Cleaning and changing windscreen wiper blades)**Windscreen wipers (Front view)*

Folding back the wiper blade

*Service position for the front windscreen wipers**Windscreen wipers and washer**Functions (Windscreen wiper functions)**Headlight cleaning system (Windscreen wiper functions)**Heated washer jets (Windscreen wiper functions)*

Lifting the wiper blade

*Service position for the front windscreen wipers**Windscreen wipers and washer**Rain/light sensor*

Service position

*Service position for the front windscreen wipers**Windscreen wipers and washer**Things to note (Windscreen wiper lever)*

Windscreen wiper lever

Rain/light sensor

Windscreen wiper lever

Winter conditions (Electric panorama sliding/tilting glass roof)

Anti-freeze for windscreen washer fluid (Checking and refilling the windscreen washer fluid level)

Filter preheater (Diesel)

Fuel consumption (Driving in a fuel-efficient manner)

Headlight washer system (Windscreen wiper functions)

Heated washer jets (Windscreen wiper functions)

Mirrors

Panorama sliding/tilting glass roof (Electric panorama sliding/tilting glass roof)

Salt deposits (Rain/light sensor)

Snow chains

Snow chains

Spare wheel or temporary spare wheel

Towing (Towing a trailer)

Tread depth (Tread depth and wear indicators)

Tyre pressure

Washer fluid reservoir (Checking and refilling the windscreen washer fluid level)

Winter diesel

Diesel

Winter tyres

Tyre lettering

Winter tyres (Tyre lettering)

Winter diesel (Diesel)

Winter tyres (Tyre lettering)

Workshop visits (Frequently asked questions)

X

XDS (Brake support systems)

Xenon lamps (Switching lights on and off)

Volkswagen AG works continuously to develop and improve its vehicles. Please understand that we must therefore reserve the right to alter any part of the vehicle and its equipment or technical specifications at any time. The data provided concerning scope of delivery, appearance, performance, dimensions, weights, fuel consumption, standards and vehicle functions are all correct at the time of going to print. Some of the equipment described might not yet be available in a particular vehicle (information can be provided by your local Volkswagen dealership), and some equipment may not be available in certain countries. No legal commitment may be inferred from the information, illustrations or descriptions in this manual.

No part of this manual may be reprinted, reproduced or translated without the written permission of Volkswagen AG.

All rights under the laws of copyright are expressly reserved by Volkswagen AG. Subject to alteration and amendment.

Printed in Germany.

© Volkswagen AG 2014



This paper was bleached without the use of chlorine.