

# ELECTRICAL



## A. LOCATION OF RELAYS / CONTROLLERS / FUSES IN ENGINE COMPARTMENT FUSE BOX MPFI PETROL EURO - III

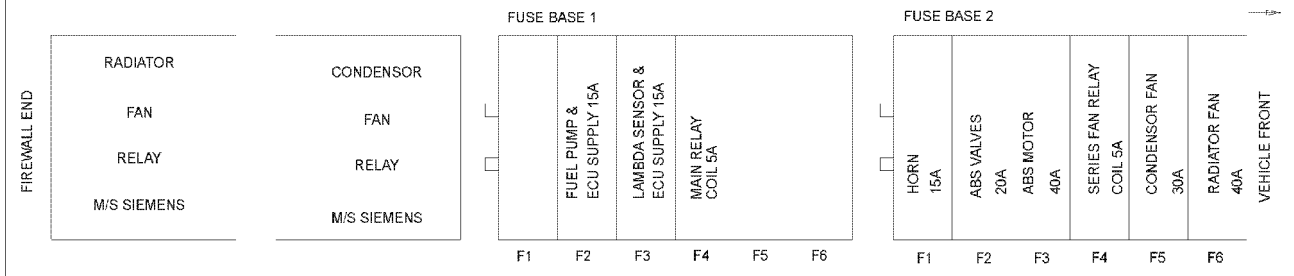


Fig. 1

## B. LOCATION OF RELAYS / CONTROLLERS / FUSES IN CABIN COMPARTMENT FUSE BOX MPFI PETROL EURO - III

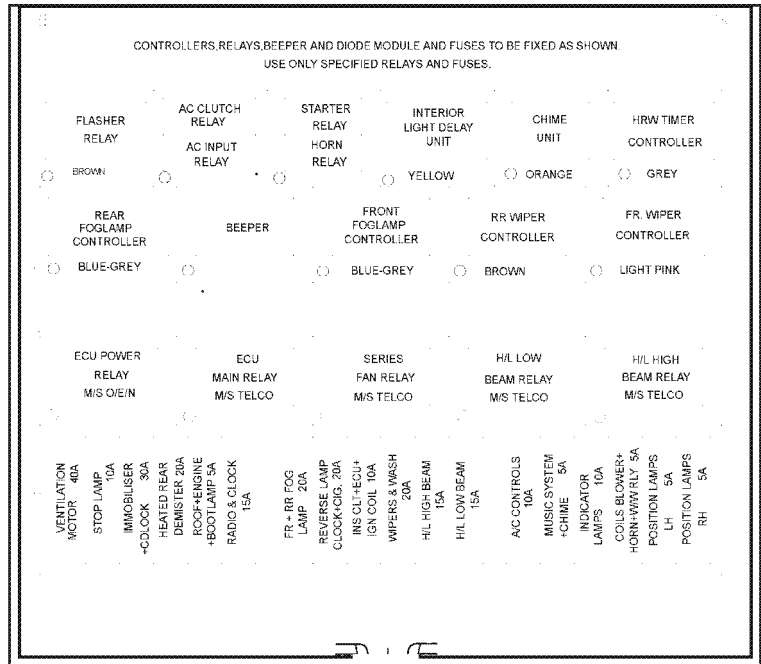
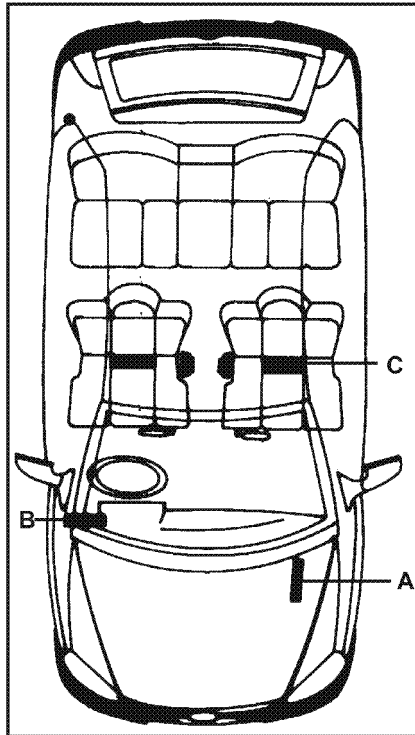


Fig. 2

## C. LOCATION OF RELAYS / CONTROLLERS / FUSES BELOW CO-DRIVER SEAT IN CABIN COMPARTMENT MPFI PETROL EURO - III

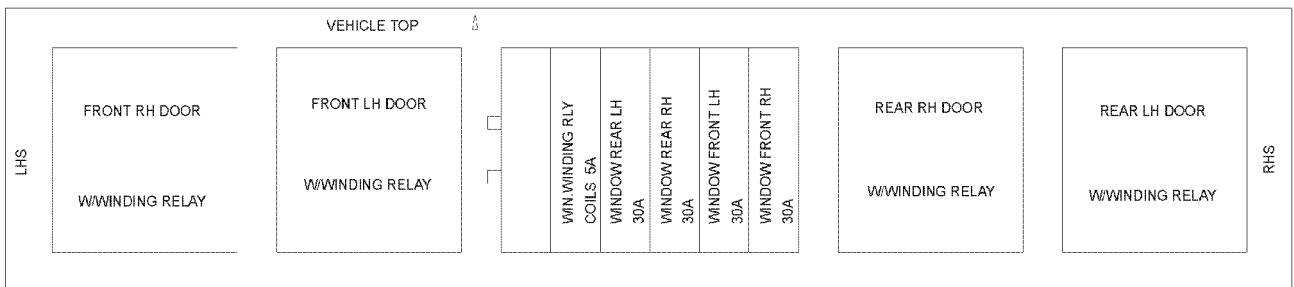


Fig. 3