



CODE NO.42 CMP SENSOR (CAMSHAFT POSITION SENSOR) CIRCUIT (SENSOR SIGNAL NOT INPUTTED FOR 2 SECONDS AT ENGINE CRANKING)

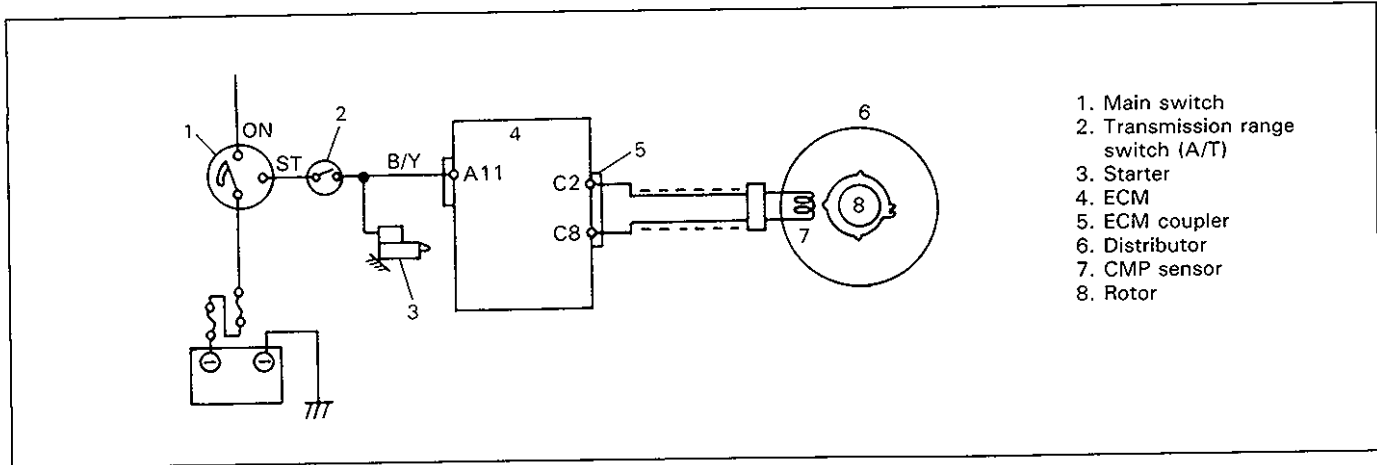

- 1. Main switch
- 2. Transmission range switch (A/T)
- 3. Starter
- 4. ECM
- 5. ECM coupler
- 6. Distributor
- 7. CMP sensor
- 8. Rotor

NOTE:
 If starter circuit is open (i.e., start signal circuit is OK but starter fails to run), code No.42 is stored in memory at starter switch ON, even though CMP sensor is in good condition.
 When starter motor fails to run and code No.42 appears, check starter circuit first.

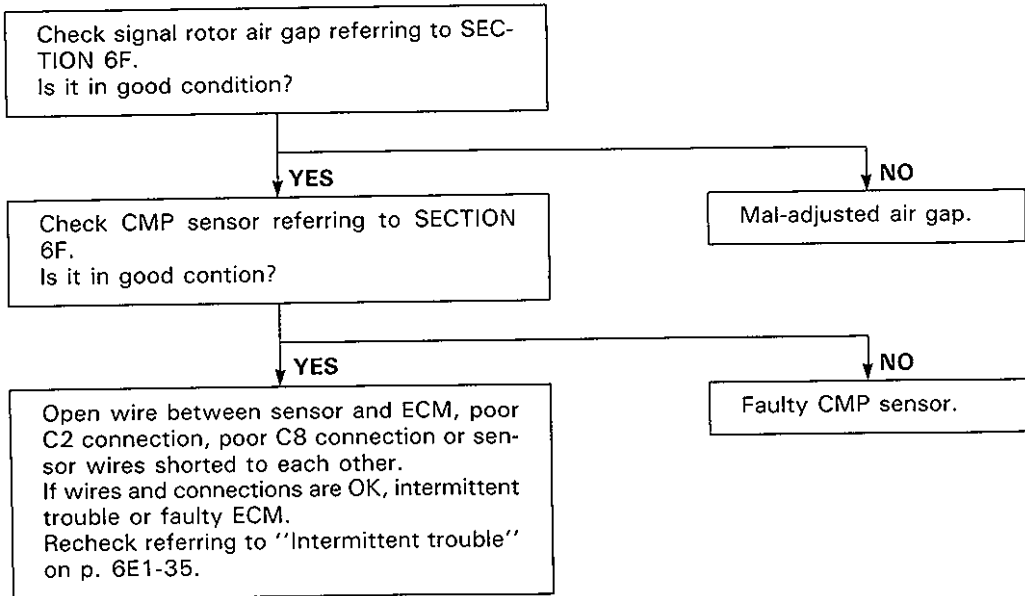

NOTE:
 Upon completion of inspection and repair work, perform FINAL CHECK, referring to page 6E1-53 to confirm that the trouble has been corrected.