


BEFORE DRIVING

Fuel Recommendation.....	3-1
Remote Keyless Entry System (if equipped).....	3-2
Keys.....	3-2
Door Locks.....	3-3
Windows.....	3-5
Mirrors.....	3-8
Front Seat Adjustment.....	3-9
Driver Seat Height Adjuster.....	3-10
Adjustable Head Restraints (if equipped).....	3-10
Seat Belts.....	3-11

BEFORE DRIVING

FUEL RECOMMENDATION

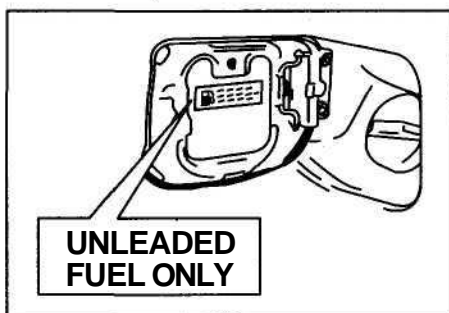

You must use unleaded petrol with an octane number (RON) of 87 or higher. Your vehicle is fitted with a restrictor in the fuel filler pipe which will not allow the use of large nozzle used for dispensing leaded fuel at filling station. A label is also attached near the fuel filler pipe of your vehicle that states: "UNLEADED FUEL ONLY".

CAUTION

Use of leaded fuel in vehicle equipped with catalytic converter is prohibited, because leads deactivates the pollutant reducing components of catalytic converter and may result in permanent damage to catalytic converter.

Petrol/Ethanol Blends

Blends of unleaded petrol and ethanol (grain alcohol), also known as gasohol, are commercially available in some areas. Blends of this type may be used in your vehicle if they are no more than 10% ethanol. Make sure this petrol-ethanol blend has octane ratings no lower than those recommended for petrol.

Petrol/Methanol Blends

Blends of unleaded petrol and methanol (wood alcohol) are also commercially available in some areas. **DO NOT USE** fuels containing more than 5% methanol under any circumstances. Fuel system damage or vehicle performance problems resulting from the use of such fuels are not the responsibility of MARUTI and may not be covered under Warranty.

Fuels containing 5% or less methanol may be suitable for use in your vehicle if they contain cosolvents and corrosion inhibitors.

NOTE:

If you are not satisfied with the driveability or fuel economy of your vehicle when you are using a petrol/alcohol blend, you should switch back to unleaded petrol containing no alcohol.


CAUTION

Be careful not to spill fuel containing alcohol while refuelling. Fuels containing alcohol can cause paint damage, which is not covered under Warranty.

CAUTION

The fuel tank has an air space to allow for fuel expansion in hot weather. If you continue to add fuel after the filler nozzle has automatically shut off or an initial blowback occurs, the air chamber will become full. Exposure to heat when fully fuelled in this manner will result in leakage due to fuel expansion. To prevent such fuel leakage, stop filling after the filler nozzle has automatically shut off, or when using an alternative non automatic system, initial vent blowback occurs.

REMOTE KEYLESS ENTRY SYSTEM Other Controls (if equipped)

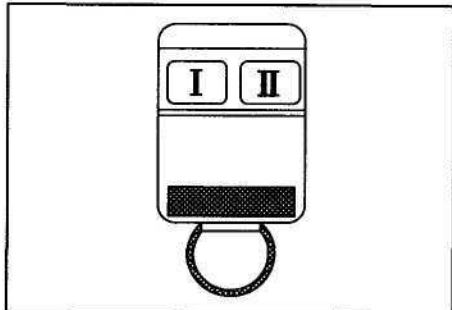

60G-50-001E

Remote keyless entry system is installed in your vehicle. The general features of keyless entry system are;

1. Remote lock/arming and remote unlock/disarming.
2. Doors/trunk/bonnet protection.
3. Doors/trunk/bonnet open signal.
4. Personal protection alarm.
5. Mute lock/unlock.
6. Starter immobiliser.
7. Permanent siren chirp enable/disable (programmable mode).
8. Two stage shock/impact sensor (programmable mode).
9. Emergency disarm by personalised PINCODE (programmable mode).
10. Car locator
11. Flashing LE.D.

15


Initially the system is programmed in factory default. The features operative in factory default are;

1. Remote lock/arming and remote unlock/disarming.
2. Doors/trunk/bonnet protection.
3. Doors/trunk/bonnet open signal while locking/arming.
4. Personal protection alarm.
5. Starter immobiliser.
6. Mute lock/unlock.
7. Permanent siren chirp enable/disable.
8. Emerging disarm by personalised PINCODE.
9. Car locator.
10. Flashing LE.D.

The system can always be programmed back to factory default for restoration of original setting of the system.

For more detail and warranty condition, please refer to the Owner's Manual of "Maruti Mobile Security".

KEYS

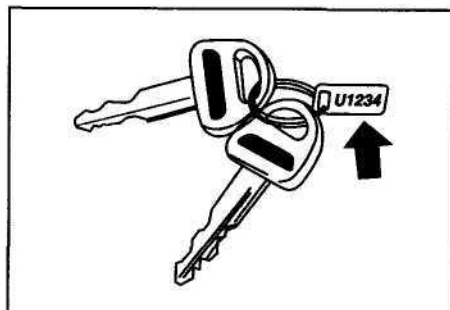

70F-01-003

Your vehicle comes with a pair of identical keys. Keep the spare key in a safe place. One key can open all of the locks on the vehicle. The key identification number is stamped on a metal tag provided with the keys. Keep the tag in a safe place. If you lose your keys, you will need this number to have new keys made. Write the number down and keep it in a safe accessible place away from the vehicle.

⚠ WARNING

- Do not use locally made key.
- Should you require a duplicate key, place your order with a MARUTI dealer only.

NOTE:


Keep the spare key very carefully. When it is lost, consult your dealer by quoting key number.

3-2

BEFORE DRIVING

60G-74E


DOOR LOCKS

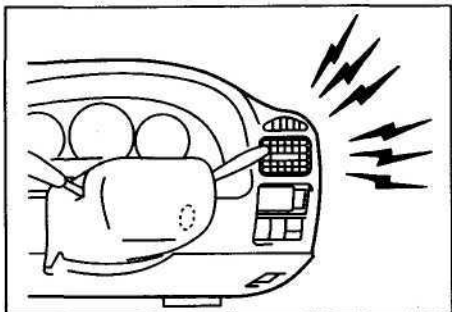

60G-03-003

Ignition Key Reminder (if equipped)

A buzzer sounds intermittently to remind you to remove the ignition key if it is in the ignition switch when the driver's door is opened.

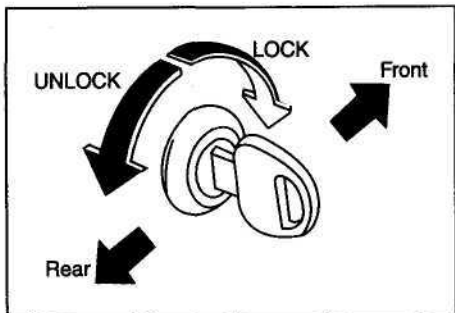


72F-03-002E

To lock a front door from outside the vehicle:

- a) Insert the key fully and turn the top of the key toward the front of the vehicle, or
- b) Push in the lock knob down and hold the door handle up as you close the door.

To unlock a front door from outside the vehicle, insert the key fully and turn the top of the key toward the rear of the vehicle.

To lock a rear door from outside the vehicle, push in the lock knob down and close the door.

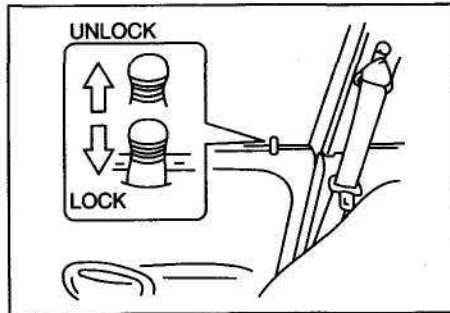


60G-03-004E

To lock a door from inside the vehicle, push the lock knob down. Pull the lock knob up to unlock the door.

⚠ WARNING


Always lock all doors when driving. Locking the door prevents occupants from being thrown from the vehicle in the event of an accident. It also helps prevent unintentional opening of the doors.

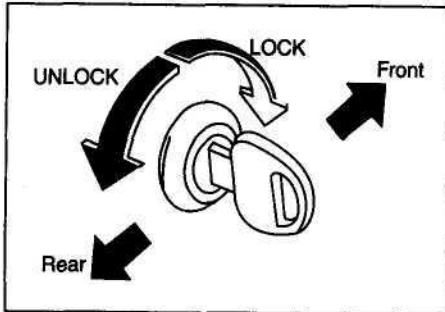

72F-03-002E

Central door locking system (if equipped)

You can lock and unlock all the side doors and simultaneously by using the key in the driver's door lock or the front passenger's door lock.

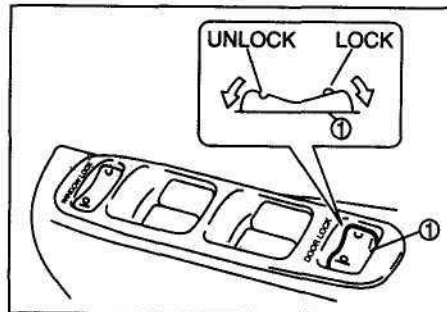


60G-03-006E

You can also lock or unlock all the side doors by depressing the right or left of the switch ②, respectively.

NOTE:

- Moving the lock knob on each door locks or unlocks that door only.
- Be sure to hold the door handle up when you close a locked front door, or the door will not remain locked.

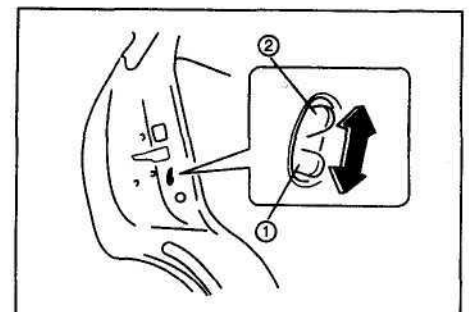


60G-03-005

Child-Proof Locks (if equipped)

As illustrated, a child-proof lock is provided for both rear doors. When the lock lever is down, position ①, the child proof lock is activated, and when up, in position ② the child-proof lock is deactivated, when the child-proof lock is activated, the rear door cannot be opened from the inside even if the inside door lock is unlocked but can be opened from the outside.

⚠ WARNING


Be sure to place the child-proof lock in the locked position whenever children are seated in the rear.

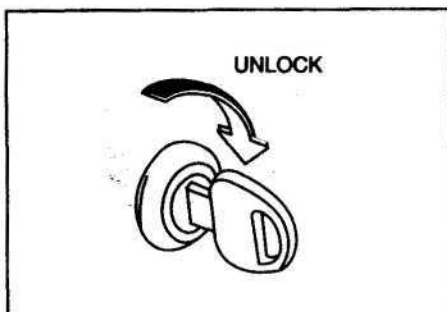

70F-01-008E

Trunk (Boot) Lid

To unlock the lid, insert the key and turn it clockwise. You can also unlock the lid by pulling the release lever located on the outboard side of the driver's seat.

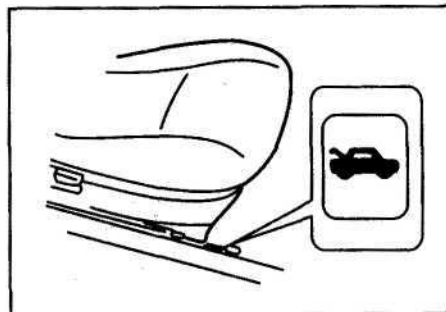

60G-03-007E

CAUTION

Do not use the key to lift up the lid, or the key may break off in the lock.


⚠ WARNING

Always make sure that the trunk lid is closed and latched securely. Closing the lid completely helps to prevent exhaust gases from entering the car.

CAUTION

Do not keep the trunk lid open for a long time, or the battery will discharge.

WINDOWS

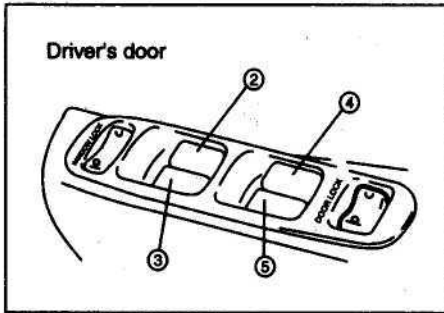


60G-03-009E

Electric window controls (if equipped)

The driver's door has switches ②, ③, ④ & ⑤ to operate the driver's window, front passenger's window, rear right and rear left passenger's window respectively.

The passenger's door only has a switch ⑥ to operate the passenger's window. The electric windows can only be operated when the ignition switch is in the "ON" position.

To open a window with the driver's door switches, push the top part of the switch and to close the window lift up the top part of the switch.

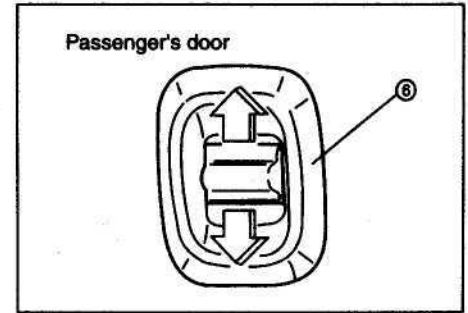


60G-03-010E

The driver's window has an "auto-down" feature for added convenience (at toll booths or drive-through restaurants, for example). This means you can open the window without holding the window switch in the "Down" position. Press the driver's window switch completely down and release it. To stop the window before it reaches the bottom, lift up the switch briefly.


To open or to close a window with the passenger's door switch, push down or push up the switch.

BEFORE DRIVING

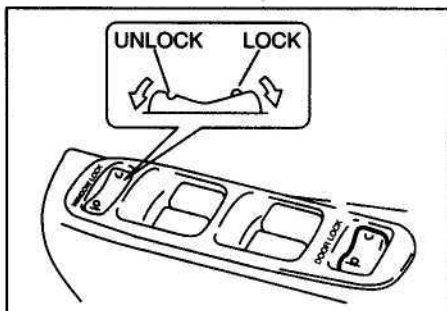

60G-03-011E

The driver's door also has a lock switch for the passenger's window. When you push in the lock side of the switch, the passenger's windows can not be raised or lowered by operating either of the switches ②, ③, ④ & ⑤. To restore normal operation, push the unlock side of the switch.

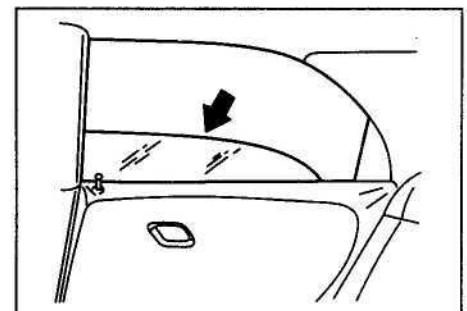

60G-03-012

⚠ WARNING

You should always push the lock side of the lock switch when there are children in the vehicle. Children can be seriously injured if they get part of their body caught by the window during operation.


CAUTION

Since the electric windows consumes a large amount of electricity, the same should not be used excessively with engine in "OFF" condition.


NOTE:

The rear side door windows are not designed to open fully. They can be opened about 2/3 of the way down.


MIRRORS

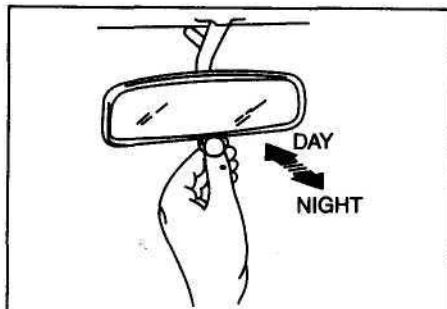

70F-01-012E

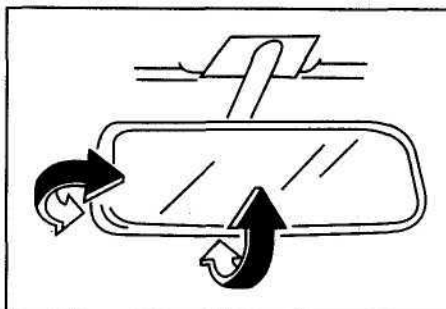

70F-01-013

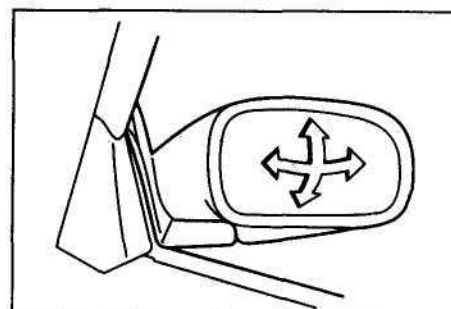

60G-03-013

Day-Night Rearview Mirror (if equipped)

To adjust the interior rearview mirror, set the selector tab to the day position, then move the mirror up, down, or sideways to obtain the best view.

When driving at night, you can move the selector tab to the night position to reduce glare from the headlights of vehicles behind you.

⚠ WARNING

- Always adjust the mirror with the selector set to the day position.
- Only use the night position if it is necessary to reduce glare from the headlights of vehicles behind you. Be aware that in this position you may not be able to see some objects that could be seen in the day position.

Outside Rearview Mirrors

Adjust the outside rearview mirrors so you can just see the side of your vehicle in the mirrors.

A WARNING

Be careful when judging the size or distance of a vehicle or other object seen in the side convex mirror (if equipped). Be aware that objects look smaller and appear farther away than when seen in a flat mirror.


21

3-8


BEFORE DRIVING

60G-74E


FRONT SEAT ADJUSTMENT

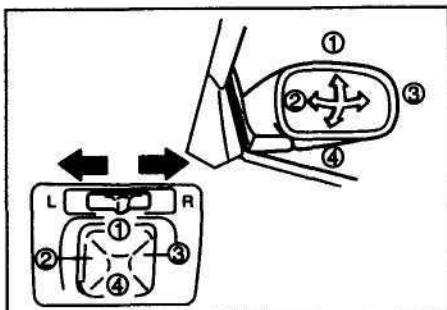

60G-03-014

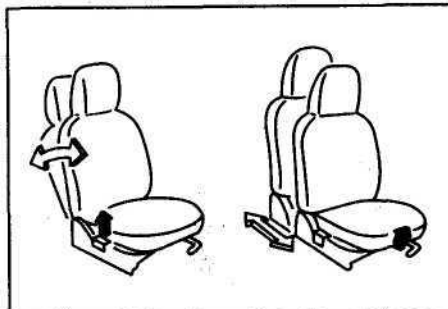

72F-03-016

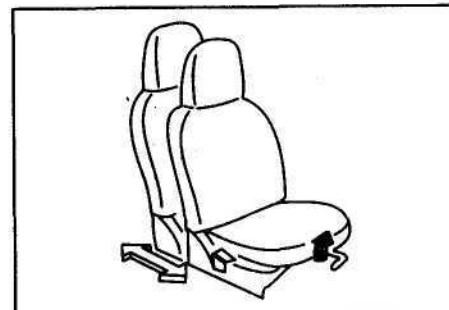

72F-03-013

Electric Mirrors (If equipped)

The switch to control the electric mirrors is located on the instrument panel. You can only adjust the mirrors when the ignition switch is in the "ON" position. To **adjust the mirrors**:

- 1) Move the selector switch to the left or right to select the mirror you wish to adjust.
- 2) Press the outer part of the switch that corresponds to the direction in which you wish to move the mirror.
- 3) Return the selector switch to the centre position to help prevent unintended adjustment.

⚠ WARNING

Never attempt to adjust the driver's seat or seatback while driving. The seat or seatback could move unexpectedly, causing loss of control. Make sure that the driver's seat and seatback are properly adjusted before you start driving.


Adjusting Seat Position

The adjustment lever for each front seat is located under the front of the seat, on the inboard side. To adjust the seat position, pull up on the adjustment lever and slide the seat forward or rearward. After adjustment, try to move the seat forward and rearward to ensure that it is securely latched.

3-9

22

DRIVER SEAT HEIGHT ADJUSTER (if equipped)

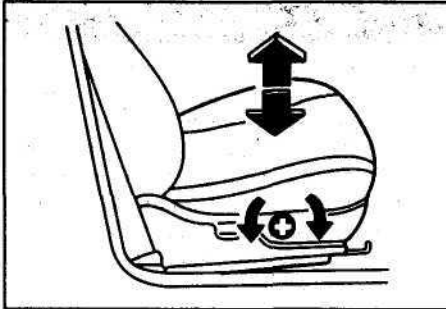


60G-03-015

If the driver's seat is equipped with a seat height adjuster knob on the outboard side of the seat, adjust the seat to the proper height by turning the adjuster knob.

⚠ WARNING

To avoid excessive seat belt slack, which reduces the effectiveness of the seat belts as a safety device, make sure that the seats are adjusted before the seat belts are fastened.

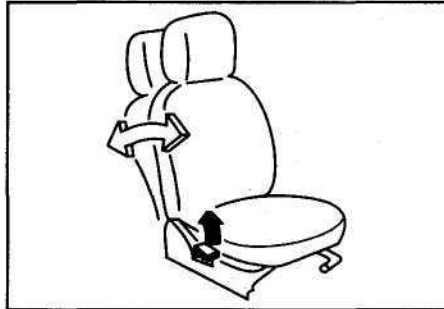

72F-03-014


Adjusting Seatbacks

The seatbacks can be adjusted to different angles. To adjust the seatback angle, pull up the lever on the outboard side of the seat, move the seatback to the desired position, and release the lever to lock the seatback in place.

⚠ WARNING

Seatbacks should always be in an upright position when driving, or seat belt effectiveness may be reduced. Seat belts are designed to offer maximum protection when seatbacks are in the fully upright position.

ADJUSTABLE HEAD RESTRAINTS (if equipped)

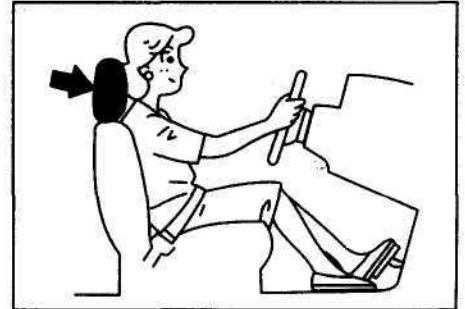

70F-01-019

⚠ WARNING


- Never drive the vehicle with the head restraints removed.
- Do not attempt to adjust the head restraint while driving.

Head restraints are designed to help reduce the risk of neck injuries in the case of an accident. Adjust the head restraint to the position which places the top of the head restraint closest to the top of your ears.

BEFORE DRIVING


60G-74E

SEAT BELTS

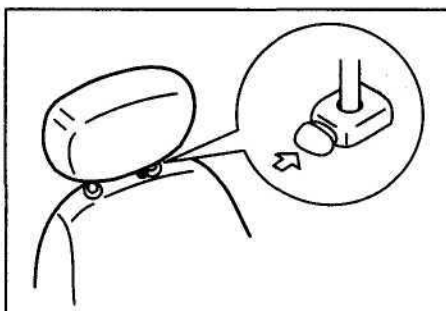

60G-03-016

To raise the head restraint, pull upward on the restraint until it clicks. To lower the restraint, push down on the restraint while holding in the lock lever. If a head restraint must be removed (for cleaning, replacement, etc.), push in the lock lever and pull the head restraint all the way out.

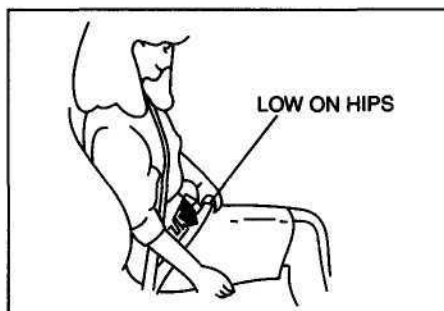

70F-01-022E

⚠ WARNING

Wear your Seat Belts at All Times.

⚠ WARNING

- Never allow persons to ride in the cargo area of a vehicle. In the event of an accident, there is a much greater risk of injury for persons who are not riding in a seat with their seat belt securely fastened.
- Seat belts should always be adjusted so the lap portion of the belt is worn low across the pelvis, not across the waist. Shoulder straps should be

⚠ WARNING

- worn on the outside shoulder only, and never under the arm. Seat belts should never be worn with the straps twisted and should be adjusted as tightly as is comfortable to provide the protection for which they have been designed. A slack belt will provide less protection than one which is snug.
- Make sure that each seat belt buckle is inserted into the proper buckle catch. It is possible to cross the buckles in the rear seat.
- Do not wear your seat belt over hard or breakable objects in your pockets or on your clothing. If an accident occurs, objects such as glasses, pens, etc. under the seat belt can cause injury.
- Never use the same seat belt on more than one occupant and never attach a seat belt over an infant or child being held on an occupant's lap. Such seat belt use could cause serious injury in the event of an accident.



▲ WARNING


- Pregnant women should use seat belts, although specific recommendations about restraint use should be made by the woman's medical advisor.
- Periodically inspect seat belt assemblies for excessive wear and damage. Seat belts should be replaced if webbing becomes frayed, contaminated, or damaged in any way. It is essential to replace the entire seat belt assembly after it has been stressed in an impact, even if damage to the assembly is not obvious.
- Infants and small children should never be transported unless they are properly restrained. Restraint systems for infants and small children can be purchased locally and should be used. Make sure that the system you purchase meets applicable safety standards. Read and follow all the directions provided by the manufacturer.

**▲ WARNING**

- Avoid contamination of seat belt webbing by polishes, oils, chemicals, and particularly battery acid. Cleaning may safely be carried out using mild soap and water.
- For children, if the shoulder belt irritates the neck or face, move the child closer to the center of the vehicle.

A WARNING

Be sure to inspect all seat belt assemblies after any collision. Any seat belt assembly which was in use during a collision (other than a very minor one) should be replaced, even if damage to the assembly is not obvious. Any seat belt assembly which was not in use during a collision should be replaced if it does not function properly or is damaged in any way.

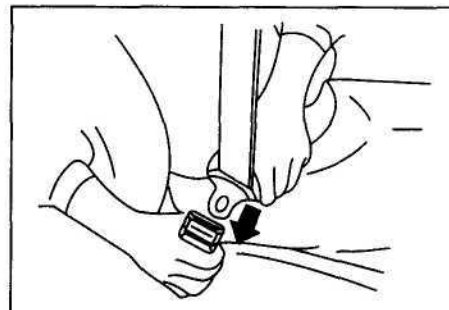

70F-01-021

There are two types of seat belt, "Lap-shoulder belt" and "Lap belt".


To fasten the seat belt, sit up straight and well back in the seat, pull the buckle tongue attached to the seat belt across your body and slide it into the buckle catch on the opposite side until you hear a "click".

25

3-12


BEFORE DRIVING

60G-74E

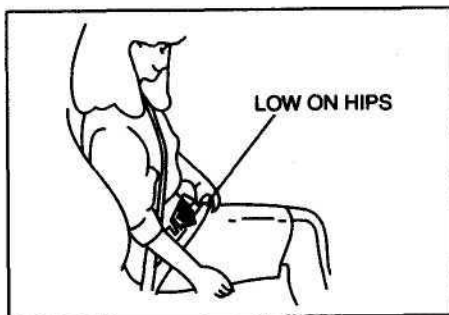

70F-01-022E

To reduce the risk of sliding under the belt during a collision, position the lap portion of the belt across your lap as low on your hips as possible and adjust the belt to a snug fit using the proper method for each type of the belt as described below. Make sure that the belt is not twisted.

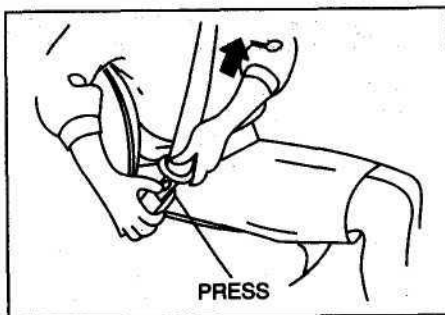

70F-01-023E


To unfasten the belt, press the release button on the buckle catch.



70F-01-024E

To Adjust the Belt

- **Lap-shoulder belt**
Pull the shoulder portion of the belt upwards through the tongue plate.
The length of the diagonal shoulder strap adjusts itself to allow freedom of movement. The seat belt has an emergency locking retractor (ELR), which is designed to lock the seat belt only during a sudden stop or impact.

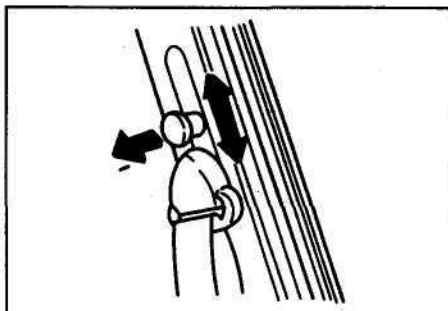


70F-01-025

Your vehicle is equipped with the shoulder anchor height adjusters for the front seat belts, adjust the shoulder anchor height so that the shoulder belt rides on the center of the outboard shoulder. To adjust the shoulder anchor height, slide the anchor up or down while pulling the lock knob out. After adjustment, make sure that the anchor is securely locked.

⚠ WARNING

No modifications or additions of any sort should be made to the seat belt or its operating mechanism.

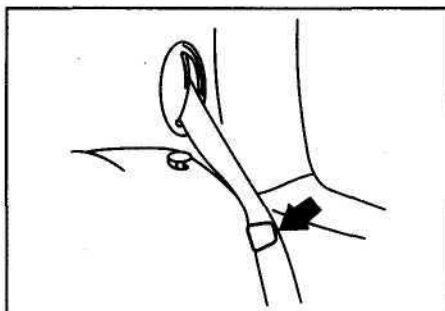


60G-03-017

Seat Belt Hanger (if equipped)

CAUTION

When you move a seatback, make sure the belt webbing is hooked in the belt hangers so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

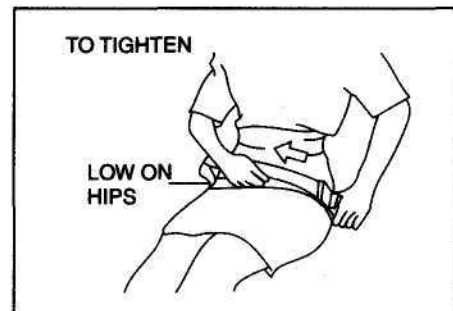


60G-03-018E

• Lap belt


On this belt the adjuster is incorporated in the tongue unit.

To tighten the belt, pull the free end of the belt across alongside the lap strap until it is adjusted to a snug comfortable position.

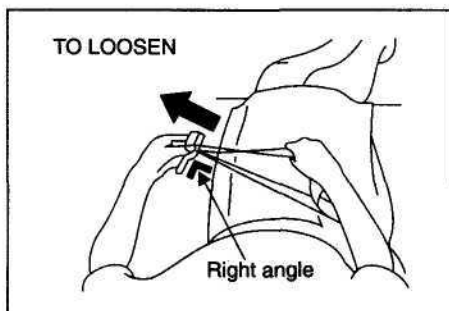

60G-03-019E

To lengthen, release the tongue from the buckle unit, pull the tongue (adjuster) in the direction of the arrow, at right angles to the belt. The tongue should then be refitted into the buckle unit and the belt tightened as previously described.

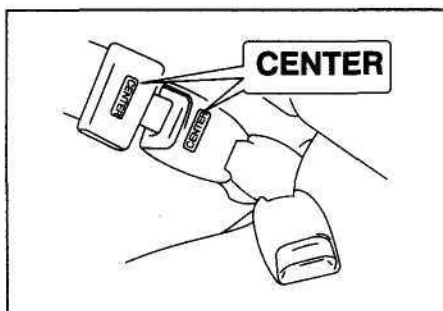

60G-03-020E

NOTE:

To identify the center seat belt buckle catch and tongue in the rear seat, "CENTER" is moulded on the buckle catch and tongue of the center lap belt. The buckle catches are designed so a buckle tongue can not be inserted into the wrong buckle catch.



70F-01-030

Child Restraint Systems


MARUTI highly recommends that you use a child restraint system to restrain infants and small children. Many different types of child restraint systems are available; make sure that the restraint system you select meets applicable safety standards.

All child restraint systems are designed to be secured in vehicle seats by lap belts or the lap portion of lap-shoulder belts. Whenever possible, Maruti recommends that child restraint systems be installed on the rear seat. According to accident statistics children are safer when properly restrained in rear seating positions than in front seating positions.

If you must use a front-facing child restraint in the front passenger's seat, adjust the passenger's seat as far back as possible.

WARNING

Children could be endangered in a crash if their child restraints are not properly secured in the vehicle. When installing a child restraint system, be sure to follow the instructions below. Be sure to secure the child in the restraint system according to the manufacturer's Instructions.

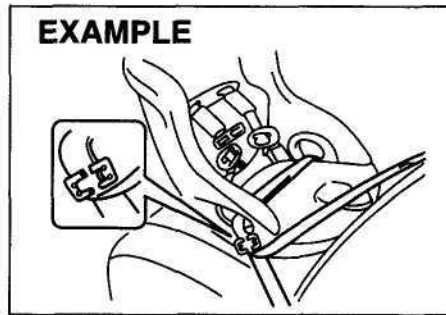


60G-03-021E

Installation with lap-shoulder seat belts

Note:


The lap-shoulder belts of your vehicle have emergency locking retractors (ELRs) that can not function as an automatic locking retractor (ALR). Use the installation method described in the instructions provided by the child restraint system manufacturer that does not require the ALR function.

Install your child restraint system according to the instructions provided by the child restraint system manufacturer. Make sure that the seat belt is securely latched.

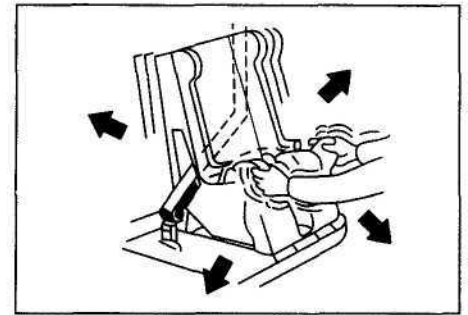

70F-01-031

Try moving the child restraint system in all directions, to make sure it is securely installed. Tighten the belt if necessary.

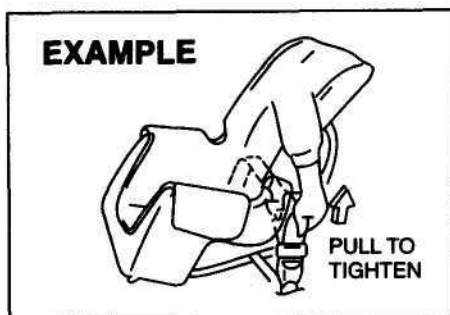

70F-01-032E

Installation with a lap belt

Install your child restraint system according to the instructions provided by the child restraint system manufacturer.

To lengthen or tighten the belt, refer to the "**Lap belt**" item in this "SEAT BELTS" section. After making sure that the seat belt is securely latched, try moving the child restraint system in all directions, to make sure it is securely installed. If you need to tighten the belt, pull the free end of the webbing.