 



OTHER CONTROLS AND EQUIPMENT

Parking Brake Lever.....	6-1
Pedals.....	6-2
Gear Lever.....	6-2
Fuel Filler Cap.....	6-3
Folding Rear Seats.....	6-4
Sun Visor.....	6-5
Interior Light Switch.....	6-5
Assist Grips.....	6-5
Bonnet.....	6-6
Cup Holder (if equipped).....	6-7
Tyre Changing Tools.....	6-7
Luggage Compartment Trim.....	6-8
Trunk (Boot) Light.....	6-8
Front Seat Back Pocket (if equipped).....	6-9
Rear spoiler with Stop lamp (if equipped).....	6-9
Alloy Wheels (if equipped).....	6-9
Power Antenna (if equipped).....	6-10
Leather Cover (if equipped).....	6-10
High Mount Stop Lamp.....	6-10

PARKING BRAKE LEVER

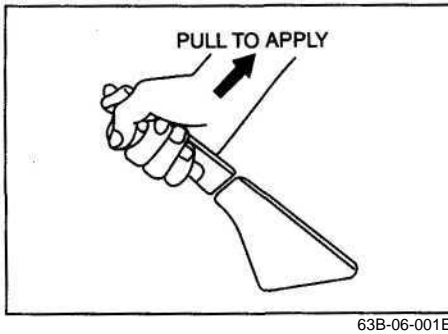

 The parking brake lever is located between the seats. To apply the parking brake, hold the brake pedal down and pull the parking brake lever all the way up.

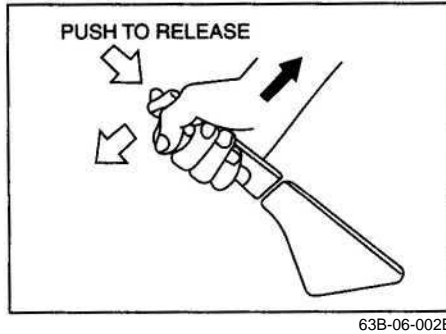

To release the parking brake, hold the brake pedal down, pull up slightly on the parking brake lever, push the button on the end of the lever with your thumb, and lower the lever to its original position.

⚠ WARNING

- Never drive your vehicle with the parking brake on: rear brake effectiveness can be reduced from over heating, brake life may be shortened, or permanent brake damage may result.
- If the parking brake does not hold the vehicle securely or does not fully release, have your vehicle inspected immediately by an authorized MARUTI dealer.

⚠ WARNING

Always apply the parking brake fully before leaving your vehicle or it may move, causing injury or damage. When parking, make sure the gear shift lever is left in first gear or reverse. Remember, even though the transmission is in gear, you must always apply the parking brake fully.

 
6-1

54

60G-74E

OTHER CONTROLS AND EQUIPMENT

PEDALS

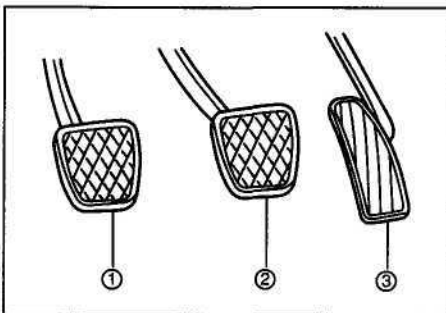

Clutch Pedal ©

The clutch pedal is used to disengage the drive to the wheels when starting the engine, stopping, or shifting the transmission lever. Depressing the pedal disengages the clutch.

CAUTION

Do not drive with your foot resting on the clutch pedal. It could result in excessive clutch wear, clutch damage, or unexpected loss of engine braking.

Brake Pedal ®

Your MARUTI vehicle is equipped with front disc brakes and rear drum brakes. Depressing the brake pedal applies both sets of brakes.

You may hear occasional brake squeal when you apply the brakes. This is a normal condition caused by environmental factors such as cold, wet, snow, etc.

⚠ WARNING

If brake squeal is excessive and occurs each time the brakes are applied, you should have the brakes checked by your MARUTI dealer.

 
⚠ WARNING

Do not "ride" the brakes by applying them continuously or resting your foot on the pedal. This will result in overheating of the brakes which could cause unpredictable braking action, longer stopping distances, or permanent brake damage.

Accelerator Pedal ®


This pedal controls the speed of the engine. Depressing the accelerator pedal increases power output and speed.

GEAR LEVER

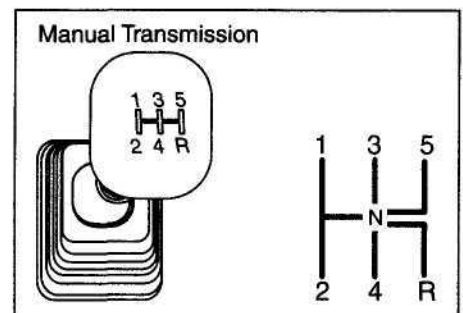

The gear change pattern is shown in the illustration. For details on how to use the transmission, refer to USING THE TRANSMISSION in the OPERATING YOUR VEHICLE section.

 FUEL FILLER CAP

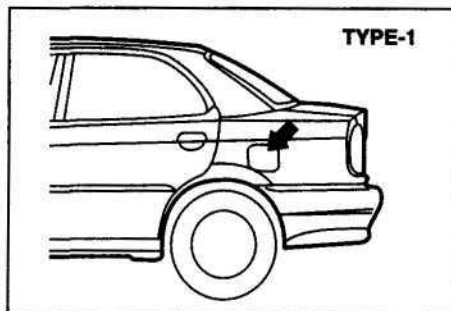


60G-06-002

The fuel filler cap is located on the left rear side of the vehicle. The fuel filler lid can be unlocked by pulling up the opener lever located on the outboard side of the driver's seat and locked by simply closing the lid.


⚠ WARNING

 Remove the fuel filler cap slowly. The fuel may be under pressure and may spray out, causing injury.

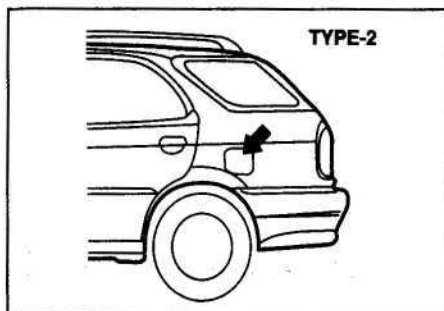

⚠ WARNING

 Petrol is extremely flammable. Do not smoke when refuelling, and make sure there are no open flames or sparks in the area.

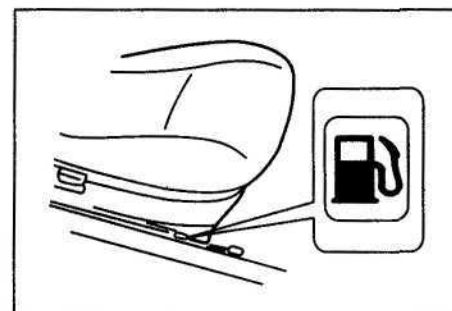

60G-06-003

The fuel tank filler cap has a "screw-on ratcheting type" feature.

- To remove - turn the cap counterclockwise. Turn the cap slowly to allow any residual pressure to escape.
- To install - turn the cap clockwise and tighten it securely until a "ratcheting" (clicking) sound is heard. The "ratcheting" sound indicates that the cap is on properly.

 
6-3

56

60G-74E

OTHER CONTROLS AND EQUIPMENT


FOLDING REAR SEATS

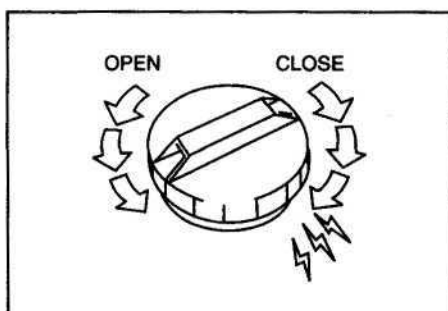

70F-04-008E

CAUTION

 If you need to replace the fuel cap, use only a cap specified for your model. Using an improper fuel cap can cause a serious malfunction of the fuel system. You can get the correct replacement cap from your MARUTI dealer.

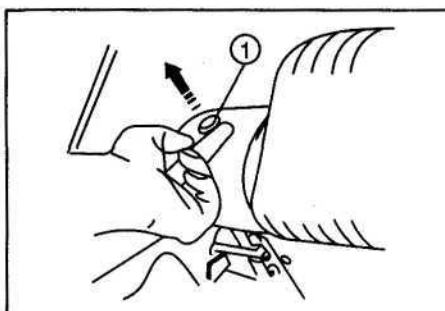


63B-06-013

The rear seat of your vehicle can be folded forward to provide additional luggage space.

To lower the seatback, hook the webbing of both outboard lap-shoulder belts in the belt hangers, pull up the lock knobs (© and @) simultaneously and fold forward the seatback. To raise the seatback, lift it up and push back until it locks into place.

⚠ WARNING

 When you move a seatback, make sure the belt webbing is hooked in the belt hangers (if equipped) so the seat belts are not caught by the seatback, seat hinge, or seat latch. This helps prevent damage to the belt system.

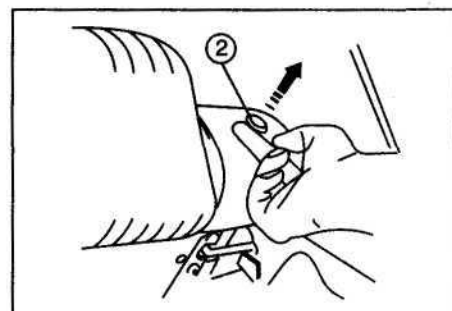

63B-06-014

 
⚠ WARNING

When returning a rear seat to the normal position, make sure that movement of the seatback is unobstructed and the seatback is securely latched.

57

6-4

SUN VISOR

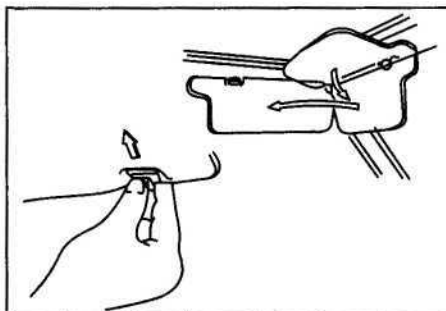

70F-04-024

⚠ WARNING

 
Luggage or other cargo should be stowed in the luggage compartment with the rear seat in an upright position, whenever possible. If you need to carry cargo in the passenger compartment with the rear seat back folded forward, be sure to secure the cargo or it may be thrown about, causing injury. Never pile cargo higher than the seatbacks.

The sun visors can be pulled down to block glare coming through the wind screen, or they can be unhooked and turned to the side to block glare coming through the side window.

CAUTION

When unhooking and hooking a sun visor, be sure to handle it by the hard plastic parts or the sun visor can be damaged.

INTERIOR LIGHT SWITCH

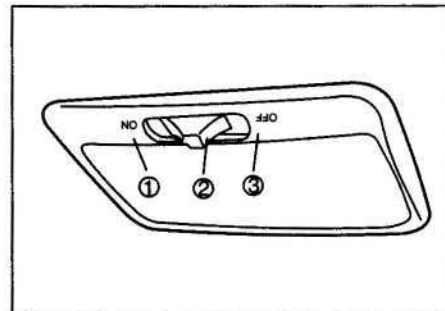

60G-06-004

 
This light switch has three positions which function as described below:

- Ⓒ The light comes on and stays on regardless of whether the door is open or closed.
- Ⓒ The light comes on when the door is opened.
- Ⓒ The light remains off even when the door is opened.

NOTE:

Both Front and Rear doors are involved in lighting operation of the interior light.

ASSIST GRIPS

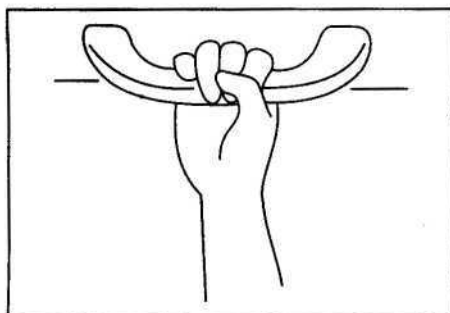


70F-04-015

Assist grips are provided for passenger convenience.

⚠ WARNING

Do not hang Hems on the assist grips. They could obstruct the driver's view, resulting in an accident, or could be thrown about in an accident or abrupt manoeuvre, causing injury.

 
BONNET

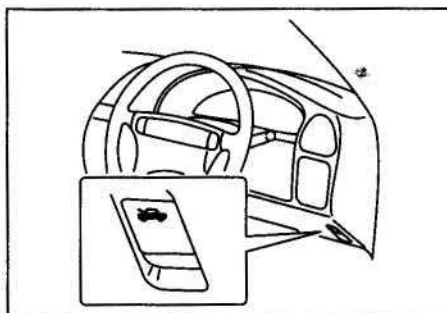

60G-06-005

To open the bonnet:

 
- 1) Pull the bonnet release handle located on the outboard side of the driver's side of the instrument panel. This will disengage the bonnet lock halfway.

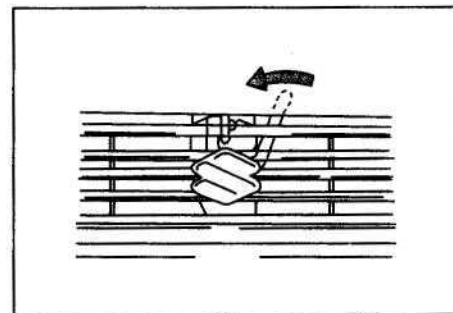

60G-06-006

- 2) Push the under-bonnet release lever sideways with your finger, as shown in the illustration. While pushing the lever, lift up the bonnet.

 CUP HOLDER (if equipped)

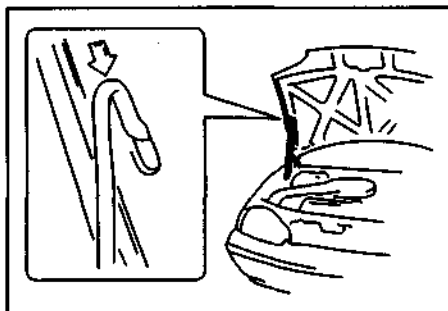


60G-06-007

- 3) Continue to lift up the bonnet until it is high enough to support with the prop rod.

▲ WARNING

 Make sure the bonnet is fully closed and latched before driving. If it is not, it can fly up unexpectedly during driving, obstructing your view and resulting in an accident.

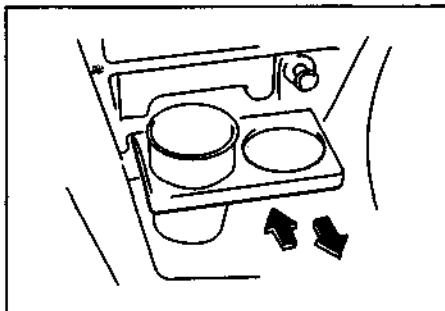


60G-06-008

To use the cup holder, pull it out fully. After using the holder, push it back in.

▲ WARNING

Do not use the cup holder to hold cups containing hot liquids, or objects other than cups. Objects in the cup holder may be thrown about during a sudden stop or impact, and could cause personal injury.

 TYRE CHANGING TOOLS

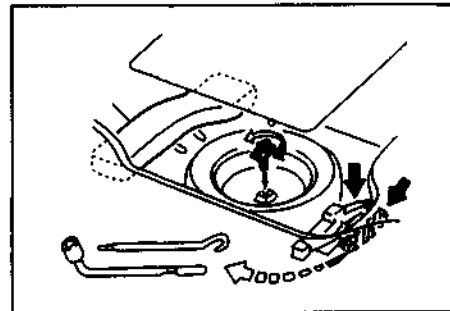


60G-06-009

The jack, wheel wrench and jack crank are stowed in the luggage compartment behind the rear seat.

To remove the jack, turn its shaft counterclockwise and pull the jack out of the storage bracket. To stow the jack, place it in the storage bracket and turn the shaft clockwise until the jack is securely held in place.

 LUGGAGE COMPARTMENT TRIM

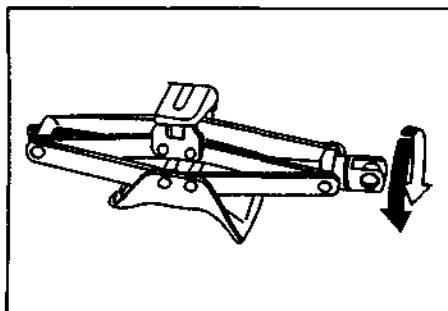

60G-06-010

Luggage or other cargo placed in the luggage compartment are hidden from view by a luggage compartment trim.

▲ WARNING

Do not carry items on top of the luggage compartment trim, even if they are small and light. Objects on top of the trim could be thrown about in an accident, causing injury, or could obstruct the driver's rear view.

 
▲ WARNING

The jack should be used only to change wheels. It is important to read the jacking instructions in the EMERGENCY SERVICE section of this manual before attempting to use the jack.

▲ WARNING

After using the jack, jack crank and wheel wrench, be sure to stow them securely or they can cause injury if an accident occurs.

TRUNK (BOOT) LIGHT (if equipped)

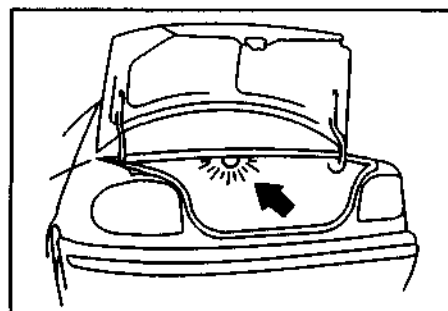


60G-06-011

When you open the trunk (boot) lid, the trunk (boot) light comes on and remains on as long as you keep the lid open.

▲ WARNING

 Do not leave the boot (trunk) lid open for a long time, or the battery will discharge.

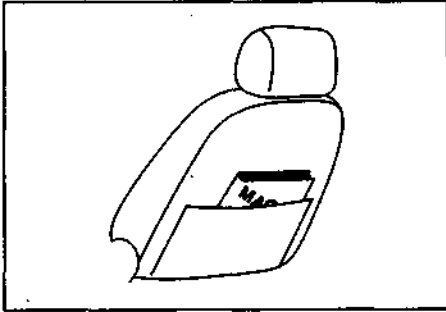
FRONT SEAT BACK POCKET
(if equipped)

63B-06-022

This pocket is provided for holding light and soft things such as gloves, newspapers or magazines.

⚠ WARNING

 Do not put hard or breakable objects in the pocket. If an accident occurs, objects such as bottles, cans etc. can injure the occupants in the rear seat.

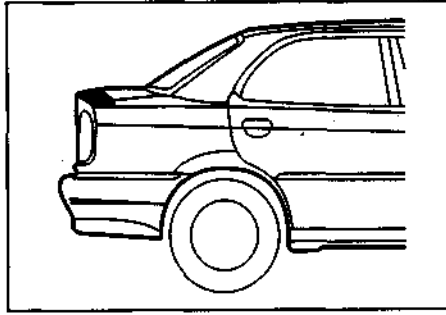
REAR SPOILER WITH STOP LAMP
Other Controls (if equipped)

60G-50-002E

Rear Spoiler is provided to improve aerodynamic stability at higher speeds and better aesthetics. Stop Lamp (if equipped) is fitted inside the Rear Spoiler. The stop lamp will glow as and when the Brake Pedal is depressed.

CAUTION

 Never close the dicky door too hard or with jerk or lift the dicky by holding spoiler, rear spoiler may get damaged. Close the dicky door gently and make sure it is closed properly.

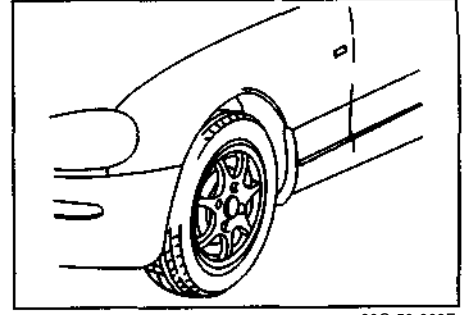ALLOY WHEELS
Maintenance with tyre wears (if equipped)

60G-50-003E

 
Wider alloy wheels are provided in the vehicle for better grip on the road and more fuel economy. For balancing of wheels please consult MARUTI authorised workshop.

CAUTION

Never try to remove the tyre from alloy wheel rim in convention manner (by hammering), it will damage the wheel rim. Always insist on tyre changing machine.


60G-74E

OTHER CONTROLS AND EQUIPMENT

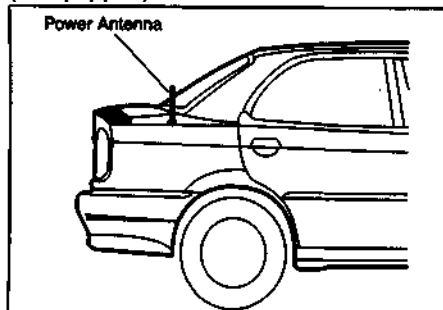POWER ANTENNA Other Controls
(if equipped)


60G-50-004E

 Power antenna on the rear side will automatically come up on switching on the AM/FM receiver fitted in the vehicle.

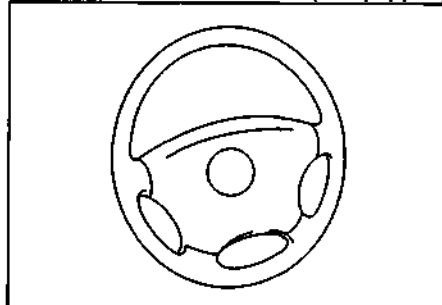LEATHER COVER
Steering Column Controls (if equipped)

60G-50-006E

 For better control on steering wheel leather cover is provided.

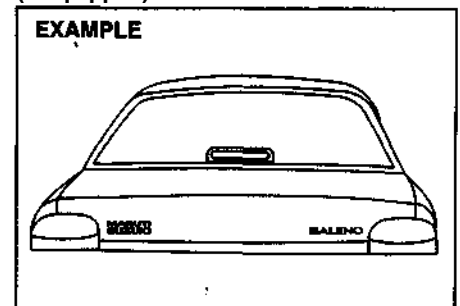HIGH MOUNT STOP LAMP
(if equipped)**EXAMPLE**

High mount stop lamp is provided with your vehicle and is fitted on rear parcel tray. The stop lamp will glow as when the brake pedal will be depressed.

To change the bulb of the stop lamp, remove the clips at both sides of the cover, by pressing the inner pin inside so that the clip gets loose and remove the bulb on turning it anticlock-wise

The rating of bulb is 21W/12V. There are one bulb in high mount stop lamp.