

Engine warning lamp

If the engine warning lamp comes on when the engine is running, this indicates a malfunction. If it flashes when you are driving, reduce the speed of your vehicle immediately. If it continues to flash, avoid heavy acceleration or deceleration. The engine will continue to run but it will have limited power. Have this checked immediately.

Front fog lamp indicator (where fitted)

The front fog lamp indicator will come on when you switch the front fog lamps on.

Headlamp indicator

The headlamp indicator will come on when you switch the headlamp dipped beam or the side and tail lamps on.

Ignition warning lamp

If the ignition warning lamp comes on when you are driving, this indicates a malfunction.

Switch off all unnecessary electrical equipment and have this checked immediately.

Low fuel level warning lamp

If the low fuel level warning lamp comes on, refuel as soon as possible.

Main beam indicator

The main beam indicator will come on when you switch the headlamp main beam on. It will flash when you use the headlamp flasher.

Oil pressure warning lamp**CAUTION**

Do not resume your journey if the oil pressure warning lamp comes on despite the oil level being correct.

Have this checked immediately.



If the oil pressure warning lamp comes on when you are driving, this indicates a malfunction. Stop your vehicle as soon as it is safe to do so and switch the engine off. Check the engine oil level. See Maintenance (page 113).

Engine system fault warning lamp

If the powertrain warning lamp comes on when the engine is running, this indicates a malfunction. The engine will continue to run but it will have limited power. Have this checked as soon as possible.

If the powertrain warning lamp flashes when the engine is running, this indicates a malfunction. Stop your vehicle as soon as it is safe to do so. Have this checked before continuing your journey.

Rear fog lamp indicator

The rear fog lamp indicator will come on when you switch the rear fog lamps on.

Water in fuel warning lamp

Vehicles with a diesel engine. If the water in fuel warning lamp illuminates whilst driving immediately see an authorized Ford dealer to have the water drained from the fuel filter.

CAUTION

Failure to do so could damage the vehicles Fuel Injection system causing engine or fuel injection system failure.

Note: Such failures are not covered under warranty repair.