
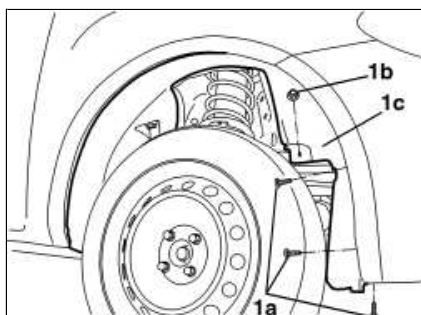

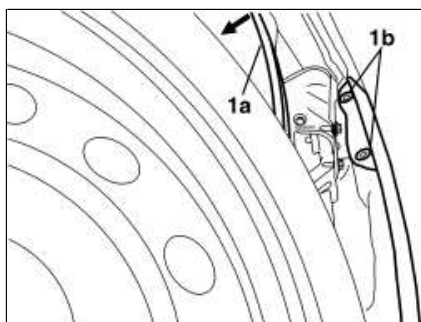


## GRANDE PUNTO 1.2 8v R.R. FRONT BUMPER 7210E10


[back to AIR CONDITIONING CONDENSER - R+R](#) Removing ( [Refitting](#)  )

- Position the vehicle on the lift.
- Open the bonnet lid and raise the vehicle.

1. Working from both sides of the vehicle, undo bolts (1a) and plastic nut (1b) securing front wheel arch (1c).




1. Move the wheel arches (1a) slightly and undo the side bolts (1b) fixing the bumper.

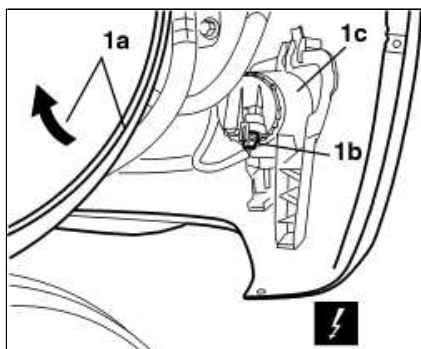

1. Move the wheel arch (1a) slightly and disconnect the electrical connection (1b) for the fog lights (1c).


Description	Component
LEFT FOG LIGHT	<a href="#">See F015 LEFT FOG LAMP</a>
RIGHT FOG LIGHT	<a href="#">See F016 RIGHT FOG LAMP</a>

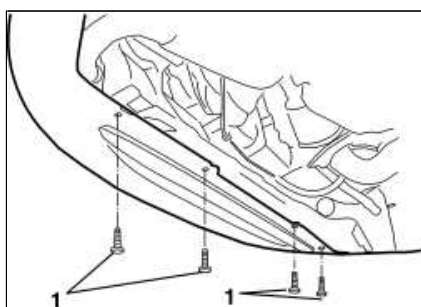

1. Undo the lower bolts fixing the bumper.


- Lower the vehicle.

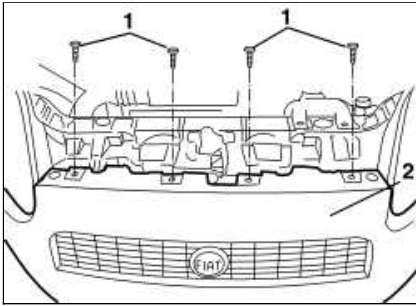

1. Undo the upper bolts fixing the bumper.
2. Remove the bumper.



- If necessary, strip the bumper.
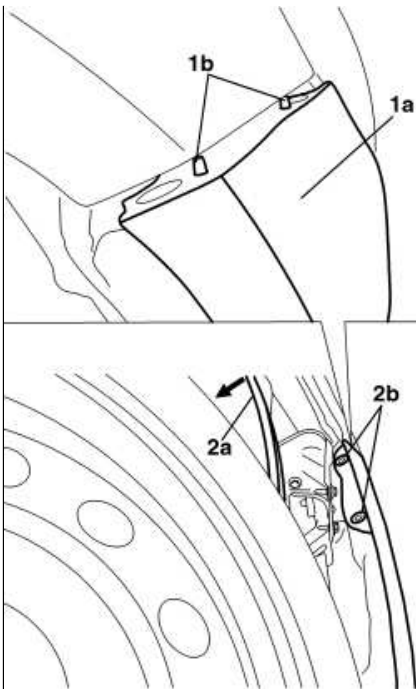
#### Op. 7205E10 STRIPPING FRONT BUMPER



 Refitting ( [Removing](#)  )

- Check that the bumper is not damaged.
  - If necessary, reassemble the bumper.
1. Position the bumper (1a) in its seat and fasten pins (1b) in their seats on both sides.
  2. Move the wheel arch (2a) slightly and undo the side bolts (2b) fixing the bumper.

- Tighten the upper bolts fixing the bumper.
- Raise the vehicle and tighten the lower bumper bolts.
- Connect the electrical connection for the fog light.
- Tighten the front wheelarch nuts and bolts.
- Lower the vehicle and reclose the bonnet lid.
- Remove the vehicle from the lift.
- If necessary, adjust the foglamp.

#### Op. 5540D38 FOG LIGHT BEAM - ADJUST